



SAGE LU MEI R11 Ultrathin Touch Slide RF Remote Controller Instruction Manual

[Home](#) » [SAGE LU MEI](#) » SAGE LU MEI R11 Ultrathin Touch Slide RF Remote Controller Instruction Manual 

sage


Ultrathin Touch Slide RF Remote Controller

Model No.: R11,R12,R13


Touch color slide/1-3 color/Wireless remote 30m distance/CR2032 battery/Magnet stuck fix



R11
1 Zone Dimming

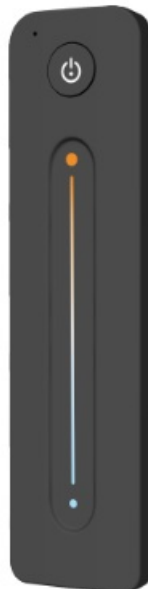

R12
1 Zone CCT

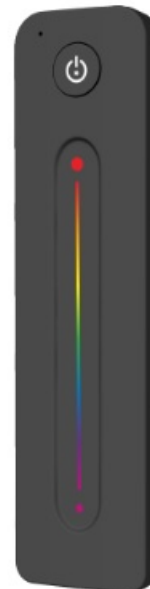

R13
1 Zone RGB

CE RoHS  LVD RED

Contents

[1 Features](#)

[2 Technical Parameters](#)

[3 Mechanical Structures and Installations](#)

[4 Match Remote Control \(two match ways\)](#)

[5 Key function](#)

[6 Safety information](#)

[7 Documents / Resources](#)

[8 Related Posts](#)

Features

- Apply to a single color, dual color or RGB LED controller.
- Ultra-sensitive color adjustment touch slide.
- Each remote can match one or more receivers.
- CR2032 battery-powered.
- Operate with LED indicator light.
- Magnet on the back which can be easily stuck on back holder or any metal surfaces.

Technical Parameters

Input and Output	
Output signal	RF 2.4GHz
Working voltage	3VDC CR2032
Working current	5mA
Standby current	10μA
Standby time	1 year
Remote distance	30m(Barrier-free space)


Environment	
Operation temperature	Ta: -30 O C ~ +55 O C
IP rating	IP20

Safety and EMC	
EMC standard (EMC)	ETSI EN 301 489-1 V2.2.3 ETSI EN 301 489-17 V3.2.4
Safety standard(LVD)	EN 62368-1:2020+A11:2020
Radio Equipment(RED)	ETSI EN 300 328 V2.2.2
Certification	CE,EMC,LVD,RED

Warranty	
Warranty	5 years

Weight	
Gross weight	24g
Net weight	64g

Mechanical Structures and Installations

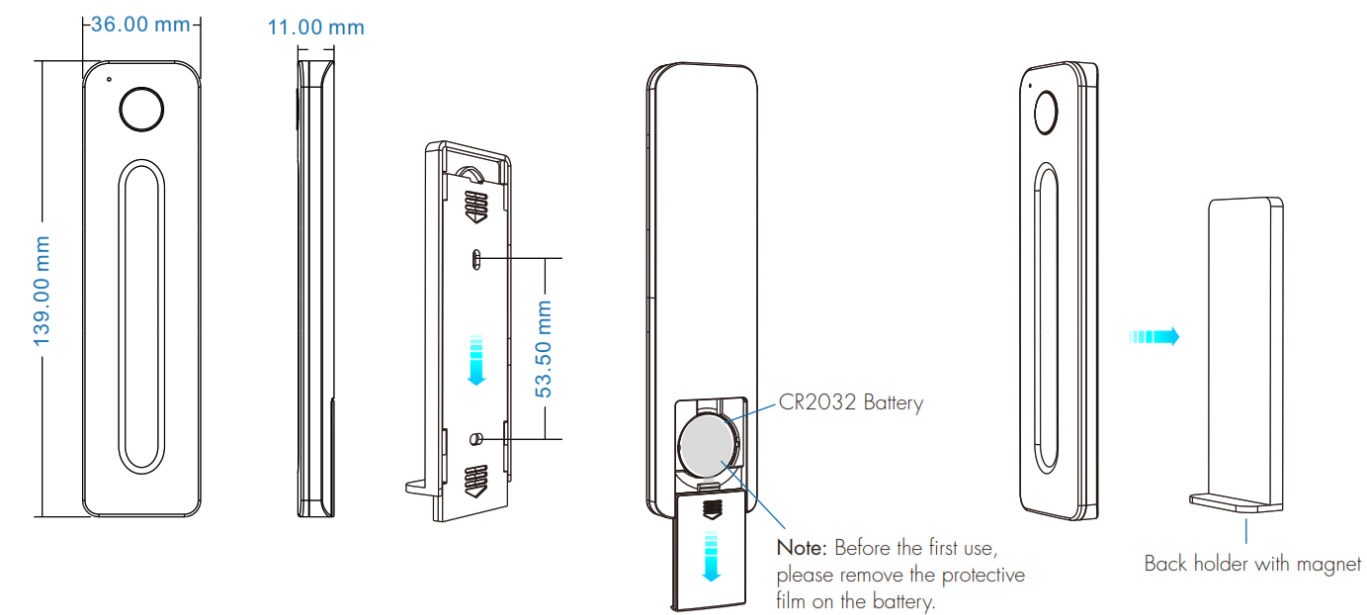

To fix the remote, three options are offered for selection:
 Option 1: stuck the remote on any metal surfaces directly.
 Option 2: fix the remote' back holder on the wall with two screws.
 Option 3: adhere the remote' back holder to the wall with a paster.

Match Remote Control (two match ways)

The end users can choose suitable match/delete ways. Two options are offered for selection:

Use the controller’s Match key


Match: Short press the match key, and immediately press on/off key on the remote.
 The LED indicator fast flash a few times means the match is successful.
Delete: Press and hold the match key for 5s to delete all match, The LED indicator fast flash a few times means all matched remotes were deleted.

Use Power Restart


Match: Switch off the power, then switch on the power, repeat again. An immediately short press on/off key 3 times on the remote. The light blinks 3 times means the match is successful.
Delete: Switch off the power, then switch on the power, repeat again. An immediately short press on/off key 5 times on the remote. The light blinks 5 times means all matched remotes were deleted.

Key function


- **R11 1 zone dimming remote**

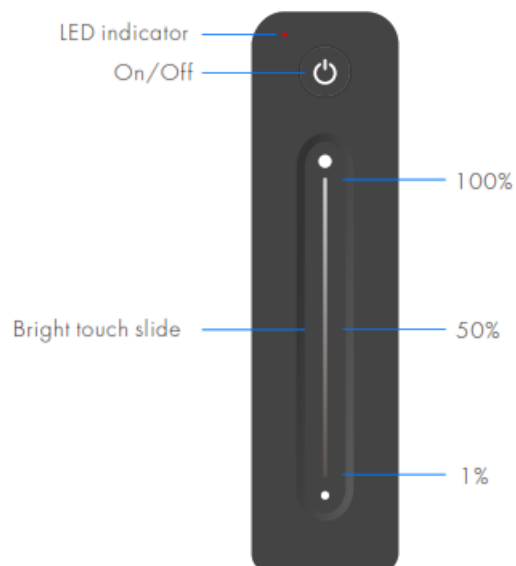

- **R12 1 zone CCT remote**

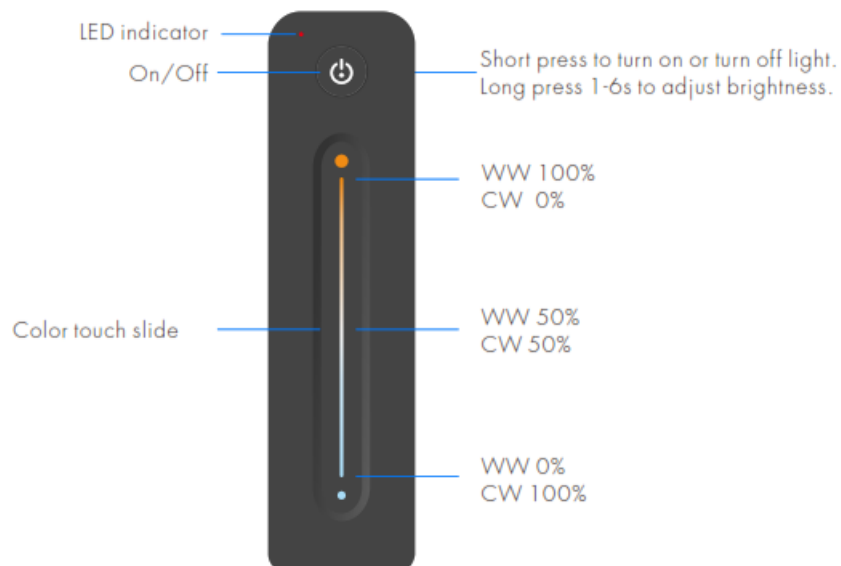


- **R13 1 zone RGB remote**

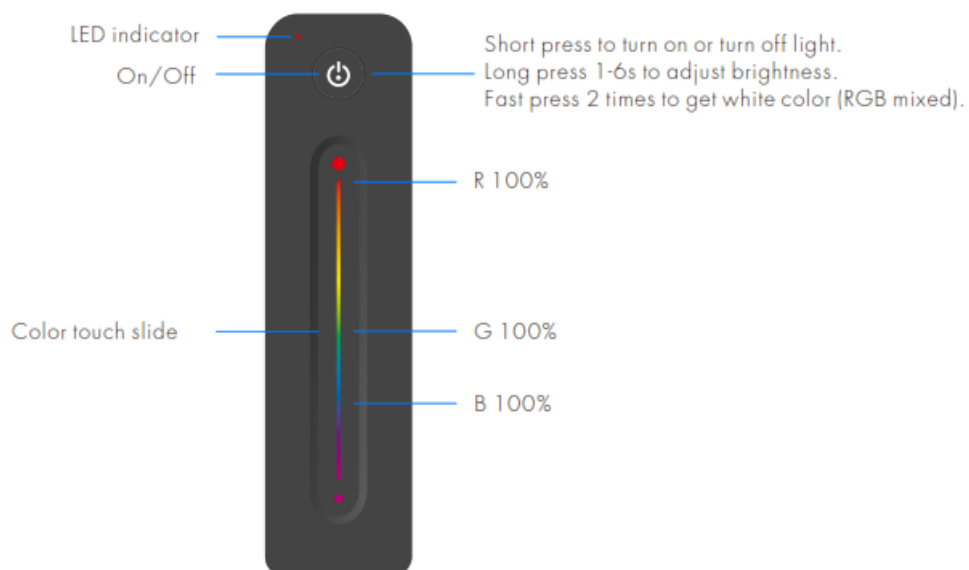

Safety information

1. Read all instructions carefully before you begin this installation.
2. When installing the battery, pay attention to the battery's positive and negative polarity.
After a long time without the remote control, remove the battery.
When remote distance becomes smaller and insensitive, replace the battery.
3. If no response from the receiver, please re-match the remote.
4. Gently handle the remote, beware of falling.
5. For indoor and dry location use only.

Documents / Resources

	SAGE LU MEI R11 Ultrathin Touch Slide RF Remote Controller [pdf] Instruction Manual R11, R12, Ultrathin Touch Slide RF Remote Controller, Touch Slide RF Remote Controller, RF Remote Controller, Remote Controller, R11, Controller
---	--