



sage BBL405 Kinetix Twist Blender User Guide

[Home](#) » [Sage](#) » sage BBL405 Kinetix Twist Blender User Guide 

Contents

- [1 sage BBL405 Kinetix Twist Blender](#)
- [2 SAGE® RECOMMENDS SAFETY FIRST](#)
- [3 IMPORTANT SAFEGUARDS](#)
- [4 Components](#)
- [5 EASTMAN TRITAN™ COPOLYESTER](#)
- [6 Functions](#)
 - [6.1 GETTING STARTED](#)
 - [6.2 MANUAL FEATURES](#)
 - [6.3 PRESET PROGRAMS](#)
- [7 Troubleshooting](#)
- [8 Care & Cleaning](#)
- [9 Guarantee](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)
- [11 Related Posts](#)



sage BBL405 Kinetix Twist Blender



SAGE® RECOMMENDS SAFETY FIRST

At Sage® we are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions.


IMPORTANT SAFEGUARDS

READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE

- A downloadable version of this document is also available at sageappliances.com
- Before using for the first time ensure your electricity supply is the same as shown on the label on the underside of the appliance.
- Remove and safely discard any packaging materials before first use.
- To eliminate a choking hazard for young children, safely discard the protective cover fitted to the power plug.
- This appliance is for household use only. Do not use the appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors.
- Misuse may cause injury.
- Fully unwind the power cord before operating.
- Position the appliance on a stable, heat resistant, level, dry surface away from the edge and do not operate on or near a heat source such as a hot plate, oven or gas hob.
- Vibration during operation may cause the appliance to move.
- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- Always ensure the appliance is turned OFF, unplugged at the power outlet and has been allowed to cool before cleaning, attempting to move or storing.
- Always turn the appliance to the OFF position, switch off at the power outlet and unplug at the power outlet when the appliance is not in use.

- Do not use the appliance if the power cord, plug, or appliance becomes damaged in any way. If damaged and maintenance other than cleaning is required please contact Sage Customer Service or visit sageappliances.com
- Any maintenance other than cleaning should be performed by an authorized Sage® service center.
- Children should not play with the appliance.
- Cleaning of the appliance should not be carried out by children unless they are 8 years or older and supervised.
- The appliance and its cord should be kept out of reach of children aged 8 years and younger.
- The installation of a residual current safety switch is recommended to provide additional safety when using all electrical appliances. Safety switches with a rated operating current not more than 30mA are recommended. Consult an electrician for professional advice.
- Always ensure the appliance is properly assembled as per instruction before use. Using the appliance without being properly assembled may cause product malfunction, product damage or pose safety risk including personal injury.
- Do not use the appliance on a sink drain board.
- Keep hands, fingers, hair, clothing as well as spatulas and other utensils away from moving or rotating parts during operation.
- Do not use the appliance for anything other than food and/or beverage preparation.
- In order to avoid the possible hazard of the appliance starting by itself due to inadvertent resetting of the overload protection, do not attach an external switching device (such as a timer) or connect the appliance to a circuit that can regularly switch the appliance on and off.
- Carefully read all instructions before operation and save for future reference.
- The appliance can be used by persons with reduced physical or mental capabilities or a lack of experience and knowledge, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- This appliance shall not be used by children.
- Do not leave the appliance unattended when in use.
- Allow the motor to rest for 1 minute between each use.
- Be careful when handling and cleaning blades, as they are very sharp. Mishandling of the blades may cause injury.
- Avoid putting the cup or jug on the motor base while the motor is still spinning.
- Do not operate without any ingredients in the cup or jug.
- Never attempt to operate with damaged blades, or with utensils, or any foreign objects inside the cup or jug.
- Do not put the cup or jug in extremes of heat or cold, for example placing a cold jug into hot water, or vice versa.
- Lid must be firmly secured to the jug before operation to ensure internal contents do not escape, spray or overflow.
- Do not remove the jug from the motor base while blender is in use.
- Do not use blender while OVERLOAD PROTECTION is flashing on the LCD. If this occurs, unplug the blender and wait for 30 minutes until the motor has cooled. Once cooled, you will be able to use the blender as usual again.
- Do not process hot or boiling liquids. Allow to cool before placing into the blender jug.

Components

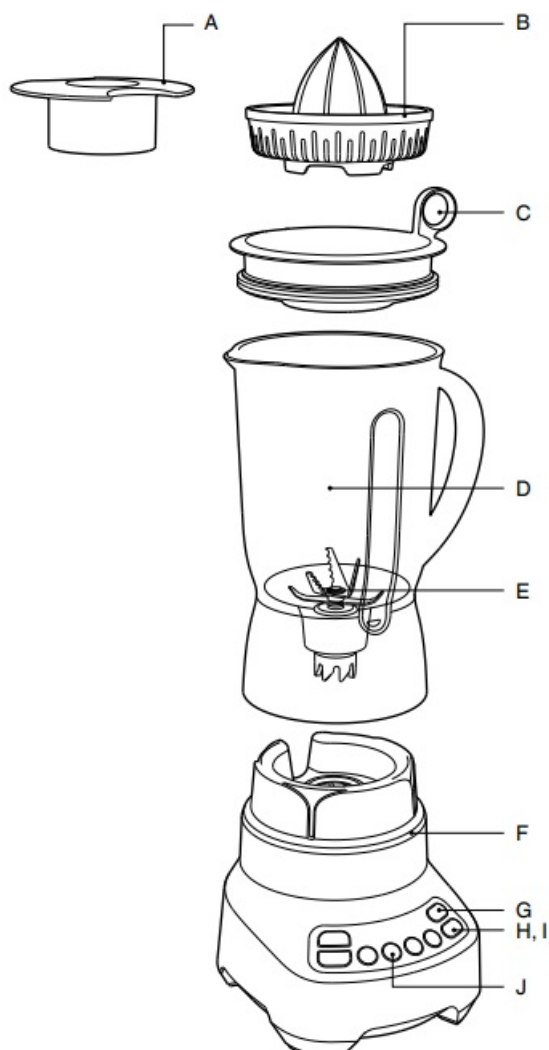

- **A.** Inner measuring cap
- **B.** Citrus cone
- **C.** Sage® Assist™ lid
- **D.** 1.4 litre BPA-free Eastman Tritan™ jug Impact resistant, shatterproof, and dishwasher safe
- **E.** MiniKinetix® blade and bowl system
- **F.** Overload protection
- **G.** Pulse
- **H.** Smoothie program
- **I.** Auto clean
- **J.** 4 electronic speeds

EASTMAN TRITAN™ COPOLYESTER

This blender jug is made with Eastman Tritan™ copolyester, which is a tough, BPA-free polymer used to make houseware products that can stand up to extreme use and repeated dishwasher cleaning. Products made from Tritan™ are impact resistant and shatter resistant and stay clear and durable even after hundreds of cycles in the dishwasher.

Functions



GETTING STARTED

ON / OFF

The ON / OFF button powers the unit into READY mode.

CANCEL button

Cancels any function.

MANUAL FEATURES

Electronic speed control

There are 4 electronic speed buttons from MIX through to LIQUIFY.

MIX combines more delicate foods with

a folding motion, and is good for combining wet and dry ingredients.

LIQUIFY is the fastest setting, and is ideal for breaking down ingredients to make cocktails and other finely blended mixtures.

PULSE

The momentary pulse button is ideal for processing foods that need sudden bursts of power. It also encourages ingredients to move around the jug.

PRESET PROGRAMS

SMOOTHIE (60 seconds)

This program has been optimised to combine and aerate frozen and liquid ingredients together. The SMOOTHIE function has a unique processing technique that blends the denser ingredients at lower speed, then increases in speed as ingredients thicken. This will happen several times while blending smoothies. The programming also circulates the ingredients for maximum aeration and creamy texture.

AUTO CLEAN (60 seconds)

Use to remove most of the ingredients off the blender walls and blades. Add 2 cups (500ml) warm soapy water, and press the clean button. For harder to clean, sticky or thick ingredients, add ½ teaspoon of dish liquid detergent for extra cleaning power. For best results, clean the blender jug this way immediately after use. Soaking can damage the surface of the jug, especially if citrus has been blended. After washing in detergent, rinse with plain water and allow to dry immediately.

NOTE

If the blender is running and a different button is pressed, the speed will automatically switch to that program without stopping.

Troubleshooting

Motor doesn't start or blade doesn't rotate

- Check that the power plug is properly inserted into the power outlet.
- Check the ON / OFF button and selected function button is illuminated.
- If all lights are flashing in unison, refer to the 'blender overload' solutions below.

Food is unevenly chopped

- This can happen when too much food is being blended at one time. Try a smaller amount, and work in batches if necessary.
- The ingredients may be too large. Try cutting into smaller pieces. For best results, ingredients should be in pieces no larger than 2cm.

Food is chopped too fine or is watery

Try blending for shorter period of time. Use the PULSE function for better control.

Food sticks to blade and jug

The mixture may be too thick. Try adding more liquid and/or using a slower speed for blending.

Blender overloaded (all lights flashing)

- This blender has overload protection to prevent damage to the motor. Unplug and allow the blender to cool down for 15 minutes. Once cooled, you will be able to use the blender as usual again.
- We recommend blending in smaller batches or cutting ingredients into smaller batches.

Care & Cleaning

Jug and lid

To avoid food drying on blades, jug and lid, follow the below steps as soon as possible after use:

- Rinse most of the ingredients off the jug and lid.
- Add 500ml of warm water and press the AUTO CLEAN button. If thick or sticky ingredients require extra cleaning power add a few drops of dish liquid detergent.
- Rinse the jug and lid again and/or wash separately in warm soapy water with a soft cloth or bottle brush.
- Take care to rinse all detergent off the jug after cleaning.
- It is most effective to clean the jug immediately after use.

Citrus

Exposure to citrus oil may affect the clarity and longevity of the blending jug. After washing in detergent, rinse with plain water thoroughly, and allow to dry immediately. Do not soak.

Motor base

To clean the motor base, wipe with a soft, damp cloth then dry thoroughly. Wipe any excess food particles from the power cord.

Guarantee

2-YEAR LIMITED GUARANTEE

Sage Appliances guarantees this product for domestic use in specified territories for 2 years from the date of purchase against defects caused by faulty workmanship and materials. During this guarantee period, Sage Appliances will repair, replace, or refund any defective product (at the sole discretion of Sage Appliances).

Cleaning agents

Do not use abrasive scouring pads or cleaners on either the motor base or the jug, as they may scratch the surface. Use only warm soapy water with a soft cloth.

Dishwasher

The blender jug and lid can be washed in the dishwasher on a standard wash cycle. Jug can be placed on the bottom shelf, however the lid and inner measuring cap should be washed on the top shelf only. The inner lid and citrus cone should be hand washed only.

Stubborn food stains and odors

Strong smelling foods such as garlic, fish and some vegetables such as carrots may leave an odor or stain on the blender jug and lid. To remove, soak blender jug and lid for 5 minutes in warm soapy water. Then wash with a mild detergent and warm water, rinse well and dry thoroughly. Store jug with the lid off.

Storage

Store your blender upright with the blender jug assembled on the motor base, or beside it. Do not place anything on top. To allow air to circulate, keep the lid off.

All legal warranty rights under applicable national legislation will be respected and will not be impaired by our guarantee. For full terms and conditions on the guarantee, as well as instructions on how to make a claim, please visit www.sageappliances.com.

www.sageappliances.com


Registered in Germany No. HRB 81309 (AG Düsseldorf). Registered in England & Wales No. 8223512.

Due to continued product improvement, the products illustrated or photographed in this document may vary slightly from the actual product.

Copyright BRG Appliances 2019.

BBL405/SBL405 UG5 – E19

Documents / Resources

	<p>sage BBL405 Kinetix Twist Blender [pdf] User Guide</p> <p>BBL405, SBL405, BBL405 Kinetix Twist Blender, BBL405, Kinetix Twist Blender, Twist Blender, Blender</p>
---	--

References

- [S Sage Appliances](#)
- [S Sage Appliances](#)