

Sage BMO870 Combi WaveTM 3 in 1



Sage BMO870 Combi WaveTM 3 in 1 User Guide

[Home](#) » [Sage](#) » Sage BMO870 Combi WaveTM 3 in 1 User Guide 

Contents

- 1 Sage BMO870 Combi WaveTM 3 in 1
- 2 Product Information
- 3 Product Usage Instructions
- 4 IMPORTANT SAFETY INSTRUCTIONS
- 5 SPECIFICATIONS
- 6 Components
- 7 Assembly
- 8 Functions
- 9 Cooking Functions
- 10 Hints & Tips
- 11 Care & Cleaning
- 12 Troubleshooting
- 13 Guarantee
- 14 Documents / Resources
 - 14.1 References

The Sage logo, featuring the word 'Sage' in a bold, black, sans-serif font with a registered trademark symbol (®) to the upper right.

Sage BMO870 Combi WaveTM 3 in 1



Product Information

Specifications

- **Model:** BMO870/SMO870

Sage Recommends Safety First

At Sage, we prioritize safety in the design and manufacturing of our consumer products. We kindly request that you also exercise caution when using any electrical appliance by following the precautions below:

Important Safety Instructions

When using electrical appliances, it is essential to adhere to basic safety precautions, including:

READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE

1. Children should be supervised closely when using the appliance.
2. Do not overcook food. Pay attention when cooking with paper, plastic, or other combustible materials.
3. Remove wire twist-ties from paper or plastic bags before placing them in the oven.
4. If materials inside the oven ignite, keep the oven door closed, turn off the oven, and disconnect the power cord or shut off power at the fuse or circuit breaker panel.
5. Do not use the cavity for storage purposes. Remove paper products, cooking utensils, or food from the cavity when not in use.
6. Ensure all surfaces are level, clean, and free of water or any other substances to prevent damage to the appliance.

Important Safeguards for All Electrical Appliances

The glass used in this appliance is specially treated to be stronger, more durable, and safer than ordinary glass. However, it is not unbreakable. If dropped or struck extremely hard, it may break or weaken and could shatter into many small pieces without apparent cause. Please follow these guidelines:

- Inspect the power cord and actual appliance for any damage. Do not use if damaged in any way or if it is not

working properly or has been dropped. Immediately stop using the appliance, unplug or disconnect power, and call Sage Consumer Support.

- Do not use the appliance outdoors, in moving vehicles, boats, or planes.
- Do not tamper with the power cord or power outlet while the unit is operating.
- It is advisable to have a safety switch with a rated residual operating current not exceeding 30mA installed in the electrical circuit supplying the appliance. Consult your electrician for professional advice.
- Ensure the appliance is plugged into a properly grounded outlet. If you are unsure about the power outlets being properly grounded, consult your electrician.
- Place food containers on a suitable microwave-proof container before placing them onto the glass turntable.
- Under no circumstances should you modify the power plug or use an adapter.

Product Usage Instructions

Components

The Combi Wave™ 3 in 1 (Model: BMO870/SMO870) consists of the following components:

- Combi Wave™ 3 in 1 unit
- Glass turntable
- Power cord

Assembly

To assemble the Combi Wave™ 3 in 1:

1. Place the unit on a stable and level surface.
2. Ensure all surfaces are clean and free of water or any other substances.
3. Insert the glass turntable securely into the designated area inside the unit.
4. Connect the power cord to a properly grounded outlet.

Functions

The Combi Wave™ 3 in 1 offers multiple functions, including:

- Microwave cooking
- Convection cooking
- Grilling

Cooking Functions

The Combi Wave™ 3 in 1 provides various cooking functions to suit your needs. Please refer to the full user manual for detailed instructions on each cooking function.

Hints & Tips

Here are some helpful hints and tips for optimal usage of the Combi Wave™ 3 in 1:

- Follow the recommended cooking times and power levels for different types of food.
- Use microwave-safe containers and covers.
- Allow food to stand after cooking to ensure even heat distribution.
- Clean the interior and exterior of the unit regularly to maintain performance.

Care & Cleaning

To ensure proper maintenance and longevity of the Combi Wave™ 3 in 1:

- Always unplug the appliance before cleaning.
- Use a soft, damp cloth to clean the exterior surfaces.
- Remove and wash the glass turntable and other removable parts separately.
- Refer to the full user manual for detailed cleaning instructions.

Troubleshooting

If you encounter any issues with the Combi Wave™ 3 in 1, please consult the troubleshooting section in the user manual. If the problem persists, contact Sage Consumer Support for assistance.

Guarantee

The Combi Wave™ 3 in 1 comes with a guarantee. Please refer to the guarantee section in the user manual for more information.

FAQ

• Q: Can I use the Combi Wave™ 3 in 1 outdoors?

A: No, the appliance is not designed for outdoor use. It should only be used in indoor environments.

• Q: Can I modify the power plug or use an adapter?

A: No, under no circumstances should you modify the power plug or use an adapter. Doing so may result in damage to the appliance or pose safety risks.

• Q: How should I clean the Combi Wave™ 3 in 1?

A: Always unplug the appliance before cleaning. Use a soft, damp cloth to clean the exterior surfaces. Remove and wash the glass turntable and other removable parts separately. Refer to the full user manual for detailed cleaning instructions.

SAGE RECOMMENDS SAFETY FIRST

At Sage we are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances basic safety precautions should be followed, including the following:

WARNING

To reduce the risk of burns, explosion, electric shock, or to prevent damage to property, personal injury, or loss of life, or exposure to excessive microwave energy:

READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE

- A downloadable version of this document is also available at sageappliances.com
- Do not remove the microwave guide cover placed on the right panel inside the cavity. This sheet is not part of the packaging and needs to remain inside the microwave cavity.
- Remove and safely discard any packaging material and promotional labels before using the Sage microwave oven for the first time.

- Read and follow the specific “PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY”.
- This appliance must be grounded. Connect only to properly grounded outlet. See “GROUNDING INSTRUCTIONS”.
- Microwave oven is not intended to be mounted below a height of 916mm above the floor level.
- The outer housing of the oven may be hot during and after cooking. Please do not touch hot surfaces. Always keep the power cord of this oven, and those of other appliances near the oven, clear from the oven housing.
- The oven is not suitable to be used in a small appliance enclosure. Ensure to leave adequate space all around the oven. Minimum space of 20cm is recommended.
- Install and locate this appliance only in accordance with the supplied installation instructions.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should not play with the appliance.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years old.
- Some products such as whole eggs and sealed containers (for example, closed glass jars), have the potential to explode and should not be heated in this oven.
- Use this appliance only for its intended use as described in the manual. Do not use corrosive chemicals or vapours in this appliance. This type of oven is specifically designed to heat, cook, or dry food. It is not designed for industrial or laboratory use.

WARNING

As with any appliance, close supervision is required when used by children.

- Regularly inspect the power cord. Do not operate this appliance if it has a damaged cord or plug when it is not working properly, or when it has been damaged or dropped. Immediately stop using the appliance and contact Sage Consumer Support.
- The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.
- This appliance shall be serviced only by qualified personnel. Contact Sage Consumer Support or the nearest Sage Authorized Servicer for examination, repair or adjustment.
- Do not cover or block any openings on the appliance.
- Do not store this appliance outdoors.
- Do not use this product near water, for example, near a kitchen sink, in a wet basement, near a swimming pool, or similar location.
- Do not immerse the cord or plug in water.
- Keep the cord away from heated surfaces.
- Do not let cord hang over edge of table or counter, touch hot surfaces or become knotted.
- To reduce the risk of fire in the oven cavity:
 1. Do not overcook food. Carefully attend to appliances when paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.
 2. Remove wire twist-ties from paper or plastic bags before placing the bag in the oven.
 3. In the event materials inside the oven ignite, keep the oven door closed, turn the oven off, disconnect the power cord, or shut off power at the fuse or circuit breaker panel.

4. Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils, or food in the cavity when not in use.
- Always operate the microwave oven on a heat-resistant surface. Do not use on a cloth-covered surface, near curtains or other flammable materials.
 - Do not use the oven without the turntable roller and glass turntable in place. Ensure the glass turntable is positioned correctly into the indents on the turntable roller.
 - Never use the microwave oven without food or water in the oven cavity. Operating the microwave oven when empty could cause damage to the appliance.
 - Do not leave the microwave oven unattended when in use.
 - Do not touch hot surfaces. Allow the microwave oven to cool entirely before moving or cleaning any parts.
 - Always press the STOP/CLEAR button and return to the default screen before unplugging the unit from the wall outlet: The appliance is to be left unattended; if not in use; before moving or assembly; when storing the appliance; or before cleaning.
 - Keep the appliance clean. Follow the cleaning instructions provided in this book.
 - When cleaning surfaces of the door and oven that come together on closing the door, use only mild, non-abrasive soaps, or detergents applied with a sponge or soft cloth. The use of corrosive chemicals in cleaning will damage the appliance and may result in radiation leaks.
 - The appliance shall not be cleaned with a steam cleaner.
 - Do not place the microwave oven near the edge of a bench or table during operation.

Ensure all surfaces are level, clean and free of water or any other substances.

- Do not place the microwave oven on or near a hot gas or electric burner, or where it could touch a heated oven.
- When using the microwave oven, provide adequate air space above and on all sides for air circulation.
- The microwave oven is to be used as a free-standing unit. Do not build in or enclose the microwave oven in a cabinet or confined space as it will cause overheating.
- Do not use the microwave oven on a metal surface, for example, a sink drainboard.
- The microwave oven is not intended to be operated employing an external timer or separate remote-control system.
- Liquids, such as water, coffee or tea can overheat beyond the boiling point without appearing to be boiling. Visible bubbling or boiling when the container is removed from the microwave oven is not always present.

THIS COULD RESULT IN VERY HOT LIQUIDS SUDDENLY BOILING OVER WHEN THE CONTAINER IS DISTURBED OR A UTENSIL IS INSERTED INTO THE LIQUID.

IMPORTANT SAFEGUARDS FOR ALL ELECTRICAL APPLIANCES

- This appliance is for household use only. Do not use the appliance for anything other than its intended purposes as described in this manual.
- Do not use outdoors. Do not use in moving vehicles, boats or planes.
- Fully unwind the power cord before use.
- We recommend a separate circuit dedicated to serving only this microwave oven.
- A short power cord is supplied to reduce the risks resulting from becoming entangled in or tripping over a longer cord.

- To protect against electric shock do not immerse the power cord, power plug or appliance in water or any other liquid.
- Do not disconnect or tamper with the power cord or the power outlet while the unit is operating.
- When storing the microwave oven, loosely wind the cord. Do not wrap the cord around the microwave oven.
- The glass window has been specially treated to make it stronger, more durable and safer than ordinary glass, however, it is not unbreakable. If dropped or struck extremely hard, it may break or weaken, and could at a later time shatter into many small pieces without apparent cause.
- Regularly inspect the power cord and actual appliance for any damage. Do not operate if damaged in any way, or if it is not working properly, or if it has been dropped. Immediately stop using the appliance, unplug or disconnect power and call Sage Consumer Support.
- For any maintenance other than cleaning, contact Sage Consumer Support.
- Position the appliance at a minimum distance 20cm away from side walls and 20cm from top, curtains and other heat or steam-sensitive materials and provide adequate space above and on all sides for air circulation.
- Do not disconnect the microwave oven from the power supply by pulling on the cord.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances.
- A safety switch with a rated residual operating current not exceeding 30mA should be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.
- The appliance must be used on a properly grounded outlet. If you are not sure if the power outlets are properly grounded, please consult your electrician.
- Do not, under any circumstances, modify the power plug or use an adapter.

SPECIAL SAFETY INSTRUCTIONS FOR YOUR MICROWAVE OVEN

- The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloths and similar may lead to risk of injury, ignition or fire.
- Ensure all food containers and/or plates are suitable for use in the microwave oven. This should be done prior to preparing food for heating or cooking in the microwave oven. Always monitor foods and liquids heating or cooking in the microwave oven due to the possibility of containers igniting.
- All suitable glass or plastic food containers should be used in strict compliance with the cookware manufacturer's recommendations.
- Food and/or liquids should not be heated or cooked directly on the glass turntable.
- They must be placed into a suitable microwave-proof container before placing onto the glass turntable.
- Food and/or liquids should not be heated or cooked in plastic or paper containers or bags, unless specified as suitable for use by the manufacturer, due to the possibility of containers exploding or igniting.
- Metal clips or twist ties should be removed from the packaging as these could cause sparking and/or fire.
- Do not use recycled paper or paper towels when cooking. Recycled paper may contain small metal or other impurities which could cause sparking and/or fire.
- Do not use metal containers or utensils in the microwave oven as these could cause sparking and/or fire except the accessories provided with this microwave oven.
- Food-grade foil should not be used in the microwave oven as this could cause sparking and/or fire.
- Ensure that lids and caps covering containers are removed prior to placing liquids and/or foods into the microwave oven.
- Feeding bottles and baby food jars should have lids and caps removed before warming or heating in the

microwave oven. To avoid burns or scalding after heating, the contents should be stirred or shaken and the temperature checked before serving.

- Always ensure the temperature of food or drink that has been heated or cooked in the microwave oven has been tested before eating, drinking or serving.
- Some containers and/or plates may appear suitable for use in the microwave oven but may be coated in a glaze that will absorb the microwave energy, overheat and cause the container to crack. The glaze may also prevent the food from heating/cooking.
- Utensils should be checked to ensure that they are suitable for use in microwave ovens.
- Allow proper cool-down time for heated food or drink before handling or serving from the microwave oven. Always test before eating, drinking or serving to others, especially children, disabled or elderly.
- Allow the glass turntable to cool down to room temperature before washing or placing in cold water.
- If cooking meat, poultry or fish, always make sure they are cooked thoroughly and measured with an appropriate temperature registering device to help protect against foodborne illness.
- Do not heat popcorn in the microwave oven unless it has been commercially packaged for microwave oven use. There may be several unpopped kernels that may overcook and burn when popping popcorn.
- Do not cook any food surrounded by a membrane (such as potatoes, chicken liver, egg yolks, oysters, etc) without first piercing the membrane several times with a fork or similar utensil.
- “Boilable” cooking pouches, bags or containers should always be slit, pierced or vented as directed by the package. If they are not, plastic or packaging could burst resulting in burns and injury.
- Always allow items to cool down before opening or handling. Use caution when opening or handling.
- Use caution when opening bags, pouches, lids or containers as hot steam, food or liquid can escape causing burns or injury.
- Eggs in the shell and whole hard-boiled eggs should not be cooked or heated in the microwave oven as they may explode during cooking, at the end of cooking or after removing from the microwave oven.
- Caution should be taken when toasting and grilling high-oil-content foods, such as pine nuts and walnuts. They may catch fire. If this occurs, please keep the oven door closed switch it off and unplug the oven until the flame has extinguished.
- Do not heat oil or fat in the microwave oven. Doing so may cause the microwave oven and/ or the oil to overheat and/or ignite.
- If smoke is observed, switch off and unplug the microwave oven at the power outlet. Keep the door closed to stifle any flames.
- If you see any sparks, arcing or flashing within the microwave oven, press the STOP/CLEAR button and correct the problem or contact Sage Consumer Support for assistance.
- Wipe the oven cavity with a soft, damp cloth after each use. Leaving food residue, grease or fat in the cavity could cause the microwave oven cavity to overheat and may cause the microwave oven to smoke or catch fire.
- The microwave oven should be cleaned regularly and any food splattering inside the cavity should be removed. Failure to maintain the microwave oven in a clean condition could lead to deterioration of the surface, adversely affecting the life of the microwave oven and possibly resulting in a hazardous situation.
- Do no attempt to operate the microwave oven by any method other than those described in this instruction book.
- When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.

WARNING

Liquids and other foods must not be heated in sealed containers since they are liable to explode.

COMBINATION MICROWAVE OVENS

- Oversized food or oversized metal utensils should not be inserted in a microwave oven as they may create fire or risk of electric shock.
- Do not store any materials, other than the manufacturer's recommended accessories, in this microwave oven when not in use.
- Do not cover racks or any other part of the oven with metal foil. This will cause overheating of the microwave oven.
- Do not clean with metal scouring pads. Pieces can burn off the pad and touch electrical parts causing a risk of electric shock.
- Do not use paper products when the appliance is operated in combination mode.

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- Do not attempt to operate this oven with the door open since open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
- Do not place any object between the oven's front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.

WARNINGS

- If the door or door seals are damaged, the oven must not be operated. Immediately cease to use and call Sage Consumer Support for examination, repair or adjustment. It is particularly important that the oven door close properly and that there is no damage to the:
(1) Door (bent), (2) Hinges and latches (broken or loosened), (3) Door seals and sealing surfaces.
- Do not put any foreign material between the door and door jamb of the microwave oven

WARNING

It is hazardous for anyone other than a qualified service technician to carry out any service or repair operation.

SUPERHEATED LIQUIDS

To reduce this risk of injury to persons:

- Liquids, such as water, coffee or tea can become heated above their boiling points without the appearance of boiling or bubbling. THIS COULD RESULT IN VERY HOT LIQUIDS SUDDENLY BOILING OVER WHEN THE CONTAINER OR LIQUID SURFACE IS DISTURBED OR WHEN A SPOON OR UTENSIL IS INSERTED INTO THE LIQUID.
- Do not overheat the liquid.
- Stir the liquid both before and halfway through heating it.
- Do not use straight-sided containers with narrow necks.
- After heating, allow the container to stand in the microwave oven for a short time before removing the container.
- Use extreme care when inserting a spoon or other utensil into the container.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

NOTE

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used under the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna. Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

GROUNDING INSTRUCTIONS

WARNING

Improper use of the grounding can result in a risk of electric shock.

- This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire and grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.
- Consult a qualified electrician if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded.
- Do not use an extension cord. If the power supply cord is too short, have a qualified electrician or serviceman install an outlet near the appliance.

NOTE

Do not use an adapter plug with this appliance.

SPECIFICATIONS

• Power Consumption

220–240V 50Hz

- **Microwave Input Power:** 1300W
- **Oven Input Power:** 1700-2100W
- **Grill Input Power:** 880-1100W

• Microwave Output 1100W–2450 MHz

• Outside Dimensions

- 316mm/12.5 inches (H)
- 519mm/20.4 inches (W)
- 513mm/20.2 inches (D) with handle
- 490mm/19.3 inches (D) without handle

• Glass Turntable Diameter 315mm/12.4 inches


• Net Weight Approx. 15.4kg

- **Oven Capacity** 32 Litres

These specifications may change without notice.

FOR HOUSEHOLD USE ONLY SAVE THESE INSTRUCTIONS

Components

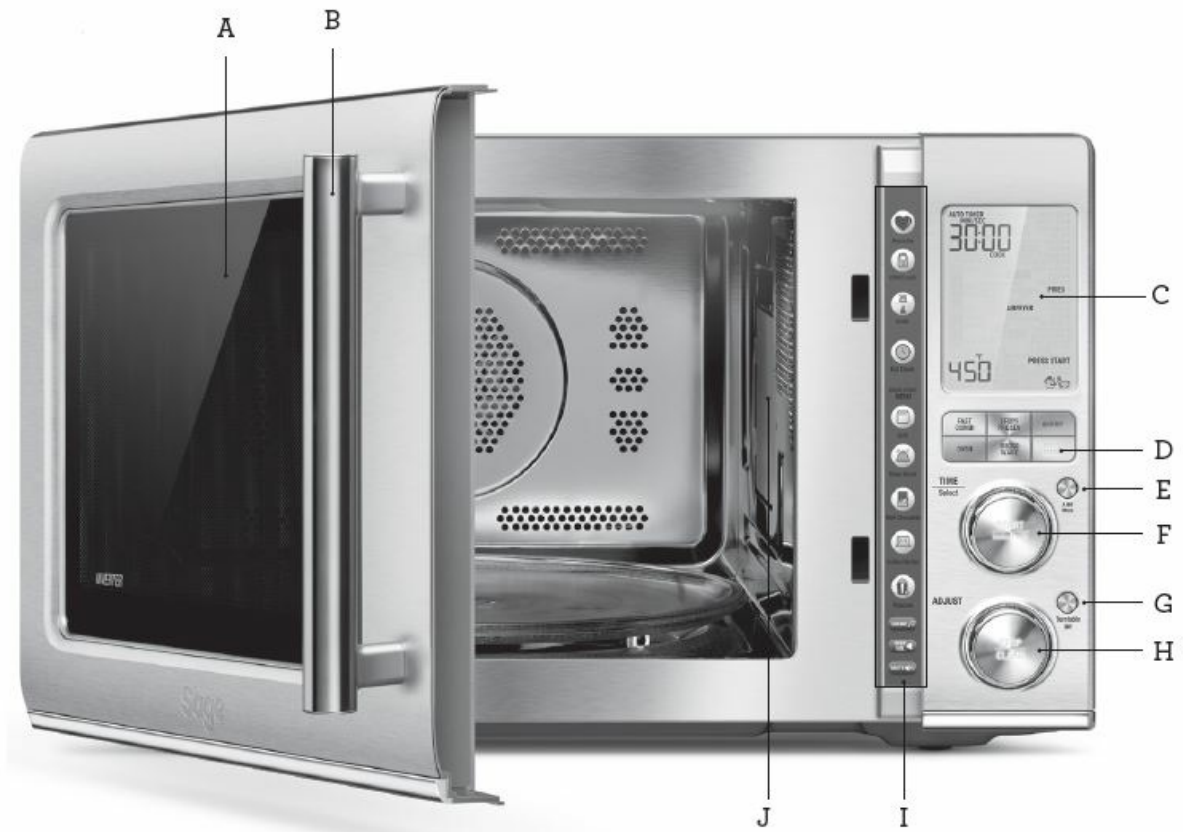

- **A. Viewing window**
- **B. Door handle**
Pull the handle to open.
- **C. LCD screen**
- **D. Function buttons**
FAST COMBI, FROM FROZEN, AIR FRY, OVEN, MICROWAVE, FOOD MENU
- **E. A BIT MORE™**
- **F. Instant +30/START button and TIME/Select dial** Each press adds 30-second increments at 100% power.
- **G. TURNABLE OFF button**
Press once to stop the turntable from rotating during cooking. Press again to reactivate the turntable.
- **H. ADJUST dial & STOP/CLEAR button** Turn the dial to adjust the power level, weight & quantity that corresponds with the food type selected. Press once to pause without cancelling the program. Press twice (or more if necessary) to clear the display.
- **I. Shortcuts panel**
Refer to the operation section for a detailed explanation.
- **J. Microwave Guide Cover**
Do not remove to ensure a safe operation.

Included accessories:

- Combi Crisp™ Pan



- Trivet




Assembly

BEFORE FIRST USE

Before first use, remove all promotional stickers and packaging material. Carefully unpack the microwave oven and keep all the packing material until all the parts of the microwave oven have been found and the appliance has been assembled. It is recommended to keep all the packing material in a safe place in case you wish to repack the product for shipping purposes. To remove any dust that may have accumulated during packing, wash the turntable roller and glass turntable in warm soapy water, rinse in clean water then dry thoroughly. Wipe the interior and exterior of the microwave oven with a soft, damp cloth then dry thoroughly.

ASSEMBLING THE GLASS TURNTABLE

- Insert the turntable roller into position in the intended space in the oven cavity base.
- Place the glass turntable on top of the turntable roller, matching the indents of turntable roller at the centre area.

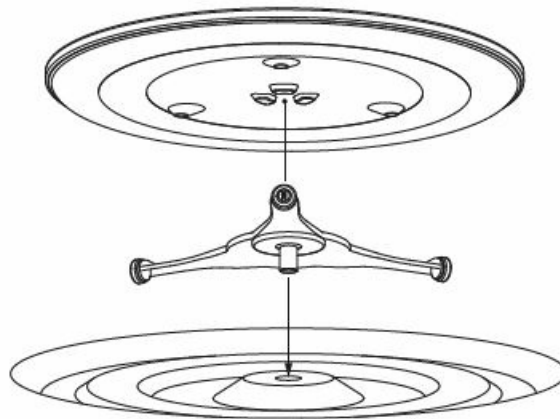

INSTALLATION AND TURNING ON THE MICROWAVE OVEN

- Select a level surface that provides enough open space for the intake and/or outlet vents.
- A minimum clearance of 20cm is required between the microwave and any adjacent walls.
- Leave a minimum clearance of 20cm above the microwave.
- Do not remove the legs from the bottom of the microwave.
- Blocking the intake and/or outlet openings can damage the microwave.
- Place the microwave as far away from the radios and TV as possible.
- Operation of a microwave may cause interference to your radio or TV reception.

- Plug your microwave into a standard household outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label.
- The microwave must not be placed in a cabinet.



WARNING

- To avoid an electrical circuit overload, it is recommended that no other appliances are plugged into the same circuit as your microwave oven (or other products) when it is in use.
- Do not install oven over a range cooktop or other heat-producing appliances. If installed near or over a heat source, the oven could be damaged and the warranty would be void.
- Check the oven for any damage, such as a misaligned or bent door, sealing surface, broken or loose door hinges and latches and dents inside the cavity or on the door. If there is any damage, do not operate the oven and contact a Sage service centre.
- Do not immerse the microwave oven, power cord or plug in water or any other liquid.

USING THE COMBI CRISP PAN

- The Combi Crisp pan is ideal for crisping up items that can become soggy in the microwave, such as pizza, chicken nuggets and fries. The Combi Crisp Pan can be used in either the High or Low position depending on the size of the food or how much browning is desired. To reduce the risk of injury or causing damage to the microwave oven, always place the Combi Crisp Pan securely in the centre of the turntable.
- Do not place plates or dishes of any kind on the Combi Crisp pan as they may overheat and become damaged.

CAUTION


The Combi Crisp pan and trivet are safe to use in microwave mode. But note that trivet and crisp pan can not be used at the same time and never on top of the other.

NOTE

Best to use the trivet in convection oven mode.(e.g. for roasting)

NOTE

- The non-slip silicone feet on the trivet are designed to help keep it steady and should NOT be removed.
- The silicone on the crisp pan legs and trivets are safe in microwave mode to use.
- When the use of the Combi Crisp pan is required for the selected cooking function, the words 'USE PAN' or 'USE PAN LEGS' will appear on the screen.

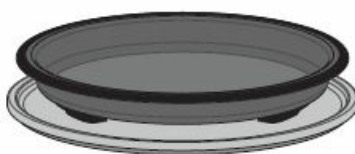

Screen displays 'USE PAN'




Screen displays 'USE PAN LEGS'


CAUTION

The Combi Crisp pan surfaces and legs are hot during and after operation. This accessory is only to be used with the SMO870.

Functions

SETTING THE CLOCK – 12 OR 24-HOUR CLOCK DISPLAY


- Press SET CLOCK on the shortcuts panel . The clock can be set as a 12- or 24-hour clock display.
- When entering the SET CLOCK setting, '12' will flash. To select a 12-hour clock display, press START to confirm the selection.

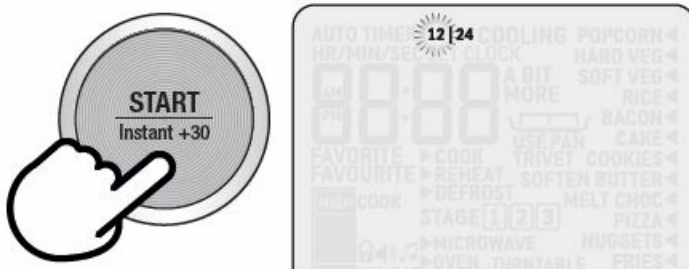


- To select a 24-hour clock display, turn the START/TIME or ADJUST dials clockwise. The number '24' will flash. Press the START button to confirm the selection.
- The default time is 12:00. The highlighted digits will flash to show it can be adjusted.



- Turn TIME dial to adjust hours and press START button to confirm.

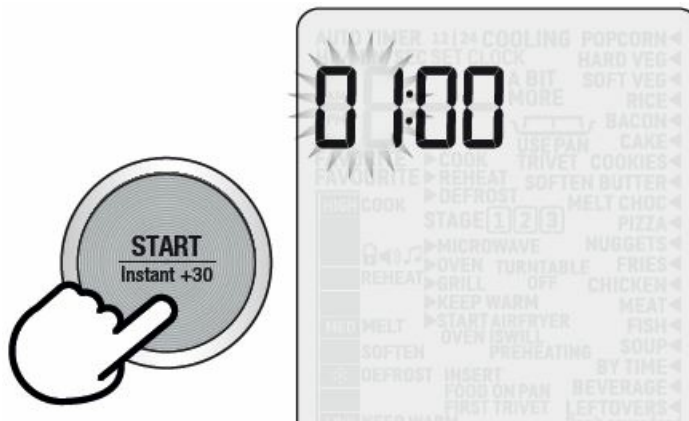


- Minutes now flash to show they can be adjusted. Turn TIME dial to adjust minutes and press START button to confirm.

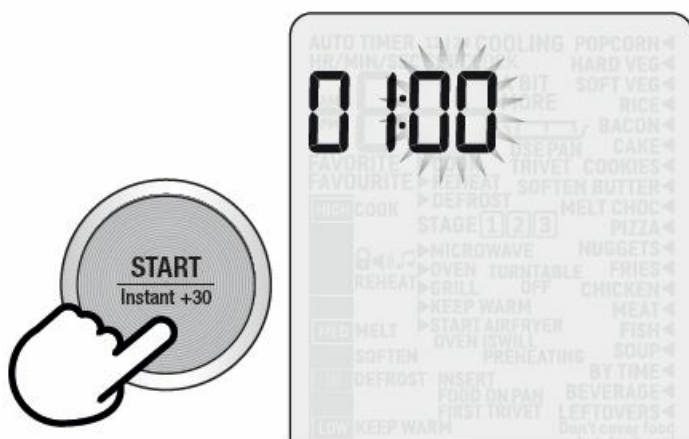


- **NOTE**
If you forget to press START to confirm hours or minutes, after 1 minute the microwave will automatically cancel your selection.

SETTING THE BEEP VOLUME

- This setting allows you to choose the beep volume of your microwave oven.
- Press BEEP VOL on the shortcuts panel. 
- The default beep volume is LOW.



- Turn START or ADJUST dials to toggle between LOW, MEDIUM and HIGH volume. Each selection will sound the BEEP VOL selected.

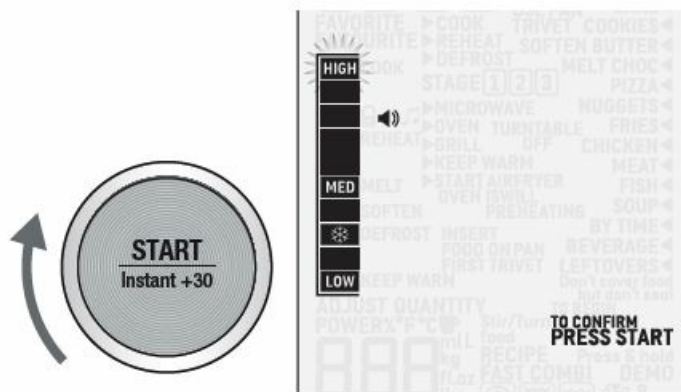


NOTE

If you forget to press START to confirm BEEP VOL, after 1 minute the microwave will automatically confirm your selection.

SOUND


This program allows you to choose between the new or the traditional sound suite when using the microwave oven.

By default, the microwave oven will play the new Sage-designated sound profile. If you wish to change, follow the below instructions:

- Open the door and press the SOUND button  shortcut panel.
- Turn the START/TIME or ADJUST dials to switch between the sound selections. Press START/TIME to confirm your selection, or press STOP/CANCEL dial to cancel your selection.
- To go back to the Sage designated sound profile, simply press once again on the SOUND button.

MUTE

This program allows you to mute the sound of the microwave oven during operation.


- When the MUTE program is selected, no tone will sound.
- Open the door and press the MUTE button  button on the shortcuts panel.
- To return to the previous volume setting, press the MUTE button a second time OR press the BEEP VOL button



on the shortcuts panel.

SETTING THE UNIT MEASURE



- Press UNITS on the shortcuts panel  .
- You can change from kilograms (kg) to ounces (oz) and from Celsius (°C) to Fahrenheit (°F).
- The default UNITS is kilograms (kg) and Celsius (°C). The highlighted kilograms (kg) will flash to show it can be adjusted. Turn START or ADJUST dial to toggle between kilograms (kg) and ounces (oz). Press START button to confirm.



SETTING CHILD LOCK

- This setting allows you to lock the interface of the microwave oven.
- Press CHILD LOCK on the shortcuts panel.
- The CHILD LOCK symbol will be displayed on the LCD screen




Child Lock



- To deselect the CHILD LOCK, press the CHILD LOCK button again.
- The CHILD LOCK symbol will disappear from the LCD screen and you will have full functionality of your microwave.

STANDBY

When the microwave has been idle for 1-minute, STANDBY mode will be activated. The backlight of the LCD screen will turn off and buttons will no longer be illuminated.

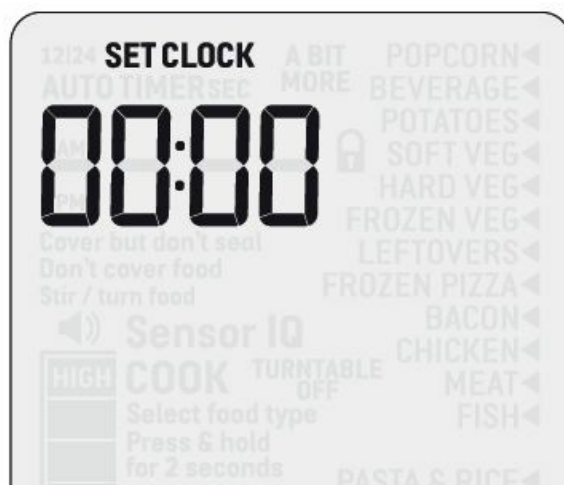

Standby mode when the time is not set.



Standby mode when the time is set.

To activate the microwave:

- Open the door OR;
- Press START OR;
- Turn any dial OR;
- Press any button

TURNTABLE OFF

The TURNTABLE OFF button allows you to stop the turntable rotation while cooking in the microwave. This setting is useful if using a square dish that will constrain the rotation. To activate the TURNTABLE OFF setting, press once on the button. 'Turntable off' will be displayed on the LCD screen.



- Press once again to enable the turntable to rotate again.
- At the end of the cooking cycle, the TURNTABLE OFF setting will automatically cancel itself.

TIME & POWER LEVEL ADJUSTMENT

- Select different times and microwave power levels by simply turning the TIME and ADJUST dials.
- The maximum microwave cooking time is 95 minutes (95:00).
- There are 10 power levels available.

Turning the TIME Dial


Turn TIME dial to adjust the time.




The default time will be 30 seconds.

Turning The ADJUST Dial

When the ADJUST dial is turned clockwise HIGH will flash and 100% will be displayed.

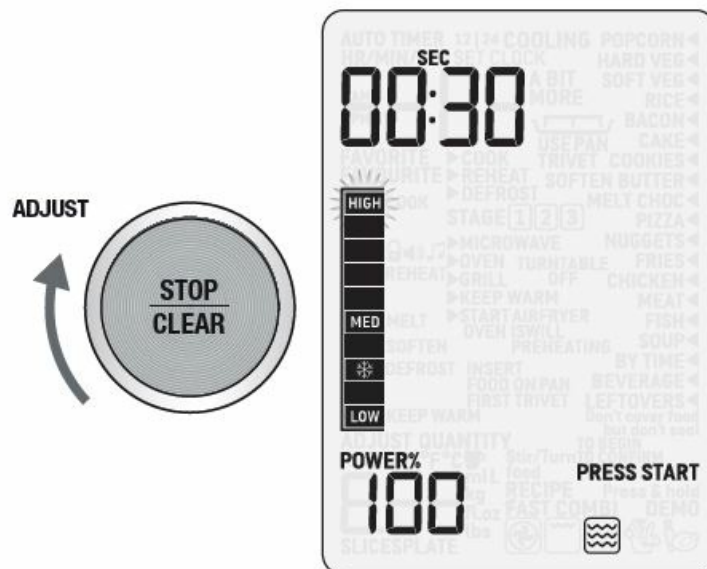


When the ADJUST dial is turned counterclockwise the POWER LEVEL % will start to decrease from 100% to 10%, in 10% increments.

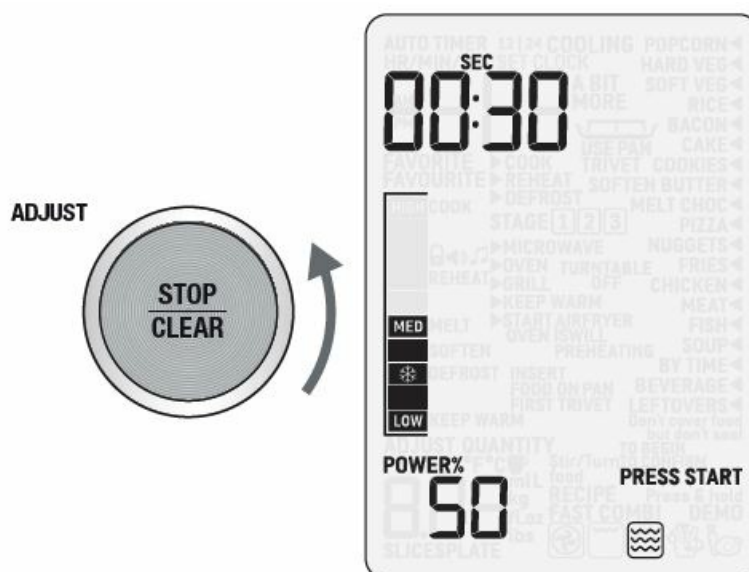

TEMPERATURE ADJUSTMENT


Turn the ADJUST dial counterclockwise to decrease the temperature in 10-degree increments, and turn the

1. Press **FOOD MENU** button and select **COOK** on the menu.
2. Turn **TIME/Select dial** to select food type.

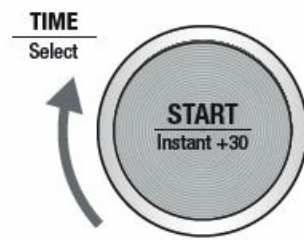


3. As the TIME/Select dial is turned the arrow shifts and points to what food type is selected. In this case, RICE is selected.

4. Once you have chosen FOOD TYPE, turn the ADJUST dial to adjust the quantity or weight.

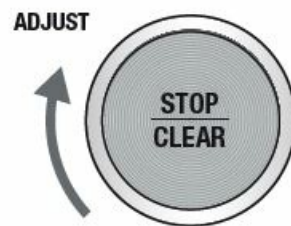


5. Press START to begin cooking.

6. Using the ADJUST dial the power level can be increased or decreased at any time during the cooking program.

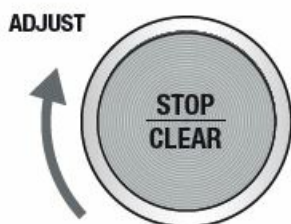

Adjusting the power level while heating does not affect the time.

Following the steps on the previous page, using the ADJUST dial, the temperature can also be increased or decreased at any time during the cooking program depending on the chosen FOOD TYPE from the FOOD MENU. For example: Cake

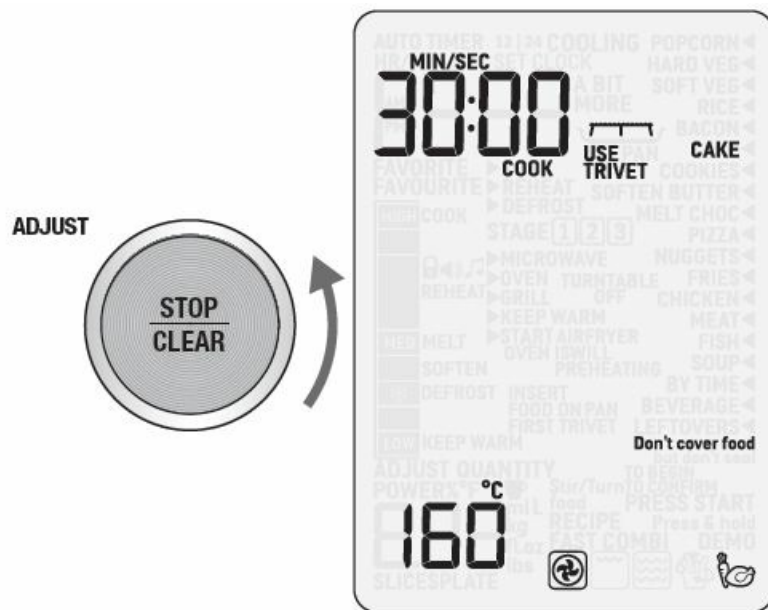

Adjusting the temperature while heating does not affect the time.

+30 SEC INSTANT START

Press the **START/Instant +30** button to begin cooking instantly for 30 seconds with 100% microwave power. Each additional press will increase the cooking time by 30 seconds.

WHEN COOKING IS FINISHED

- At the end of any cooking cycle, the microwave will play the designed cycle finish tone, and the word End will flash on the screen.
- The word End will stay flashing on the screen for 5 minutes or until the door is opened.



STOP/CLEAR

- Press STOP/CLEAR once to pause the current function.
- Press twice to clear and return to the default screen.
- When on the default screen, press STOP/CLEAR to show the clock.
- To return to the default screen press any button, turn any dial or open the door.


A BIT MORE BUTTON

Use A BIT MORE™ when cooking is finished and your food is not quite cooked or hot enough.




For example:

Press the FOOD MENU button.

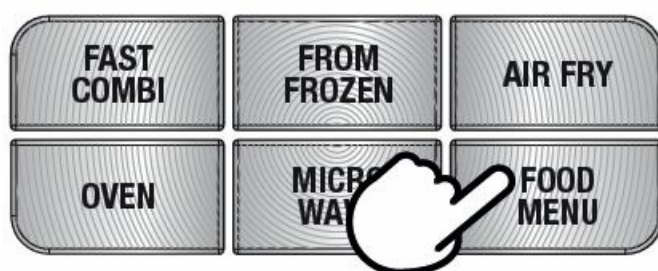

Turn the TIME/Select dial to select SOFT VEG.

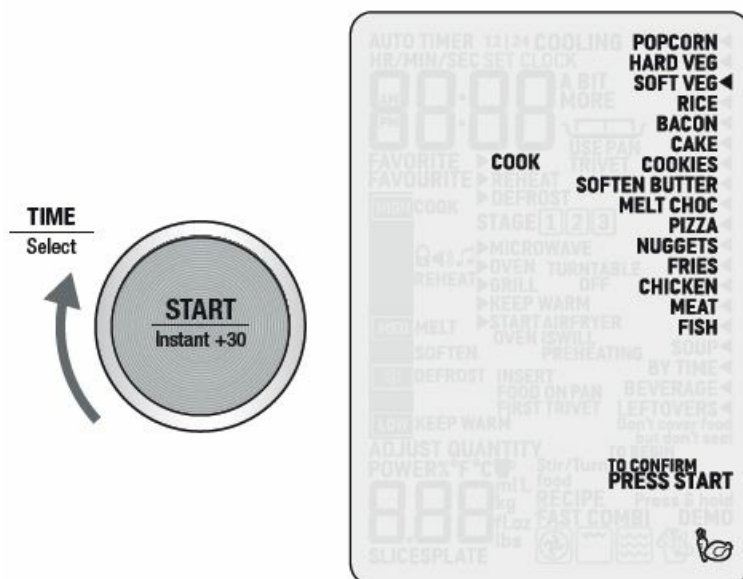

Press START to begin cooking.



Cooking process ends




At the end of the cooking process, if you think the food requires additional cooking time, you can select the 'A BIT MORE™' setting. Close the microwave door and press the A BIT MORE™ button to add A BIT MORE™ cooking time. The timer will start to count down.



NOTE

As soon as the A BIT MORE™ button is pressed the microwave will start cooking. If A BIT MORE™ is pressed and there is no previous food menu or SHORTCUT setting selected, the microwave will default to the basic mode and add 20 seconds at 100% power.


KEEP WARM

- Keep Warm allows you to stop food from going cold while completing other tasks. This program operates the oven at 70°C, from 5 minutes to 2 hours. The default time is 10 minutes.
- To use the Keep Warm setting, open the door and then press KEEP WARM button  on the shortcuts panel.

FAVOURITE

- The FAVOURITE setting will save your most used and favourite cook, reheat or defrost setting.
- At the press of a button, your favourite program can be duplicated time after time.

To set the microwave to your favourite setting:


1. Set the cooking time.
2. Open the microwave door.
3. Press and hold the FAVOURITE button  on the shortcuts panel for 2 seconds or until the FAVOURITE is displayed on the LCD.

NOTE

The microwave will save this setting for future use. Pressing the FAVOURITE button next time will display your saved FAVOURITE setting on the shortcuts panel. To change your FAVOURITE setting at any time, repeat steps 1 to 3 above.

Cooking Functions

Depending on the FUNCTION and the FOOD TYPES selected, the MICROWAVE, OVEN, GRILL, AIR FRY or FAST COMBI icons will be displayed on the LCD SCREEN.

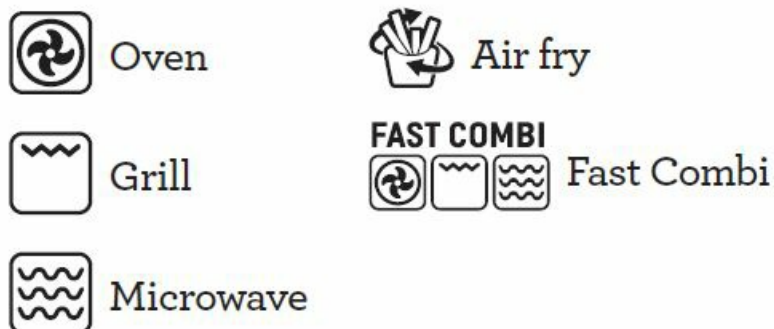

NOTE

Go to our website Sage.com to discover many recipes created for the Combi Wave™ 3-in-1 Microwave oven.

FAST COMBI




The FAST COMBI function is designed to cook your favourite dishes faster than in a traditional oven. The FAST COMBI function will alternatively use the microwave, the convection oven and the grill in order to reach the selected cooking temperature. This combination of the three functions helps the microwave reach the cooking temperature more quickly than a traditional oven, and maintains the temperature inside the cavity, for an optimal food result. The FAST COMBI setting is ideal for cooking gratins, bake dishes, roast vegetables or different types of meat. Refer to the 'Instructions & Tips' sticker on the microwave. For best results, it is recommended to use the provided Combi Crisp pan except when cooking foods that require a specific baking dish or pan. Place other dishes or pans on the provided trivet for best results. Depending on the amount of food being cooked, use the Combi Crisp Pan in a low or high position.

Press 'FAST COMBI' button on the main interface to enter FAST COMBI function. Turn the START/TIME dial to select the cooking time, from 1 to 90 minutes. Then turn the ADJUST to select the cooking temperature, from 150°C to 230°C.



At the end of the cooking program, allow the food items to stand for 5 minutes before removing and serving.

FROM FROZEN

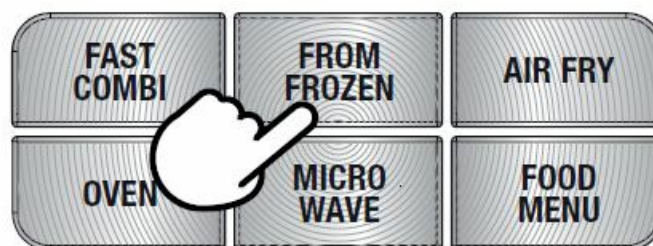

The FROM FROZEN function is designed to perfectly cook different types of meat, from frozen to a perfectly cooked result. The function is using the microwave, the convection and the grill alternately in two different cooking stages.

NOTE

To use this function, it is recommended to season and marinate the meat before freezing.

- Place the food item into the Combi Crisp pan, in the low position.
- Press the FROM FROZEN button on the main interface to enter the FROM FROZEN function. Select the desired type of meat between chicken, meat and fish by turning the START/ TIME or the ADJUST dials. Press Start to select.
- Turn the ADJUST dial to adjust quantity or weight. The minimum amount is 200g and the maximum amount is 1kg. Press START to begin cooking.

- Halfway through the cooking program, the oven will beep and STIR/TURN will flash (except for the FISH setting). Open the door or press the STOP/CLEAR button once to pause. Turn the food items OVER and press START to continue.
- During FROM FROZEN, the different cooking stages will be displayed on the screen.
- The first stage is designed to defrost the food, by using a microwave only.



- The second stage is designed to cook food using the suitable function for the food type.




- Depending on the amount/weight selected, the final cooking time will vary from 16 to 60 minutes.

NOTE

When cooking chicken, rest the meat, and cover for five minutes after the cooking cycle has finished.


AIR FRY

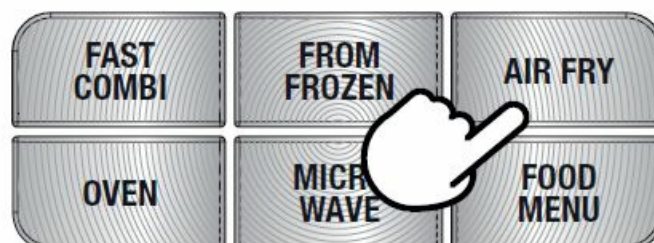

- The AIR FRY function is designed to air fry food items and get crispy golden results in the microwave oven, thanks to the Element IQ® system. Refer to the 'Instructions & Tips' sticker on the microwave.
- Press AIR FRY button on the main interface to enter the AIR FRY function. The LCD screen will show 'AIR FRYER WILL PREHEAT. INSERT PAN'. Place the Combi Crisp pan in high position inside the microwave for

the preheating cycle.

- Turn the START/TIME dial to select the cooking time, from 1 to 60 minutes. Then turn the ADJUST to select the cooking temperature, from 200°C to 230°C.

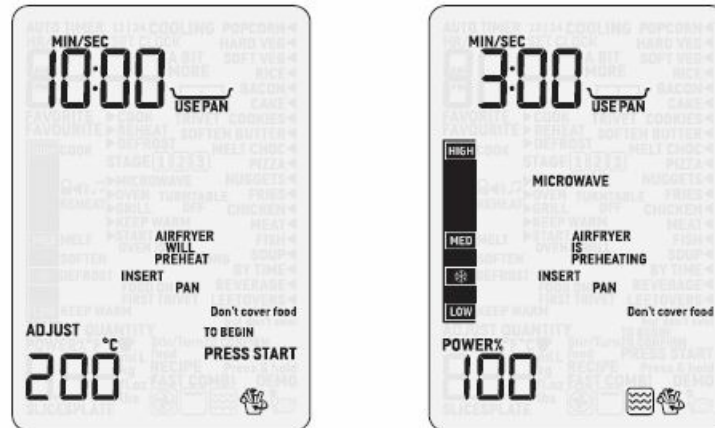


- At the end of the 3-minute preheating cycle, an alert tone will sound and the screen will indicate 'INSERT FOOD ON PAN'. Open the door to place the food on the pan, and press START to continue.
- Lay the food items flat in a single layer.



- Halfway through the cooking program, the oven will beep and STIR/TURN will flash. Open the door or press the STOP/CLEAR button once you pause. Turn the food items and press START to continue.

OVEN

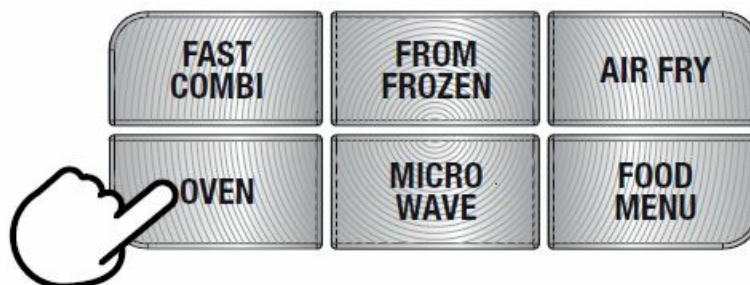

- The OVEN function is designed to cook food items using the convection oven.
- The food needs to be placed in an oven-safe dish. Use the trivet to elevate the dish for better cooking results.



NOTE

It is highly recommended to use the trivet for this function, to allow the convection to circulate the food while being cooked.


- Press the OVEN button on the main interface to enter the OVEN function. Turn the START/TIME dial to select the cooking time, from 1 to 120 minutes. Then turn the ADJUST to select the cooking temperature, from 60°C to 230°C. Press the START/TIME dial to confirm the selection.
- After confirming, the microwave oven will start preheating. The LCD screen will show 'OVEN IS PREHEATING.'



- At the end of the preheating cycle, an alert tone will sound and the screen will indicate 'INSERT FOOD'. Open the door to place the food in the cavity, and press START to continue.




MICROWAVE

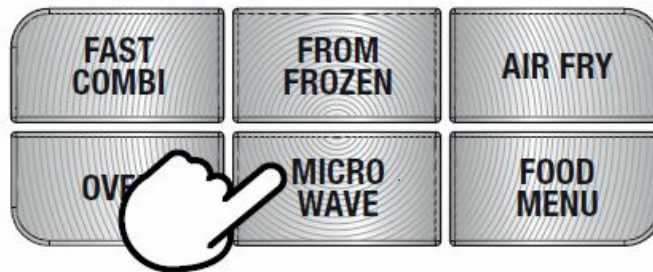

- The MICROWAVE setting is designed to operate as a classic microwave function by adjusting the time and the power level. This is also the default function when activating the microwave oven.
- Always use a microwave-safe dish or bowl when using the microwave function.
- Press the MICROWAVE button on the main interface to enter the MICROWAVE function. Turn the START/TIME dial to select the cooking time, from 1 second to 95 minutes. Then turn the ADJUST to select the power level, from 10% to 100% Press the START/TIME dial to confirm the selection.



GRILL

- The grill function is designed to gently brown your food item, by using the top heating elements.
- Open the door and press the GRILL button  on the shortcut panel to select the GRILL function.
- Place the food item on the Combi Crisp pan, in a high position.
- Turn the START/TIME dial to select the cooking time, from 1 minute to 20 minutes. Press START to begin cooking.

FOOD MENU




- In the FOOD MENU, choose between the SMART SETTINGS: COOK, REHEAT or DEFROST.
- Then select from a list of most commonly used food types and press START. The microwave oven will automatically set the time and power level or temperature for the selected food types so no need to program this.




SMART COOK

- The SMART COOK setting is designed to automatically cook at the correct power or temperature for the correct time.
- Press FOOD MENU button, then select COOK with the START dial. Press START to confirm your selection.
- Turn TIME/Select dial to select food type. As the TIME/Select dial is turned the arrow shifts and points to what food type is selected.

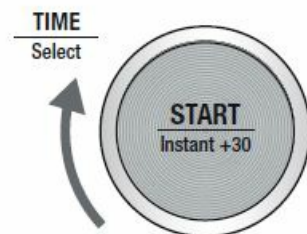

- Once you have chosen FOOD TYPE, turn the ADJUST dial to adjust quantity or weight.

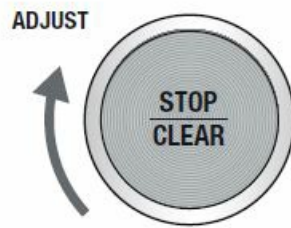

Press START to begin cooking.



FOR BEST RESULTS

- Foods should be cooked in a microwave-safe container, either plastic, Pyrex or ceramic.
- Moist foods will cook more evenly because microwave energy heats water molecules very efficiently. Add approximately 15mL to 20mL of water per 100g when cooking soft and hard vegetables.
- For optimal results, arrange larger and thicker foods such as broccoli or the thick end of a chicken drumstick around the edges of the turntable. This allows maximum penetration of the microwaves through the food during cooking.
- Stir foods such as casseroles and soups from the outside to the centre to distribute heat more evenly. Constant stirring is not necessary.
- Small pieces of food cook faster than large ones. Pieces similar in size and shape will cook more evenly when cooked together.
- Be careful when removing lids or plastic wrap from your microwave-cooked foods. Steam can build up and cause serious burns on face or hands.

Popcorn

- The SMART COOK POPCORN setting is designed to pop the maximum number of kernels in a 100g bag by using the microwave function.
- Place the bag in the centre of the turntable. Press START to begin cooking.

Hard Vegetables

- The SMART COOK HARD VEGETABLES setting is suitable for vegetables such as carrots, corn, sweet potato and beets. This setting uses the microwave function.
- Cook times are based on vegetables from the refrigerator (approx. 5°C).
- The minimum amount of hard vegetables cooked is 100g and the maximum is 1kg.
- Cut into even sizes of 1.2 to 2cm pieces to ensure even cooking throughout. Add 20mL of water per 100g of hard vegetables.
- Cover with a vented microwave-safe plastic lid or vented microwave-safe plastic wrap.
- Halfway through the cooking program, an alert tone will sound and STIR/TURN will flash. Open the door or press the STOP/CLEAR button once to pause. Stir vegetables, close the door and press the START button to continue the cooking program.

Soft Vegetables

- The SMART COOK SOFT VEGETABLES setting is suitable for vegetables such as broccoli, green beans, cauliflower, zucchini and peas. This setting uses the microwave function.
- Cook time is based on vegetables from the refrigerator (approx. 5°C).
- The minimum amount of vegetables cooked is 100g and the maximum is 500g.
- Add 1 tablespoon (15mL) of water per 100g of soft vegetables.
- Cover with a vented microwave-safe lid or vented microwave-safe plastic wrap.
- Halfway through the cooking program, an alert tone will sound and STIR/TURN will flash. Open the door or press the STOP/CLEAR button once to pause. Stir vegetables, close the door and press the START button to continue the cooking program.

Rice

- The SMART COOK RICE setting is suitable for white rice such as long grain rice, jasmine and basmati, by using the microwave function.
- Always use a deep microwave-safe bowl. Do not cover the bowl.
- The minimum amount of rice is 1 cup (250g) and the maximum is 2 cups (450g). Rinse rice with cold water until it runs clear before cooking. Add a 2:1 ratio of water to rice. (2 parts water to 1 part rice)
- Allow rice to stand for 5 minutes before serving.

Bacon

- The SMART COOK BACON setting is designed to cook bacon slices until crisp, by using the microwave function.
- Cook times are based on the bacon directly from the refrigerator (approx. 5°C).
- Arrange bacon slices in a single layer on a plate. Turn the ADJUST dial to select several slices and press

START to begin cooking. You can select between 2 to 4 regular slices of bacon. If cooking thick-cut bacon, add another minute to the cooking time.

- Halfway through the cooking program, an alert tone will sound and STIR/TURN will flash.
- Open the door or press the STOP/CLEAR button once to pause. Turn the bacon over and press START to continue the cooking program. If cooking more than 2 slices, move the centre slices to the outside of the plate when turning them over to ensure even cooking.

NOTE

Rashers of bacon are recommended.

Cake

- The SMART COOK CAKE setting is designed to cook different types of cakes using the convection oven.
- Use bakeware suitable for a convection oven. For best results use a 19 – 22cm round cake pan and approximately 450g of batter. For packaged cake mixes, split batter into two cake pans, and cook in batches.
- Place the bakeware on the trivet to bake the cake. Do not cover the food.
- Press START to begin the cooking program.
- Once cooking has finished, allow the cake to stand for 5 minutes.

Cookies

- The SMART COOK COOKIES setting is designed to cook different types of cookies using the convection oven.
- Place the cookies into the provided Combi Crisp pan with legs in a high position to bake the cookies.
- Press START to start the cooking program.
- Once cooking has finished, allow the cookies to stand for 5 minutes.

Melt chocolate

At the press of a button, the SMART COOK MELT CHOCOLATE setting is designed to melt chocolate without overheating and seizing the chocolate, using the microwave.

NOTE

- The SMART COOK MELT CHOCOLATE setting was tested with dark chocolate. If using other types of chocolate, check at short intervals to prevent possible seizing of chocolate.
- Choose a suitable glass bowl and do not cover it. If using a block of chocolate, cut into 1cm pieces.
- Turn the ADJUST dial to select weight and press the START button to commence melting. The minimum amount of chocolate is 50g and the maximum is 400g.
- Halfway through the program, an alert tone will sound and STIR/TURN will flash. Open the door or press the STOP/CLEAR button once to pause. Stir the chocolate, close the door and press the START button to finish melting.
- In the end, some of the chocolate may still hold its shape. Stir until completely melted and smooth.
- The SMART COOK MELT CHOCOLATE setting can also be selected from the SHORTCUTS panel.

Soften butter

- The SMART COOK SOFTEN BUTTER setting is perfectly designed to soften butter suitable to cream immediately in a mixer, using the microwave.
- The soften butter setting will soften butter that has been taken directly from the refrigerator (approx. 5°C).
- The butter should be cut as a whole piece and placed onto a plate. Do not cover.
- Turn the ADJUST dial to select weight and press the START button to commence softening. The minimum amount of butter is 125g and the maximum is 500g.

NOTE

- The butter should be soft enough to push your finger easily into the centre. The butter should not be melted.
- The SMART COOK SOFTEN BUTTER setting can also be selected from the SHORTCUTS panel.

Pizza

- The SMART COOK PIZZA setting is designed to cook whole frozen pizzas, using both microwave and grill.
- The cooking time is based on pizza that has been taken directly from the freezer (approx. -18°C).
- Place the pizza or the pizza slices into the provided Combi Crisp pan in a high position to bake the pizza. Do not cover the food.
- Press START to start the cooking program.
- Once cooking has finished, allow the pizza to stand for 5 minutes.

NOTE

Pizzas smaller than 10" require less cooking time.

Chicken Nuggets

- The SMART COOK CHICKEN NUGGETS setting is designed to air fry chicken nuggets in the microwave oven.
- The cooking time is based on chicken nuggets that have been taken directly from the freezer (approx. -18°C).
- Turn the ADJUST dial to select the amount of chicken nuggets to air fry and press START to begin cooking. You can select from 200g to 500g of nuggets.
- When selecting the SMART COOK CHICKEN NUGGETS setting, the LCD screen will show 'AIR FRYER IS PREHEATING. INSERT PAN'. Place the Combi Crisp pan in a high position inside the microwave for the preheating program.
- At the end of the 3-minute preheating program, an alert tone will sound and the screen will indicate 'INSERT FOOD ON PAN'. Open the door to place the food on the pan, and press START to continue. Lay the chicken nuggets flat in a single layer.
- Halfway through the cooking program, an alert tone will sound and STIR/TURN will flash. Open the door or press the STOP/CLEAR button once to pause. Turn the chicken nuggets and press START to continue the cooking program.

Fries

- The SMART COOK FRIES setting is designed to air fry French fries in the microwave oven.
- The cooking time is based on fries that have been taken directly from the freezer (approx. -18°C).

- Turn the ADJUST dial to select the amount of fries to air fry and press START to begin cooking. You can select from 200g to 500g of fries.
- When selecting the SMART COOK FRIES setting, the LCD screen will show 'AIR FRYER IS PREHEATING. INSERT PAN'. Place the Combi Crisp pan in a high position inside the microwave for the preheating program.
- At the end of the 3-minute preheating program, an alert tone will sound and the screen will indicate 'INSERT FOOD ON PAN'. Open the door to place the food on the pan, and press START to continue. Lay the fries flat in a single layer.
- Halfway through the cooking program, an alert tone will sound and STIR/TURN will flash. Open the door or press the STOP/CLEAR button once to pause. Turn the fries and press START to continue the cooking program.
- At the end of the cooking program, allow the fries to stand for 5 minutes before removing and serving.

Chicken

- The SMART COOK CHICKEN setting is suitable for fresh chicken pieces as well as cooking whole chickens. This setting is using both convection and grill, as well as microwave when cooking a whole chicken.
- Cook times are based on chicken directly from the refrigerator (approx. 5°C).
- The minimum amount of chicken to be cooked is 200g and the maximum is 1.6kg.
 - 200g to 500g suitable for chicken fillets and boneless chicken pieces.
 - 1kg to 1.6kg suitable for chicken pieces with bones and whole chickens.
- Use the provided Combi Crisp pan to cook the chicken. For chicken pieces, use the Combi Crisp pan in a high position. For a whole chicken, use the Combi Crisp pan in a low position.
- Halfway through the cooking program, an alert tone will sound and STIR/TURN will flash. Open the door or press the STOP/CLEAR button once to pause. Turn the chicken pieces (not necessary when cooking a whole chicken) and press START to continue the cooking program.
- Once cooking has finished, allow the chicken to stand for 5 minutes.

Meat

- The SMART COOK MEAT setting is designed to cook different types of meat.
- Cook times are based on meat directly from the refrigerator (approx. 5°C).
- The minimum amount of meat to be cooked is 200g and the maximum is 2kg.
 - 200g to 500g suitable for meat fillets, minced meat and meat in pieces.
 - 750g to 2kg suitable for whole roasts.
- Use the provided Combi Crisp pan to cook the meat. For 200g – 500g, use the Combi Crisp pan in the high legs position. For 750g – 1kg, use the Combi Crisp pan in the low legs position.
- Halfway through the cooking program, an alert tone will sound and STIR/TURN will flash. Open the door or press the STOP/CLEAR button once to pause. Turn the meat over and press START to continue the cooking program.
- Once cooking has finished, allow the meat to stand for 5 minutes.

Fish

- The SMART COOK FISH setting is designed to cook your fish without dry and overcooked edges, using the

microwave, convection oven and grill.

- Cook times are based on the fish directly from the refrigerator (approx. 5°C).
- The minimum amount of fish should not be less than 200g and not more than 800g.
- Suitable for white fish fillets and salmon fillets; arrange in a single layer in the Combi Crisp pan in high legs position. Fold over the thin tail end of the fillets to prevent overcooking.
- Once cooking has finished, allow the fish to stand for 5 minutes.

NOTE

Oily fish with skin on is recommended.

SMART REHEAT

The SMART REHEAT setting uses lower power levels to gently reheat food without drying or overcooking.

NOTE

While the microwave is reheating, time can be increased or decreased. Adjusting the reheating time does not affect the selected weight or quantity.

Beverage

- The SMART REHEAT BEVERAGE setting is suitable to reheat hot drinks such as coffee and tea that may have become cold. The BEVERAGE setting will warm your drink to approx. 60–65°C which is suitable to drink right away.
- Position cups around the outside of the turntable. Turn the ADJUST dial to select the number of cups and press START to begin reheating. You can select the amount of beverage from 1 cup (250mL) to 4 cups (1000mL).
- At the end of the reheat program, stir heated drinks and allow to stand for 1–2 minutes before consuming. Be aware, that overheating may scald or burn drinks.

NOTE

Use a ceramic cup or mug.

Leftovers


- The SMART REHEAT LEFTOVERS setting is suitable for reheating a plate of leftovers from the refrigerator (approx. 5°C).
- For even reheating, place food onto a microwave-safe plate or into a bowl. Cover food with a vented microwave-safe lid or vented microwave-safe plastic wrap (do not seal).
- Turn the ADJUST dial to select the number of plates and press START to begin cooking. You can select the amount from 1 to 2 plates/bowls. When using 2 plates, use the trivet to place the plates on top of each other.
- Halfway through the cooking program, an alert tone will sound and STIR/TURN will flash. Open the door or press the STOP/CLEAR button once to pause. Stir the food in the plate and press START to continue the reheating program. When reheating 2 plates, it is recommended to switch the plate's position (from top to bottom, and vice-versa) to ensure even reheating.
- At the end of the reheat program, stir heated food and allow to stand for 1–2 minutes before consuming.

By time


- The SMART REHEAT setting also enables you to select the reheat time, from a range to 1 minute to 95 minutes.
- When reheating any food item, place the food onto a microwave-safe bowl or plate. Cover food with a vented microwave-safe lid or vented microwave-safe plastic wrap (do not seal).
- Halfway through the cooking program, an alert tone will sound and STIR/TURN will flash. Open door or press the STOP/CLEAR button once to pause. Stir/turn the food item and press START to continue the reheating program.

SMART DEFROST

- The SMART DEFROST setting is designed to gently defrost food without overheating and drying out of edges.
- Press the FOOD MENU button, then select COOK with the START dial. Press START to confirm your selection. An alert tone will sound.
- Turn TIME/Select dial to select the food type. As the TIME/Select dial is turned the arrow shifts and points to what food type is selected

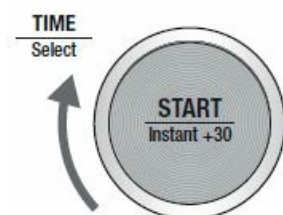

- Once you have chosen FOOD TYPE, turn ADJUST dial to adjust quantity or weight.

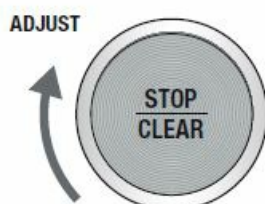

- Press START to commence defrosting. All unselected FOOD TYPES, the PRESS START and INPUT QUANTITY prompts are no longer displayed on the LCD screen. The TIME appears and begins to countdown.

NOTE

While the microwave is defrosting time can be increased or decreased. Adjusting the defrosting time does not affect selected weight or quantity.

FOR BEST RESULTS

- Defrost times are for thoroughly frozen foods that have been in the freezer for at least 24 hours and maintained at temperatures of -18°C or lower.
- When freezing meats, poultry and fish, use good quality plastic wrap, bags and containers.
- To separate meat, such as chicken pieces or steak, place wax paper or plastic film between each layer.
- Ensure that all air has been removed and packaging has been sealed securely.
- Label the packs with type and cut of meat, date and weight.
- After the defrost cycle, most foods will still be somewhat icy in the centre when removed from the microwave. Stand food for 5–15 minutes until completely thawed.
- Position foods in a single layer with thinner parts in the centre and thicker ends around the outside of the turntable.
- Remove any packaging and bags from frozen meats. If the packaging is too frozen to remove, defrost for 3 minutes using the TIME DEFROST setting; remove the packaging and continue with the SMART DEFROST setting.

Chicken

The SMART DEFROST CHICKEN setting is suitable for defrosting either chicken pieces (legs, breasts) or a whole chicken. The minimum amount of chicken to defrost is 200g and the maximum is 1kg.

- 200g to 750g – suitable for chicken fillets and chicken pieces.
- 1kg to 1.6kg – suitable for chicken pieces with bones and whole chickens.

For chicken pieces, position chicken pieces in a single layer in a microwave-safe dish, plate or container. Arrange thicker ends around the outside of the plate/container.

- Halfway through the defrost setting, an alert tone will sound and STIR/TURN will flash. Open the door or press the STOP/CLEAR button once to pause. Turn over the chicken pieces and press the START button to continue the defrost program.
- Once the program has finished, remove the chicken from the microwave and stand 5-15 minutes to thaw completely.
- For whole chickens, remove from original packaging. Place chicken, and breast side down onto in a microwave-safe dish, plate or container.
- Halfway through the defrost setting, an alert tone will sound and STIR/TURN will flash. Open the door or press the STOP/CLEAR button once to pause. Turn the chicken over and press the START button to continue the defrosting program.
- After the defrost program has ended, remove the chicken from the microwave. Rinse under tap water, making sure to wash the cavity well to loosen the icy core.
- Place onto a clean plate and pat dry. Cover with cling film and refrigerate for 1–2 hours until completely thawed.

Meat

- The SMART DEFROST MEAT setting is suitable for defrosting any type of ground or diced meat such as beef, lamb and pork, as well as steaks and chops. The minimum amount of meat to defrost is 200g and the maximum

is 1kg.

- 200g to 500g – suitable for meat fillets, minced meat and meat in pieces.
- 750g to 2kg – suitable for whole roasts.
- Remove any packaging, foam trays and absorbent pads from the meat. Place directly onto a microwave-safe plate or shallow dish.
- Halfway through the defrost setting, an alert tone will sound and STIR/TURN will flash. Open door or press STOP/CLEAR button once to pause. Remove any defrosted meat and set aside in the refrigerator. If some ground meat is still thawed, remove it from the microwave oven as well. Turn the frozen meat over and return to the microwave oven. Press the START button to continue the defrost program.
- At the end of the program, remove the meat and stand 5–15 minutes to thaw completely.

Fish

- The SMART DEFROST FISH setting is programmed to gently thaw delicate fish fillets without cooking and heating the edges. The minimum amount of fish to defrost is 200g and the maximum is 800g.
- For best results, place frozen fillets in a single layer into a microwave-safe shallow dish.
- Halfway through the defrost setting, an alert tone will sound and STIR/TURN will flash. Open door or press STOP/CLEAR button once to pause. Turn fish pieces over and return to oven. Press START button to continue the defrost program.
- At the end of the program, the fish will still be somewhat icy in the centre. Remove from the microwave and stand for 5–15 minutes until completely thawed.

NOTE

Oily fish is recommended.

Soup

- The SMART DEFROST SOUP is suitable for defrosting frozen prepared soups directly from the freezer (approx. –18°C). The minimum amount of fish to defrost is 250mL and the maximum is 1000mL.
- Remove soup from any packaging and place it into a microwave-safe bowl. Do not cover food.
- Halfway through the defrost setting, an alert tone will sound and STIR/TURN will flash. Open door or press STOP/CLEAR button once to pause. Break up any frozen pieces and press the START button to continue the defrost program.

By time

- The SMART DEFROST setting also enables you to select the defrost time, from a range of 1 minute to 95 minutes.
- When defrosting any food item, place the food onto a microwave-safe bowl or plate, and do not cover it.
- Halfway through the defrost program, an alert tone will sound and will flash Stir/turn the food. Pause the program and stir/turn the food item. Press the START button.

Hints & Tips

SOME IMPORTANT TIPS FOR MICROWAVE COOKING

To help equalize energy in the food so that it cooks evenly follow these helpful tips.

- Arrange foods with varying size ends, such as chicken drumsticks and broccoli with the thicker or tougher part positioned to the outside of the dish. This ensures the parts that require more cooking will receive more energy, so the food will cook evenly.
- Covering the dish during cooking holds in the heat and steam to speed up cooking time. Use a microwave-safe lid or plastic wrap that has been vented by turning back one edge at the side of the dish to form a narrow vent to release excess steam.
- Choose cooking dishes that are shallow and preferably have straight sides. Shallow dishes enable the food to cook faster and straight sides prevent the edges from being overcooked.
- Arrange individual items such as ramekins or whole potatoes around the outside of the turntable. Make sure to leave space between items so the energy can penetrate from all sides.
- Use round-shaped microwave dishes. Round shapes cook more evenly than square or rectangle dishes which absorb most of the energy in the corners causing food to overcook and toughen.
- Stir foods from the outside to the centre of the dish once or twice during cooking to equalize heat and speed up microwaving.
- Turn medium to large food items over twice during microwaving. This enables even exposure to microwaves.
- Elevating some types of food such as cakes, roast vegetables and dough products can be advantageous. It allows more energy to penetrate the food from all sides, base and top. Use a microwave-safe plastic or ceramic rack. If a rack is unavailable, use an upturned bowl or cup to elevate plates of food.
- Do not elevate any special browning dishes, jugs of sauce or custard, small quantities of food or mugs of beverages.
- Internal temperatures of foods continue to rise so that they continue cooking even after they have been removed from the microwave oven. It is better to undercook food as it will continue to cook once removed from the microwave.

MICROWAVE UTENSILS

- Containers, plates, dishes, etc. used in the microwave oven should always be microwave–safe. Check if stated on the underside of the utensil or contact the manufacturer.
- To test if a container, plate or dish is microwave–safe, place it into the microwave oven with 1 cup of cold water (in a microwave–safe cup) and heat on High (100%) Power for 1 minute. If the container is hot and the water is cold, the container is not suitable for microwave oven use. If the container is cold and the water is hot, then the container is suitable for microwave oven use.
- Microwave-safe cookware will not become hot by microwave energy, but it will become hot from contact with hot food. When the food becomes hot, some of this heat is transferred to the dish. Always use oven mitts to remove hot dishes from the microwave.
- Metal containers and utensils should not be used in the microwave oven.

Care & Cleaning

- Remove the plug from the power outlet before cleaning.
- Keep the inside of the microwave oven clean. When food splatters or spilled liquids adhere to the microwave oven's internal walls, wipe them with a damp cloth. Mild detergent may be used if the cavity gets very dirty.

Avoid the use of spray and other harsh cleaners as they may stain, streak or dull the door surface.

- The outside surfaces should be cleaned with a damp cloth. To prevent damage to the operating parts inside the microwave oven cavity, water should not be allowed to seep into the ventilation openings.
- Wipe the door and window on both sides of the door seals and adjacent parts frequently with a damp cloth to remove any spills or spatters. Do not use an abrasive cleaner.
- Do not allow the control panel to become wet. Clean with a soft, damp cloth. When cleaning the control panel, leave the microwave oven door open to prevent it from accidentally turning on.
- If steam accumulates inside or around the outside of the oven door, wipe it with a soft dry cloth. This may occur when cooking foods high in moisture or if the microwave oven is operated under high humidity conditions, this is normal.
- It is occasionally necessary to remove the glass turntable for cleaning. Wash the glass turntable in warm soapy water, rinse in clean water and dry thoroughly.
- The turntable roller and microwave oven floor should be cleaned regularly to ensure the glass turntable rotates correctly and avoids making excessive noise. Simply wipe the bottom surface of the microwave with a soft damp cloth. The turntable roller may be washed in mild soapy water, rinse in clean water and dry thoroughly. When removing the turntable roller from the cavity floor for cleaning, be sure to replace in the proper position.
- Remove odours from your microwave oven by combining a cup of water with the juice of one lemon in a deep microwave-safe bowl, and microwave on High for 5 minutes. Wipe the microwave oven cavity thoroughly and dry with a soft cloth.
- When it becomes necessary to replace the oven light, please consult your Sage Service Centre to have it replaced.
- Please do not dispose of this appliance with domestic rubbish; it should be taken to the appropriate disposal centre provided by the local council municipalities.
- If storing the microwave oven, press the STOP/CLEAR button, switch off the power outlet then unplug the power cord. Ensure the microwave oven is completely cool, clean and dry. Secure the roller ring and glass turntable and close the door. Do not place heavy objects on top. Store the microwave oven upright.
- Wash the Combi Crisp Pan and Trivet in the top rack of the dishwasher. Alternatively, wash with warm soapy water, rinse with clean water and dry thoroughly. If required, remove the Combi Crisp Pan legs by pinching inwards to detach them from the base of the pan.

Troubleshooting

PROBLEM	EASY SOLUTION
Microwave oven interfering with radio, TV or similar equipment.	<ul style="list-style-type: none">• Clean door and sealing surface of the oven.• Reorient the receiving antenna of radio or television.• Relocate the microwave oven with respect to the receiver.• Move the microwave oven away from the receiver.• Plug the microwave oven into a different outlet so that microwave oven and receiver are on different branch circuits.
Dim microwave oven light.	<ul style="list-style-type: none">• When operating on low power levels, the microwave oven light may be dimmer.
Steam accumulating on door and hot air coming out from vents.	<ul style="list-style-type: none">• During operation, steam may be produced. Most will exit through the vents; however, some may accumulate around the oven door.

POSSIBLE PROBLEM	POSSIBLE REASON	EASY SOLUTION
Microwave oven will not start.	<ul style="list-style-type: none"> • Power cord not plugged in properly or switched on. • Trouble with outlet. 	<ul style="list-style-type: none"> • Unplug, put the plug in again and switch on. • Have a professional check that the outlet is not faulty.
Microwave oven does not heat.	<ul style="list-style-type: none"> • Door not closed properly. 	<ul style="list-style-type: none"> • Ensure door is shut properly.
Glass turntable makes noise during operation.	<ul style="list-style-type: none"> • Turntable roller not assembled properly or needs to be cleaned. 	<ul style="list-style-type: none"> • Reset and clean if necessary.
LCD time digit shows EA1A then V1:00 or similar information then goes to default mode.	<ul style="list-style-type: none"> • Both STOP/CLEAR and A BIT MORE™ button are pressed at the same time under the default mode. 	<ul style="list-style-type: none"> • No action required. This is normal and LCD just shows the model type and software version.

Guarantee

2 YEAR LIMITED GUARANTEE

Sage Appliances guarantees this product for domestic use in specified territories for 2 years from the date of purchase against defects caused by faulty workmanship and materials. During this guarantee period, Sage Appliances will repair, replace, or refund any defective product (at the sole discretion of Sage Appliances).

- All legal warranty rights under applicable national legislation will be respected and will not be impaired by our guarantee.
- For full terms and conditions on the guarantee, as well as instructions on how to make a claim, please visit www.sageappliances.com.

BRG Appliances Limited

- 86–90 Paul Street, London, EC2A 4NE, United Kingdom
- **Freephone (UK Landline):** 0808 178 1650
- **Mobile Calls (National Rate):** 0333 0142 970


www.sageappliances.com

- Registered in England & Wales No. 8223512
- Registered in Germany No. HRB 81309 (AG Düsseldorf)
- Registered in France No. 879 449 866 RCS

Due to continued product improvement, the products illustrated or photographed in this document may vary slightly from the actual product.

Copyright BRG Appliances 2023

Documents / Resources

 <p>the Combi Wave™ 3 in 1</p> <p>Sage</p>	<p>Sage BMO870 Combi WaveTM 3 in 1 [pdf] User Guide BMO870 Combi WaveTM 3 in 1, BMO870, Combi WaveTM 3 in 1, WaveTM 3 in 1, 3 in 1</p>
---	--

References

- [B Sage Appliances](#)
- [S Sage | High End Kitchen & Cooking Appliances](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.