



Salind GF-07 GPS Tracker Portable Mini Hidden Instruction Manual

[Home](#) » [Salind](#) » Salind GF-07 GPS Tracker Portable Mini Hidden Instruction Manual 



Contents

- 1 Salind GF-07 GPS Tracker Portable Mini Hidden Instruction Manual
- 2 Scope of delivery
- 3 Product description & battery charging
- 4 Activation
- 5 Start-up
- 6 Use
- 7 Meaning of the LED lights
- 8 Technical data
- 9 Safety instructions
- 10 Instructions for disposal of used batteries
- 11 Instructions for disposal of electrical devices
- 12 Steam shower room trouble shooting
- 13 Documents / Resources
 - 13.1 References


Salind GF-07 GPS Tracker Portable Mini Hidden Instruction Manual



Thank you very much,

... for ordering our GPS tracker!

Read the instructions carefully before using the GPS tracker for the first time. Keep the instructions somewhere safe in case you may need it in the future. However, do not hesitate to contact us if you have any problem or doubt via WhatsApp, Chat or E-mail.

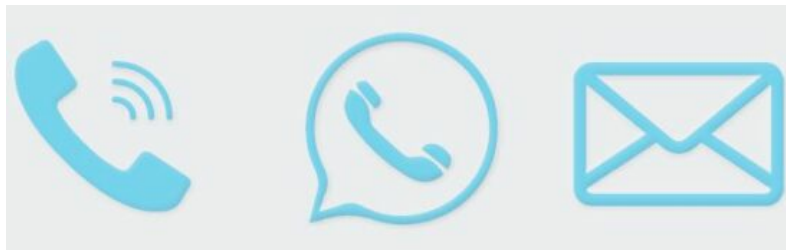

Scope of delivery

Included in the delivery:

- Salind GPS Tracker 20 4G
- M2M SIM card (is already inserted)
- USB charging cable



Product description & battery charging



Before using it for the first time, you should charge the GPS tracker for about 8-12 hours.

Connect the supplied charging cable to the charging port on the GPS tracker. Then attach the USB port to the

power socket adapter. Once the GPS tracker is connected to the power source, please charge it until the red LED turns off.


The Salind GPS Tracker 20 4G offers you approximately 180 days of operation without any in-between charging! However, it should be noted that the duration depends on the load. The more the GPS tracker is moved and the more alerts are sent, the higher the utilization.

Activation

NOTE!

For the activation, you need the device number (ID). Please make a note of this before installing your GPS tracker.

In order to use your Salind GPS Tracker 20 4G, you will need activate it online first. Scan the QR code or enter the following link and follow the instructions.

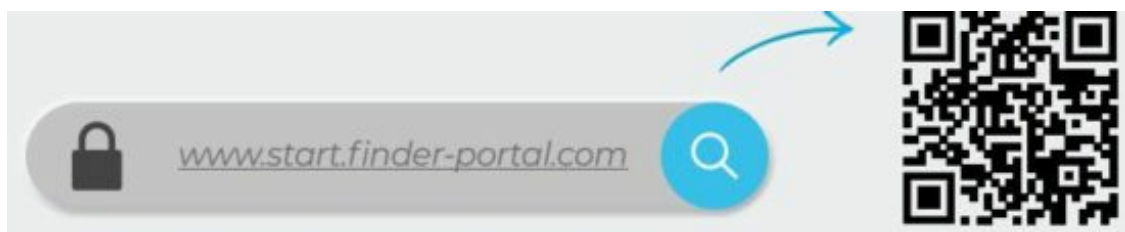

To get a detailed explanation of the activation, you can simply click on the following link:
<https://www.youtube.com/watch?v=r3t7ugoiXVQ> or you scan this QR code.



Start-up

When activation is successful, turn on the GPS tracker by sliding the switch located under the protective rubber to the right. The LED lights then activate. To switch off, move the switch to the left.

For the initial start-up, open spaces, such as the garden or the terrace, are recommended (i.e. not indoors, in a garage, a cellar, or anything similar).



Use

Once the start-up of the GPS tracker was successful, you can attach the tracker to a location of your choice and view the position of the tracker using a smartphone, tablet or PC. Please use our app or go to the following website:



Meaning of the LED lights



Red LED – battery status

The red LED is fixed?

The GPS tracker is charging.

Is the red LED off?

The battery is fully charged or the battery level is not empty.

The red LED flashes?

The battery level is low.



Orange LED – GSM status

Is the orange LED off?

The GPS tracker is in standby mode.

The orange LED flashes?

No signal available. The GPS tracker is looking for a signal.



Blue LED – GPS status

The blue LED flashes?

No signal available. The GPS tracker is looking for a signal.

Is the blue LED off?

The GPS tracker is in standby mode. As soon as the GPS tracker is moved again, the GPS signal automatically switches on again.

The blue LED is fixed?

GPS signal is available.

Technical data

Dimensions	120 mm x 64 mm x 48 mm
GPS accuracy	under 10 meters
Battery	3,7 V 20.000 mAh Li-ion
Time to start	Cold start: 60 s Standby: 30 s In operation: 10 s
Weight	460 g
Network	GSM/GPRS
Band	LTE/4G LTE-FDD: B1/B3/B5/B7/B8 B20 (max. 2W / min. 0,07W) GPRS/2G GSM 900 MHz. (max. 2W) DCS 1800 MHz. (max. 1W)
GPS Chip	MT2503
GPRS / LTE module	SIMCOM A7670E
GPS reception	-162 dBm
Storage temperature	From -30 °C to +75 °C
Operating environment	From -10 °C to +55 °C

Safety instructions

Safety Instructions

The following signal words are used in these operating instructions:

NOTE!

This signal word is used to draw your attention to an issue or situation. It also serves as a recommendation for proper use. Possible damage to property or personal injury can be prevented if this is observed.



WARNING!

This classifies a hazard of medium risk level. Failure to observe the warning may result in serious injury or damage.

Proper use

Read these safety instructions for this GPS tracker carefully before using it for the first time in order to use it properly. The intended use of the GPS tracker to locate an object or a living being is only that described in this manual. Please note that it is a criminal offence to monitor third parties using a GPS tracker without their consent.

If you use it in any other way, it will be considered improper and may result in damage to property or even personal injury. Please note that the GPS tracker is not a child's toy. In other countries and regions there are different laws concerning digital positioning and tracking of people, animals and/or objects. Salind UG cannot be held responsible if such laws or regulations are violated. The user is held solely responsible for this.

NOTE!

The manufacturer and dealer accept no liability for damage caused by improper or incorrect use.

Safety



WARNING! RISK OF ELECTRIC SHOCK!

A faulty electrical installation or a mains voltage that is too high can lead to an electric shock. Before use, check the mains voltage of the socket with the information on the rating plate. To ensure that you can disconnect the charging cable from the mains as quickly as possible in the event of a fault, connect the mains adapter so that it is easily accessible. If you notice any visible damage to your GPS tracker or the charging cable, do not use it. Only use the original parts supplied to charge the GPS tracker. If the charging cable is damaged, replace it only with original accessories from the manufacturer. Never place the GPS tracker near flames or hot surfaces. The GPS tracker isn't waterproof. Therefore we recommend that you use it in dry environments if possible. The charging cable should only be used indoors. Keep it away from moisture and do not bend it. Do not open the housing of the GPS tracker. Leave the repair work to qualified specialists. Please beware that if you carry out repairs yourself, connect the GPS tracker improperly or operate it incorrectly, liability and warranty claims are excluded.

Hazards for children and vulnerable people

Please do not allow the GPS tracker to be used unsupervised by people (including children) with reduced physical, sensory or mental capabilities.

The exception is if they have been instructed beforehand by the person responsible for their safety of how to use the appliance. Make sure that your child does not handle small parts (e.g. accessories, etc.). These can be swallowed and lead to suffocation.

NOTE!

Inform your child about the dangers and use of the GPS tracker.

The battery



WARNING! EXPLOSION AND FIRE HAZARD!

Hereafter, you will find information and notes regarding the handling of the battery: The GPS tracker is powered by a lithium polymer battery. It is not replaceable and must not be removed or opened. Keep the GPS tracker away from heat sources and high temperatures, such as direct sunlight in a vehicle (even when charging the battery). Failure to follow the instructions regarding this warning may result in the destruction of the battery, overheating, explosion and fire. These hazards also exist if you use non-original accessories to charge your device. Do not burn or punch the GPS tracker. Protect it from mechanical damage. Do not remove, drop, disassemble or modify the battery with pointed or sharp objects. If a child swallows the battery, seek medical help immediately! If you need to have the battery replaced, please contact our support team.

Removing or replacing the battery

- Contact our support if the battery needs to be removed or replaced.
- Send the machine to us to remove or replace the battery.
- For safety reasons, do not attempt to remove the battery. Failure to remove the battery properly may result in damage to the battery and unit, personal injury and/or compromise the safety of the unit.
- Salind GPS shall not be liable for any damage or loss (whether in contract or tort, including negligence) arising from your failure to comply with these warnings and instructions.

WARNING! RISK OF CHEMICAL BURNS!

Batteries that leak due to damage can cause burns if they come into contact with the skin. Therefore, never open the battery. However, if the battery leaks, please wear protective gloves.

Electromagnetic compatibility

Please observe all prohibitions and switch off the GPS tracker immediately in dangerous areas and if it can cause interference. It should not be used near, for example, medical equipment, fuels and chemicals, or in blasting areas. Mobile devices may cause interference that can affect performance. Transformers and very strong magnetic fields must be avoided. Otherwise, deviations in the transmission may occur.

NOTE!

Failure to observe these recommendations may result in malfunctions or damage to the GPS tracker.

Cleaning

WARNING! RISK OF DAMAGE!

In the following you will find information and instructions on how to clean the GPS tracker. Do not use aggressive cleaning agents or brushes. Do not clean the GPS tracker with cleaning objects (e.g. knives, metal sponges). This can damage the surface. Never put the GPS tracker into water, in a dishwasher (or similar) and do not use a steam cleaner. The surface can be wiped with a slightly damp cloth. The GPS tracker should be wiped completely dry afterwards.

Storage

If you are not going to use the GPS tracker for a long period of time, switch it off. Place the tracker in its original packaging or in a same size box. Protect the tracker from dirt and moisture.

NOTE!

Keep the GPS tracker out of children's reach in order to avoid possible damage to property or personal injury.

Declaration of conformity

Packaging disposal

Hereby, Salind UG (haftungsbeschränkt) declares that the Tracker, 20 4G, is in conformity with the Directive 2014/53/EU. The complete text of the EU Declaration of Conformity can be found at the following Internet address:



www.salind-gps.de/konformitaetserklaerung/

Packaging disposal



Dispose of the packaging according to type. Throw cardboard and paper to the corresponding container.

Foil belongs in the recyclables collection.

Instructions for disposal of used batteries

The following note is addressed to those who use batteries or products with products with built-in batteries and who will not resell them in the form in which they were supplied to them (end users).

Free recall of used batteries

Batteries must not be disposed of with waste. You are legally obliged to return used batteries so that proper disposal can be guaranteed. You can return used batteries to a local collection point or to your local retailer.

As a distributor of batteries, we are also to take back used batteries, although our obligation to take back used is limited to the type which we carry or have carried as batteries in our range. Used batteries of the aforementioned type can therefore either be returned to us with sufficient postage or handed in directly to our dispatch warehouse at the following address free of charge:

Salind UG (haftungsbeschränkt)
Auf der Fuhr 3
51570 Windeck
Germany
E-mail: info@salind-gps.de

Meaning of the battery symbols

Batteries are marked with the symbol of a crossed-out dustbin (see illustration). This symbol indicates that batteries must not be disposed of in household waste. Batteries containing more than 0.0005% mercury by mass, more than 0.002% cadmium by mass or more than 0.004% lead by mass are also marked with the chemical name of the pollutant below the dustbin symbol. The abbreviation „Cd“ stands for cadmium, „Pb“ for lead and „Hg“ for mercury.



Instructions for disposal of electrical devices

The Electrical and Electronic Equipment Act (ElektroG) contains a large number of requirements for the handling of electrical and electronic equipment. The most important ones are summarised here:

1. Separate collection of WEEE

Waste Electrical and Electronic Equipment that has become waste is referred to as WEEE. Owners of WEEE must dispose of it separately from unsorted local waste. In particular, WEEE does not belong in household waste, but in special collection and return systems.

2. Batteries and accumulators

As a rule, owners of WEEE must separate spent batteries and accumulators that are not enclosed in the WEEE before handing them over at a collection point. This does not apply if the WEEE is handed over to public waste management authorities and separated from other WEEE there for the purpose of preparation for reuse.

3. Options for returning old appliances (WEEE)

Owners of WEEE from private households can hand it in to public waste management authorities or at the collection points set up by manufacturers or distributors as defined by the ElektroG. An online directory of collection and collection points can be found here:

<https://www.ear-system.de/ear-verzeichnis/sammel-und-ruecknahmestellen.jsf>

4. Data Protection

Old equipment often contains sensitive personal data. This applies in particular to information and telecommunication technology devices such as computers and smartphones. For your own sake, please note that each end-user is responsible for deleting the data on the old equipment to be disposed of.

5. Meaning of the „crossed-out dustbin“ symbol

The symbol of a crossed-out dustbin regularly displayed on electrical and electronic equipment indicates that the respective device must be separated from unsorted local waste at the end of its service life.



6. Manufacturer registration number

As a manufacturer, within the meaning of the ElektroG, we are registered with the responsible foundation Elektro-Altgeräte Register (Benno-Strauß- Str. 1, 90763 Fürth) under the following registration number: DE33887550.

Steam shower room trouble shooting

... In this case, please contact us and we will be delighted to help you!

Salind UG (haftungsbeschränkt)

Auf der Fuhr 3

51570 Windeck

Germany

E-mail: info@salind-gps.de


Phone: +49 (0) 2292 39 499 60

Web: www.salind-gps.de









The Salind GPS Team wishes you to enjoy your Salind GPS Tracker 20 4G!

Read More About This Manual & Download PDF:

Documents / Resources

	<p>Salind GF-07 GPS Tracker Portable Mini Hidden [pdf] Instruction Manual GF-07 GPS Tracker Portable Mini Hidden, GF-07, GPS Tracker Portable Mini Hidden, Tracker P ortable Mini Hidden, Portable Mini Hidden, Mini Hidden, Hidden</p>
---	--

References

-  [Laufpunk – Laufen. Abenteuer. Emotionen. | Wearables, Smartwatches, Trends für Sportler und Aktive](#)
-  [PAJ-Portal](#)
-  [GPS Tracker kaufen - GPS Sender 2024](#)
-  [Konformitätserklärung - Salind](#)
-  [PAJ-GPS FINDER Portal – Aktivieren Sie Ihren FINDER von PAJ](#)
-  [PAJ-Portal](#)
-  [ear-system.de/ear-verzeichnis/sammel-und-ruecknahmestellen.jsf](#)
-  [stiftung-ear.de/de/startseite](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.