



SALORA ACP1250 Razor-sharp 4K Resolution Camera Instruction Manual

[Home](#) » [SALORA](#) » SALORA ACP1250 Razor-sharp 4K Resolution Camera Instruction Manual 

Contents

- 1 SALORA ACP1250 Razor-sharp 4K Resolution Camera
- 2 Product Information
- 3 Product Usage Instructions
- 4 Product Main Function Introduction
- 5 APP operation interface function introduction
- 6 Spec
- 7 Operational precautions
- 8 Product Features
- 9 Product Schematic Diagram
- 10 Documents / Resources
- 11 Related Posts

SALORA

SALORA ACP1250 Razor-sharp 4K Resolution Camera



Product Information

- **Product Name:** Body Waterproof
- **Product Number:** ACP1250
- **Video Resolution:** Up to 4K@30fps
- Wide-angle Lens
- Ultra HD 2.0 inch + 1.3 inch Screen
- Detachable Battery for Easy Replacement
- Supports up to 128GB Micro SD Memory Card
- **Multiple Video Recording Formats:** 4K, 2.7K, 1080P, 720P
- **Multiple Shooting Modes:** Single, Timing, Auto, Burst
- **Multiple Video Modes:** Normal, Loop, Time-lapse, Slow Motion

Product Usage Instructions

 
Function Definitions

- **Mode button:**
 - Press and hold the Mode button for 2-3 seconds to power on/off.
 - Short press this key after power on to switch between video/photo/menu modes.
 - Short press on the menu interface to return to the previous menu or exit.
- **OK button:**
 - In recording mode, short press to start recording, short press again to stop recording.
 - Short press OK button to take a photo in photo mode.
 - Short press OK button in playback mode to play video.
 - Short press OK button to confirm an option in the settings menu.
 - In video or photo mode, press and hold OK button to open the multi-function setting interface and set different photo or video modes.
- **Up button:**
 - In video recording mode, short press Up button to turn on playback mode.
 - In playback mode, short press Up button to scroll through videos or photos.
 - In Menu setting mode, short press Up button to select the setting item in the menu.
- **Down button:**
 - In playback mode, short press Down button to scroll through videos or photos.
 - In Menu setting mode, short press Down button to select the setting item in the menu.
 - In photo or video mode, short press Down button to turn on/off WIFI.
 - In photo or video mode, long press Down button to switch between 2.0 inch Screen and 1.3 inch screen.
- **Magnetic charging interface:**
 - Use the provided magnetic charging cable to charge the camera.
- **Micro SD card slot:**
 - Supports 16-128GB capacity Micro SD card. (Note: C10 or above standard high-speed card should be used. Please format it with this machine before starting to use.)
- **Indicators**
 - **Work indicator:** green light
 - **Charging indicator:** red light

Product Main Function Introduction


- **Camera settings:**

- Press Mode button to switch to the setting interface.
- Press the Mode button or up and down buttons to select the setting item.
- Press the OK button to open the menu.

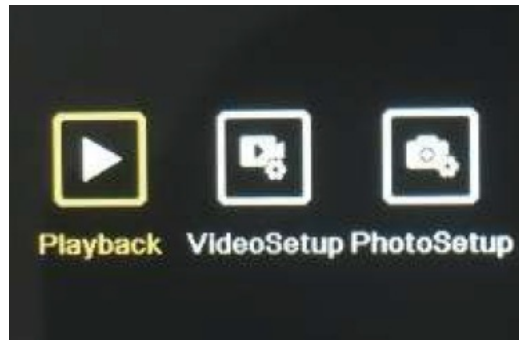

- **Playback mode:**

 
After entering playback mode, press the up/down buttons to select video album, photo album, Delete, and Exit.

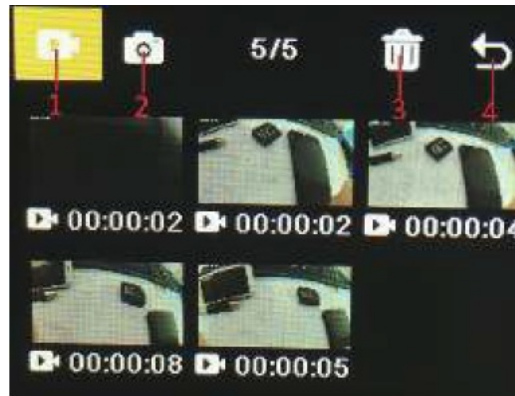

1. Video album: Select the video album icon, press Mode button to enter the video file selection, press up/down to select, and press OK button to play the video. When a video is playing, press the OK button to play/pause it, and press the Mode button to exit. Press the Mode button to return to album selection.
2. Photo album: Select the photo album icon and press OK button to open the album, press Mode button to enter the photo file selection, press up and down to select, press OK button to display photos in full screen, and press up/down to browse. Press the Mode button to return to album selection.
3. Delete: After opening the video or photo album, press the up/down button to select the delete function, then press the mode button to enter the corresponding album to select the file to be deleted, press the up/down button to select, press the OK button to confirm, and finally press the mode button to enter the delete operation. You can choose to delete selected and delete all.
4. Exit playback Mode


- **Settings Menu:**

 - Enter the menu interface after selecting video settings or camera settings.

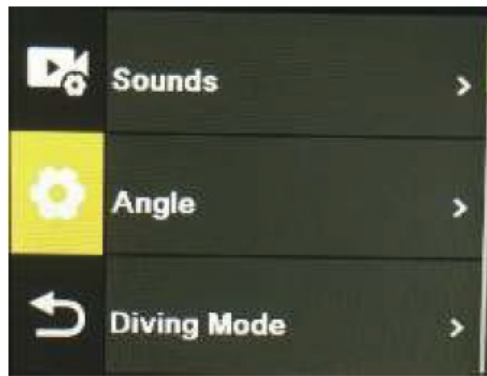

- On the menu interface, press the up/down button to switch between different setting menus: Current mode setting, Camera system setting, and Exit.
- Press OK button to enter the lower menu.
- Press the up and down buttons to select the setting item.
- Press the OK button to confirm the selection.
- Press the mode button to return to the upper level or exit.

 • **Video recording function:**

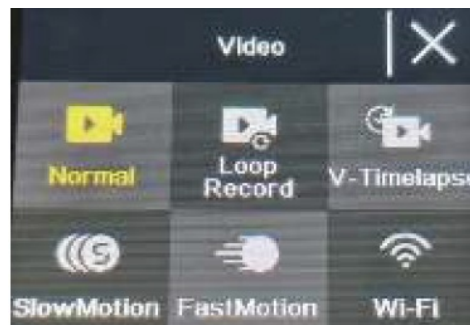

◦ **Normal recording**

In recording mode, short press OK button to start recording. Short press the OK button again to stop recording and save the file.

◦ **Loop recording**

On the photo and video mode selection interface, select loop recording. After entering loop recording mode, the loop recording icon will be displayed in the upper left corner of the screen. In the loop recording menu, you can set the length (1 minute, 3 minutes, 5 minutes) and video resolution of each video in the loop recording, press the “OK button” to start the loop recording.

◦ **Time-lapse video**

Select time-lapse video on the photo and video mode selection interface. After entering the time-lapse video mode, the time-lapse video icon will be displayed in the upper left corner of the screen. Time-lapse recording parameters (1 second, 3 seconds, 5 seconds, 10 seconds, 30 seconds, 1 minutes) and video resolution can be set in the time-lapse recording menu, and press “OK” to start time-lapse recording.

◦ **Slow motion video**

Select slow motion video on video mode selection interface. After entering the slow motion video mode, the slow motion icon will be displayed in the upper left corner of the screen, and press the “OK button” to start recording.

• **Photo function**



- **Ordinary photo**

Select the photo mode in the photo and video mode selection interface. After entering the photo mode, the photo icon will be displayed in the upper left corner of the screen. You can set the photo pixels (20M, 16M, 14M, 10M, 8M, 5M, 2M) and other parameters in the photo mode menu. Press “OK” to take a photo.

- **Self-time photo**

Select the self-time photo mode on the photo and video mode selection interface. After entering the self-time photo mode, the self-time photo icon will be displayed in the upper left corner of the screen. You can set the timer time (2s, 5s, 10s) in the self-time photo mode menu. Press the “OK button” to start the countdown and take a photo when the timer ends.

- **Burst Photo**

Select the burst photo mode in the photo and video mode selection interface. After entering the burst photo mode, the burst photo icon will be displayed in the upper left corner of the screen. 3p/s, 7p/s, 15p/s, 30p/s). Press the “OK button” and the camera continuously emits a “click” sound and the blue light flashes.

(Note: The camera needs a certain period of time to store photos during burst photo, and it cannot take another photos by pressing the “OK button” before the storage ends.)

- **Timelapse Photo**

Select the timelapse photo mode in the photo and video mode selection interface. After entering the timelapse photo mode, the timelapse photo icon will be displayed in the upper left corner of the screen. The photo interval time (3s, 5s, 10s, 15s, 30s, 60s) can be set in the timelapse photo mode menu. Press the “OK button” to start taking pictures continuously according to the set time interval, and press the “OK button” again to stop.

- **WiFi and APP Function**

- **APP download**

For Android system, please search “iSmart DV2” in the Google APP store to download and install. For IOS system, search “iSmart DV2” in Apple App Store to download and install.

- **Open WIFI**

In the video mode or photo mode, press the “down button” to turn on the WIFI, the camera enters the WIFI interface, and displays the WIFI name “Action Cam-XXXX” and the WIFI password “12345678”. Find the corresponding WIFI name of the camera in the phone WIFI settings to connect to WIFI.

- **APP Operation**

After the mobile phone is connected to the camera WIFI, open the APP and enter the APP home page.

- Click to add a new camera → WI-FI Connect to enter the APP operation interface
- Click “Offline Album” to enter the APP offline album, the pictures and videos downloaded from the

camera side album on the APP are saved here.

APP operation interface function introduction



1. Setting
2. Resolution
3. WIFI Signal
4. Battery capacity
5. White balance
6. Album
7. Shutter
8. Video mode selection

Spec

Function mode	Recording, photo, playback....
LCD screen	2.0inch+1.3inch Screen
Picture resolution	20M, 16M, 14M, 10M, 8M, 5M, 2M
Video resolution	4K, 2.7K, 1080P, 720P
Storage medium	Micro SD Card (Maximum supporting 128GB)
File format	JPG/ MOV
USB Port	USB2.0
Power supply	Built- in 3.7V rechargeable lithium battery
Menu language	English/ Spanish.....

Operational precautions

1. This product is a high-precision product, please do not drop or hit.
2. Please do not place the camera close to objects with strong magnetic fields, such as magnets and motors, and also avoid placing the product close to objects that emit strong radio waves. Strong magnetic fields may cause product failure, or damage images and sounds.
3. Please select the brand's Micro Sd card, ordinary cards cannot be guaranteed to work normally.
4. Please do not store the Micro Sd card in or near a strong magnet to avoid losing the stored data in the Micro Sd card.
5. During the charging process, if there is overheating, smoke, or odor, please unplug the power immediately and stop charging to avoid fire.
6. When charging, please keep the product out of reach of children. The power cord may cause accidental suffocation or electric shock to children.
7. Please place the product in a cool, dry and dusty-free place.

Product Features

- Video resolution up to 4K@30fps
- wide-angle lens
- Ultra HD 2.0 inch +1.3inch screen
- The battery is detachable, it is easy to replace the battery and prolong the service life.
- Support for up to 128G Micro Sd memory card
- **Multiple video recording format:** 4K, 2.7K, 1080P, 720P
- **Multiple shooting modes:** single, timing, auto, Burst
- **Multiple video modes:** normal, loop, time-lapse, slow motion


Product Schematic Diagram



1. OK button
2. Mode button
3. Speaker
4. Magnetic charging interface
5. 1.3 inch screen
6. Up button
7. Down button
8. Battery cover
9. Support interface

Micro Sd memory card is not included

Documents / Resources

<p>Instruction Manual for Body Waterproof</p> <p>Product NO.: ACP1250</p> 	<p>SALORA ACP1250 Razor-sharp 4K Resolution Camera [pdf] Instruction Manual 934823, ACP1250 Razor-sharp 4K Resolution Camera, Razor-sharp 4K Resolution Camera, 4 K Resolution Camera, Resolution Camera, Camera</p>
---	--