



Salto FRO01
Orion Face
Recognition
Access Control



Salto FRO01 Orion Face Recognition Access Control Installation Guide

[Home](#) » [SALTO](#) » Salto FRO01 Orion Face Recognition Access Control Installation Guide 

Contents

- [1 Salto FRO01 Orion Face Recognition Access Control](#)
- [2 Considerations](#)
- [3 What's in the box?](#)
- [4 Orion Camera](#)
- [5 Orion Control Unit](#)
- [6 Placement](#)
- [7 INSTALLATION](#)
- [8 Commissioning](#)
- [9 Specifications and Requirements](#)
- [10 FAQ](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)
- [12 Related Posts](#)



Salto FRO01 Orion Face Recognition Access Control



Considerations

- **Passing Pedestrians**


Pedestrians passing too close to an Orion Camera may initiate the recognition sequence. There are situations where this may be unavoidable, for example, busy corridors. However, in such cases, it may be advantageous to slightly adjust the dimension at which the sensor is triggered, requiring users to stand slightly closer to the camera. This can help reduce unnecessary load upon the network.

- **Lighting Conditions**

Camera positions must be carefully considered at pre-installation survey prior to fitting Orion Cameras outdoors or in indoor locations that are subject to bright sunlight or very bright artificial lighting. Ensure that cameras are positioned such that users will never have bright or direct light behind them. Consider how lighting conditions may vary through the day and throughout the year; for example, the sun position will change significantly from summer to winter. The Orion Camera requires a minimum lighting level of 10 Lux in the vertical plane, 600mm from the Orion Camera. In low lighting conditions, (e.g. outdoors at night) lighting should evenly illuminate the user's face.


- **Passing Vehicles**

Vehicles passing too close to the Orion camera may initiate the recognition sequence. In a situation such as a busy road this could cause unnecessary load upon the network. Cameras should be positioned such that there is a minimum of 2m between the Orion Camera and any adjacent roadway.

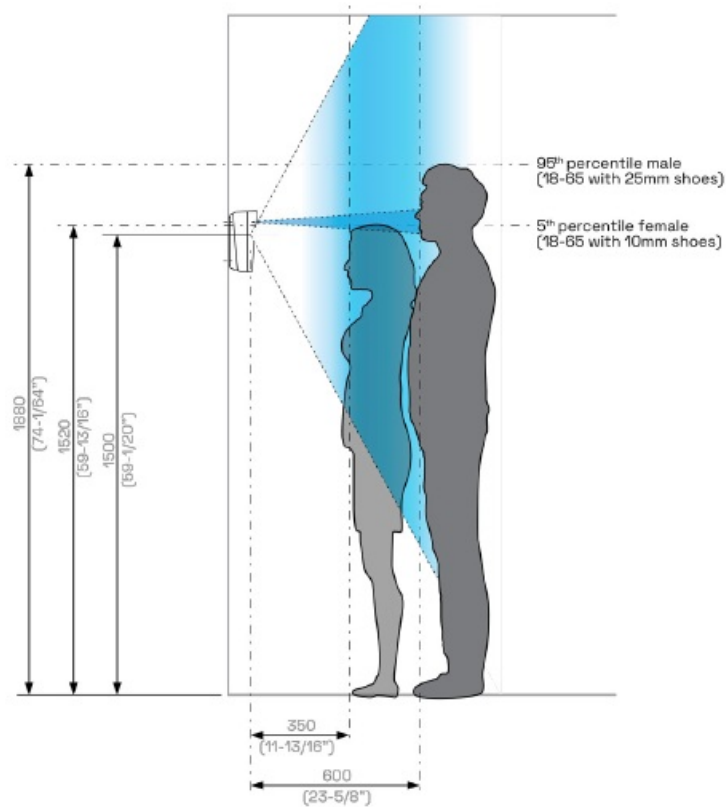


Positioning

It is important to position the Orion Camera at the specified height. The camera is designed to operate optimally for a user population from 5th %ile adult females, to 95th %ile adult males and at a range from approximately 300mm to approximately 600mm.

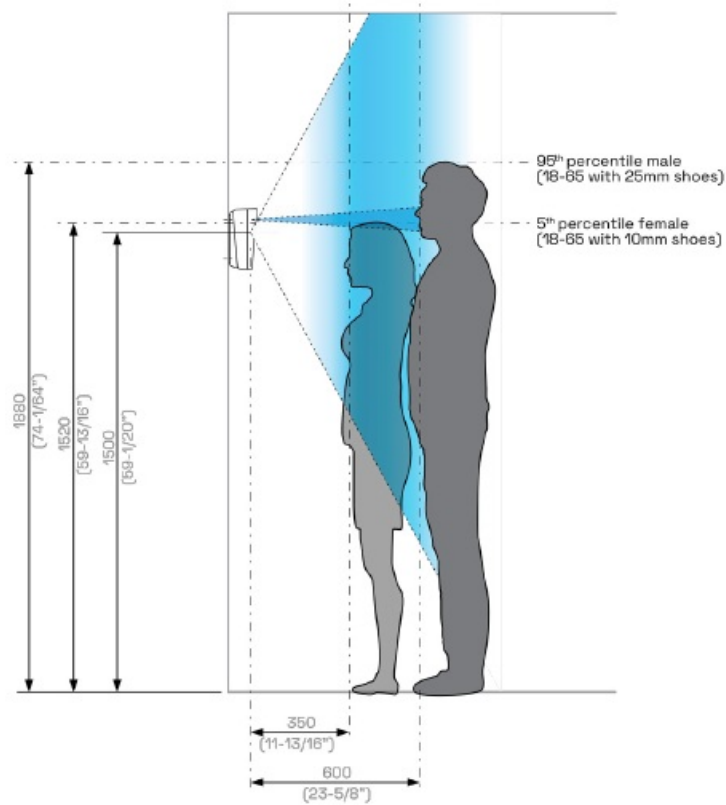


Accommodating Disabilities


Where an access point is wheelchair accessible, the Orion Camera will need to be set slightly lower, or two cameras should be fitted.

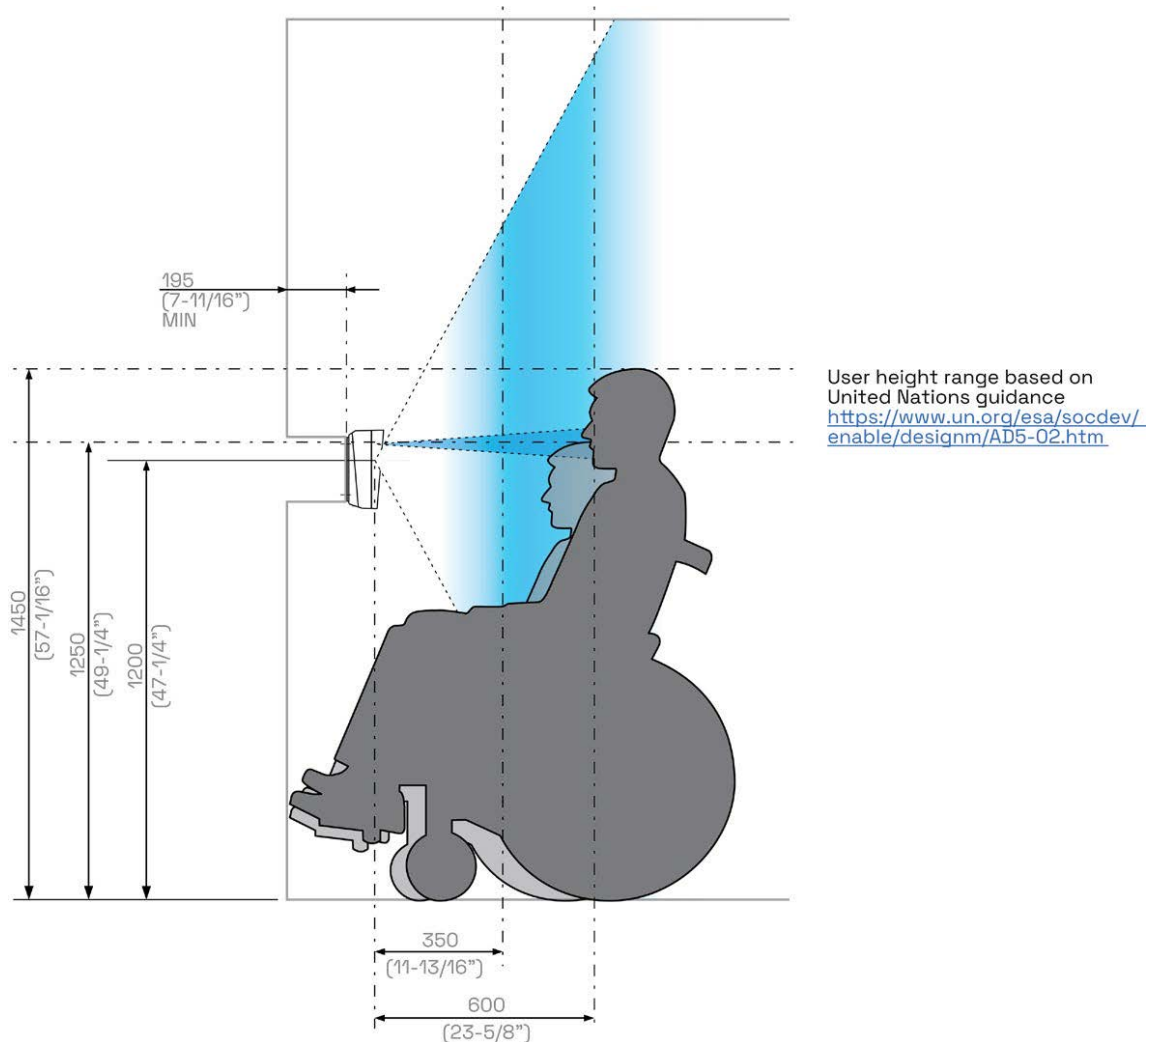


What's in the box?

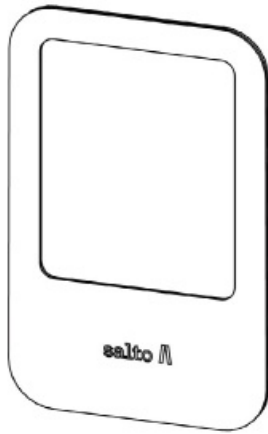


**Orion C
Face Plate**

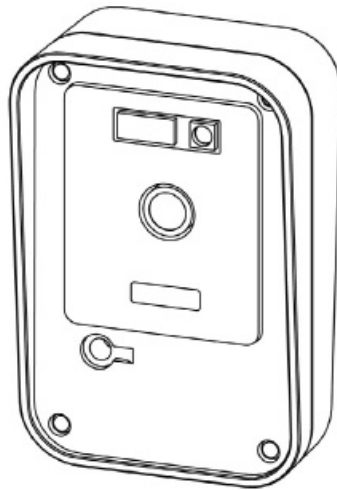

**Orion C
Camera**

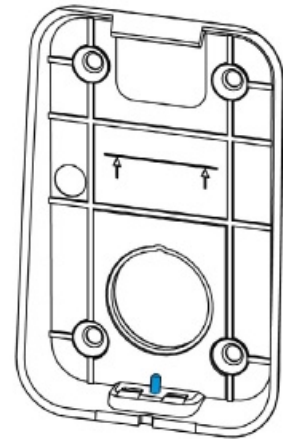

**Orion C
Wall Mount**

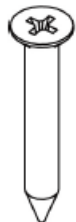


(X4)




(X4)




Bung

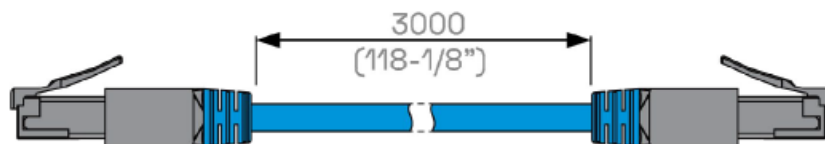


Orion C 3 meter Cat6 shielded cable

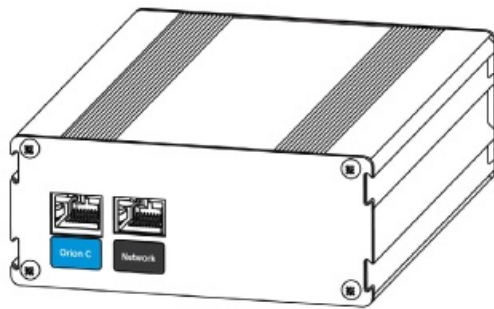

**Orion CU
(Control Unit)**

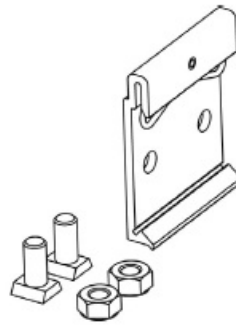

**Orion CU
(Control Unit)
DIN mount**

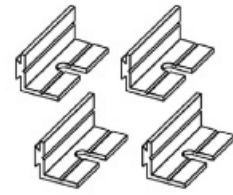

**Orion CU
(Control Unit)
Fixing plates**





(X4)




(X4)

Orion Camera

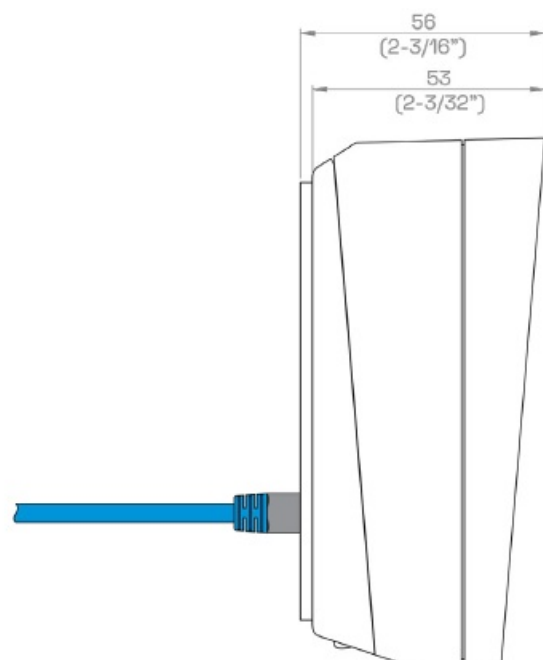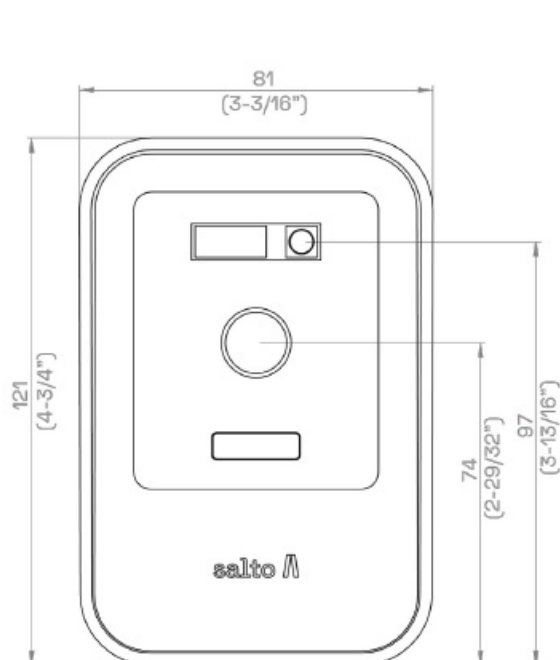


Orion Control Unit

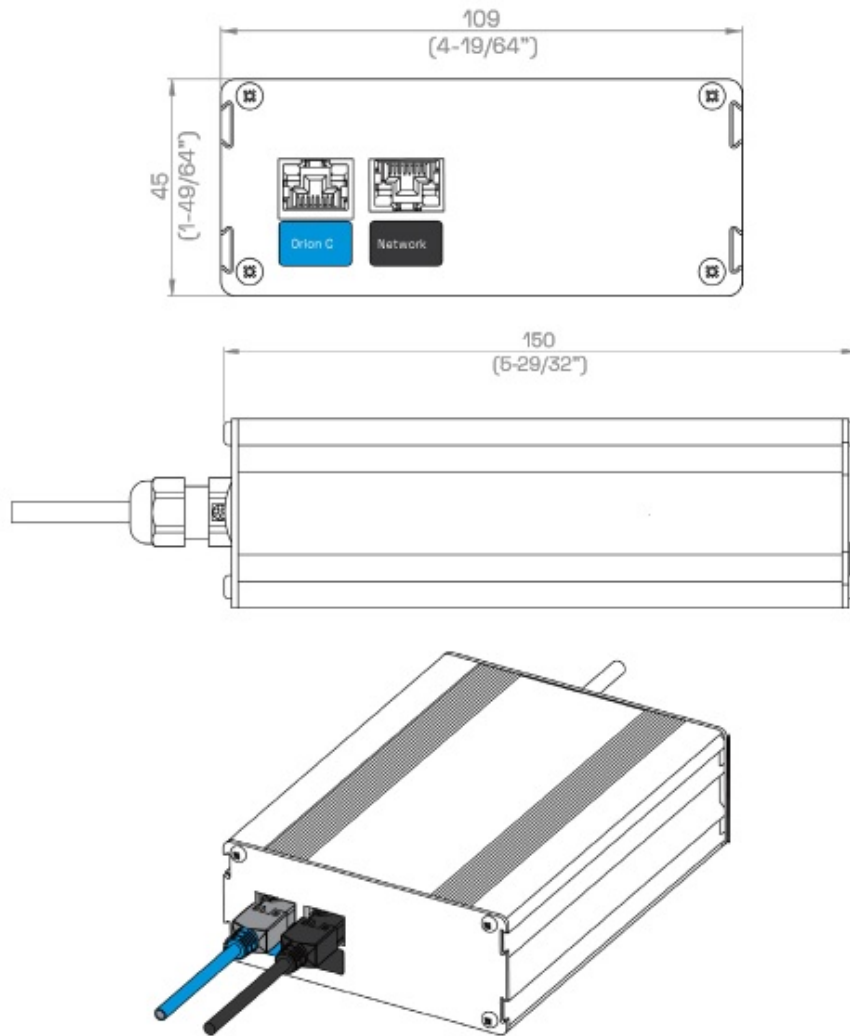


Placement


Installation of a Control Unit above a ceiling behind the locked door (not in the corridor or space outside the locked door), using the provided Orion C 3 metre-long cable.

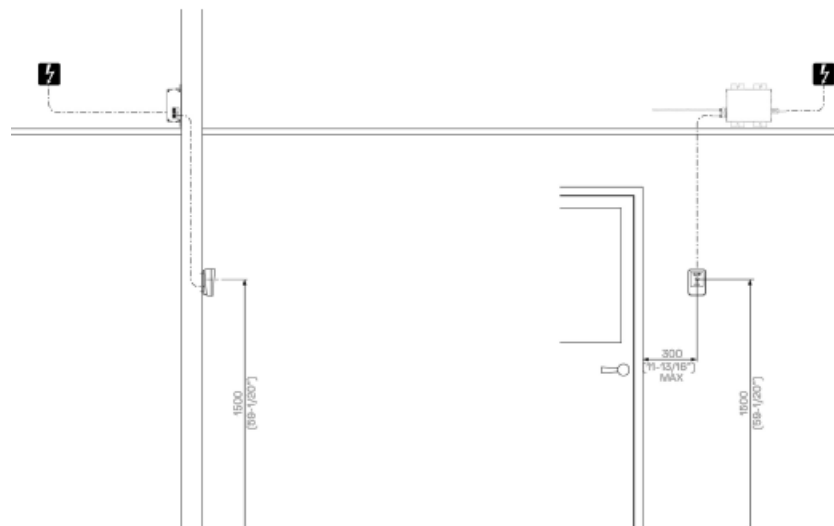

Installation of a Control Unit in a cabinet behind the locked door (not in the corridor or space outside the locked door), using the provided Orion C 3 metre-long cable.

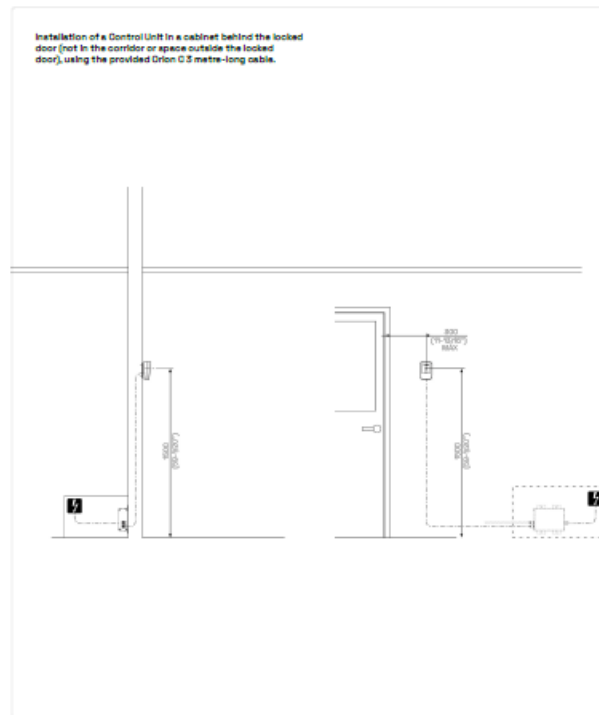


INSTALLATION

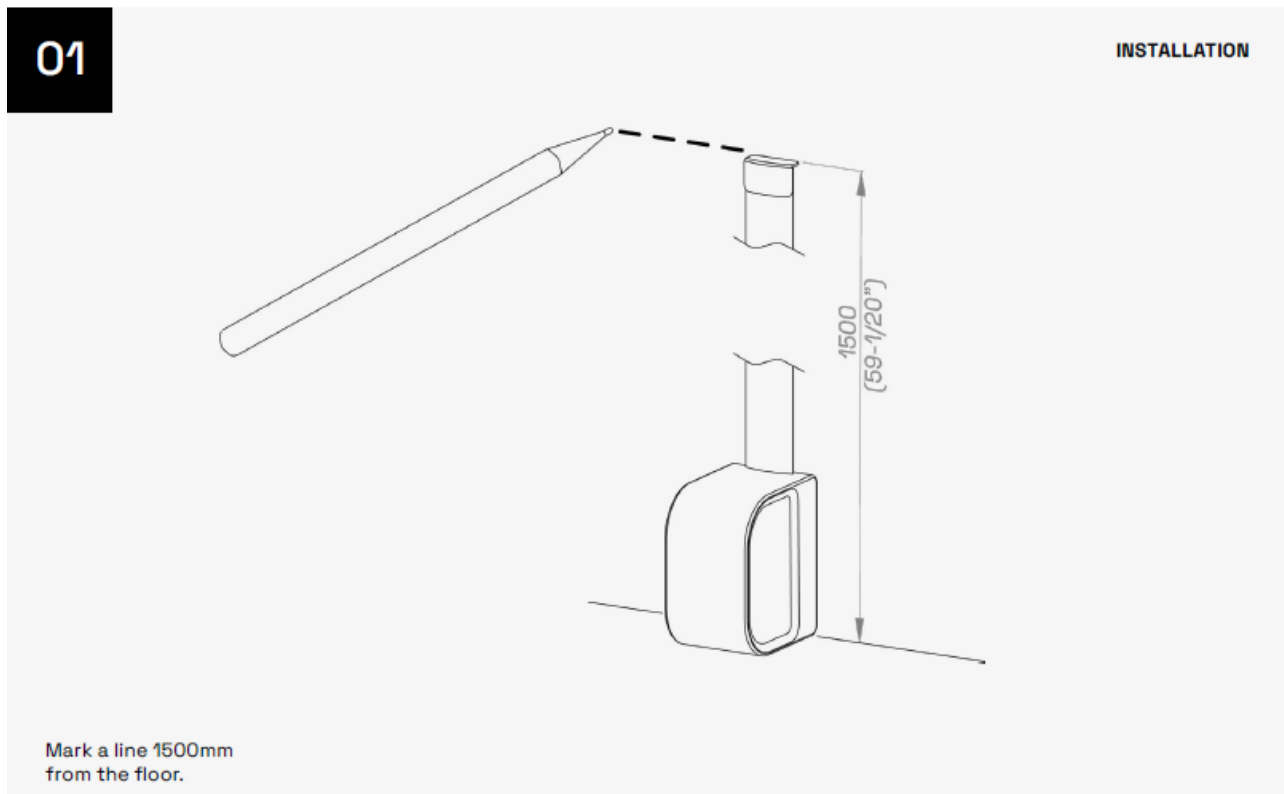

Mark a line 1500mm from the floor.

02

INSTALLATION

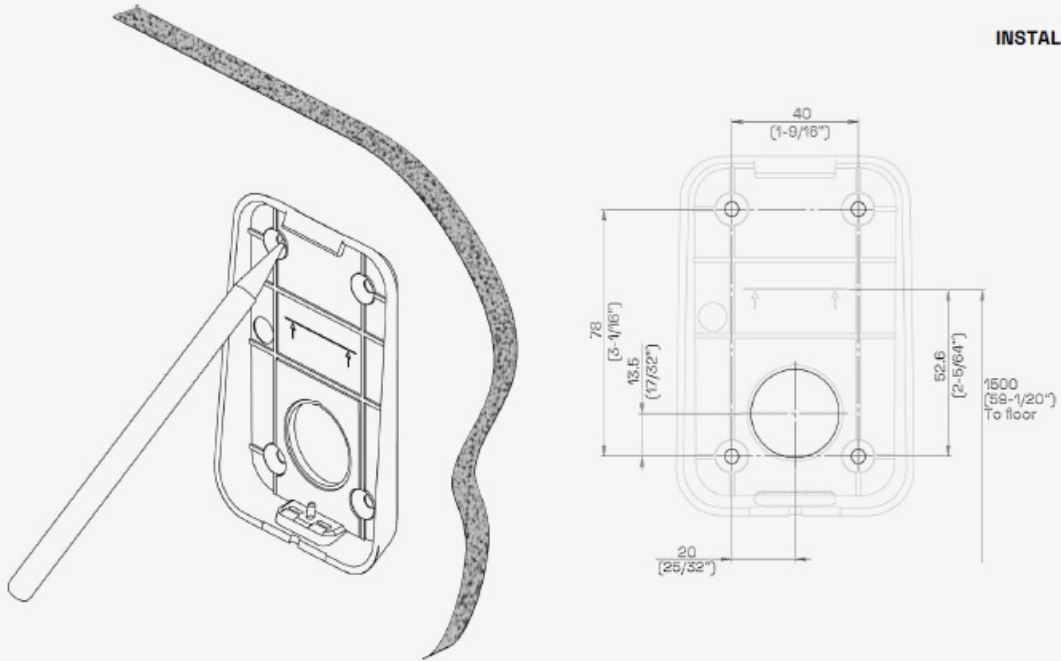


Using the window, position the Camera Wall Mount at the correct height and mark the hole centres.
Ensure the wall mount is positioned horizontally using a spirit level.

Using the window, position the Camera Wall Mount at the correct height and mark the hole centres. Ensure the wall mount is positioned horizontally using a spirit level.

03

INSTALLATION

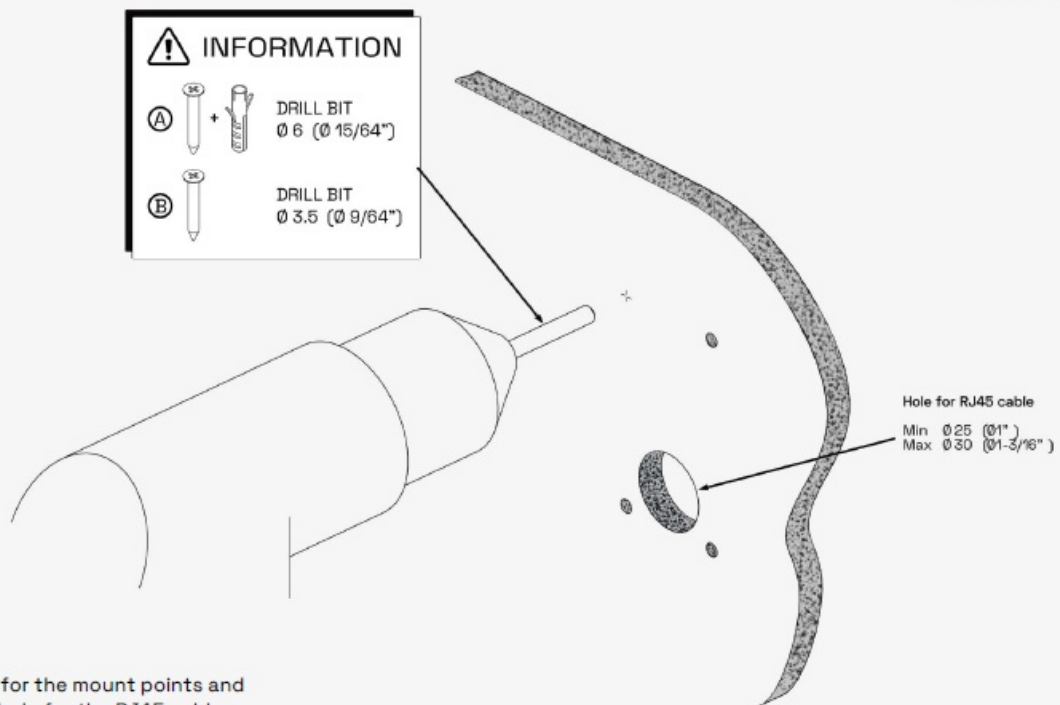


Drill 4 holes for the mount points and the access hole for the RJ45 cable.


Drill 4 holes for the mount points and the access hole for the RJ45 cable.

04

INSTALLATION

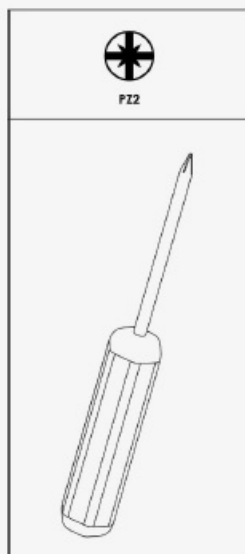

Mount the Orion C Wall Mount using the wall Plugs and Screws.

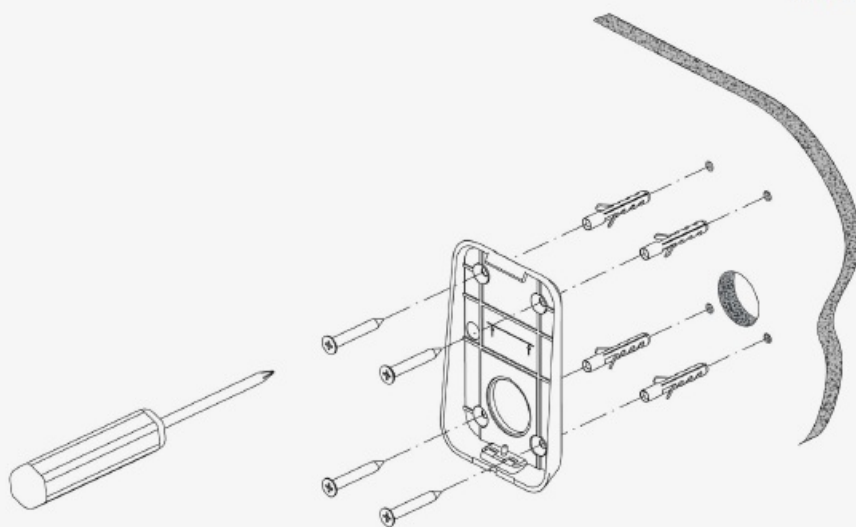


Mount the Orion C Wall Mount using the wall Plugs and Screws.



05




INSTALLATION

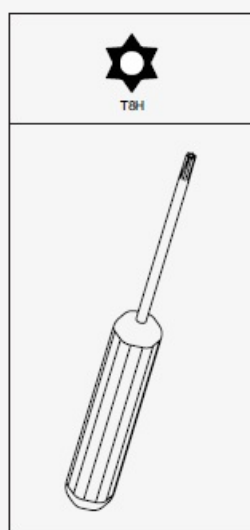

Using a T8H security screwdriver, gently loosen the security screw until it is clear of the inside wall.
Avoid using electric screwdrivers to minimise damage to the device.

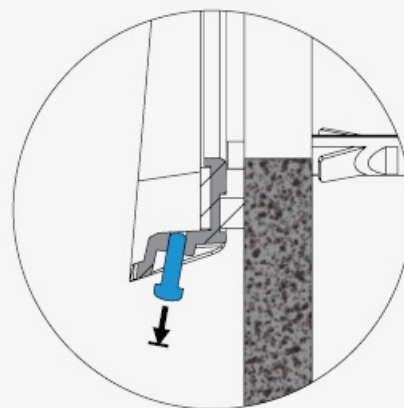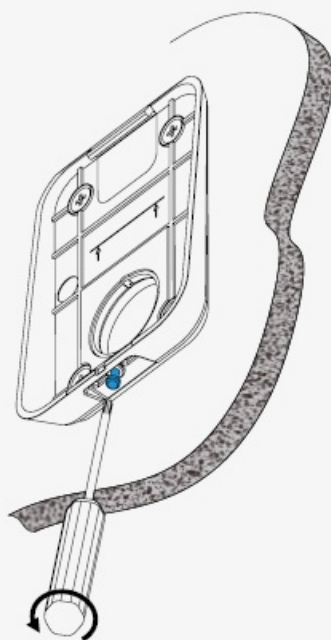


Using a T8H security screwdriver, gently loosen the security screw until it is clear of the inside wall. Avoid using electric screwdrivers to minimise damage to the device.

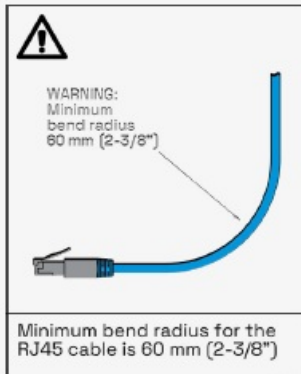


Route the RJ45 Cable to the Camera Wall Mount making sure the minimum bend radius of 60mm is observed. A larger bend radius is preferred.

Ensure there is no strain on the cable connection.

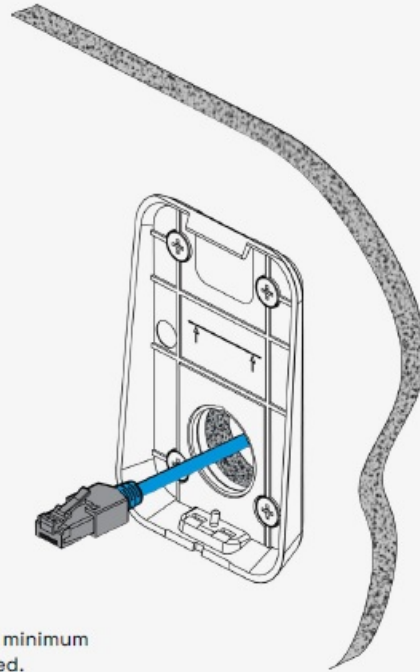

Route the RJ45 Cable to the Camera Wall Mount making sure the minimum bend radius of 60mm is observed. A larger bend radius is preferred.
Ensure there is no strain on the cable connection.

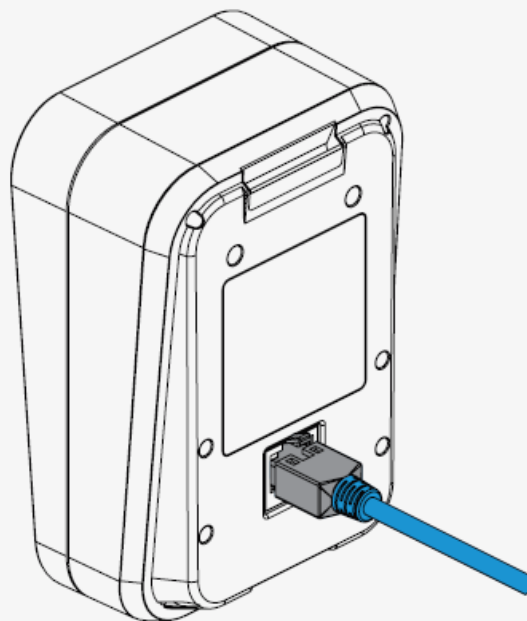


Plug the RJ45 cable into the Orion Camera.


Plug the RJ45 cable into the Orion Camera.

08


INSTALLATION

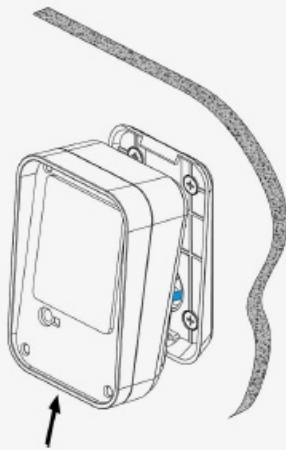

Locate the Wall Mount tongue into the slot on the top of the Orion Camera casing.

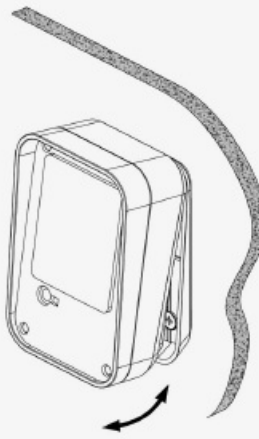




Rotate Camera and snap into the Wall Mount.
Ensure there is no strain on the cable connection.

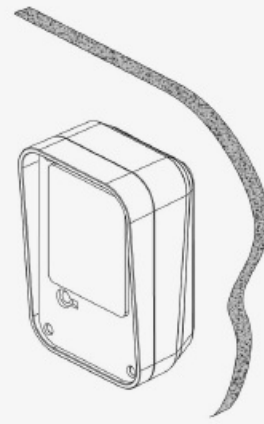

Locate the Wall Mount tongue into the slot on the top of the Orion Camera casing. Rotate Camera and snap into the Wall Mount. Ensure there is no strain on the cable connection.

09


INSTALLATION

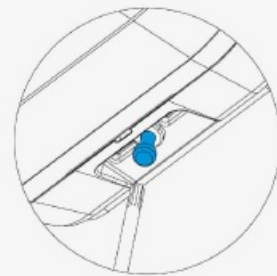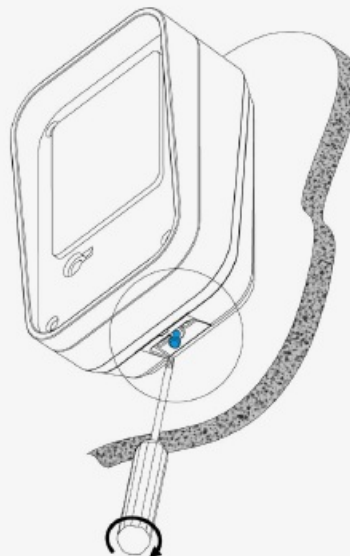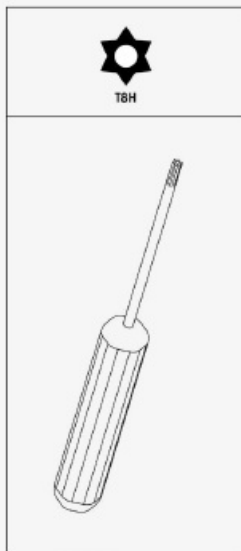


Using a T8H security screwdriver, gently tighten the security screw until it is fully inserted.

Avoid using electric screwdrivers to minimise damage to the device.

Using a T8H security screwdriver, gently tighten the security screw until it is fully inserted.
Avoid using electric screwdrivers to minimise damage to the device.

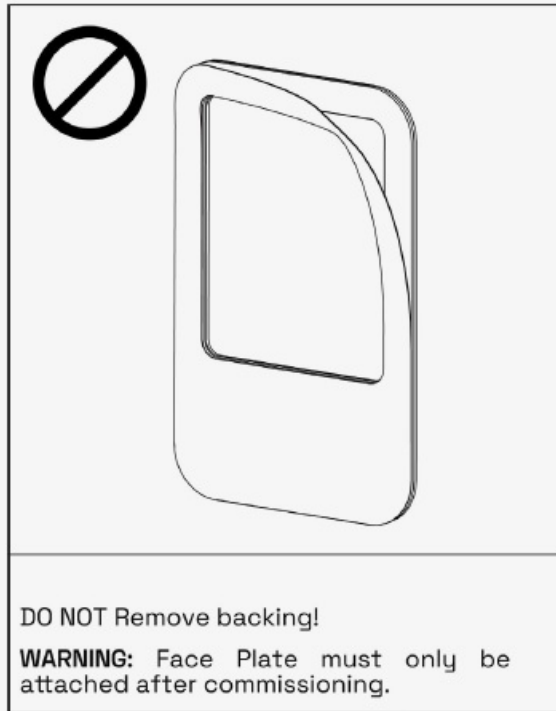


10

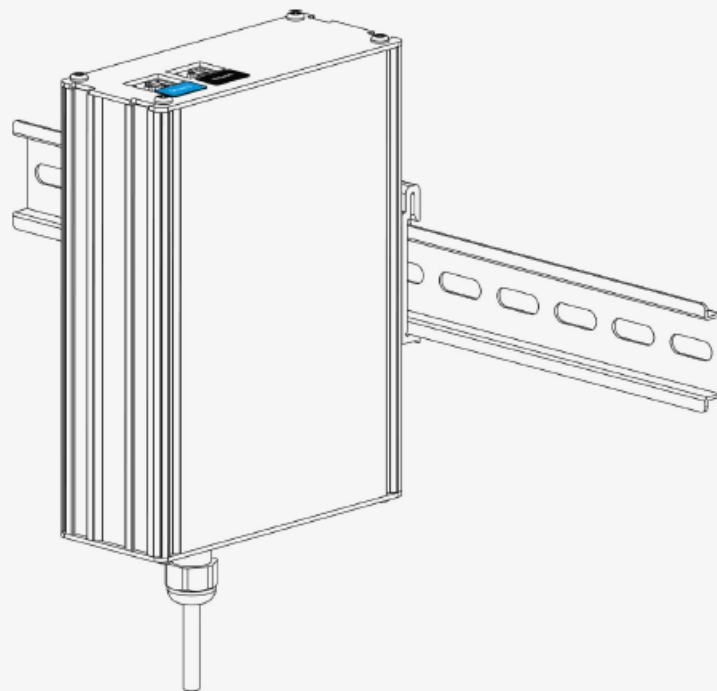


Control Unit Din Rail
Mounting Option

Control Unit Din Rail Mounting Option

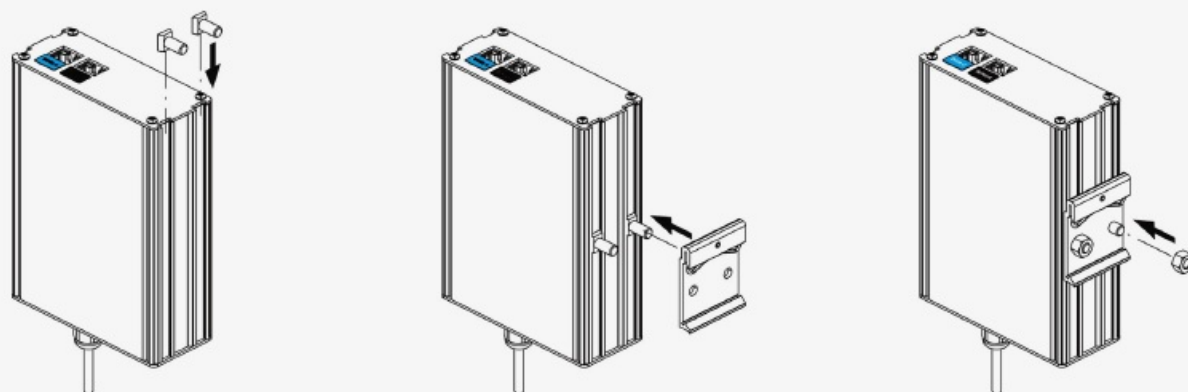


Orion CU Din Rail
Type assembly

Orion CU Din Rail Type assembly

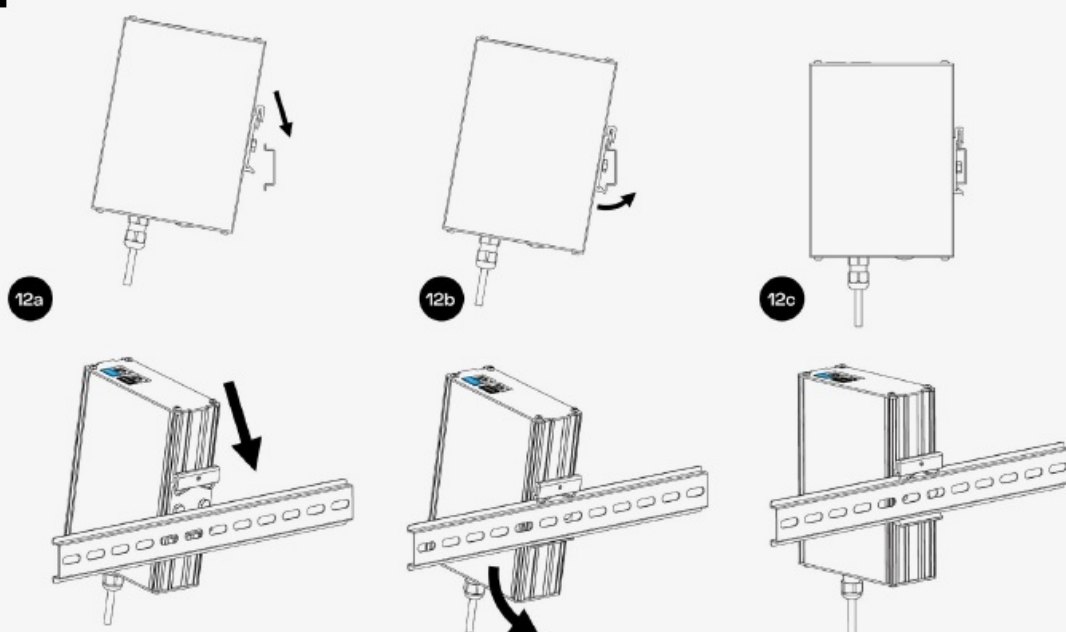


13

INSTALLATION

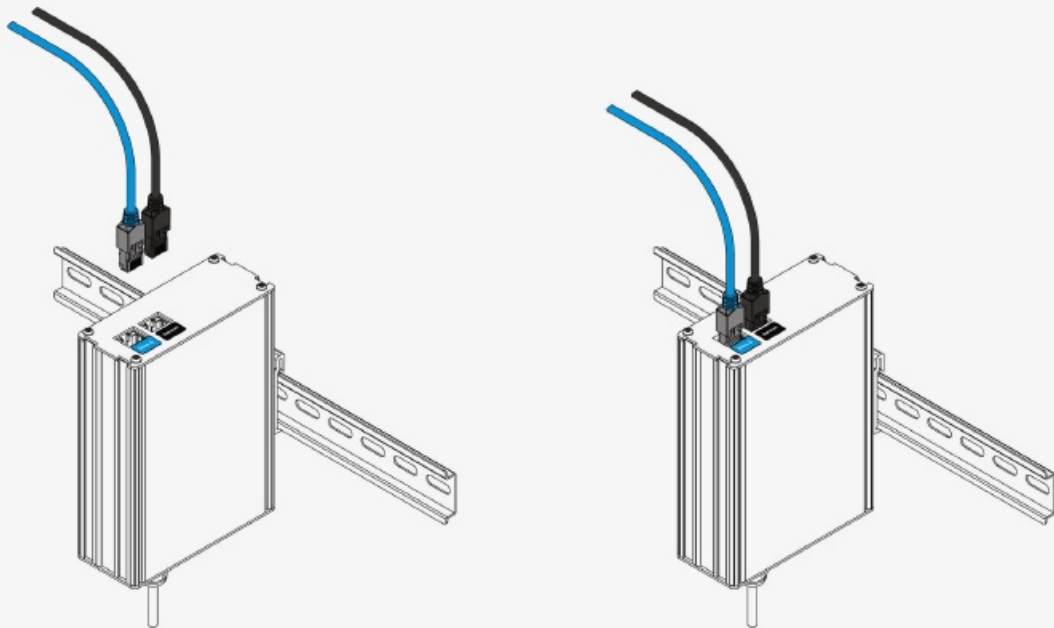


14

INSTALLATION

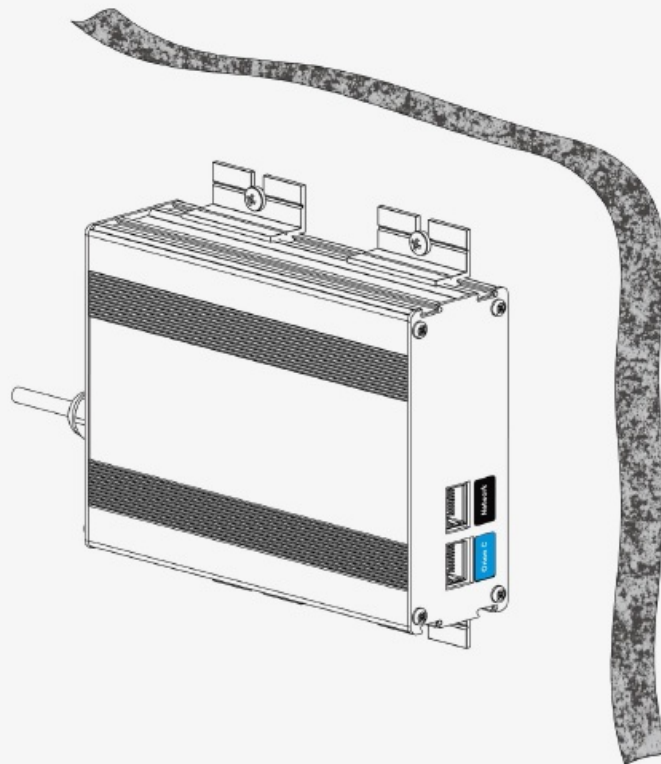




Control Unit Wall
Mounting Option

Control Unit Wall Mounting Option

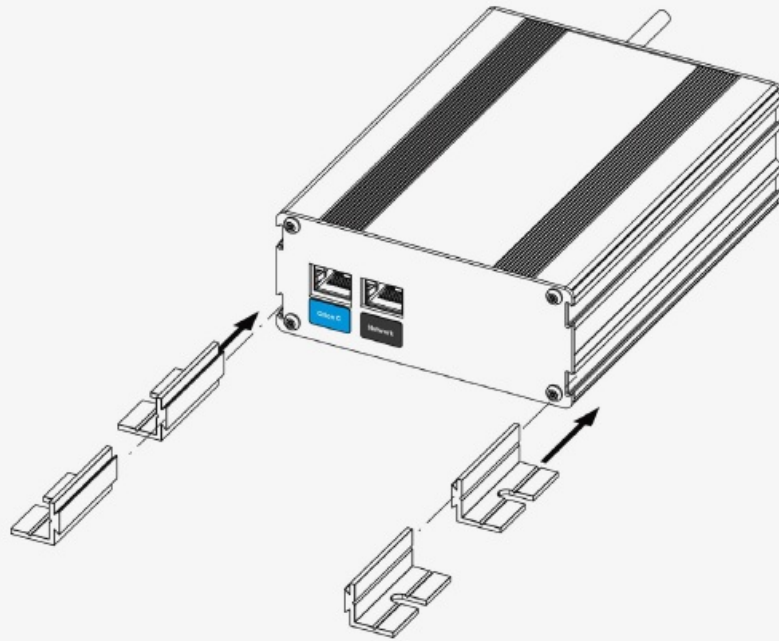


Orion CU Wall mount assembly

Orion CU Wall mount assembly

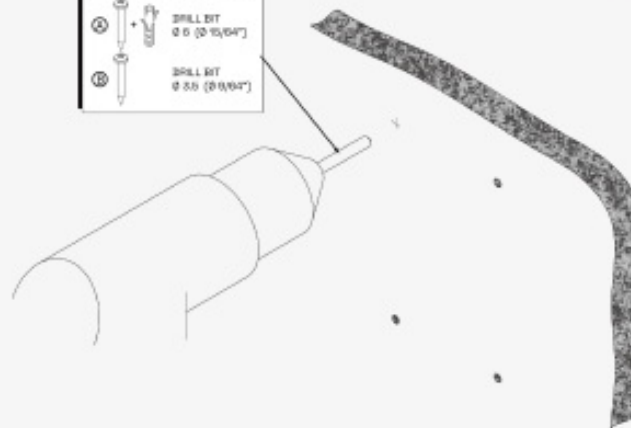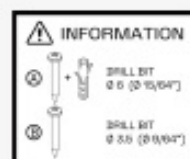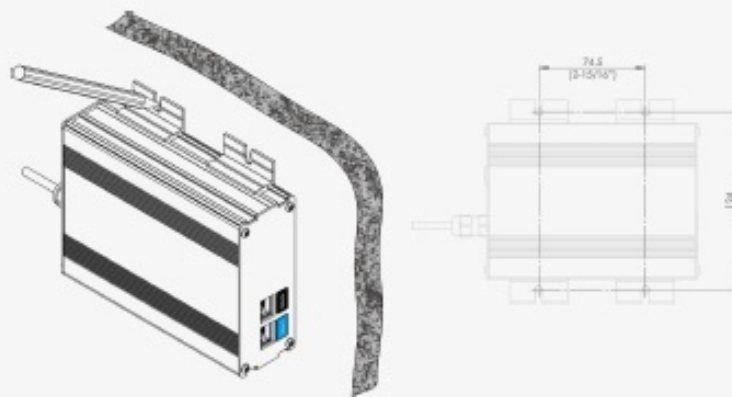


18

INSTALLATION

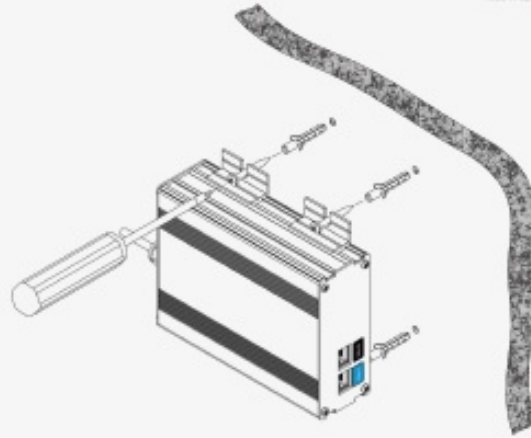

19


INSTALLATION

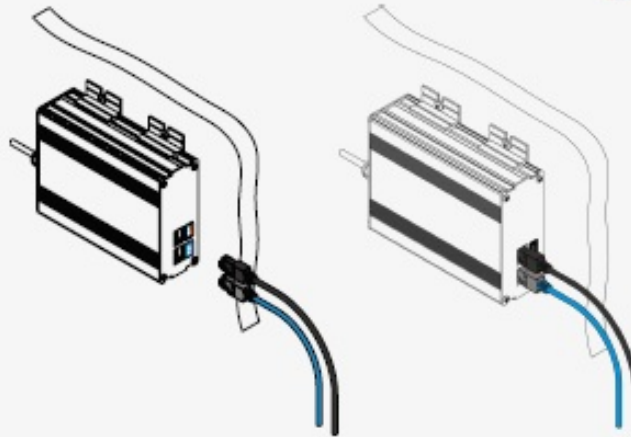

20

Power on the system

INSTALLATION

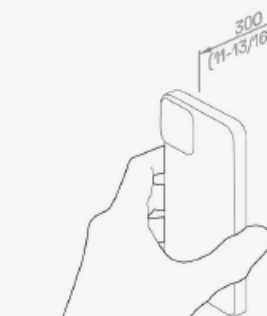

QR Code no. 1




Power on the system. Status displays dim blue during starting-up. Status then displays flashing yellow. Status displays continuous yellow when detector is activated (including by the screen protector film).

Display QR code no.1 to camera at a distance of 300mm. Status displays solid green to indicate successful test.

Status displays red if an issue is detected. Depending on the severity of the issue, the program may restart, but will return to flashing yellow when the QR code is moved away or the program has restarted.


Power on the system. Status displays dim blue during starting-up. Status then displays flashing yellow. Status displays continuous yellow when detector is activated (including by the screen protector film). Display QR code no.1 to camera at a distance of 300mm. Status displays solid green to indicate successful test.

Status displays red if an issue is detected. Depending on the severity of the issue, the program may restart, but will return to flashing yellow when the QR code is moved away or the program has restarted.

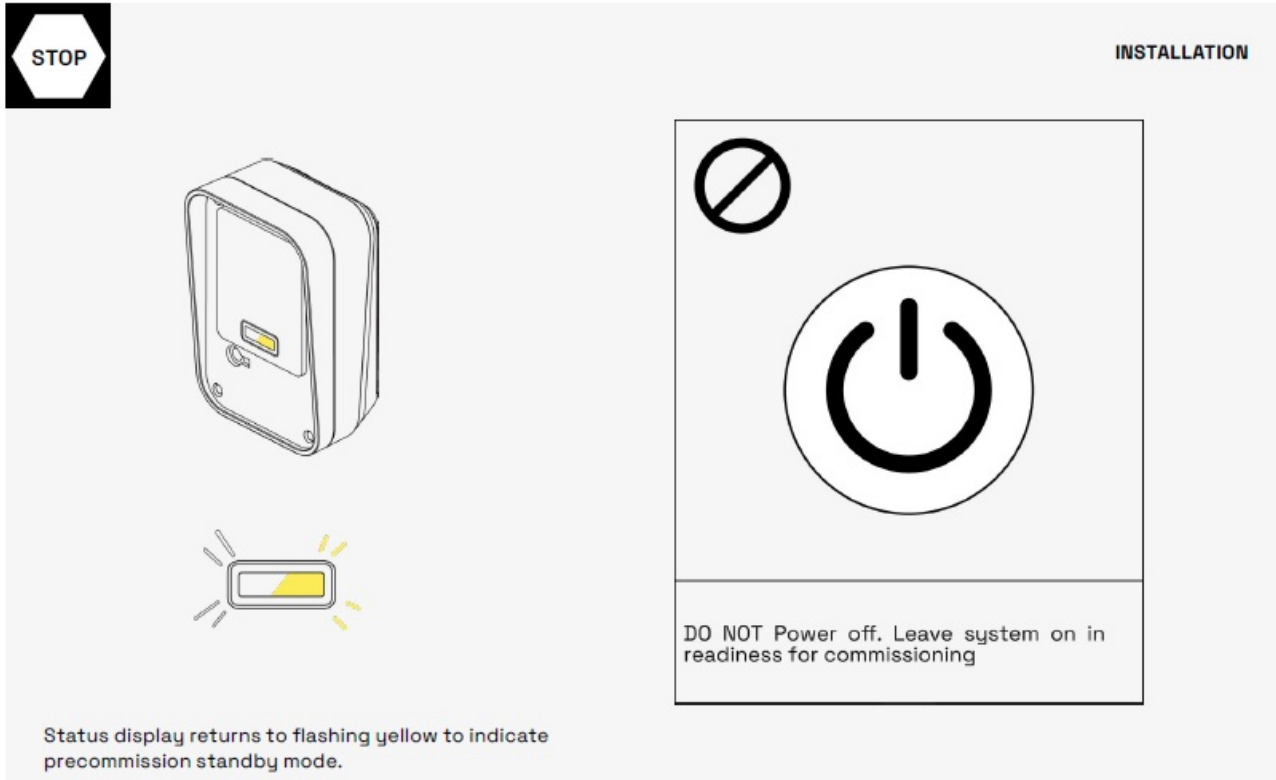


Status display returns to flashing yellow to indicate pre-commission standby mode.

Commissioning

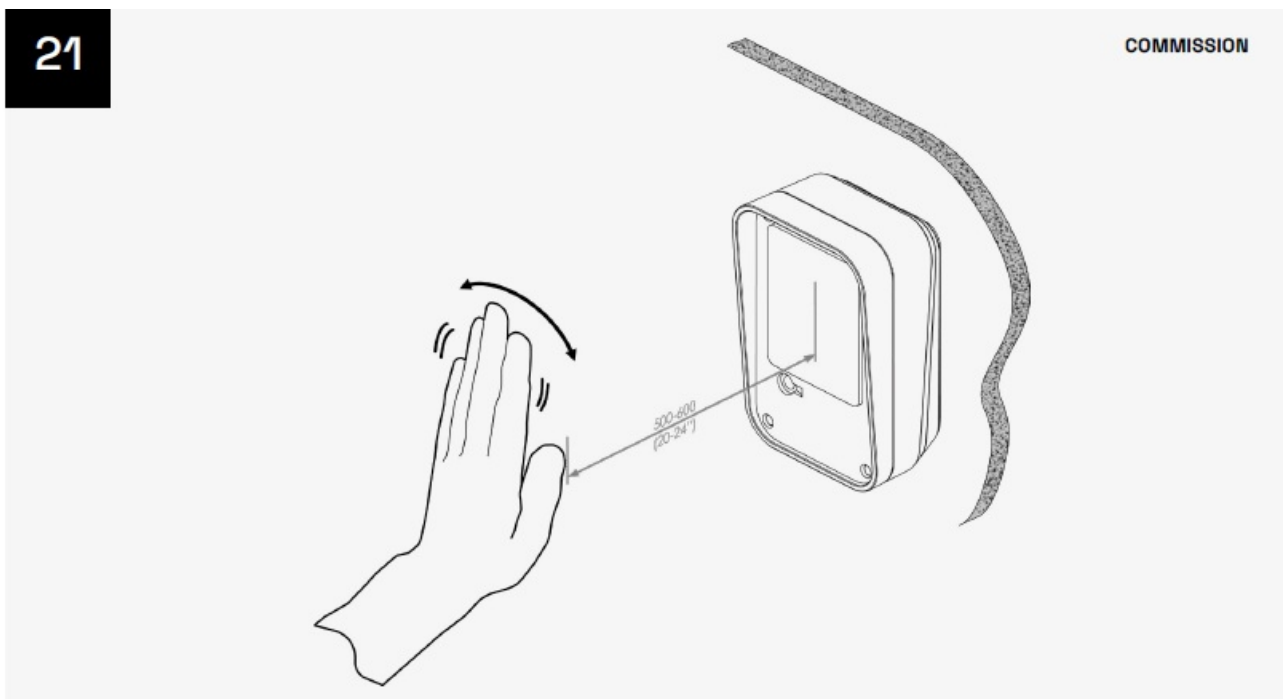


Place your hand at the selected detection distance. Status displays flashing yellow until an object is detected. If status changes to continuous yellow when the hand is at the selected detection distance, the sensor is adjusted correctly.

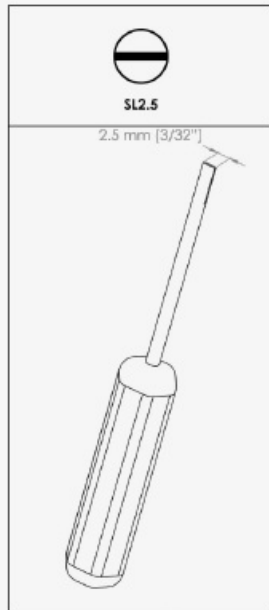

If necessary, adjust the sensor by carefully turning the potentiometer adjuster head as shown.


Gently insert the screwdriver. The adjuster head has a crossed slot, but a flat screwdriver works best.

Be sure to engage the screwdriver with one of the slots before attempting to turn it. Turn very small amounts to adjust. Take care not to damage the head of the adjuster

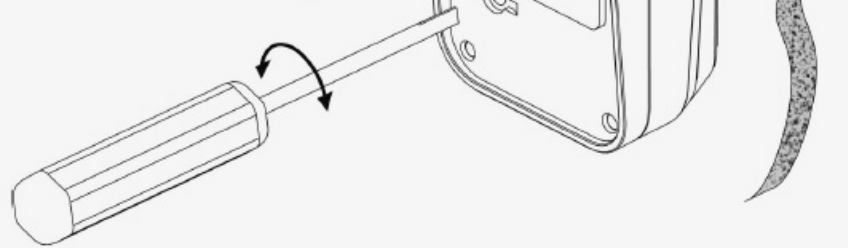


If necessary, adjust the sensor by carefully turning the potentiometer adjuster head as shown. Gently insert the screwdriver. The adjuster head has a crossed slot, but a flat screwdriver works best.

Be sure to engage the screwdriver with one of the slots before attempting to turn it. Turn very small amounts to adjust. Take care not to damage the head of the adjuster

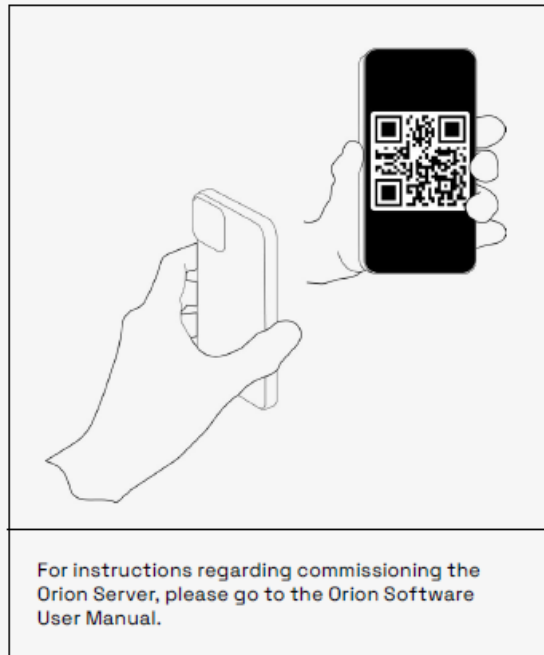


For instructions regarding commissioning the Orion Server, please go to the Orion Software User Manual.


The Orion Console allows each Orion Camera to be paired with its associated SALTO door using a uniquely generated QR code.

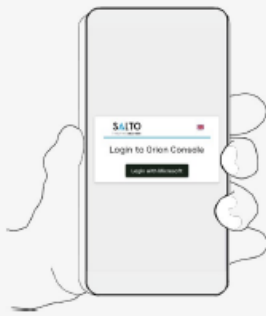

Orion Console Login screen: Commissioners of the Orion System will be provided with a URL and login credentials for the Orion Console. Go to the URL. From the globe symbol select preferred language. Click the login button.

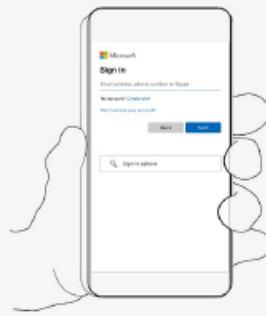

Orion Console Credentials Entry page: Enter login credentials for the Orion Console.

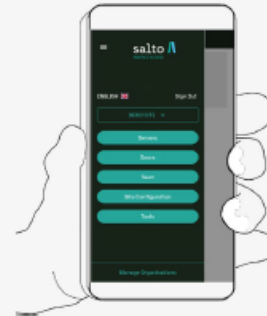


Orion Console Sites Selection page: If granted authority to access more than one Orion site (customer building or site), select the appropriate site from the drop-down menu.

The Orion Console allows each Orion Camera to be paired with its associated SALTO door using a uniquely generated QR code.


Orion Console Login screen: Commissioners of the Orion System will be provided with a URL and login credentials for the Orion Console. Go to the URL. From the globe symbol select preferred language. Click the login button.

Orion Console Credentials Entry page: Enter login credentials for the Orion Console.


Orion Console Sites Selection page: If granted authority to access more than one Orion site (customer building or site), select the appropriate site from the drop-down menu.

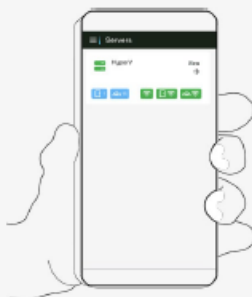


Server tab: Click the "View" button to select the server into which the Orion Camera is being commissioned.

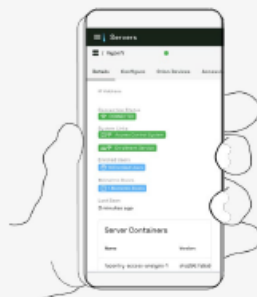

Details tab: The "Details" tab provides details about the server. Click the "Orion Devices" tab to manage and add Orion Devices.

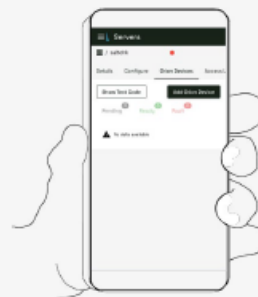

Cameras: The "Orion Devices" tab displays the cameras already commissioned to the server. Filter between cameras in "pending", "ready" and "faulty". Click the "Add Orion Devices".

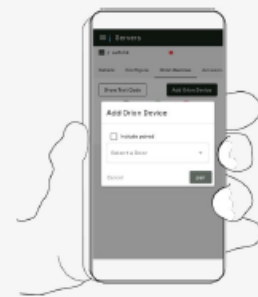

Add Orion Device screen: Use the drop down list to select the SALTO door with which to associate the camera.

Server tab: Click the

“View” button to select the server into which the Orion Camera is being commissioned.


Details tab: The “Details” tab provides details about the server. Click the “Orion Devices” tab to manage and add Orion Devices.

Cameras: The “Orion Devices” tab displays the cameras already commissioned to the server. Filter between cameras in “pending”, “ready” and “faulty”. Click the “Add Orion Devices”.


Add Orion Device screen: Use the drop down list to select the SALTO door with which to associate the camera.

26

COMMISSION

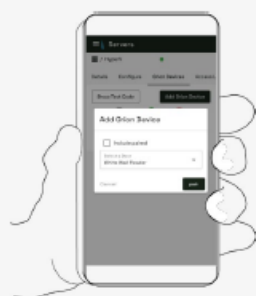


Once the correct SALTO door as been selected, click “pair”.

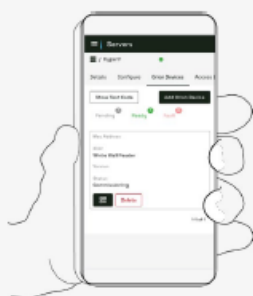

If an incorrect door was selected, use the “Delete” button. Then, use the “add Orion Device” button again to access the list of doors, and select the correct one.



QR code screen: Click “Pair”. A unique QR code will be generated. If the correct door has been selected, show the QR code to the Orion Camera. This will initiate the pairing, and the camera will display a sequence of colours on the LED status indicator lights (see below).

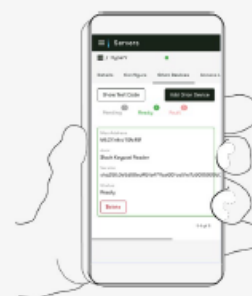

Orion Devices tab: The QR code will disappear once the commissioning of this camera is complete.


Once the correct SALTO door as been selected, click “pair”.

If an incorrect door was selected, use the “Delete” button. Then, use the “add Orion Device” button again to access the list of doors, and select the correct one.

QR code screen: Click “Pair”. A unique QR code will be generated. If the correct door has been selected, show the QR code to the Orion Camera. This will initiate the pairing, and the camera will display a sequence of colours on the LED status indicator lights (see below). Orion Devices tab: The QR code will disappear once the commissioning of this camera is complete.

27

COMMISSION

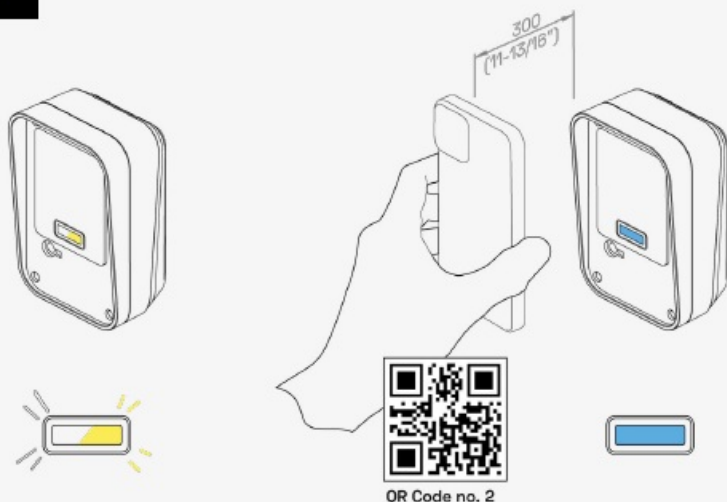

Orion system powered on and status flashing yellow.

Display QR code no.2 to camera at a distance of approximately 300mm. Status flashes blue to indicate that a commission request is being sent to the Orion Server.

Flashing green indicates a successful commission response from the Orion Server.

Orion system powered on and status flashing yellow.

Display QR code no.2 to camera at a distance of approximately 300mm. Status flashes blue to indicate that a commission request is being sent to the Orion Server.

Flashing green indicates a successful commission response from the Orion Server.

28

COMMISSION



Note

Red being shown during this process indicates an error. If this error is encountered during a commission request to the server, the status indicator will first show red then blue to indicate that it will re-attempt the request. This red-blue cycle will repeat up to 5 times until there is a green light indicating a successful commission response from the Orion Server.

If there is no successful response after 5 attempts, the camera will return to flashing yellow. In this case check the network configuration and the server status.


Once commissioning of the Camera is complete the camera status indicator LED will turn off and then show a flashing blue light whilst the Camera is initializing. This will turn to continuous white once initialization is complete.

Note

Red being shown during this process indicates an error. If this error is encountered during a commission request to the server, the status indicator will first show red then blue to indicate that it will re-attempt the request. This red-blue cycle will repeat up to 5 times until there is a green light indicating a successful commission response from the Orion Server. If there is no successful response after 5 attempts, the camera will return to flashing yellow. In this case check the network configuration and the server status. Once commissioning of the Camera is complete the camera status indicator LED will turn off and then show a flashing blue light whilst the Camera is initializing. This will turn to continuous white once initialization is complete.


29

COMMISSION

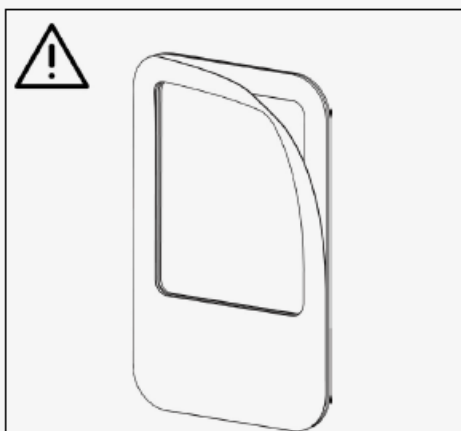

WARNING: After attaching to the camera casing the distance sensitivity cannot be adjusted. A final layer of protection and integrity is provided by this cover. Therefore, take special care to ensure that the cover is stuck correctly to the full surface of the camera casing.

Once the sensor is correctly adjusted, replace the bung. Then remove the adhesive backing and apply the metal cover to the front of the camera casing.

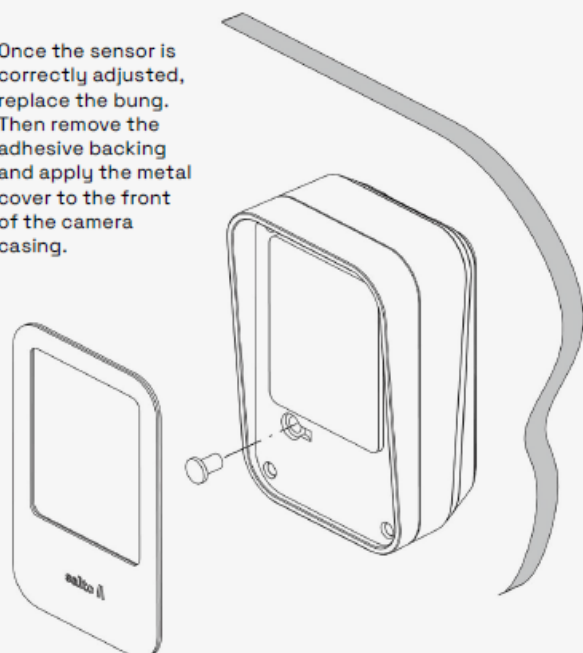

Once the sensor is correctly adjusted, replace the bung. Then remove the adhesive backing and apply the metal cover to the front of the camera casing.

WARNING: After attaching to the camera casing the distance sensitivity cannot be adjusted. A final layer of protection and integrity is provided by this cover. Therefore, take special care to ensure that the cover is stuck correctly to the full surface of the camera casing.

Specifications and Requirements

POWER

	MAX	TYP
Input Voltage (Camera)		5V
Input Voltage (Control Unit)		12V
Current Consumption (System)	415mA@12V	12V

CABLE REQUIREMENTS

	TYPE	MAX LENGTH
External Power Supply	2 core	3m
Control Unit to Camera	Orion	3m
Control Unit to Server / Network Switch	Cat 5e	100m

OPERATING CONDITIONS

	MIN	MAX
Temperature	0°C	60°C
Humidity	0%	80% non-condensing

NETWORK CONFIGURATION

ITEM	REQUIREMENT
VLAN	An isolated IPV4 (V)LAN is required for all Cameras and Locks.
Physical Characteristics	Cat 5e or Cat 6 network with Gigabit switches.
IP Subnet	Must be large enough to allocate addresses to all locks, camera units and servers/controllers Must not be in the range: 172.31.255.0/24
Outbound Ports	Restrict to:123 – NTP443 – HTTPS/TLS8883 – MQTT / mTLS Should also only permit Orion servers to access outbound ports. Orion devices do not require access outside of the VLAN.
DHCP	DHCP is required to provide IP addresses to Orion devices.The Orion server must have a reserved IP address that cannot change once Orion devices have been commissioned.
DNS	Orion Server will require access to DNS. Details should be provided by the DHCP server.
Cameras per server	No physical limit. Consideration needs to be given to the number of concurrent access requests that can be expected. Further details can be found on the Salto Support site. The server specification given below is capable of providing a sub 2 second response time for 70 concurrent requests over a 10 second timeframe.
Server CPUs / Memory	Min. 3.2 GHz 8 Cores 32GB Memory This number of concurrent requests is directly affected by the number of real cores (not virtual cores).
Server Processor Architecture	Intel / AMD x64 must support AVX2 instruction set.Supported processors: AMD Ryzen 7 and 9, Threadripper, Intel Core i9, Core i7. This is only a guide, confirm the processor supports AVX2.
Storage	Mirrored SSD – 480GBStrongly recommend that physical storage is encrypted.
Operating System	Ubuntu Server Minimal Install 24.04 LTS The install process will harden the server installing and configuring a firewall and OS updates. The server specified above is sufficient to have Windows 11 Pro installed with Hyper-V. Proaccess Space can be installed on the Windows operating system with Orion installed in a Hyper-V virtual machine with Ubuntu Server minimal.
Access Control System	For Integration with SPACE (Space minimum version 6.9 with SPACE) OPT-0018 (SHIP interface).


Copyright © 2024 Salto Systems, S.L.

FAQ

Q: How should I adjust the Orion Camera for wheelchair-accessible points?

A: For wheelchair-accessible points, lower the camera position or consider using two cameras for optimal coverage.

Documents / Resources

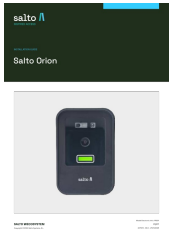

[Salto FRO01 Orion Face Recognition Access Control](#) [pdf] Installation Guide
FRO01, FRO01 Orion Face Recognition Access Control, FRO01, Orion Face Recognition Access Control, Face Recognition Access Control, Recognition Access Control, Access Control, Control

References

- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.