



SALUKI TECHNOLOGY NS1102X Navigation Signal Simulator Instruction Manual

[Home](#) » [SALUKI TECHNOLOGY](#) » SALUKI TECHNOLOGY NS1102X Navigation Signal Simulator Instruction Manual 

Contents

- [1 SALUKI TECHNOLOGY NS1102X Navigation Signal Simulator](#)
- [2 Simulator Panel](#)
- [3 Installation Connection](#)
- [4 GNSS Control Software](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)



SALUKI TECHNOLOGY NS1102X Navigation Signal Simulator



Simulator Panel

Front Panel



As shown in the Figure 1-1, there are:

1. RF signal output port 1;

The simulation signal generated by the simulator is output from this port. Output power ranger -60dBm to -150 dBm.

2. Signal status 2
3. Power switch:1; with indicator light.

Rear Panel

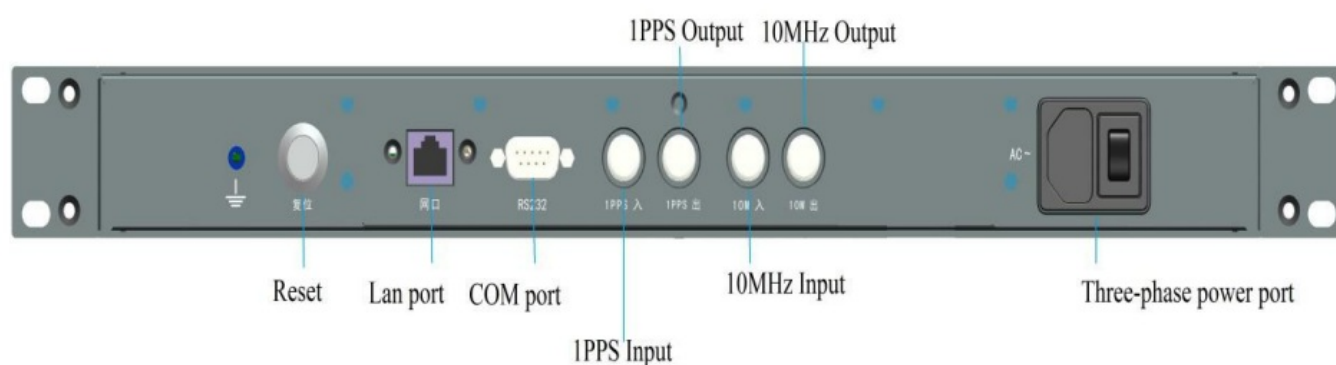


Figure1-2 Rear panel of the simulator

As shown in the Figure1-2, there are:


1. COM port 1
2. Reset 1
3. Lan port 1
4. Three-phase power port 1
5. 1PPS Input 1
6. 1PPS Output 1
7. 10MHz Input 1
8. 10MHz Output 1.

Installation Connection

Note:

make sure that the simulator power switch is disconnected before installation.

Figure1-3 shows the basic connected diagram for the installation between the simulator and the computer and user equipment.

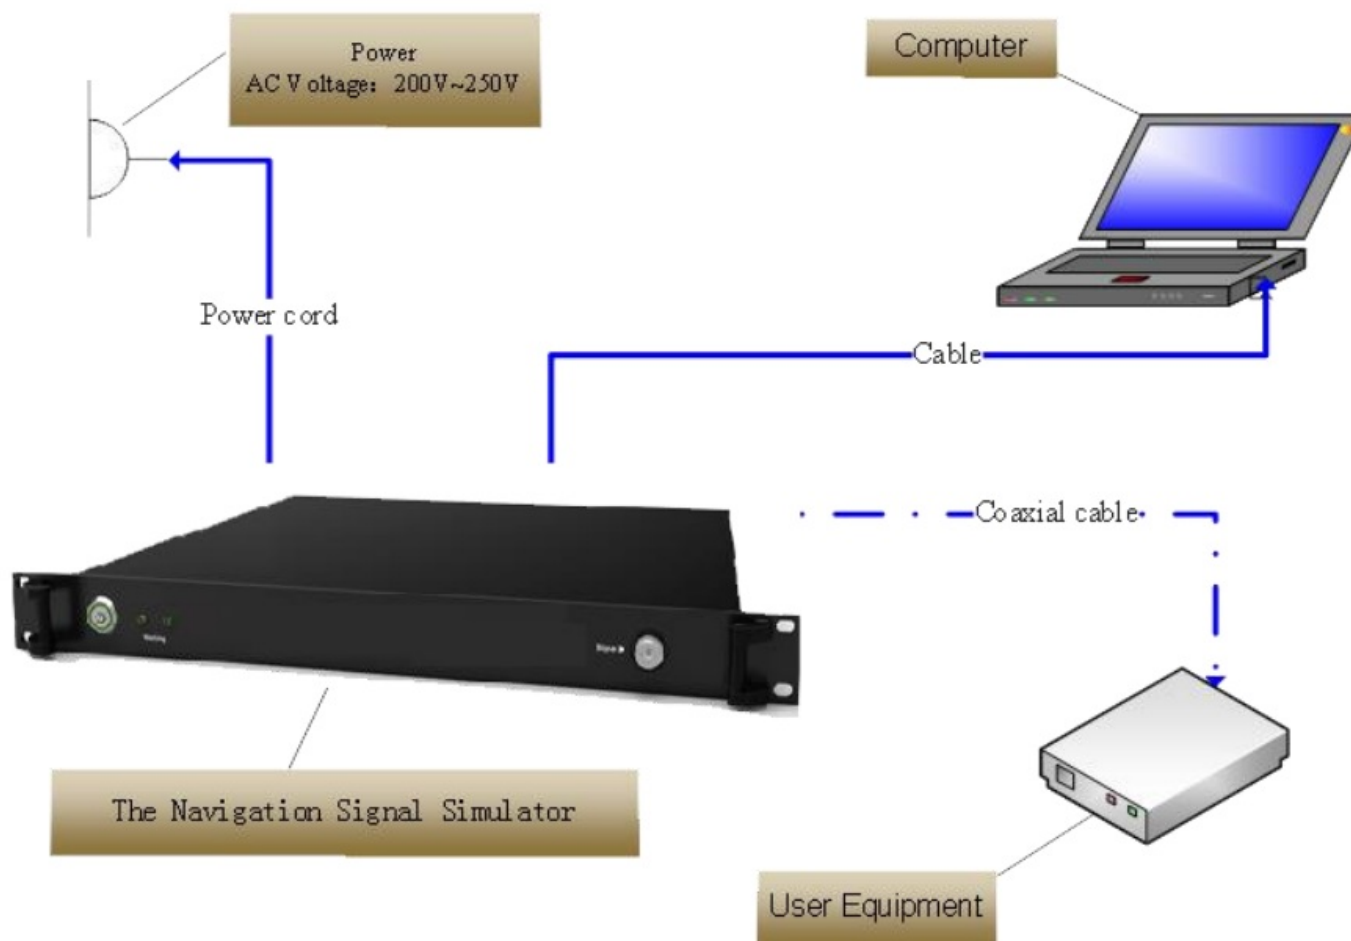

Connect the three-phase power port with AC power supply through the power cord before using the simulator. The RF output port of the simulator is connected to the users through the RF coaxial cable.


Note:

the maximum power of the RF output is -60dBm.

GNSS Control Software

The computer has been installed with the control software. And the IP address has been configured (the IP address is configured as 10.129.41.x, where x is the number between 1 – 254 except 1 – 12). After being connected as shown in the Figure 1-3, the control software can be used directly. Please refer to the instruction for the specific.

Documents / Resources

| | |
|---|---|
|  | <p>SALUKI TECHNOLOGY NS1102X Navigation Signal Simulator [pdf] Instruction Manual NS1102X, Navigation Signal Simulator, NS1102X Navigation Signal Simulator</p> |
|---|---|