



## Samsara AG26 Powered asset gateway Installation Guide

[Home](#) » [Samsara](#) » Samsara AG26 Powered asset gateway Installation Guide 


### Samsara AG26 Powered asset gateway Installation Guide




#### Contents

- [1 Package Content](#)
- [2 Product Description](#)
- [3 Federal Communication Commission Interference Statement](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)

#### Package Content

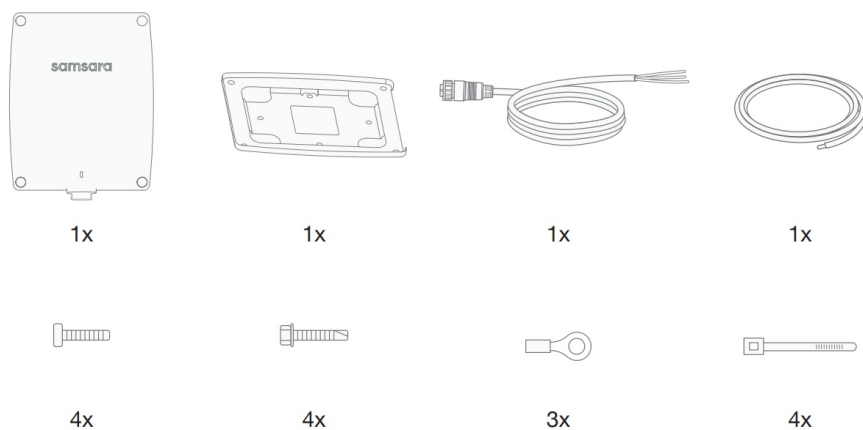

## Product Description

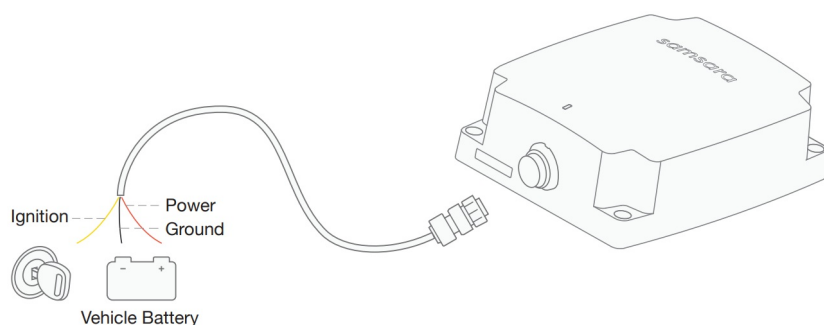

Attach mounting plate using adhesive and secure with 4 self-tapping screws (**bag 1**). Secure the AG to mounting plate using 4 flat-end screws (**bag 2**).

Plug cable into the AG and twist to secure. Verify the AG indicator light turns green, this could take 1-3 minutes.

Connect the red wire to a continuous power source.

Connect the black wire to ground.

Connect the yellow wire to the switched power source.

If yellow wire is too short, extend with accessory wire.

When ignition is off, the cable prevents vehicle power drain. The AG will function on internal battery for up to 3 months.

## Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the

FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**FCC Caution:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

For product available in the USA/Canada market, only channel 1~11 can be operated. Selection of other channels is not possible.

### FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

### IC Radiation Exposure Statement:

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

[samsara.com/support](https://samsara.com/support)

## Documents / Resources

	<p><a href="#">Samsara AG26 Powered asset gateway</a> [pdf] Installation Guide AG26 Powered asset gateway, Powered asset gateway, asset gateway, AG46P</p>
---	--