



Home » Samsung » SAMSUNG HW-LS60D-HW-LS60D-ZC Frame Design Wireless Speaker User
Guide ™

Contents [hide]

- 1 SAMSUNG HW-LS60D-HW-LS60D-ZC Frame Design Wireless Speaker
- 2 Specifications
- 3 Checking the Components
- **4 PRODUCT OVERVIEW**
- 5 Connecting the Power
- 6 Installation
- 7 INSTALLING THE WALL MOUNT
- 8 TROUBLESHOOTING
- 9 FAQs
- 10 Documents / Resources
 - 10.1 References

SAMSUNG

SAMSUNG HW-LS60D-HW-LS60D-ZC Frame Design Wireless Speaker



Specifications

• Model: HW-LS60D

Power Input: DC 19V

• Wireless Connectivity: Bluetooth, Wi-Fi

• Additional Feature: SmartThings Hub compatibility


Checking the Components

- · Wireless Speaker main unit
- Stand
- AC/DC Adapter
- Power Cord
- Photo Frame
- Component for Art Panel (sold separately)
 - Holder-Plate x 4
 - Holder-Guide x 1
- Wallmount Component
 - Wallmount Guide
 - Bracket-Wall Rear x 1
 - Screw (M5 X L55) x 2
 - Anchor x 2
 - Holder-Screw x 1


Spacer x 2


NOTE: To purchase additional components or optional cables, contact a Samsung Service Center or Samsung Customer Care

DETACHING THE PROTECTION RUBBER

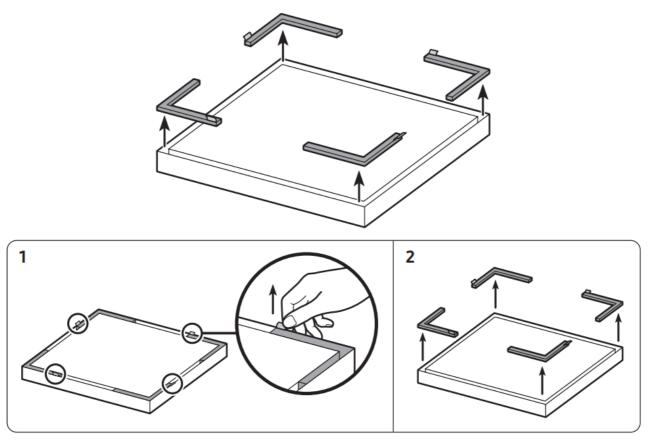

Attaching the Stands

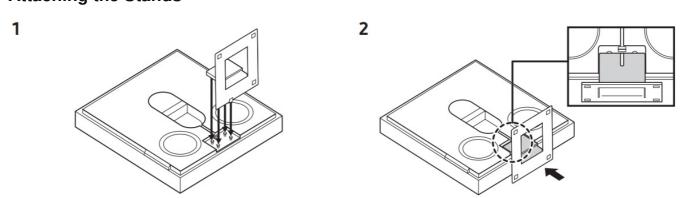

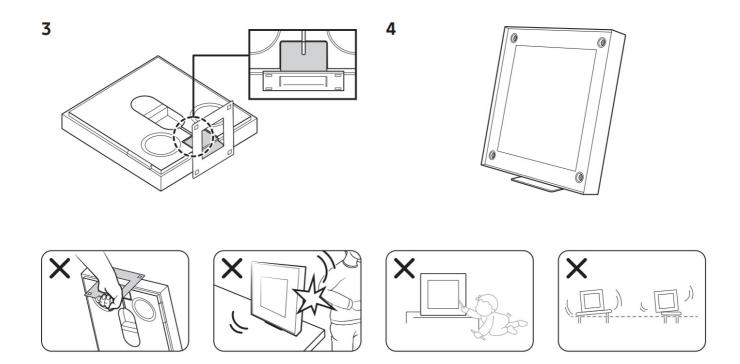


- 1. Attach the stands as instructed in the manual.
- 2. Ensure stands are securely attached for stability.


Attaching the Photo Frame & Art Panel

Attaching the Photo Frame

Be sure to secure the photo frame properly. Otherwise, it may fall off and cause damage or physical injury. Any accident resulting from carelessness by the user shall not be covered by the warranty.

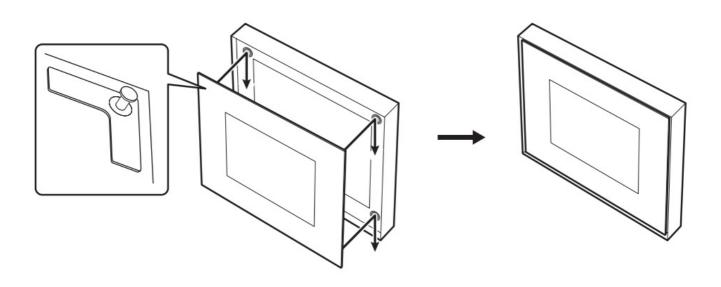

Detaching the Photo Frame

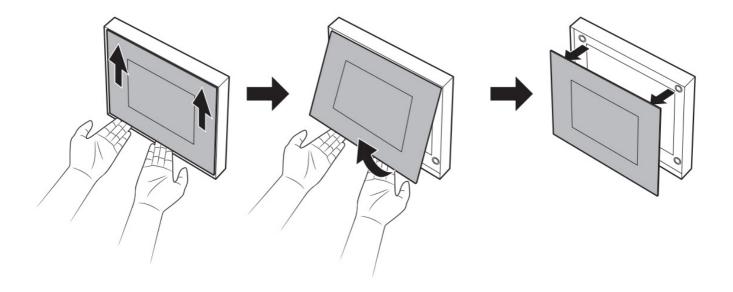


Replacing the photo in the Photo Frame

For relevant information, visit the Samsung website (http://www.samsung.com/support) and refer to the User Guide of this product.

Attaching ART PANEL


- Use the provided parts to insert the art panel.
- Ensure proper alignment and attachment.

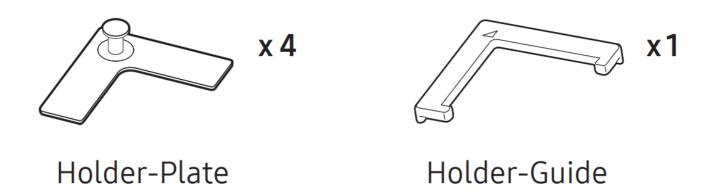

- For details on installation, see the user guide of this product at www.samsung.com.
- The art panel is available on the Marpple online shop(https://www.marpple.com/musicframe), and the availability may differ in your region. For regional retailers, visit your local Samsung website (www.samsung.com).
- Distribution of the art panel is performed by third-party businesses that have nothing to do with the company. And the panel's quality and safety are solely subject to thirdparty businesses. Regional retailers may change depending on their business situation.


PRODUCT OVERVIEW

Front

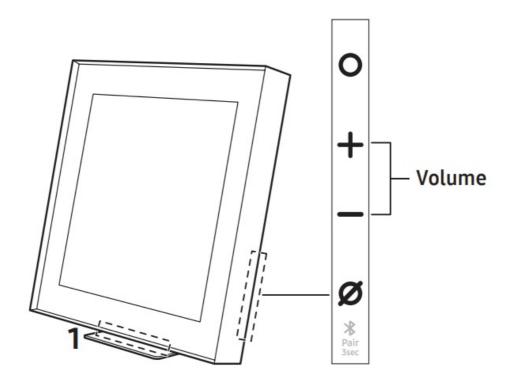

- O(Multi-Function) In standby mode, press the Multi-Function button on the Wireless Speaker. Press the Multi-Function button to change the mode.
- Mic On/Off) Press the button to turn the microphone on or off. When the microphone is off, the LED indicator will light red. To switch to Bluetooth pairing state, press and hold the (Mic On/Off) button on the side of the Wireless Speaker for more than 3 seconds.
- 1 The LED Indicator flashes, glows, or changes color depending on the Wireless Speaker's current mode or status.

Rear

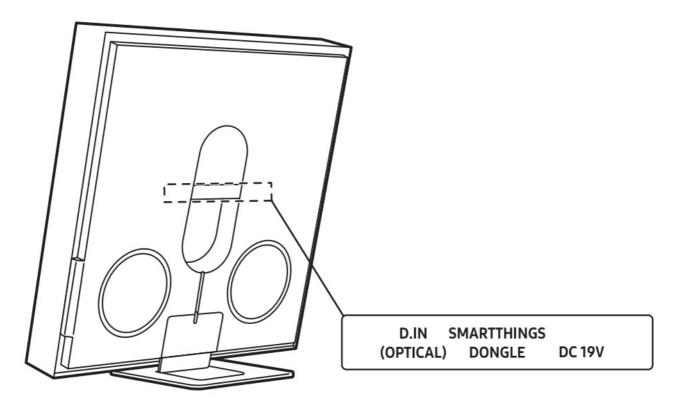


- D. IN (OPTICAL)Connect to the digital (optical) output of an external device.
- **SMART THINGS DONGLE** Connect the SmartThings dongle (Purchase separately) to use the SmartThings Hub function.
- DC 19V Connect the AC/DC power adapter. (Power Supply In)

Connecting the Power

Connecting the power and units

For more information about the required electrical power and power consumption, refer to the label attached to the product. (Label: Rear of the Wireless Speaker Main Unit).

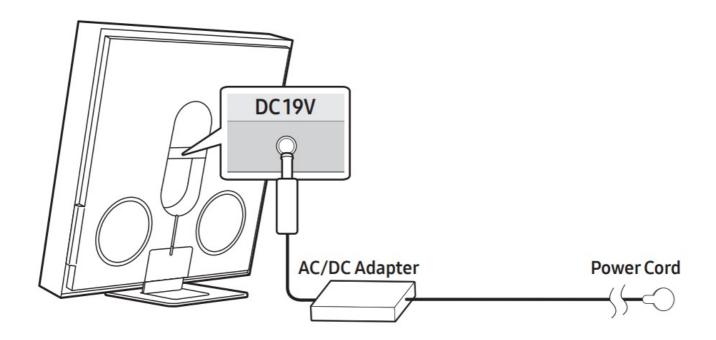

CONNECTING THE SMARTTHINGS APP

Installation

- The SmartThings app allows you to control the functionality of and adjust the settings of the Wireless Speaker.
- Download the SmartThings app from the app store of your mobile device, or simply scan the provided QR code and download the app.
- QR 1: Video Guide for SmartThings App Connection
- QR 2: Download the SmartThings App





QR₂

Device registration


- 1. Run the SmartThings app on your mobile device.
- 2. Follow the on-screen instructions and add the product to your mobile device.
 - If the automatic pop-up window does not appear, press (+) on the Home screen

to register the product.

Control with SmartThings

- 1. With the SmartThings app open on your device, select the Wireless Speaker that you have added.
- 2. The settings menu of the Wireless Speaker appears, where you can adjust the various settings, including Volume, Sound Mode, and Advanced Sound Settings.
 - For other users who want to control the Music Frame, tap Menu () on the SmartThings app of their mobile device and go to 'How to use' → 'Share control of devices' for reference.

NOTE: The illustration right may differ from the app version.

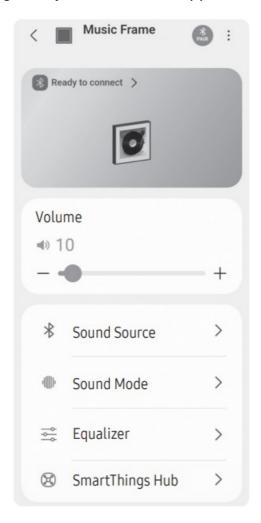

CONNECTING VIA WIFI WITH TV

Change the input source of the TV by using the Audio menu to Wireless Speaker.

Samsung TVs released in 2017 or later: setting → Sound → Sound Output → Music
 Frame (Wi-Fi)


NOTE

- Wi-Fi connection is available only on the Samsung TV.
- The TV and Wireless Speaker must be connected to the same wireless network (Wi-Fi).
- The menus may differ depending on the year of manufacture. Refer to your TV manual.

USING THE Q-SYMPHONY FUNCTION

- This function is supported only when both the wireless speaker and the TV are connected to the same Wi-Fi network.
- This function is available with new Samsung TV models to be released in 2024.
 When the Wireless Speaker connects to ais connected TV that supports the Q-Symphony function, you can play the sound simultaneously through both the Wireless Speaker and the TV. If you use the Q-Symphony function, the surround sound played on the Wireless speaker allows you to enjoy a richer, more three-dimensional surround sound effect. When the Wireless Speaker is connected, the "Q-Symphony" menu appears on the TV. (The message displayed may differ with the TV model.) (Settings → All Settings → Sound → Sound Output)


CONNECTING VIA BLUETOOTH WITH MOBILE

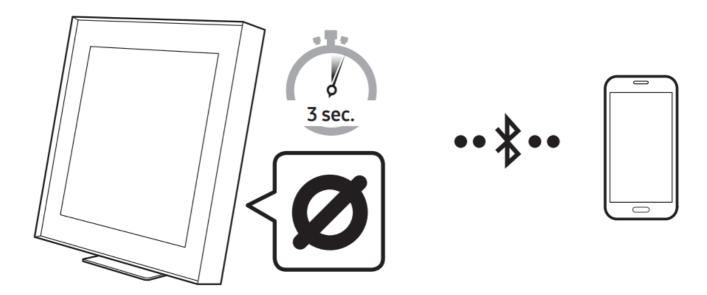

Press the (Mic On/Off) button for 3 seconds for pairing. It is also available to pair by pressing [*] on the SmartThings App screen of your mobile device.



Search for the Bluetooth device on your mobile device.TV can be connected in the same way.

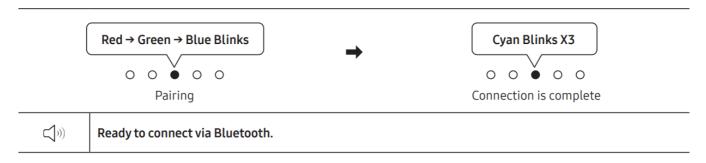


NOTE: If asked for a PIN code when connecting a Bluetooth device, enter <0000>.


INSTALLING THE WALL MOUNT


Installation Precautions


- Install on a vertical wall only.
- Do not install in a place with high temperature or humidity.
- Verify whether the wall is strong enough to support the product's weight. If not, reinforce the wall or choose another installation point.
- Connect cables from the unit to external devices before you install the Soundbar on the wall.
- Make sure the unit is turned off and unplugged before you install it. Otherwise, it may cause an electric shock.
- Make sure you use the provided wall-mount parts. Under any circumstances, any
 accident resulting from using third-party parts shall not be covered by the warranty.y


Wallmount Components

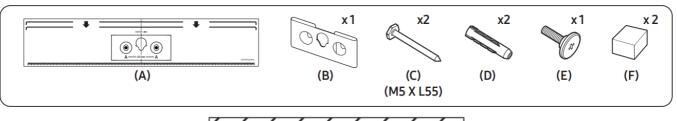

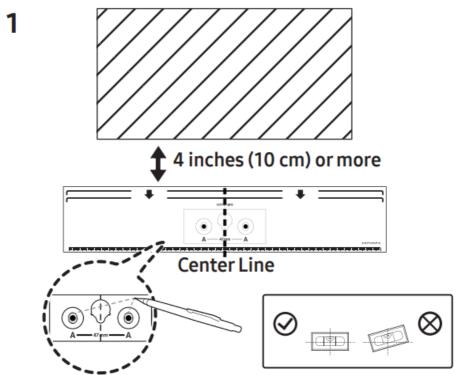


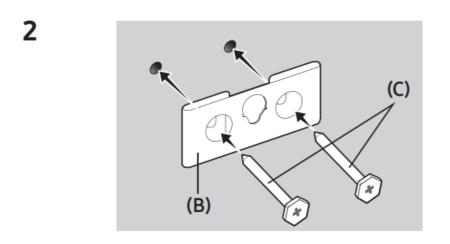

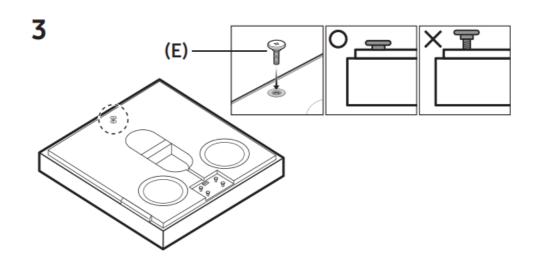

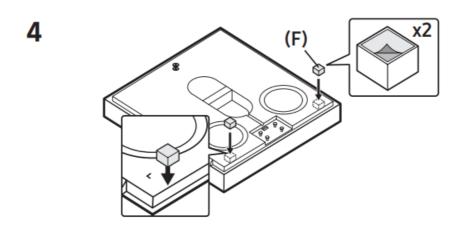

The part (F) must be attached to prevent the product from moving out of the wall-mount installation. The standard installation must be done safely for later use. When reusing it, use a double-sided adhesive tape for attachment.

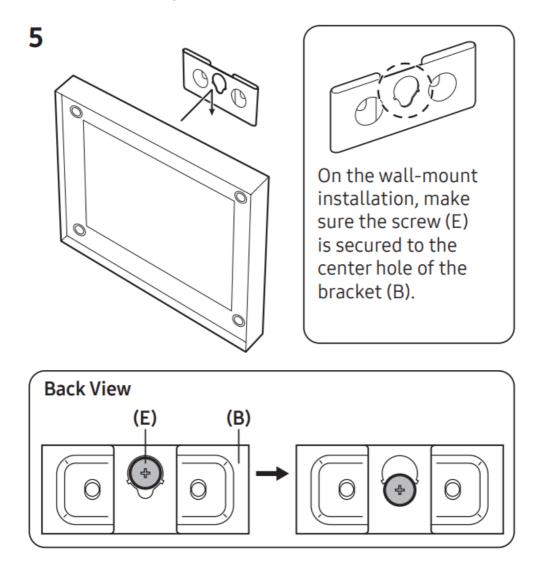

GUIDE

Supported play formats

Dolby 5.1ch / Dolby Digital Plus / Dolby ATMOS (Dolby Digital Plus) / LPCM 2ch

To activate/deactivate Wi-Fi connection

Press and hold the (Mic On/Off) button and the button on the side panel simultaneously for more than 30 seconds. This will turn on or off the Wi-Fi connection.

To activate/deactivate ate Bluetooth connection.

Press and hold the (Mic On/Off) button and the + button on the side panel simultaneously for more than 30 seconds. This will turn on or off the Bluetooth connection.

Precaution: The Wireless speaker will restart automatically if you turn on/turn off Wi-Fi or Bluetooth.

NOTE: Samsung Electronics Co., Ltd. reserves the right to change the specifications without notice. Weight and dimensions are approximate.

TROUBLESHOOTING

Before seeking assistance, check the following. The The

Wireless Speaker does not turn on.

 Check whether the power cord of the Wireless Speaker is correctly inserted into the outlet. The

Wireless Speaker works erratically.

- After removing the power cord, insert it again.
- Try again after initializing the product.
- If there is no signal, the Wireless Speaker automatically turns off after a certain period. Turn on the power.

The red LED indicator light on the Wireless Speaker stays on.

• The microphone is turned off. Turn on the microphone

LED indicator					()))
0	0	•	0	○ - Red on	Mic Off
0	0	0	0	0	Mic On

Sound is not output from the Wireless Speaker.

- The volume of the Wireless Speaker is too low or muted. Adjust the volume.
- When any external device (STB, Bluetooth device, mobile device, etc.) is connected, adjust the volume of the external device.
- For sound output of the TV, select Wireless Speaker.(Samsung TV: Home → Menu →
 Settings → All Settings → Sound → Sound Output → SelectWireless Speaker)
- Remove the cable from the Wireless Speaker and then reconnect it. The

Wireless Speaker will not connect via Bluetooth.

- • When connecting a new device, switch to "BT PAIRING" for connection. (Press the (Mic On/Off) button on the body for at least 3 seconds.)
- Reconnect it after removing the Bluetooth speaker list on the device to connect.
 (Samsung TV: Home → Menu → Settings → All Settings → Sound → Sound Output → Bluetooth Speaker List)The sound drops out when connected via Bluetooth.
- Some devices can cause radio interference if they are located too close to the
 Wireless Speaker. e. microwaves, wireless routers, etc.
- If your device that is connected via Bluetooth moves too far away from the Wireless Speaker, it may cause the sound to drop out. Move the device closer to the Wireless Speaker.
- If a part of your body is in contact with the Bluetooth transceiver or the product is installed on metal furniture, the sound may drop out. Check the installation environment and conditions for use.

Wireless Speakers will not connect to Wi-Fi.


- Make sure the wireless router is turned on, and then reconnect the wireless router after rebooting.
- The Wireless Speaker will not connect if the wireless signal is too weak. Try moving
 the router closer to the Wireless Speaker, or eliminating any obstacles that are
 between the Wireless Speaker and the router, if possible.

The Wireless Speaker does not turn on automatically with the TV.

 When you turn off the Wireless Speaker while watching TV, power synchronization with the TV is disabled. First, turn off the TV.

SAFETY INFORMATION

SAFETY WARNINGS TO REDUCE THE RISK OF ELECTRIC SHOCK: DO NOT REMOVE THE COVER (OR BACK). NO USER-SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. Refer to the table below for an explanation of symbols that may be on your Samsung product.

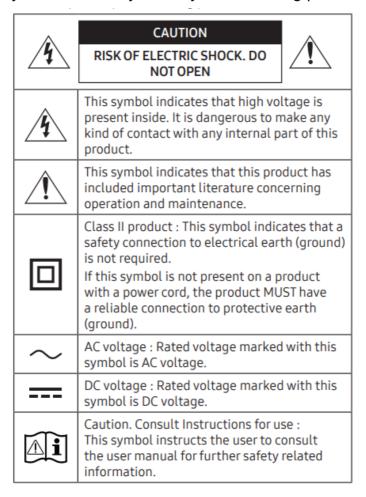

WARNING

- To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.
- To prevent injury, this apparatus must be securely attached to the floor/wall the installation instructions.
- Do not use liquid fumigators containing chemicals, such as mosquito repellent or air freshener, around the product. If steam comes in contact with the product surface or enters the product, it may cause stains or malfunction.

CAUTION

- Do not expose this apparatus to dripping or splashing. Do not put objects filled with liquids, such as vases, on the apparatus.
- To turn this apparatus off completely, you must pull the power plug out of the wall socket. Consequently, the power plug must be easily and readily accessible at all times.

CAUTION (for Canada)

This device contains license-exempt transmitter(s)/ receiver(s) that comply with Innovation, Science, and Economic Development Canada's license-exemptt RSS(s). Operation is subject to the following two conditions:

- 1. This device may not cause interference.
- 2. This device must accept any interference, including interference that may cause undesired operation of the device.

This device and its antenna(s) must not be co-located or operate in conjunction with any other antenna or transmitter. This device may automatically discontinue transmission if there is no information to transmit or an operational failure. Note that this is not intended to prohibit the transmission of control or signaling information or the use of repetitive codes where required by the technology.

This Class B digital apparatus complies with Canadian ICES-003.

Radiation Exposure Statement equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator & your body.

Important Safety Instructions

Read these operating instructions carefully before using the unit. Follow all the safety instructions listed below. Keep these operating instructions handy for future reference.

- 1. Read these instructions.
- 2. Keep these Instructions.
- 3. Heed all warnings.
- 4. Follow all instructions.
- 5. Do not use this apparatus near water.
- 6. Clean only with a dry cloth.
- 7. Do not block any ventilation openings. Install according to the instructions.
- 8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9. Do not defeat the safety purpose of the polarized grounding-type plug. A polarized plug has two blades, with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement othe f the obsolete outlet.
- 10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11. Only use attachments/accessories specified by the manufacturer.
- 12. Use only with the cart, stand, tripod, backpack, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13. . Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as the power supply cord or is damaged, liquid has been spilled, objects have fallen into the apparatus, the aapparatusbeenen exposed to rain or moisture, doesn't operate normally, or has been dropped.

PRECAUTIONS

1. Ensure that the AC power supply in your house complies with the power requirements

of the identification sticker located on the bottom of your product. Install your product

horizontally, on a suitable base (furniture), with enough space around it for ventilation

(3~4 inches). Make sure the ventilation slots are not covered. Do not place the union

amplifiers or other equipment that may become hot. This unit is designed for

continuous use. To fully turn off the unit, disconnect the AC plug from the wall outlet.

Unplug the unit if you intend to leave it unused for some time.

2. During thunderstorms, disconnect the AC plug from the wall outlet. Voltage peaks due

to lightning could damage the unit.

3. Do not expose the unit to direct sunlight or other heat This could lead to overheating

and cause the unit to malfunction.

4. Protect the product from moisture (i.e., vases), excessive heat (e,.g. a fireplace), or

equipment creating strong magnetic or electric fields. Unplugpowere cable from the

AC wall if the input malfunctions. Your product is not intended for industrial use only. If

your product has been stored in cold tempTransportingansporting the unit during the

winter, wait approximately 2 hours until it has reached room temperature before using

it.

5. Make sure to rest the AC/DC Adapter flat on a table or the floor. If you place the

AC/DC Adapter so that it is hanging with the AC cord input facing upward orteror other

foreign substances could enteAdapter andterand cause the Adapter to malfunction.

Samsung Electronics Canada Inc.

2050 Derry RdWest Mississauga, ON. L5N 0B9

Tel: 1-800-SAMSUNG (726-7864)

Fax: (905) 542- 1199

Website: www.samsung.com/ca

FAQs

Q: How do I change the mode of the Wireless Speaker?

A: Press the (Multi-Function) button on the front panel to change the mode.

Q: What is the purpose of the SmartThings Dongle?

A: The SmartThings Dongle, when connected, enables the SmartThings Hub function

for additional smart home capabilities.

Documents / Resources



SAMSUNG HW-LS60D-HW-LS60D-ZC Frame Design Wireless Speaker [

pdf] User Guide

HW-LS60D, HW-LS60D-ZC, HW-LS60D-HW-LS60D-ZC Frame Design Wireless Speaker, HW-LS60D-HW-LS60D-ZC, Frame Design Wireless Speaker, Design Wireless Speaker, Wireless Speaker

References

- User Manual
- Samsung

Website

▶ Design Wireless Speaker, Frame Design Wireless Speaker, HW-LS60D, HW-LS60D-HW-LS60D-ZC, HW-LS60D-HW-LS60D-ZC Frame Design Wireless Speaker, HW-LS60D-ZC, Samsung, Wireless Speaker

Leave a comment

Your email address will not be published. Required fields are marked*

Comment *

Name

Email

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.