



SAMSUNG RC1810 Remote Control Instructions

[Home](#) » [Samsung](#) » SAMSUNG RC1810 Remote Control Instructions 



Contents

[1 RC1810 Remote Control](#)

[2 Documents / Resources](#)

[2.1 References](#)

 
RC1810 Remote Control

[RC1810](#)



Original		Replacement	
	Power		Power
	Red/↑		Red
	Green/↓		Green
	Yellow		Yellow
	Blue		Blue
	[≡]		Text

	[≡x]		3D
	EPG		Guide
	Screen		Format
	Lang		Dual
	Subtitle		Subt
	Sleep		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV		Pre Ch
	Tv/DTV		TV/R
	Vol-		Vol –
	Vol+		Vol +

	Mute		Mute
	PR-		Ch –
	PR+		Ch +
	Swap/Recall		Back
	Preset		Options
	Source		AV
	Info/[≡?]		Info
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	M		Menu
	[*]/[..]		Shift + Guide
	Return		Shift + Back

<https://tutti-i-telecomandi.it/it/1037837-18342-telecomando-di-sostituzione-per-RC1810-30063516.html>

SAMSUNG

Documents / Resources



[SAMSUNG RC1810 Remote Control](#) [pdf] Instructions
RC1810 Remote Control, RC1810, Remote Control, Control

References

- [M Telecomando sostituto di RC1810 \(30063516\)](#)
- [User Manual](#)