

**SANSUI**  
W41 Open Bluetooth  
Headset



## SANSUI W41 Open Bluetooth Headset User Manual

[Home](#) » [SANSUI](#) » SANSUI W41 Open Bluetooth Headset User Manual 

### Contents

- 1 SANSUI W41 Open Bluetooth Headset
- 2 FIRST USE
- 3 POWER ON/ OFF
- 4 WIRELESS PAIRING CONNECTION
- 5 RESET TO FACTORY MODE
- 6 OTHER FUNCTION
- 7 INDICATE LIGHT STATUS
- 8 CAUTION
- 9 WARNING
- 10 FCC Statement
- 11 Documents / Resources
  - 11.1 References
- 12 Related Posts

**SANSUI**

**SANSUI W41 Open Bluetooth Headset**



## FIRST USE

**Before first use:** please confirm earbuds and charge case battery volume full, If the battery low, please use the charging cable provided in our product pack, and select the certified charging device.  
If the product not use over 2 weeks, suggest you charge our product before use.

## POWER ON/ OFF

**Power on automatically:** Open the charging case, and take the earbuds out that will power on automatically.  
**Power off:** Put the earbuds back to the charging case, earbuds will disconnect Wireless power will power off automatically.

## WIRELESS PAIRING CONNECTION

**Wireless pairing:** Pairing status turns on when the earbuds power on, Then open the wireless device and search for the pairing name "SANSUI + model", and click Connect to complete the pairing.

**Connecting successfully:** Prompt tone.

**Connecting successfully:** After first connecting successfully, the default connecting device is the last connection device.

**(Note:** parts of the phone need to type "0000" as the pairing password)

## RESET TO FACTORY MODE

When the Left/Right earbud are not connected to each other and the device cannot pair, following operation we can reset the earbuds.

1. Delete the earbuds pairing information on the device.
2. When the earbuds power on but not connected, tap 5 times Left/Right earbuds function button to reset, The earbuds will power off and remove the pairing information.

3. After reset the earbuds, the record information of the earbuds has already been deleted. Please according to the “Wireless pairing” steps to re-connection and use.

## **OTHER FUNCTION**

### **Power On/Off Manually**

Power off status, press & hold function button 3 seconds, earbuds power on.

Power on status, press & hold the function button 5 seconds, earbuds will disconnect and power off.

### **Unconnected by overtime**

Earbuds on the pre-pairing status, not connected with the device and connecting unsuccessfully in 5 mins, will power off automatically.

### **Wireless disconnection**

After connecting successfully, if turn the phone Wireless off or over the Wireless effective connection distance (no-obstacles environment 10m), Wireless disconnection; if 5 mins not connected with the device and connecting unsuccessfully, the earbuds power off automatically.

## **INDICATE LIGHT STATUS**

### **Earbuds indicate light**

1. Power on: Blue indicator light on
2. Power off: White indicator light flash then off
3. Unconnected: Blue and White indicator flash alternately
4. Pend to paring: The primary ear flashes alternately blue and white light blinks and the secondary ear light turns off
5. Pairing successfully: Indicate light off
6. Music status: Indicate light off
7. Calling status: Indicate light off
8. Game Mode: The blue indicator is a breathing light effect
9. Low-Battery: White indicator light flash, Prompt tone
10. Charging status: White indicator light on

### **Charging completely: Indicate light off Charging bay indicator light (display)**

1. Charging: The screen battery percentage icon flashes
2. Charging completely: The screen battery percentage icon is on with “100%”
3. Low-Battery: The screen battery percentage icon flashes to off
4. Charging to earbuds: The screen battery percentage icon is steady on
5. Earbuds charging fully: Screen battery percentage icon off

## **CAUTION**

1. Do not disassemble, repair, or modify the earbuds for any reason, otherwise, it may cause fire, electronic breakdown or even completely damage the product.
2. Do not place the product in an environment where the temperature is too low or too high (below 0°C or above 45°C).
3. When the product indicator light is on, do not look directly into it and keep away from the eyes of children and animals.
4. Do not use this device during thunderstorms. Thunderstorms may cause equipment failure or risk of electric shock.
5. Do not use harsh chemicals, cleaning agents or strong detergents to clean equipment or accessories.
6. Do not place the device close to heat sources or exposed fire sources, such as electric heaters, microwave ovens, ovens, water heaters, stove candles, or other places that may generate high temperatures.
7. Please do not listen to music at high volume for a long time, which may cause hearing damage. Please adjust the volume to an appropriate level when using the device.
8. Please do not replace the battery by yourself. This device is equipped with a non-removable built-in battery to avoid damaging the battery or the device. It is not recommended to replace it without permission.
9. Do not leave magnetic cards (such as bank cards, phone cards, etc.) in contact with this device for a long time, otherwise, the magnetic stripe card may be damaged by the magnetic field.
10. Before cleaning and servicing, stop using the device, close all applications, and disconnect all connections or cables from other devices.



## **WARNING**

1. It is prohibited to disassemble, impact, squeeze the battery, throw it into a fire, or insert foreign objects to avoid battery leakage, overheating, fire, or explosion.
2. This device is not a toy. Children should use the accessories of this device under adult supervision.
3. If severe bulging occurs, it is prohibited to continue using it.
4. Do not place it in a high-temperature environment and keep it away from fire sources.
5. It is prohibited to use this device when the battery is immersed in water or other liquids.



Scan and download APP to unlock more fun

### **FCC Statement**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Any changes or modifications to this device not explicitly approved by the manufacturer could void your authority to operate this equipment.

### **RF Exposure Information**

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

### **Documents / Resources**



[SANSUI W41 Open Bluetooth Headset](#) [pdf] User Manual  
2BNUA-W41, 2BNUAW41, W41 Open Bluetooth Headset, W41, Open Bluetooth Headset, Bluetooth Headset, Headset

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.