



SANYO PLC-400N Portable LCD Color Video Projector Owner's Manual

[Home](#) » [SANYO](#) » SANYO PLC-400N Portable LCD Color Video Projector Owner's Manual 

Contents

- [1 SANYO PLC-400N Portable LCD Color Video Projector](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 SAFETY PRECAUTIONS](#)
- [5 IMPORTANT SAFETY INSTRUCTIONS](#)
- [6 DESCRIPTION](#)
- [7 CONNECTING THE PROJECTOR](#)
- [8 HOW TO CONNECT EXTERNAL AV EQUIPMENT](#)
- [9 SETTING UP THE PROJECTOR](#)
- [10 OPERATION OF CONTROLS](#)
- [11 REMOTE CONTROL OPERATION](#)
- [12 OTHER FUNCTION SETTING](#)
- [13 AIR FILTER CARE AND CLEANING](#)
- [14 LAMP REPLACEMENT & TEMPERATURE WARNING INDICATORS](#)
- [15 HELPFUL HINTS-Problems and Solutions](#)
- [16 TECHNICAL SPECIFICATIONS](#)
- [17 SANYO INDUSTRIAL VIDEO LCD PROJECTOR LIMITED WARRANTY](#)
- [18 Documents / Resources](#)
 - [18.1 References](#)
- [19 Related Posts](#)



SANYO PLC-400N Portable LCD Color Video Projector



Product Information

Specifications

- Model: [Model Name]
- Dimensions: [Dimensions]
- Weight: [Weight]
- Power Source: [Power Source]
- Color: [Color]
- Warranty: [Warranty Period]

Description

The [Product Name] is a versatile and user-friendly device designed to [purpose or function of the product]. It is built with high-quality materials to ensure durability and reliability. With its [features or functionalities], it provides an efficient and convenient solution for [specific use case or problem].

Key Features

- [Feature 1]: [Description of Feature 1]
- [Feature 2]: [Description of Feature 2]
- [Feature 3]: [Description of Feature 3]
- [Feature 4]: [Description of Feature 4]

Included Accessories

- [Accessory 1]
- [Accessory 2]
- [Accessory 3]

Safety Precautions

Before using the [Product Name], please read and follow these safety precautions:

1. Keep the device away from water and other liquids.
2. Avoid exposing the device to extreme temperatures or direct sunlight.
3. Do not disassemble or modify the device without proper knowledge and authorization.
4. Keep the device out of reach of children and pets.
5. Only use the recommended power source and charging cables.

Product Usage Instructions

Step 1: Unboxing

Start by unboxing the [Product Name] and checking that all the included accessories are present.

Step 2: Charging

Before the initial use, make sure to fully charge the [Product Name] using the provided charging cable and power source. The charging indicator will show the progress, and it is recommended to charge the device until it reaches 100%.

Step 3: Power On/Off

To power on the device, press and hold the power button for a few seconds until the indicator lights up. To power off, repeat the same process.

Step 4: Setting up

Follow the on-screen instructions or refer to the user manual to complete the initial setup of the [Product Name]. This may include connecting to a Wi-Fi network, creating an account, or adjusting settings according to your preferences.

Step 5: Basic Operation

The [Product Name] can be operated using the provided buttons or through the touch screen interface. Familiarize yourself with the different functions and features available, such as [specific functions]. Refer to the user manual for detailed instructions on how to navigate through menus, access different modes, and customize settings.

Step 6: Maintenance and Cleaning

To ensure optimal performance and longevity of the [Product Name], follow these maintenance guidelines:

- Regularly clean the device using a soft cloth dampened with water or mild cleaning solution. Avoid using abrasive materials or harsh chemicals.
- Keep the device dry and free from dust or debris.
- Store the device in a cool and dry place when not in use.
- Refer to the user manual for any specific maintenance requirements or recommendations.

Troubleshooting

If you encounter any issues with the [Product Name], refer to the troubleshooting section of the user manual. If the problem persists, contact our customer support for further assistance.

FAQ (Frequently Asked Questions)

- **Q: How long does the battery last?**

A: The battery life of the [Product Name] depends on various factors such as usage, settings, and environmental conditions. On average, it can last up to [battery life duration].

- **Q: Can I use the device while it is charging?**

A: Yes, you can use the [Product Name] while it is charging. However, please note that the charging time may be longer in this case.

- **Q: Is the device waterproof?**

A: No, the [Product Name] is not waterproof. It should be kept away from water and other liquids to prevent damage.

- **Q: Can I connect the device to my computer?**

A: Yes, you can connect the [Product Name] to your computer using the provided USB cable. This allows for data transfer and firmware updates.

INFORMATION TO THE USER

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

TO THE OWNER

As the owner of a new Portable LCD Color Video Projector, you are probably eager to try out your new projector. Before you do, we suggest that you spend a little time reading this manual to familiarize yourself with the operating procedures, so that you will receive maximum enjoyment from the many features included on your new projector. This owner's manual will acquaint you with your projector's features. Reading it will help us too. Through the years, we have found that many service requests were not caused by problems with our projectors. They were caused by problems that could have been prevented, if the owner had followed the instructions in the manual. You can often correct operating problems yourself. If your projector fails to work properly, locate the operating problem in the Helpful Hints Chart on page 17 and try the solutions marked for each problem.

SAFETY PRECAUTIONS

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. The sur it to color no ot i go noting to C in ale Tri safely Forture In ope ily carte. batch ten do not into the ty inton as possible oye damago could resur. If the new Portable LCD Color Video Projector will not be used for an extended time, unplug the new Portable LCD Color Video Projector from the power outlet.

READ AND KEEP THIS OWNER'S MANUAL FOR LATER USE.

CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



THIS SYMBOL INDICATES THAT DANGER- OUS VOLTAGE CONSTITUTING A RISK OF ELECTRIC SHOCK IS PRESENT WITHIN THIS UNIT.



THIS SYMBOL INDICATES THAT THERE ARE IMPORTANT OPERATING AND MAINTENANCE INSTRUCTIONS IN THE OWNER'S MANUAL WITH THIS UNIT.

IMPORTANT SAFETY INSTRUCTIONS

- All the safety and operating instructions should be read before the product is operated.


- Read all of the instructions given here and retain them for later use. Unplug this projector from AC power supply before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- Do not use attachments not recommended by the manufacturer as they may cause hazards.
- Do not place this projector on an unstable cart, stand, or table. The projector may fall, causing serious injury to a child or adult, and serious damage to the projector. Use only with a cart or stand recommended by the manufacturer, or sold with the projector. Wall or shelf mounting should follow the manufacturer's instructions and should use a mounting kit approved by the manufacturer.
- Do not expose this unit to rain or use near water... for example, in a wet basement, near a swimming pool or the like.
- Slots and openings in the cabinet and the back or bottom are provided for ventilation, to insure reliable operation of the equipment and to protect it from overheating.

The openings should never be covered with cloth or other material, and the bottom opening should not be blocked by placing the projector on a bed, sofa, rug, or other similar surface.

- This projector should never be placed near or over a radiator or heat register.
- This projector should not be placed in a built-in installation such as a bookcase unless proper ventilation is provided. This projector should be operated only from the type of power source indicated on the marking label.

If you

- are not sure of the type of power supplied, consult your authorized dealer or local power company.
- Do not overload wall outlets and extension cords as this can result in fire or electric shock. Do not allow anything to rest on the power cord. Do not locate this projector where the cord will be abused by persons walking on it.
- Never push objects of any kind into this projector through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the projector.
- Do not attempt to service this projector yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
- Unplug this projector from wall outlet and refer servicing to qualified service personnel under the following conditions:
 - When the power cord or plug is damaged or frayed.
 - If liquid has been spilled into the projector.
 - If the projector has been exposed to rain or water.
 - If the projector does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the projector to normal operation.
 - If the projector has been dropped or the cabinet has been damaged.
 - When the projector exhibits a distinct change in performance-this indicates a need for service.
- When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or injury to persons.
- Upon completion of any service or repairs to this projector, ask the service technician to perform routine safety checks to determine that the projector is in safe operating condition.
- This projector is equipped with a grounding type AC line plug. Should you be unable to insert the plug into the outlet, contact your electrician. Do not defeat the safety purpose of this grounding type plug.

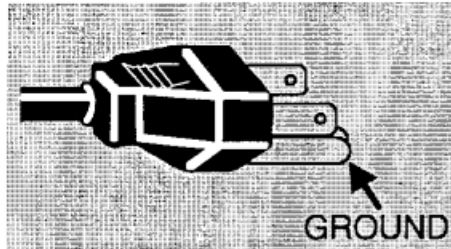

Follow all warnings and instructions marked on the projectors.

For added protection for the projector during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet. This will prevent damage due to lightning and powerline surges.


An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.




POWER REQUIREMENTS

Your projector uses nominal input voltages of 120 VAC. The projector is designed to work with single-phase power systems having a grounded neutral conductor. To reduce the risk of electrical shock, do not plug into any other type of power system. Consult your authorized dealer or service station if you are not sure what type of power is supplied to your building.

Projector side (Female)


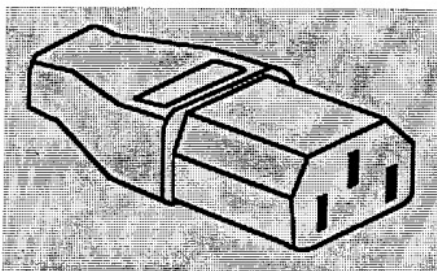


AC outlet side (Male)

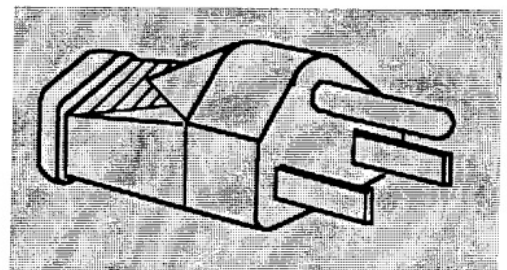


DESCRIPTION

FRONT

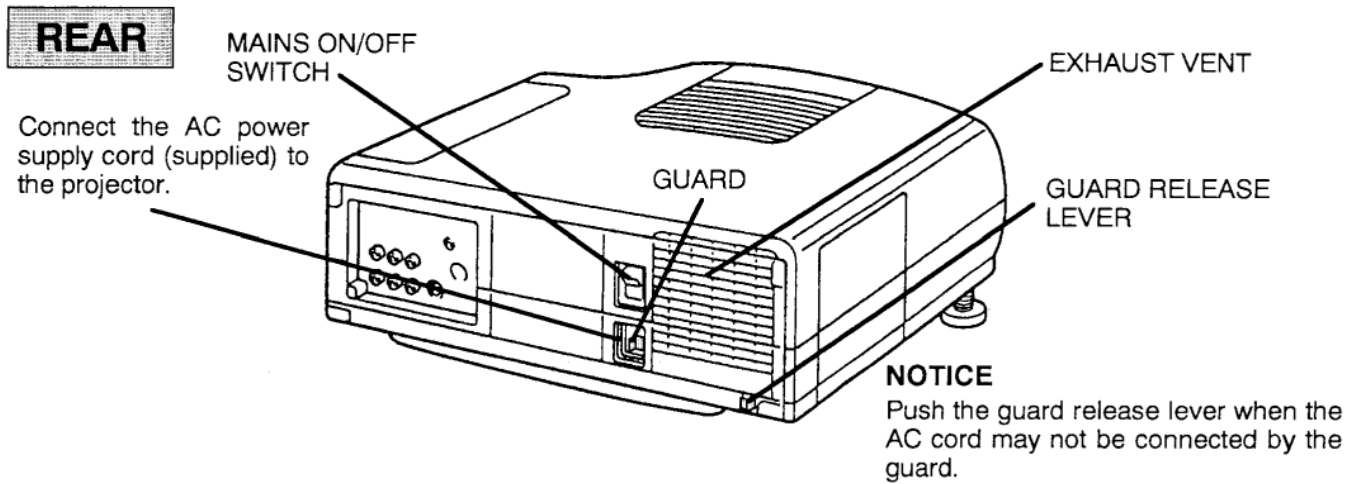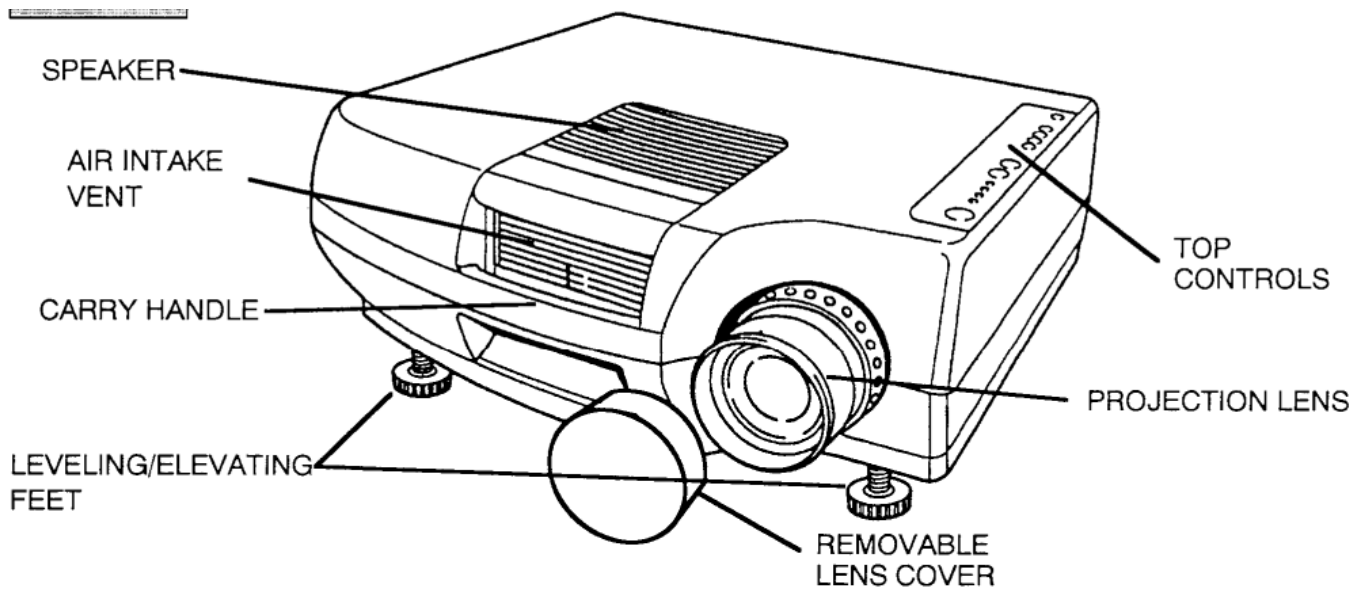


MOVING THE PROJECTOR

Use the carry handle when moving projector. Replace the lens cover when moving the projector to prevent damage to the lens.

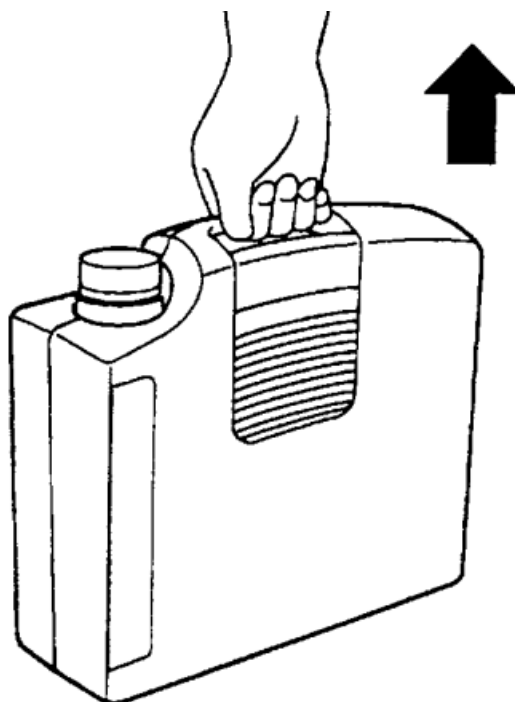

NOTE: Do not hold the projector by the filter cover when moving. You risk dropping the projector if the cover

comes loose.

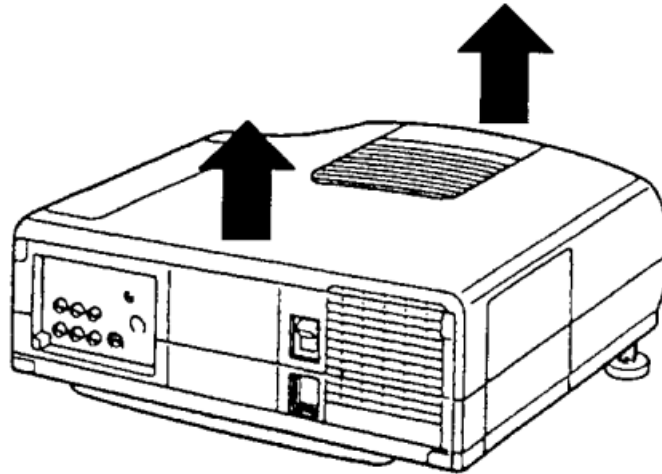

CONNECTING THE PROJECTOR

Your projector is equipped with various audio/video inputs and outputs including S-VHS video.

CONNECTING TO THE AV INPUT JACKS

Connect to the video and audio outputs of a VCR, video disc player, video camera, satellite TV tuner or other AV equipment.

- Connect video/audio outputs from external sources to these input jacks.
- If the audio signal from the AV equipment is stereo, be sure to connect the right and left channels to the respective right and left audio input jacks.
- If the external audio signal is monaural, connect it to the left jack.

S-HS FORMAT VCR CONNECTION

The AV input includes an extra video input jack marked S-VIDEO to allow connection to an S-VHS format VCR that has separate Y/C video signals. The S-VIDEO jack has priority over the VIDEO (RCA) jack.


CONNECTING TO THE MONITOR OUTPUT JACKS

This jack contains the audio information that is viewed on the screen. Use to connect a external stereo amp. and speakers system when using this jack, turn off the audio from the internal speaker.

HOW TO CONNECT EXTERNAL AV EQUIPMENT


POSITIONING

- This projector is basically designed to project on a flat projection surface.
- This projector can be focused from 4.9' (1.5m) ~ 19.7' (6.0m).
- Use the illustration below as an example when positioning the projector to the screen.


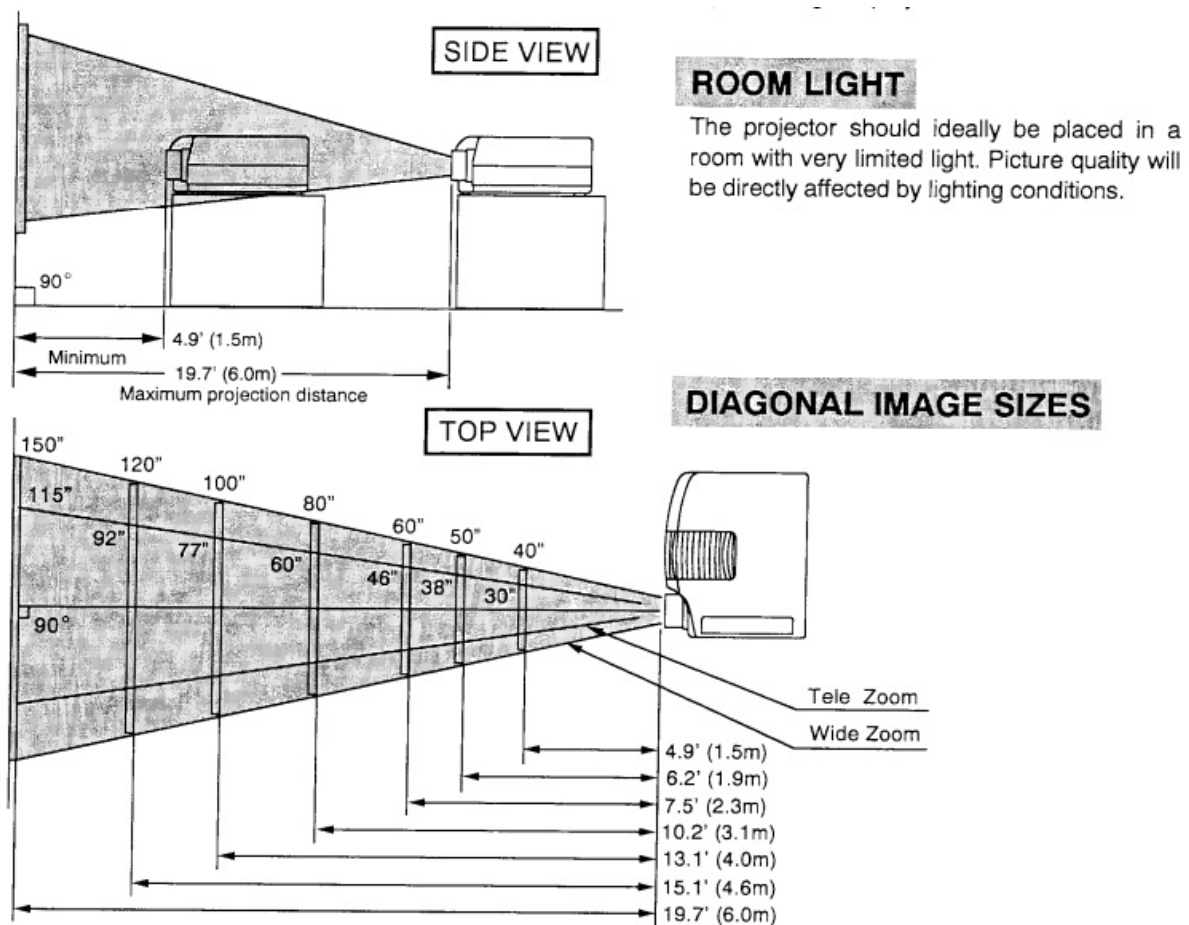


LEVELING AND ELEVATING ADJUSTMENTS


- Picture adjustments can be made with the two leveling/elevating feet. Adjustments of 6° up are possible by rotating the feet on the bottom of the projector.
- Adjust leveling of the projector, by rotating the two (left and right) feet on the bottom of the projector.

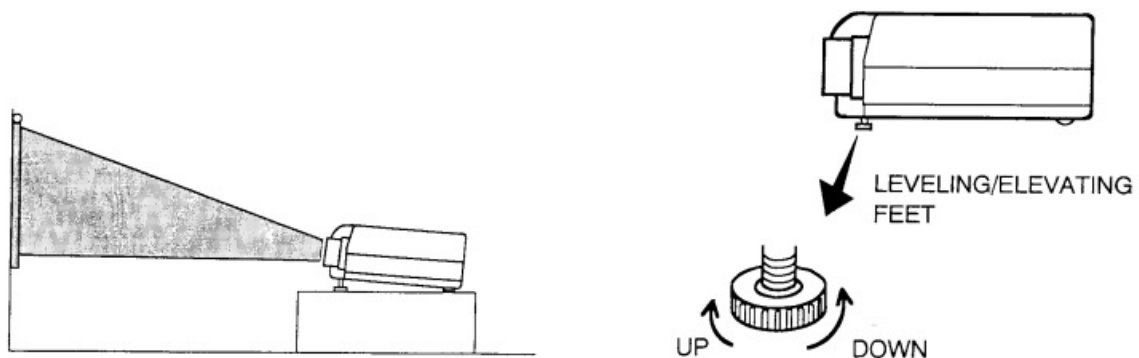

OPERATION OF CONTROLS

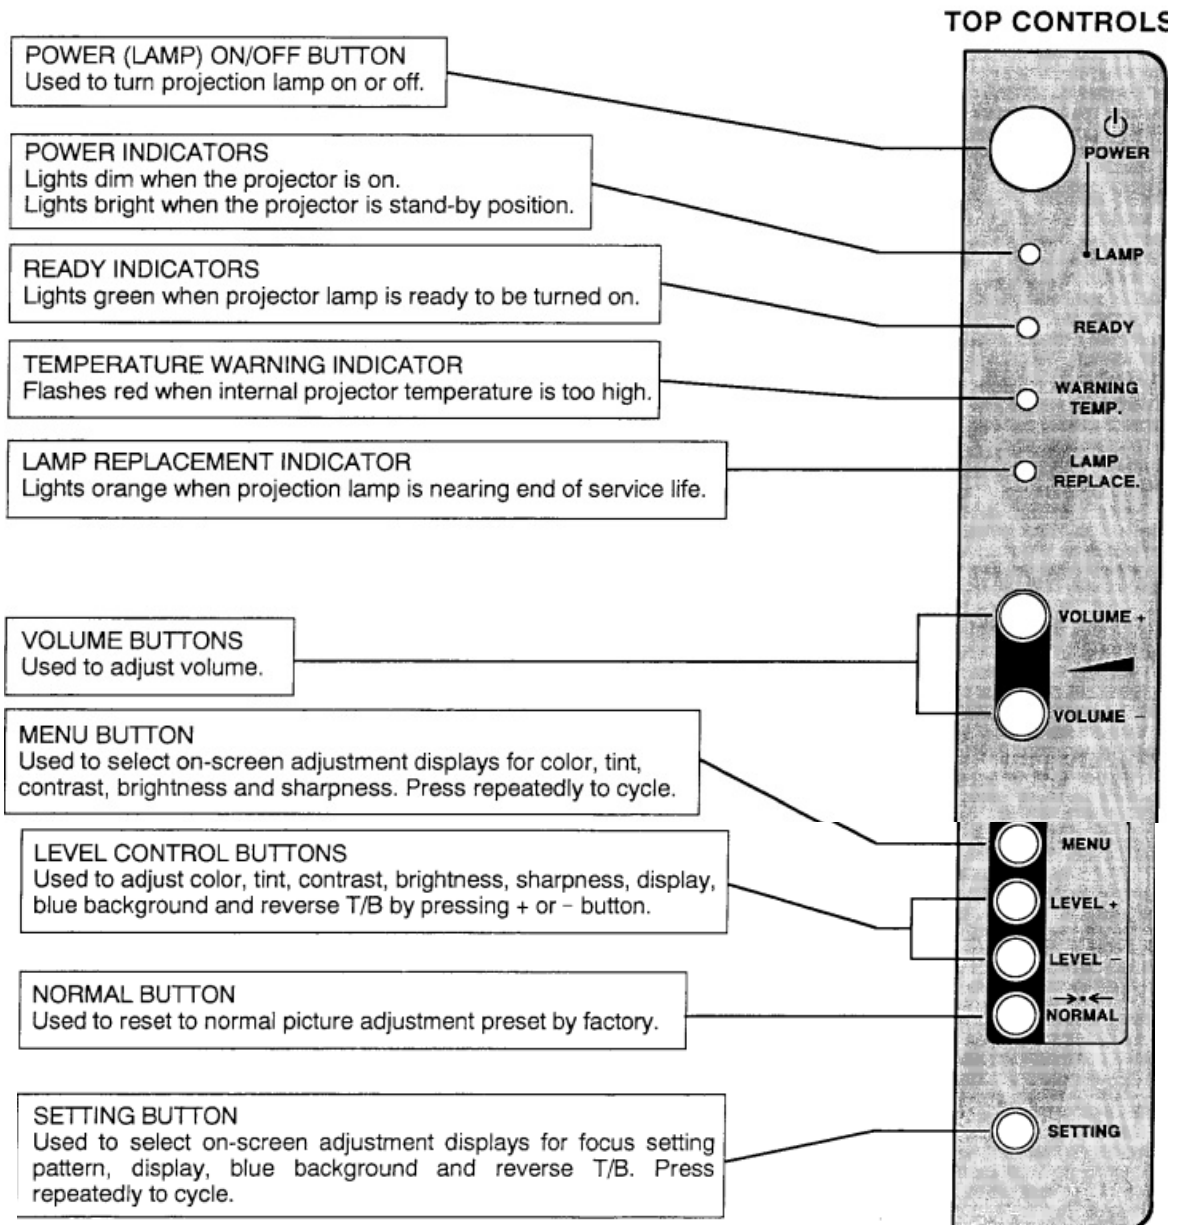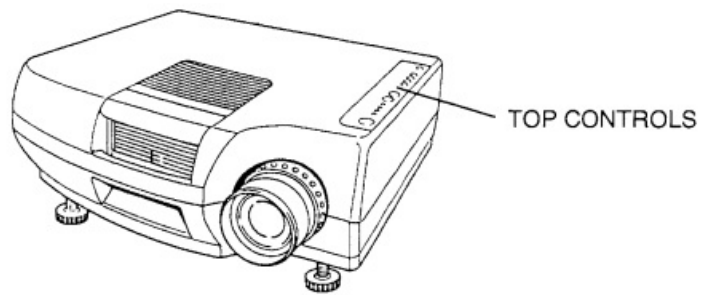


BACK OF THE PROJECTOR

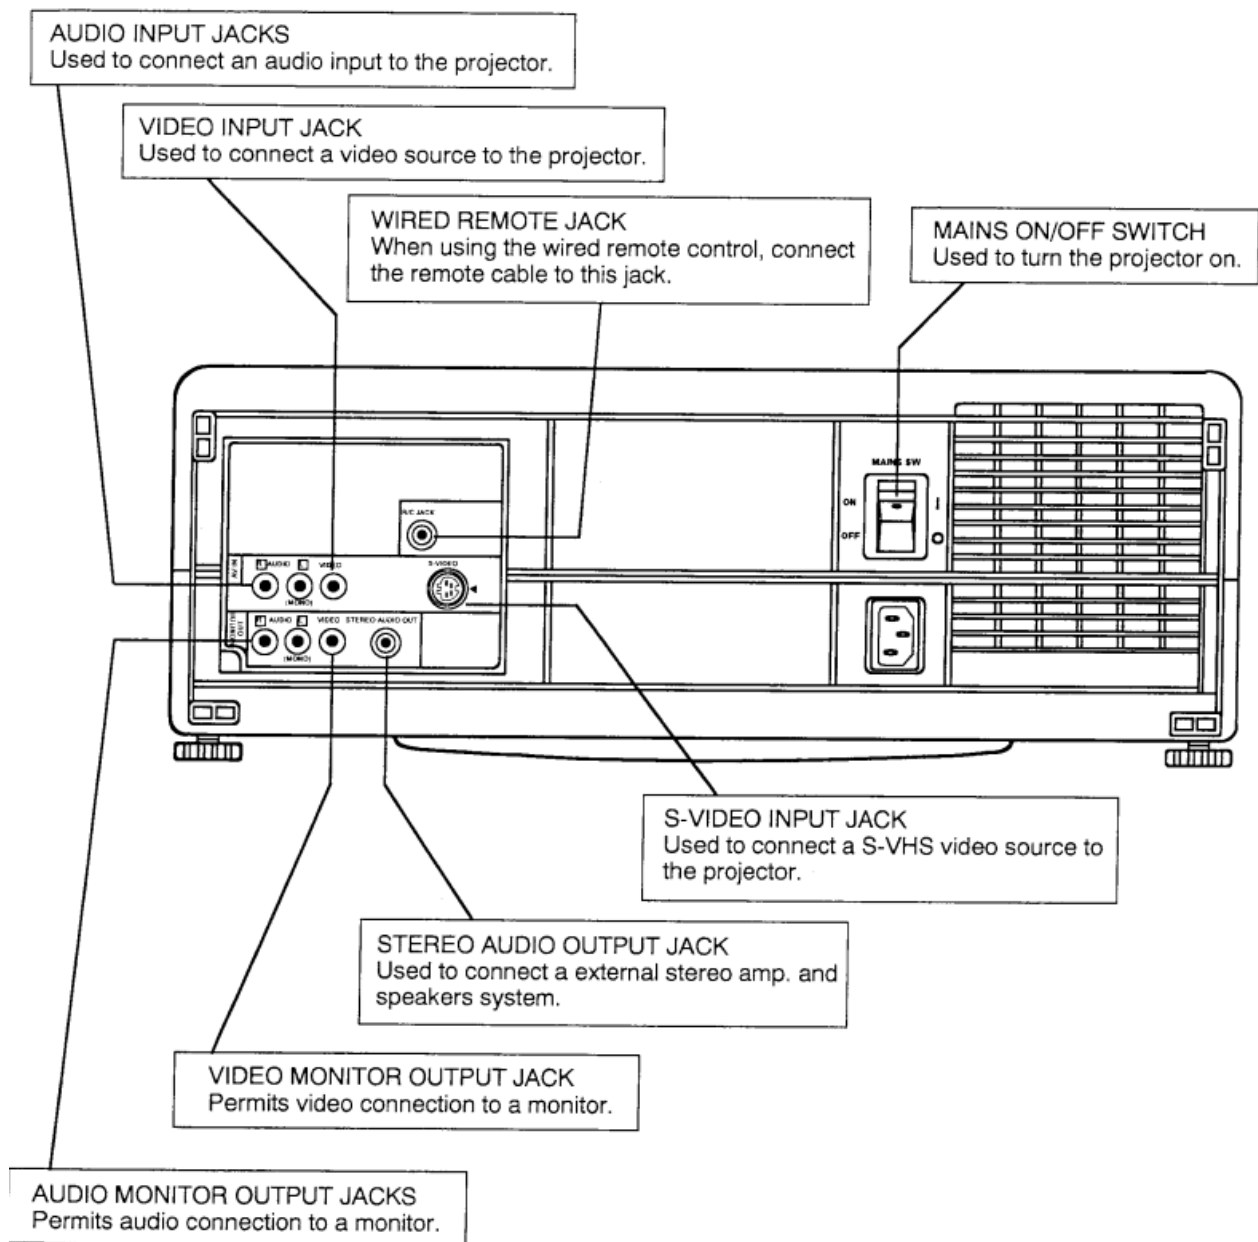


REMOTE CONTROL OPERATION

INFRARED WIRED REMOTE CONTROL

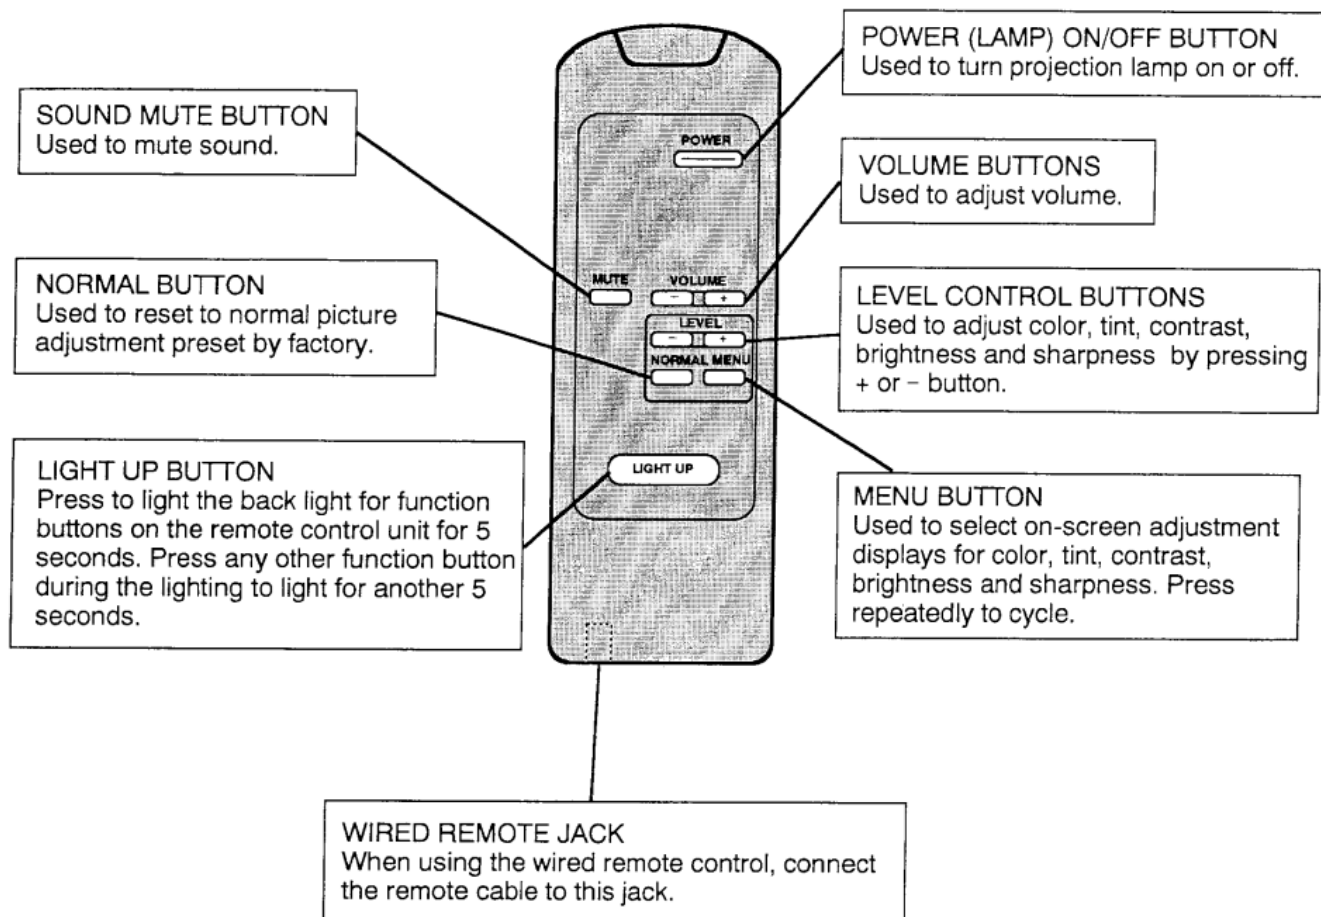


REMOTE CONTROL BATTERY INSTALLATION

1. Remove the battery compartment lid

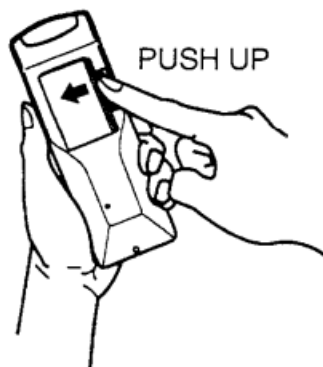


2. Slide the batteries into the compartment.

Note: For correct polarity (+ and - terminal), be sure the battery terminals are in contact with the pins in the compartment.

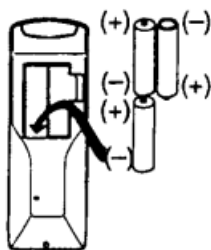


3. Replace the compartment lid.

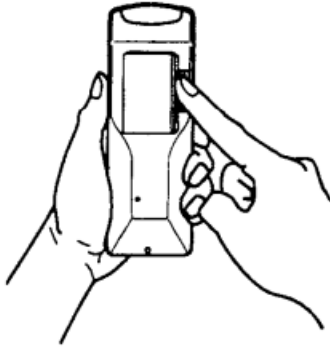

The remote control unit can be used as a wireless or wired remote control.

USING THE REMOTE CONTROL UNIT (wireless)

Point the remote control toward the back of the projector (Receiver window whenever pressing the buttons). Maximum operating range for the remote control is about 16.4' (5m) and 60° from the back of the projector.

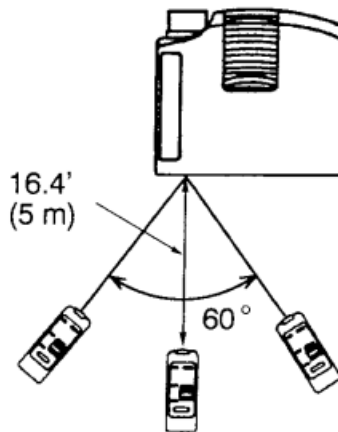


USING THE REMOTE CONTROL UNIT (wired)

Connect a remote control cable to RC jacks located on the remote control unit and the back of the projector.

To insure safe operation, please observe the following precautions:

- Use (3) AA type batteries.
- Change three batteries at the same time.
- Do not use a new battery with a used battery.
- Avoid contact with water.
- Do not drop the remote control unit.

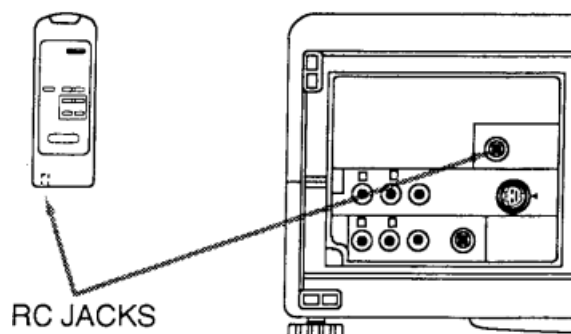


USING THE PROJECTOR

TO TURN ON THE PROJECTOR

Connect the projector to a video source (VCR, Video Camera, Video Disc Player, etc.) using the appropriate terminals on the rear of the projector (See page 6-7). Connect the projector's AC power cord into a wall outlet and turn the MAINS ON/OFF switch (located on the back of the projector) to ON position. The POWER indicator will light RED and the READY indicator will light GREEN.

Press the POWER (LAMP) ON/OFF button on the projector or on the remote control unit to ON. The POWER indicator will light dim and the cooling fan will operate. The wait display (A MOMENT ! and numeral 30) appears on the screen and the count-down starts (30-29-28-...1). The signal from the video source appears after 30 seconds.

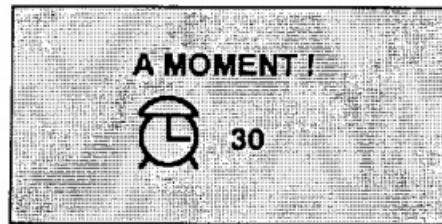

CAUTION:

- THIS PROJECTOR USES A METAL-HALIDE ARC LAMP. IF YOU TURN ON THE LAMP, DO NOT TURN IT OFF FOR AT LEAST 5 MINUTES SO THAT ITS LIFE WILL NOT GET SHORTER.
- DO NOT UNPLUG THE PROJECTOR OR TURN THE MAINS ON/OFF SWITCH (LOCATED ON THE BACK OF THE PROJECTOR) TO OFF UNTIL THE COOLING FAN HAS STOPPED OPERATING.

NOTE 1: After you turn off the projector using the POWER (LAMP) ON/OFF button on the projector (or on the remote control unit) you must wait one minute before you can turn the projector on again.

NOTE 2: TEMPERATURE WARNING INDICATOR flashes red, the projector will automatically turn off. Wait at least 5 minutes before turning the projector on. If the TEMPERATURE WARNING INDICATOR continues to flash, follow the procedures below:

1. Press POWER (LAMP) ON/OFF button to OFF.
2. Check the air filter for dust accumulation.
3. Remove dust with vacuum cleaner (See air filter care and cleaning on page 16.)
4. Press POWER (LAMP) ON/OFF button to ON.

If the TEMPERATURE WARNING INDICATOR still continues to flash, call your authorized distributor or dealer for service.


TO TURN OFF THE PROJECTOR

Press the POWER (LAMP) ON/OFF button on the projector (or on the remote control unit) to OFF. The READY indicator will turn off. The cooling fan will operate for 50 seconds after the projector is turned off and POWER indicator will light bright. (During this "cooling down" period, the projector can not be turned on.) After 10 seconds, the READY indicator will light green again and the projector may be turned on by pressing the POWER (LAMP) ON/OFF button.

ADJUST THE PROJECTOR


FOCUS ADJUSTMENT

Turn the focus ring using your fingers for sharper, crisper picture. When focusing, press setting button to select focus setting pattern. (See other function setting on page 14.)

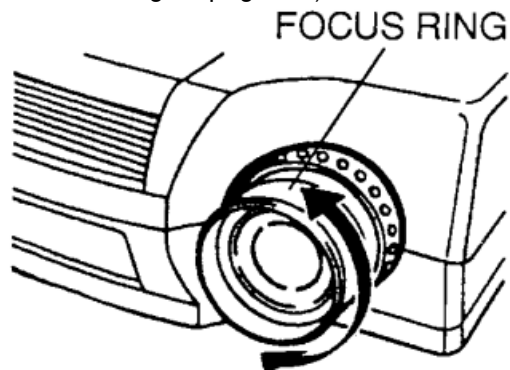

ZOOM ADJUSTMENT

Turn the zoom ring using zoom ring knob to obtain your desired picture size.

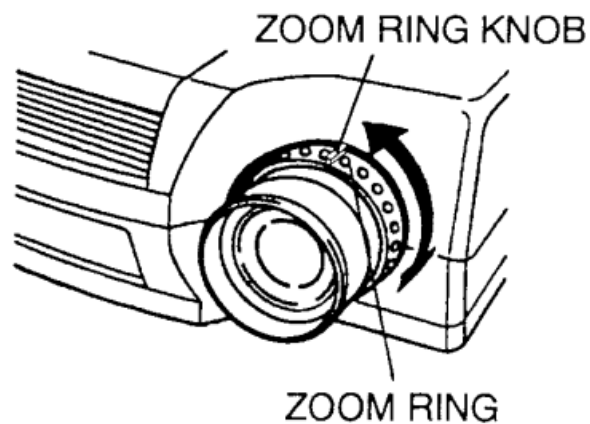

- **VOLUME ADJUSTMENT**

Press VOLUME buttons (located on projector or remote control unit) to adjust the volume. The screen display will appear.

Pressing (+) will increase volume and the green indicator will increase to the right on the screen. Pressing (-) will decrease volume and the green indicator will decrease to the left on the screen.


- **SOUND MUTE ADJUSTMENT**

Pressing SOUND MUTE button on the remote control unit will mute audio. Press SOUND MUTE button again to restore audio to its previous level.

- **PICTURE ADJUSTMENT**

The normal picture level is factory preset on the projector and can be obtained anytime by pressing the NORMAL button on the projector, or on the remote control unit. (The Normal display will appear for 5 seconds.)

Picture adjustments can be made by using the MENU and LEVEL buttons on the projector, or on the remote control unit. (See picture adjustment on page 15.)

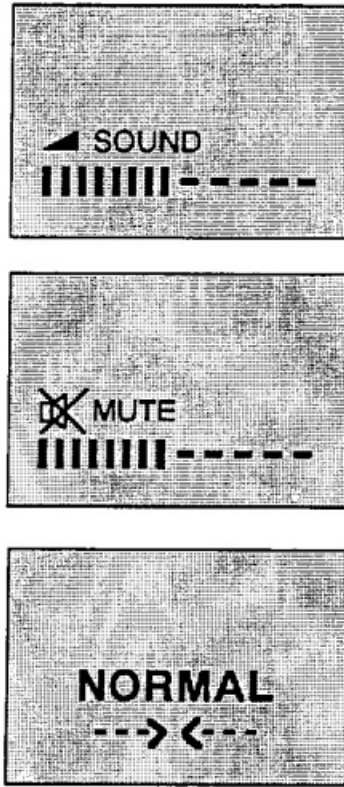


OTHER FUNCTION SETTING

This projector has other function settings; focus setting pattern, display, blue background and reverse T/B. These setting by using SETTING and LEVEL buttons on the projector.

1. Press SETTING button to select the function. Each time the SETTING button is pressed, the control function changes as follows:

2.

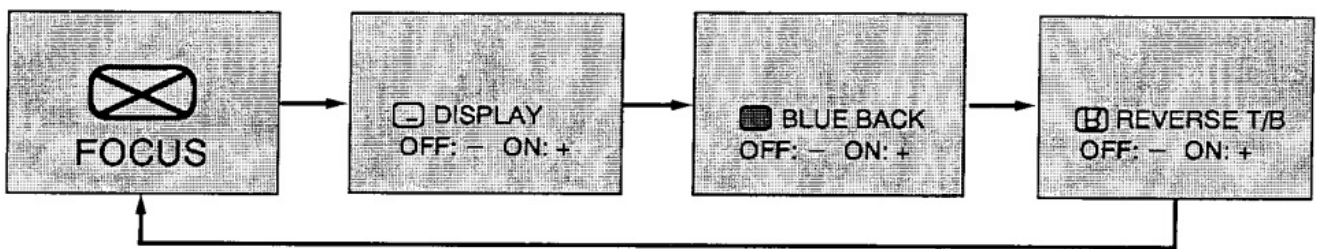

Adjust the display, blue background and reverse T/B by pressing LEVEL (- and +) buttons.

3. The ON-SCREEN display will disappear automatically in 5 seconds.

FOCUS ADJUSTMENT PATTERN

This function lets you project an easier-to-focus picture on the screen. When focusing, select this function with the setting button. (The focus setting pattern will appear for 10 seconds.)

DISPLAY

When this function is "ON" position, the projector to see the on-screen display of all setting and adjustment will be appeared. When this function is "OFF" position, the projector to see the on-screen display of any setting and adjustment (related of Picture Adjustment and Other function Setting) will be appeared.

BLUE BACK


When this function is in the "ON" position, the projector will project the blue image without video noise on the screen when the video source is unplugged or turned off.

REVERSE T/B


When this function is in the "ON" position, the top/bottom picture reverse.

PICTURE ADJUSTMENTS

TOP CONTROLS OF THE PROJECTOR

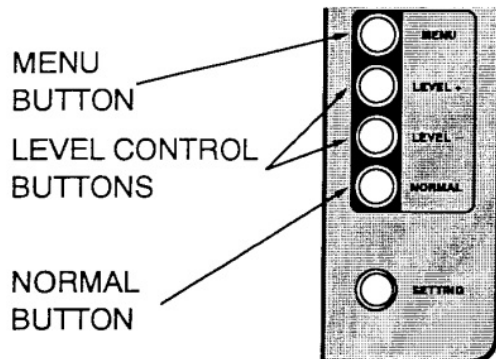


REMOTE CONTROL UNIT

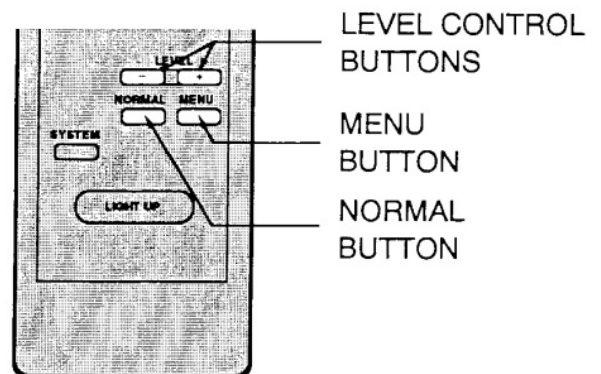

Picture adjustments have been preset at the factory to our quality standards. The picture adjustments can be made by the MENU and LEVEL buttons on the projector or on the remote control unit.


1. Press the MENU button to select the picture adjustments function. Each time the MENU button is pressed, the control function changes as follows:

2.

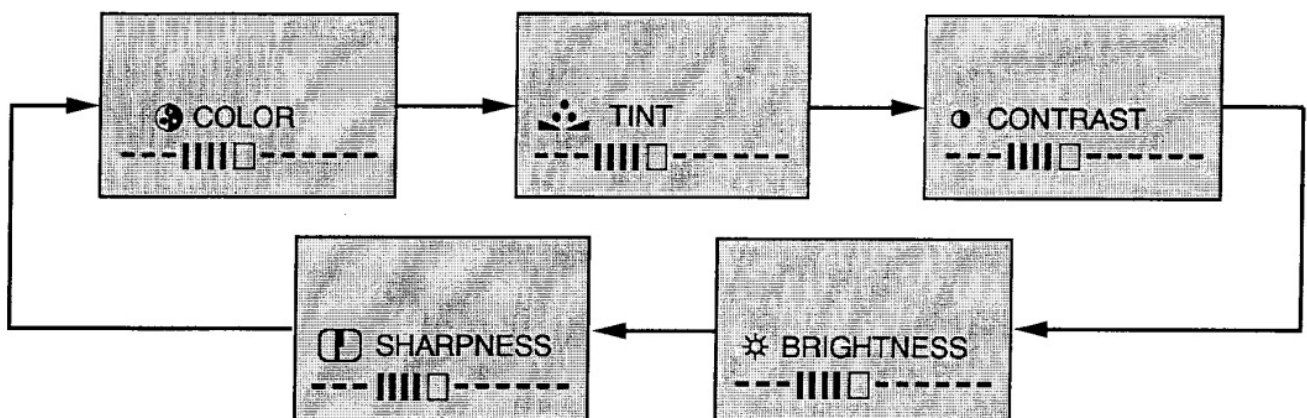

Adjust the color intensity, tint, contrast, brightness or sharpness by pressing the LEVEL (+ and -) buttons.

3. The ON-SCREEN display will disappear automatically in 5 seconds.

| | |
|--|--------------------------|
| <div style="text-align: center;">  </div> <p>• Press the LEVEL CONTROL buttons to make adjustments. Refer to the control chart below.</p> | |
| COLOR | DECREASES ↔ INCREASES |
| TINT | MORE PURPLE ↔ MORE GREEN |
| CONTRAST | SOFTER ↔ SHARPER |
| BRIGHTNESS | DARKER ↔ BRIGHTER |
| SHARPNESS | SOFTER ↔ SHARPER |


NOTE: The projector is equipped with a built-in memory feature that can maintain the picture adjustment levels if the projector is turned off and AC power cord is disconnected. If the NORMAL button is pressed, the projector will return to factory preset level.

AIR FILTER CARE AND CLEANING

The removable air filter prevents dust from accumulating on the surface of the projection lens and projection mirror. Should the air filter become clogged with dust particles, it will reduce the cooling fan's effectiveness and may result in internal heat built up and reduce the life of the projection lamp.

The air filter should be cleaned about every 100 hours. Clean the air filter more often when the projector is used in a particularly dusty or smoky place. When the air filter is blackened and beyond cleaning, it is time to change new air filter. Request service from an authorized dealer or service station. Be sure to face the air filter in the correct direction when installing inside of the filter cover. Attach the air filter with the arrow on the "AIR FLOW" label facing towards the inside of the projector. To clean the air filter, follow the cleaning procedures below:

1. Turn the POWER (LAMP) ON/OFF button OFF.
2. Remove the air filter cover from the side of the projector.
3. Remove the air filter and sponge from the filter cover.
4. Clean the air filter and sponge with a vacuum cleaner.
5. Replace the air filter and sponge. Make sure that air filter cover is fully inserted.

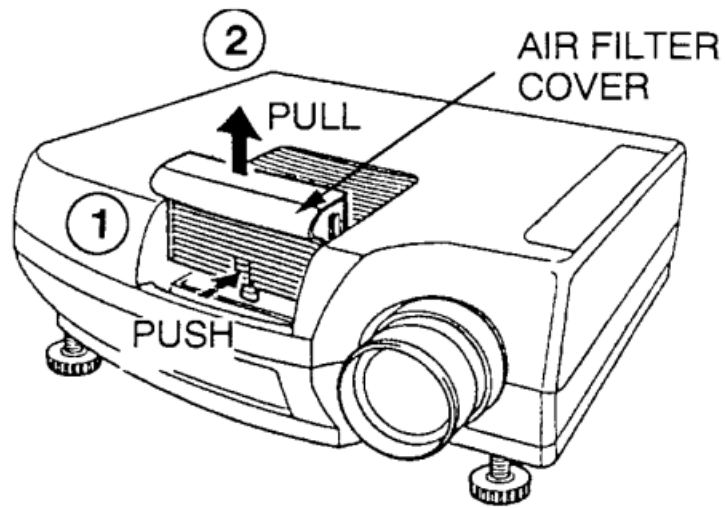


Do not clean with water.

Doing so may damage the air filter. Do not operate the projector with air filter removed.

RECOMMENDATION

TO ENJOY PICTURE IMAGE, USE THE PROJECTOR IN THE CLEAN ENVIRONMENT. USAGE IN THE CLEAN ENVIRONMENT IS RECOMMENDED. When used under the dusty or smoky conditions, dust may accumulate on the liquid crystal panel and lens inside it, and may resultantly be projected on the screen together with the picture. When the above symptoms are noticed contact the place where your purchased or the nearest service center for the cleaning.

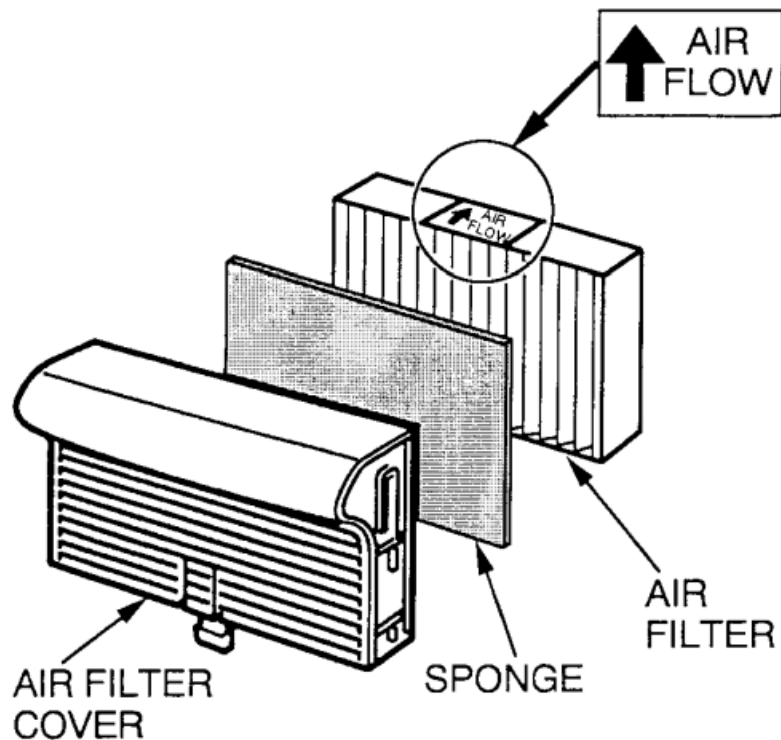

LAMP REPLACEMENT & TEMPERATURE WARNING INDICATORS

LAMP REPLACEMENT INDICATOR

When the lamp nears the end of its service life, the picture quality and color quality will deteriorate and the lamp replacement indicator will light orange.

DO NOT ATTEMPT TO REMOVE OR CHANGE THE PROJECTION LAMP. THE LAMP CAN ONLY BE CHANGED BY QUALIFIED SERVICE PERSONNEL.

TEMPERATURE WARNING INDICATOR

The TEMPERATURE WARNING INDICATOR flashes red when the internal temperature of the projector exceeds the normal temperature. Possible causes for the temperature warning may be:

1. Ventilation slots at the front or rear of the projector are blocked. In such an event, reposition the projector so that ventilation slots are not obstructed.
2. Air filter is clogged with dust particles. Remove dust from the air filter by following instructions in the Air Filter Care and Cleaning section above. If temperature warning indicator remains on after performing the checks listed above, cooling fan/internal circuits may be malfunctioning. Request service from an authorized dealer or service station.

HELPFUL HINTS-Problems and Solutions

Check the following chart before requesting service.

| Problem: | Try these Solutions: |
|--------------------------------|--|
| No power | <ul style="list-style-type: none">● Plug the projector into an AC outlet.● Turn the MAINS ON/OFF switch to ON.● Press the POWER (LAMP) ON/OFF button to ON.● Check the READY INDICATOR light ON.● One minute has not passed after the projector turned OFF. <p>NOTE: After pressing the POWER (LAMP) ON/OFF button to OFF, the projector functions as follows.</p> <ol style="list-style-type: none">1. The READY indicator will turn off.2. The cooling fan will operate for 50 seconds after the projector is turned off and POWER indicator will light bright. (During this "cooling down period, the projector can not be turned on.)3. After 10 seconds, the READY indicator will light green again and the projector may be turned on by pressing the POWER (LAMP) ON/OFF button. |
| No sound from built-in speaker | <ul style="list-style-type: none">● Press the VOLUME (▲) and (▼) to (▲).● Check audio cable connection from audio input source. |
| Picture is reversed | <ul style="list-style-type: none">● Check REVERSE SCAN (T/B) Feature. |
| Picture blurred or color faded | <ul style="list-style-type: none">● Check the projection distance 4.9' (1.5 m) ~ 19.7 (6.0 m).● Adjust the FOCUS control. <p>NOTE: Moving the projector from a cool temperature location to a warm temperature location may result in moisture condensation on the lens. In such an event, leave the projector OFF and wait until condensation disappears.</p> |

SERVICE WARNING: High voltages are used to operate this projector. Do not remove the back from your unit. You can often correct operating problems yourself. If the projector fails to work properly, locate the operating problem in the Helpful Hints Chart. To correct them, try the "Solutions."

Sanyo Service is easily obtained. If after following all operating instructions, you find that service is necessary, contact the SFS Corporation in Los Angeles, or the store where you purchased the unit. Give the model number and explain the difficulty. We will advise you how to obtain service.

TECHNICAL SPECIFICATIONS

SPECIFICATIONS

| | |
|----------------------------------|---|
| Projector Type | Portable LCD Color Video Projector |
| Dimensions (H x W x D) | 6.2" (158 mm) × 16.9" (430 mm) × 15.2" (385 mm) |
| Net Weight | 19.6 lbs (8.9 kg) |
| LCD Panel System | 1.3" TFT Active Matrix type (Thin Film Transistor) × 3 |
| Number of Pixels | 544,410 (181,470 × 3) |
| Projection Image Size (Diagonal) | Adjustable from 30" to 150" |
| Contrast Ratio | 100 :1 |
| Horizontal Resolution | 550 TV lines |
| Projection Lens | f2.8 ~ 3.2 lens with 2.09"~2.72" Manual zoom and focus |
| Lens Aperture | 2.04" (51.8 mm) |
| Throw Distance | 4.9' (1.5 m) ~ 19.7' (6.0 m) |
| Projection Lamp | Metal Halide, 195 watt |
| Projection Mirror | Dichroic mirror system |
| AV Input jacks | RCA Type × 1 (Video, Audio R and L) and DIN 4 pin (S-Video) × 1 |
| Video Monitor Output Jack | RCA Type × 1 |
| Audio Monitor Output Jacks | RCA Type × 1 (R and L) |
| Other Jacks | Stereo Audio Output Jack × 1 and Wired Remote Jack × 1 |
| Built-in Speaker | INT. SP. Monaural, 3 watt RMS (T.H.D. 10%) |
| Image Elevation Adjustment | Up 6° |
| Voltage | 120V AC, 50/60 Hz |
| Power Consumption | 260 Watts/4.1A (Max. Ampere) |
| Operating Temperature | 5 °C ~ 35 °C |
| Storage Temperature | - 10 °C ~ 60 °C |
| Remote Control Battery | (3) AA Type |
| Standard Accessories | Remote Control Unit, R/C Cable 5' (1.5m), AC Power Supply Cord, Lens Cover and Owner's Instruction Manual |



This symbol on the nameplate means the product is Listed by Underwriters Laboratories Inc. It is designed and manufactured to meet rigid U.L. safety standards against fire, casualty and electrical hazards.

SANYO INDUSTRIAL VIDEO LCD PROJECTOR LIMITED WARRANTY

OBLIGATIONS In order to obtain warranty service, the product must be delivered to and picked up from an Authorized Sanyo Service Center at the user's expense, unless specifically stated otherwise in this warranty. The names and addresses of Authorized Sanyo Service Centers may be obtained by writing to SFS Corporation, SFC's warranty administrator, at any of the addresses listed below, or by calling (toll-free) 1-800-421-5013.

New Jersey Office
210 Riser Road
Little Ferry, NJ 07643
201-641-3000

California Office
1200 W. Artesia Blvd
Compton, CA 90220
310-537-5830

Illinois Office
900 N. Arlington Heights Road
Itasca, IL 60143 U.S.A.
708-775-1414

THIS WARRANTY IS VALID ONLY ON SANYO PRODUCTS PURCHASED OR RENTED IN THE UNITED STATES OF AMERICA, EXCLUDING HAWAII AND ALL U.S. TERRITORIES AND PROTECTORATES. THIS WARRANTY APPLIES ONLY TO THE ORIGINAL RETAIL USER. THE ORIGINAL DATED BILL OF SALE, SALES SLIP OR RENTAL AGREEMENT MUST BE SUBMITTED TO THE AUTHORIZED SANYO SERVICE CENTER AT THE TIME WARRANTY SERVICE IS REQUESTED. Subject to the OBLIGATIONS above and EXCLUSIONS below, SANYO FISHER (USA) CORPORATION (SFC) warrants this SANYO product against defects in materials and workmanship for the periods specified below. SFC will repair or replace (at its option) the product and any of its parts which fail to conform to this warranty. The warranty period commences on the date the product was first purchased or rented at retail.

| LABOR | PARTS | LAMP |
|--------|--------|---------|
| 1 YEAR | 1 YEAR | 90 DAYS |


EXCLUSIONS

This warranty does not cover (A) the adjustment of customer-operated controls as explained in the appropriate model's instruction manual, or (B) the repair of any product whose serial number has been altered, defaced or removed. This warranty shall not apply to the cabinet or cosmetic parts, knobs or batteries. This warranty does not apply to uncrating, setup, installation, removal of the product for repair or reinstallation of the product after repair. This warranty does not apply to repairs or replacements necessitated by any cause beyond the control of SFC including, but not limited to, any malfunction, defect or failure caused by or resulting from unauthorized service or parts, improper maintenance, operation contrary to furnished instructions, shipping or transit accidents, modification or repair by the user, abuse, misuse, neglect, accident, incorrect power line voltage, fire, flood or other Acts of God, or normal wear and tear. The foregoing is in lieu of all other expressed warranties and SFC does not assume or authorize any party to assume for it any other obligation or liability. THE DURATION OF ANY WARRANTIES WHICH MAY BE IMPLIED BY LAW (INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS) IS LIMITED TO THE TERM OF THIS WARRANTY. IN NO EVENT SHALL SFC BE LIABLE FOR SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING FROM OWNERSHIP OR USE OF THIS PRODUCT, OR FOR ANY DELAY IN THE PERFORMANCE OF ITS OBLIGATIONS UNDER THIS WARRANTY DUE TO CAUSES BEYOND ITS CONTROL. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS AND/OR DO NOT ALLOW THE EXCLUSION OR LIMITATION OF CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS AND EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

ATTENTION For your protection in the event of theft or loss of this product, please fill in the information below for you own personal records.

- Model No.
- Serial No. (Located on back or bottom side of unit.)
- Date of Purchase Purchase Price
- Where Purchased

21350 Lassen Street Chatsworth, California 91311 Printed in Japan Part No. 610 259 4904 (1AA6P1P0837-M4BC)

| | |
|--|--|
|  The image shows the front of a white Sanyo PLC-400N portable LCD color video projector. It has a lens in the center, a small display screen on the left, and various control buttons and ports on the right. The Sanyo logo is visible at the top left of the device. | <p>SANYO PLC-400N Portable LCD Color Video Projector [pdf] Owner's Manual PLC-400N Portable LCD Color Video Projector, PLC-400N, Portable LCD Color Video Projector, LCD Color Video Projector, Color Video Projector, Video Projector, Projector</p> |
|--|--|

References

-  [Manual-Hub.com – Free PDF manuals!](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.