



---

[Home](#) » [Saramonic](#) » **Saramonic WiTalk HUB Wi Talk System Full Duplex Wireless Intercom Headset System User Manual** 

## **Contents** [ [hide](#) ]

- [1 Saramonic WiTalk HUB Wi Talk System Full Duplex Wireless Intercom Headset System](#)
- [2 Introduction](#)
- [3 Product Structure](#)
- [4 Operation Guide](#)
- [5 Headsets Pairing](#)
- [6 Specifications](#)
- [7 Packing List](#)
- [8 Statement](#)
- [9 Frequently Asked Questions](#)
- [10 Documents / Resources](#)
  - [10.1 References](#)

# Saramonic®

**Saramonic WiTalk HUB Wi Talk System Full Duplex Wireless Intercom Headset System**



## Introduction


WiTalk series is a full-duplex wireless intercom headset system that offers two-way communication at a range of up to 400m. WiTalk system is ideal for applications where teams need full use of their hands, such as filmmaking, sports events, production crew communication, etc. It mainly includes the following product:

WiTalk HUB, a mini base station with two operating channels, can work with eight Remote headsets simultaneously. Its 3.5mm headphone & microphone combo jack can be connected to the WiTalk LBH (monaural intercom headset), creating a nine-person talk net.

Both WiTalk DMH (dual-ear master headset) and WiTalk SMH (single-ear master headset) can be used with four Remote headsets, allowing up to 5 people to communicate simultaneously. Both WiTalk DRH (dual-ear remote headset) and WiTalk SRH (single-ear remote headset) can be paired with any kind of master headset or base station. WiTalk CB, a battery charger, can charge up to 10 batteries at the same time.

## Product Structure

### WiTalk DMH: Dual-Ear Master Headset

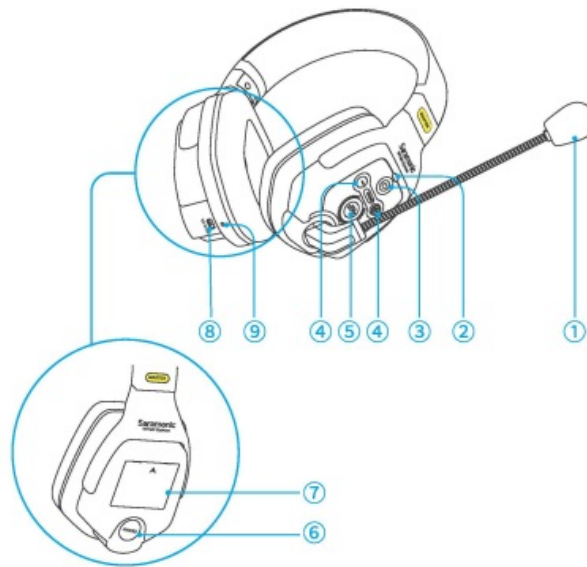

1. Microphone

2. Status Indicator

3. Power Button

Press and hold to power on or off.

4. Volume Control ( +/- button)

Press "+" or "-" button to increase or decrease the volume.

5. Mute Button

- Mode Status Indicator
- Mute Blinking red
- Not mute Static blue


6. Release Button

7. Battery Compartment

8. USB-C Charging Port

9. Charging Indicator

## WiTalk DRH: Dual-Ear Remote Headset

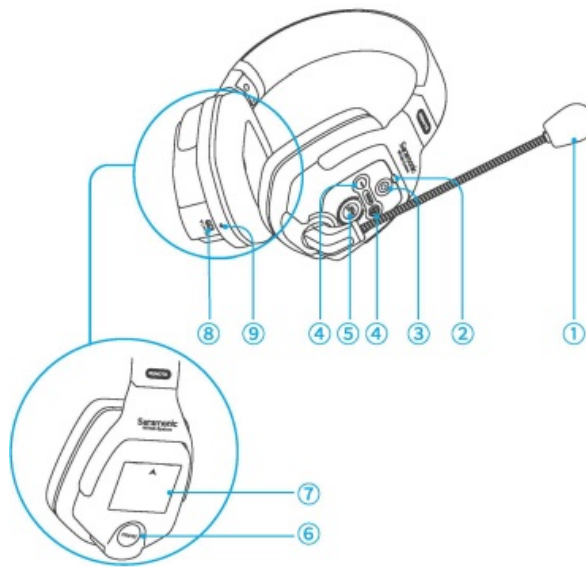

1. Microphone

2. Status Indicator

3. Power Button

Press and hold to power on or off.

4. Volume Control(+/- button)

Press "+" or "-" button to increase or decrease the volume.

5. Mute Button

- Mode Status Indicator
- Mute Blinking red
- Not mute Static blue


6. Release Button

7. Battery Compartment

8. USB-C Charging Port

9. Charging Indicator

## WiTalk SMH: Single-Ear Master Headset

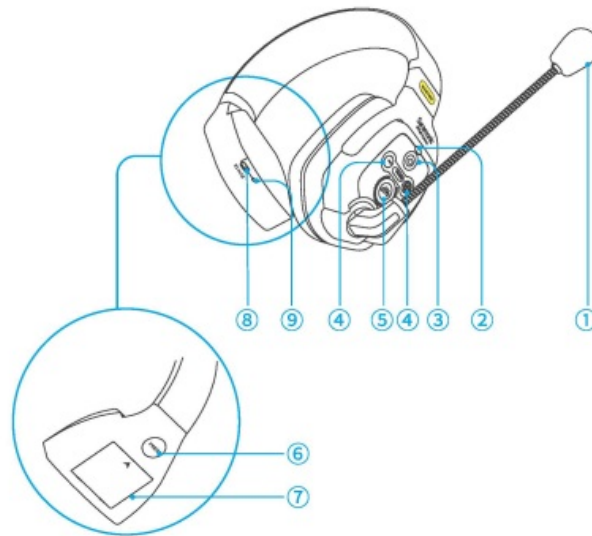

1. Microphone

2. Status Indicator

3. Power Button

Press and hold to power on or off.

4. Volume Control ( +/- button)

Press "+" or "-" button to increase or decrease the volume.

5. Mute Button

- Mode Status Indicator
- Mute Blinking red
- Not mute Static blue


6. Release Button

7. Battery Compartment

8. USB-C Charging Port

9. Charging Indicator

## **WiTalk SRH: Single-Ear Remote Headset**

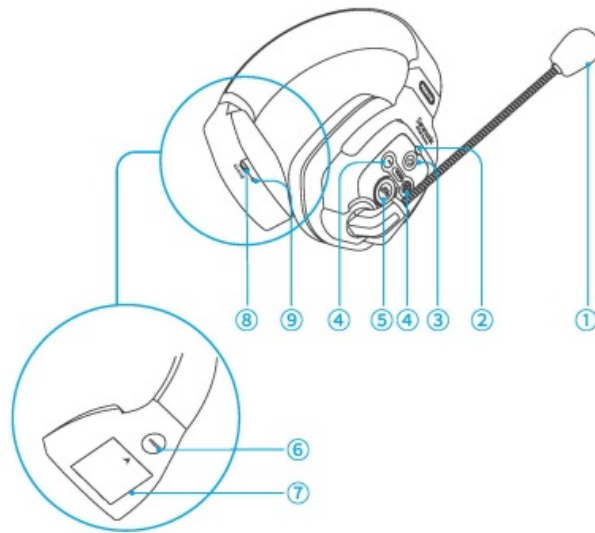

1. Microphone

2. Status Indicator

3. Power Button

Press and hold to power on or off.

4. Volume Control ( +/- button)

Press "+" or "-" button to increase or decrease the volume.

5. Mute Button

- Mode Status Indicator
- Mute Blinking red
- Not mute Static blue


6. Release Button

7. Battery Compartment

8. USB-C Charging Port


9. Charging Indicator

## **WiTalk HUB: Mini Base Station**

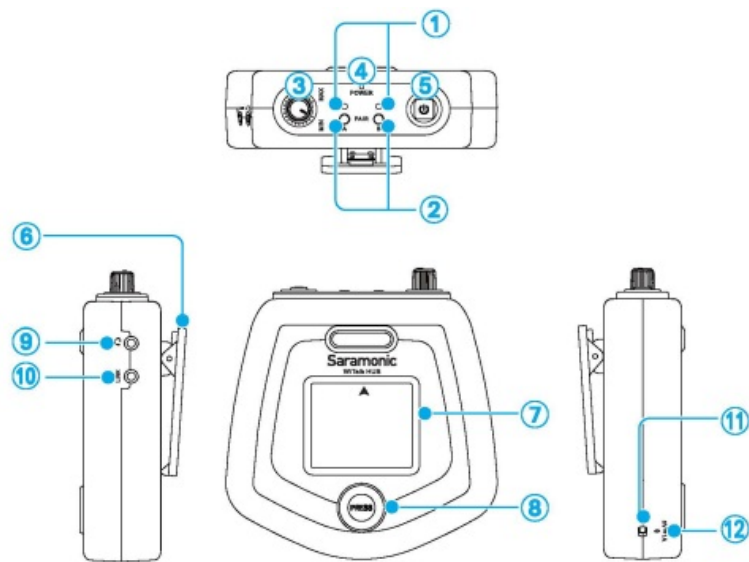


1. Pairing Indicator
2. Pair Buttons of Channel A and Channel B
3. Volume Control Knob
4. Power Indicator
5. Power Button  
Press and hold to power on or off.
6. Belt Clip
7. Battery Compartment
8. Release Button
9. 3.5mm Headphone & Microphone Combo Jack
10. Link Jack
11. USB-C Charging Port
12. Charging Indicator

### WiTalk LBH: Monaural Intercom Headset

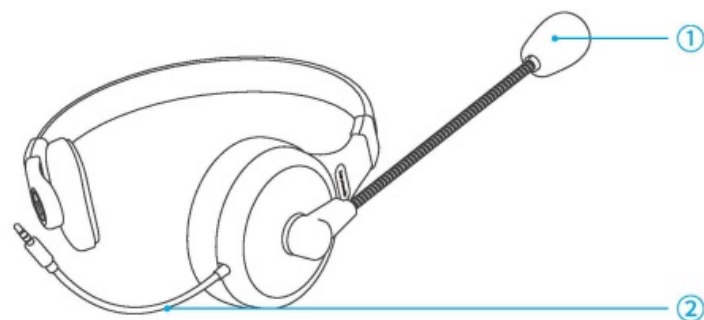

1. Microphone
2. Audio Connector 3.5mm TRRS cable


## WiTalk CB: 10-Bay Battery Charger

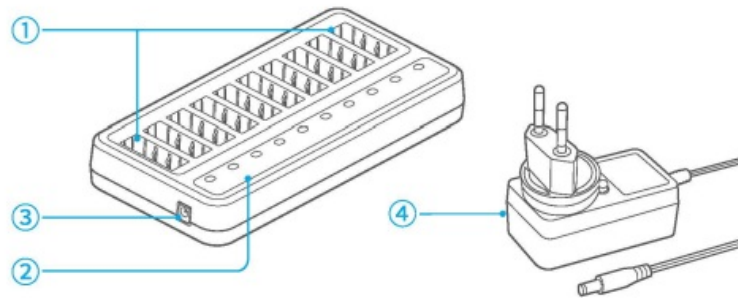

1. Battery Slots
2. Charging Indicators
3. DC Jack
4. 12V/2.5A DC Adapter  
(Including four types of detachable plug adapters: Europlug, American Standard, British Standard, Chinese Standard)


## Operation Guide

### How to Wear Witalk DMH/DRH/SMH/SRH/LBH

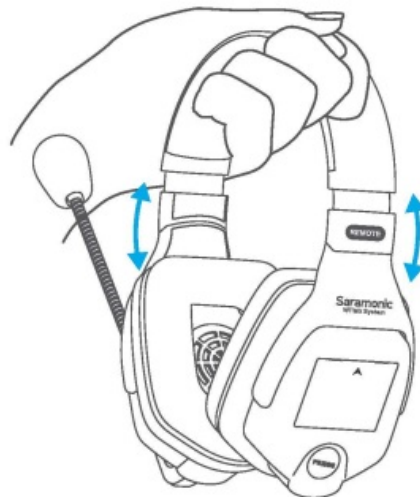


1. Put on the headset and adjust it to a comfortable size and position.




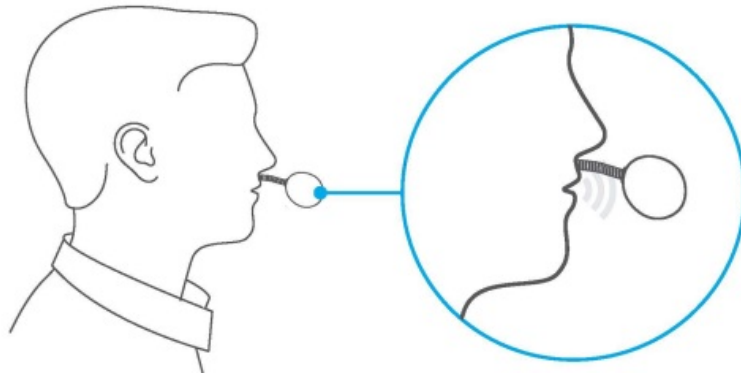

2. Adjust the boom and position the microphone capsule at about 2cm in front of your mouth for optimum audio.

## How to Use WiTalk LBH

Connect the headset to the  jack of WiTalk HUB

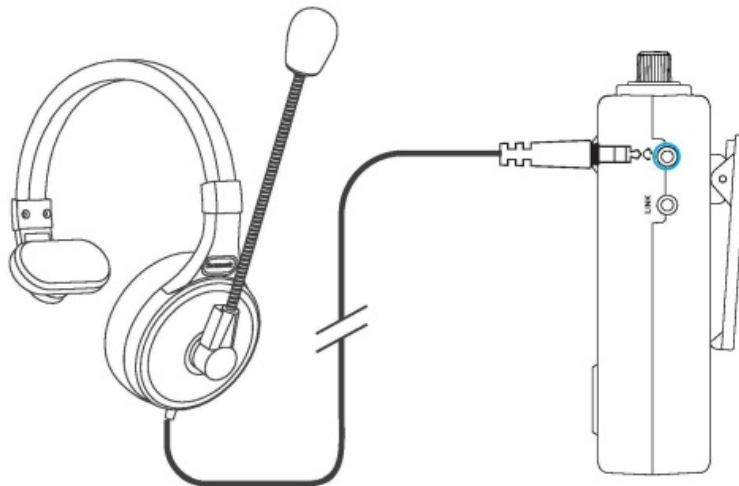

## Headsets Pairing

Before leaving the factory, the WiTalk system is prepared. Therefore, the connection will be established once they are powered on. If they are disconnected, please follow the below steps:

1. Step 1: Make sure that the Master headset and Remote headset(s) are powered off.
2. Step 2: When the Master headset is in shutdown mode, press and hold its “+” button and power button simultaneously for about 3 seconds to enter pairing mode. The indicator will blink blue rapidly.
3. Step 3: When the Remote headset is in shutdown mode, press and hold its “+” button and power button simultaneously for about 3 seconds to enter pairing mode. The


indicator will blink blue rapidly. Do it for all Remote headsets in turn.

4. Step 4: When the Master headset and the Remote headset(s) have entered the pairing mode, and the indicator of the Remote headset(s) turns to slowly blink blue, press the power button of the Master headset. They will be successfully paired within 10 seconds, and the indicators of both will turn to static blue.

**Note:**


1. Each Master headset can have a maximum of four Remote headsets paired.
2. When the number of the Remote headset is up to 4, the Master headset has reached the maximum pairing number by default. The pairing will be successful without the fourth step.
3. If the Master headset couldn't enter the pairing mode, it will automatically turn on after its indicator blinks red rapidly for 5 seconds. This means that the Master headset has reached the maximum pairing number. If you want to re-enable the pairing mode, please clear the Master headset first.
4. The Master headset and Remote headset of the single-ear and dual-ear can be used for paired. The pairing method is the same as above.

Mode	Status Indicator
Unpaired	Blinking blue slowly
<b>Pairing</b>	Blinking blue quickly
Paired Successfully	Static blue

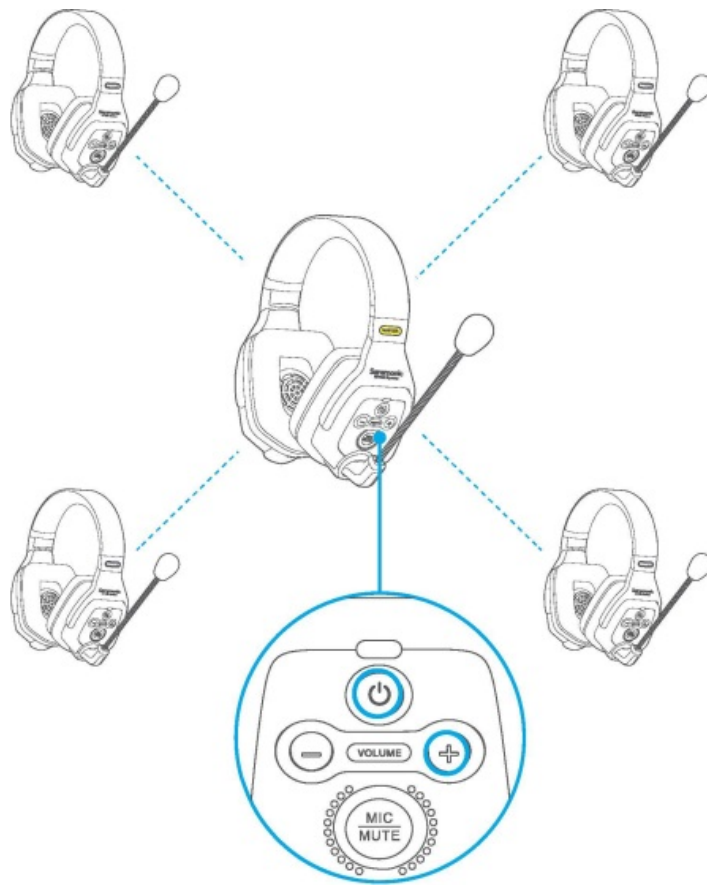

### Mini Base Station Pairing

1. Step 1: Make sure that the WiTalk HUB and the Remote headset are powered off.
2. Step 2: When the WiTalk HUB is in shutdown mode, press and hold its pair button (A or B) and power button simultaneously for about 3 seconds. The indicator will blink blue rapidly, and then the corresponding channel (A or B) enters the pairing mode.
3. Step 3: When the Remote headset is in shutdown mode, press and hold its “+” button and power button simultaneously for about 3 seconds to enter pairing mode. The indicator will blink blue rapidly. Do it for all Remote headsets in turn.
4. Step 4: When the WiTalk HUB and the Remote headset(s) have entered the pairing mode, and the indicator of the Remote headset(s) turns to slowly blink blue, press the power button of the WiTalk HUB. They will be successfully paired within 10 seconds, and the indicators of both will turn to static blue.

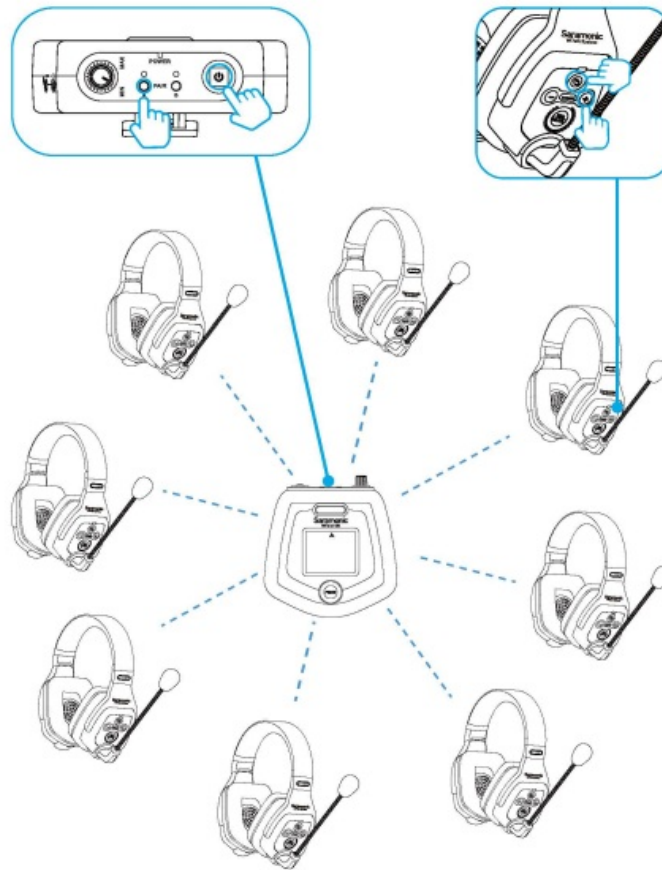

**Note:** Each channel can have a maximum of 4 Remote headsets paired. Thus, the WiTalk HUB can work with up to 8 Remote headsets simultaneously. After channel A is paired, if necessary, repeat the above steps to pair channel B.

Mode	Status Indicator
Unpaired	Blinking blue slowly
Paring	Blinking blue quickly
Paired Successfully	Static blue

### Clearing the Master Headset


When pairing with a repaired or replaced unit, the Master headset needs to be cleared before a Remote headset can be paired. Follow the steps below to clear the Master headset:

1. Step 1: Make sure the Master headset is powered off.
2. Step 2: Press and hold the Master headset's power button and "-" button simultaneously for 10 seconds until its indicator blinks red and blue alternately. When the indicator turns off, the Master headset is cleared.

## Clearing the WiTalk HUB

When pairing with a repaired or replaced unit, the WiTalk HUB needs to be cleared before a Remote headset can be paired. Follow the steps below to clear the WiTalk HUB:

1. Step 1: Make sure the WiTalk HUB is powered off. Step 2: Press and hold the WiTalk HUB's pair button A and power button simultaneously for 10 seconds. After channel A's indicator blinks blue rapidly for 3 seconds, channel A is cleared and channel B still works normally.
2. Step 3: Press and hold the WiTalk HUB's pair button B and power button simultaneously for 10 seconds. After channel B's indicator blinks blue rapidly for 3 seconds, channel B is cleared and then the WiTalk HUB will automatically shut down.

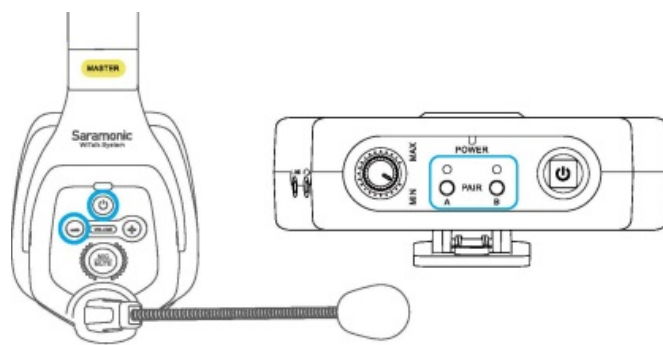


## Battery Charging

Please recharge the device when battery is low.


### Charge the battery via the charger.

1. Press the release button to remove the battery.
  - Mode Status Indicator
  - Low Battery Static red

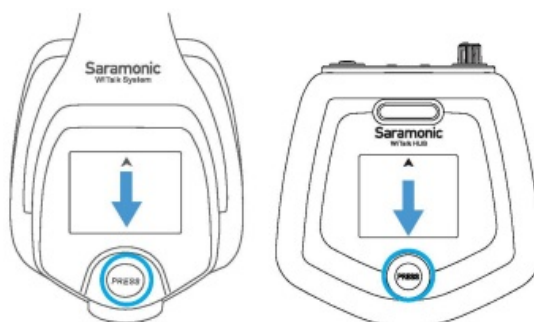


2. Insert the battery and make sure the contacts are properly aligned.

- Mode Charging Indicator (Charger)
- Fully Charged
- Charger Static red
- Static blue

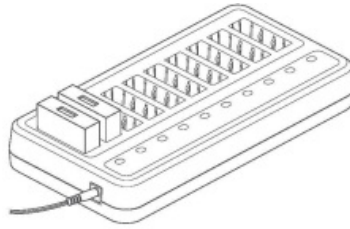

3. Charge the battery via a USB-C charging cable:

- Mode Charging (Headset) Indicator (Headset)
- Charging Static red
- Fully Charged Static blue

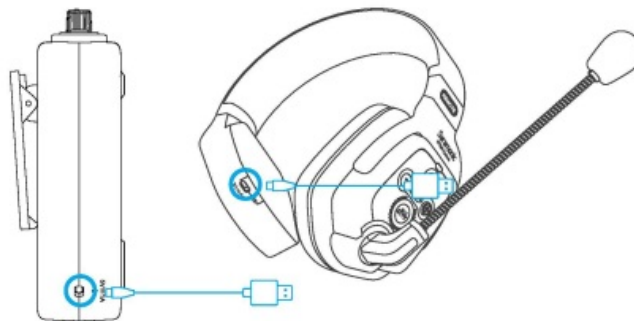


## How to Mute Witalk DMH/DRH/SMH/SRH/LBH


Boom can swivel over the top 270 degrees. Thus, headset can be worn on both sides.

You can mute/ unmute the microphone in the following two ways:

1. Unmute: Set the boom to the “Vertical” position.

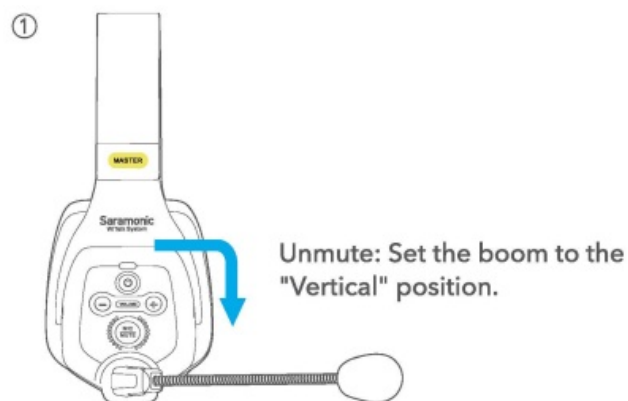


2. Press the MIC/MUTE button to mute or unmute the microphone.

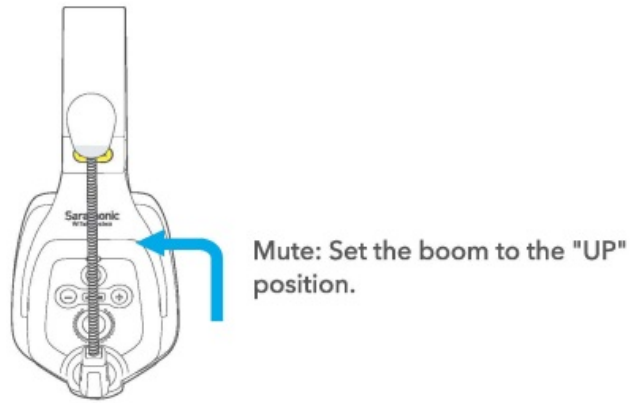

Mode	Status Indicator
Mute ON	Blinking red
Mute OFF	Static blue

## Expanding the System

The system is expandable by adding more WiTalk HUB: Use a 3.5mm TRRS to TRRS adapter cable (sold separately) to connect one WiTalk HUB's link jack to another WiTalk HUB's headphone & microphone combo jack, doubling capacity to 16 full-duplex headsets.

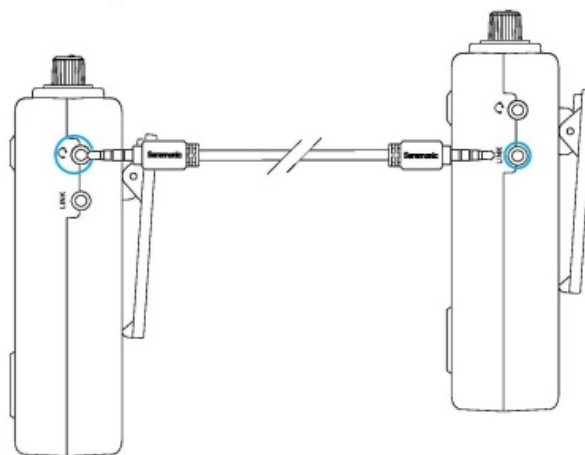

## Specifications

### Dual-Ear Master Headset

Duplex mode	Full-Duplex (FDX)
Modulation	GFSK
Carrier frequencies	1787MHz-1928MHz
Microphone type	Condenser microphone
Operating range	Up to 1312ft (400m) without obstacles
Frequency response	300Hz-5KHz
RF output power	<24dBm
Power consumption	<0.5W
SNR	65dB and more
Distortion	<1%
Power requirements	Li-ion Battery 3.7V/1200mAh or USB-C DC 5V
Battery life	Approx. 10 hours (with 2 Remotes), 5 hours (with 4 Remotes)
Weight	Approx. 360g (12.7oz)
Dimensions	175.1x203.1x85.8mm
Operating temperature	-10°C to 50°C
Storage temperature	-20°C to +55°C

## Dual-Ear Remote Headset (WiTalk DRH)

Duplex mode	Full-Duplex (FDX)
Modulation	GFSK
Carrier frequencies	1787MHz-1928MHz
Microphone type	Condenser microphone
Operating range	Up to 1312ft (400m) without obstacles
Frequency response	300Hz-5KHz
RF output power	<24dBm
Power consumption	<0.5W
SNR	65dB and more
Distortion	<1%
Power requirements	Li-ion Battery 3.7V/1200mAh or USB-C DC 5V
Battery life	Approx. 18 hours
Weight	Approx. 360g (12.7oz)
Dimensions	175.1x203.1x85.8mm
Operating temperature	-10°C to 50°C
Storage temperature	-20°C to +55°C

## Single-Ear Master Headset (WiTalk SMH)



Duplex mode	Full-Duplex (FDX)
Modulation	GFSK
Carrier frequencies	1787MHz-1928MHz
Microphone type	Condenser microphone
Operating range	Up to 1312ft (400m) without obstacles
Frequency response	300Hz-5kHz
RF output power	<24dBm
Power consumption	<0.5W
SNR	65dB and more
Distortion	<1%
Power requirements	Li-ion Battery 3.7V/1200mAh or USB-C DC 5V
Battery life	Approx. 10 hours (with 2 Remotes), 5 hours (with 4 Remotes)
Weight	Approx. 360g (12.7oz)
Dimensions	175.1x203.1x85.8mm
Operating temperature	-10°C to 50°C
Storage temperature	-20°C to +55°C

## Single-Ear Remote Headset (WiTalk SRH)

Duplex mode	Full-Duplex (FDX)
Modulation	GFSK
Carrier frequencies	1787MHz-1928MHz
Microphone type	Condenser microphone
Operating range	Up to 1312ft (400m) without obstacles
Frequency response	300Hz-5kHz
RF output power	<24dBm
Power consumption	<0.5W
SNR	65dB and more
Distortion	<1%
Power requirements	Li-ion Battery 3.7V/1200mAh or USB-C DC 5V
Battery life	Approx. 18 hours
Weight	Approx. 360g (12.7oz)
Dimensions	175.1x203.1x85.8mm
Operating temperature	-10°C to 50°C
Storage temperature	-20°C to +55°C

## Mini Base Station (WiTalk HUB)


Duplex mode	Full-Duplex (FDX)
Modulation	GFSK
Carrier frequencies	1787MHz-1928MHz
Operating range	Up to 1312ft (400m) without obstacles
Frequency response	300Hz-5kHz
RF output power	<24dBm
Power consumption	<0.5W
SNR	≥65dB
Distortion	<1%
Power requirements	3.7V/1200mAh Li-ion Battery or USB-C DC 5V
Battery life	Approx. 2.5 hours (with 8 Remotes), Approx. 5 hours (with 4 Remotes)
Weight	Approx. 180g (6.35oz)
Dimensions	127.6x119.4x46.5mm
Operating temperature	-10°C to 50°C
Storage temperature	-20°C to 55°C

## Standards for Radio Frequency Band


Product Versions	Frequency Range	Regions Available
Standard Version	1880-1900MHz	Europe: The United Kingdom; Hong Kong; South Africa; Malaysia; Australia; New Zealand;
American Version	1920-1930MHz	United States; Canada; Mexico
Japanese Version	1893-1906MHz	Japan
Taiwanese Version	1880-1895MHz	Taiwan
Brazilian Version	1910-1920MHz	Brazil

For the latest frequency band and the more countries, please refer to our official website: [www.saramonic.com](http://www.saramonic.com)

## Packing List

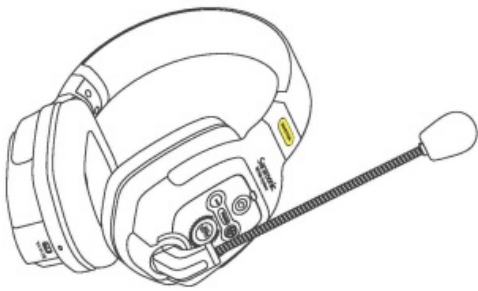

**WiTalk DMH Dual-Ear Master Headset**

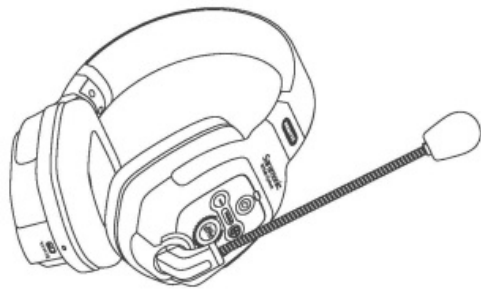

**WiTalk DRH Dual-Ear Remote Headset**




**WiTalk SMH Single-Ear Master Headset**



**WiTalk SRH Single-Ear Remote Headset**



**WiTalk LBH Monaural Intercom Headset**

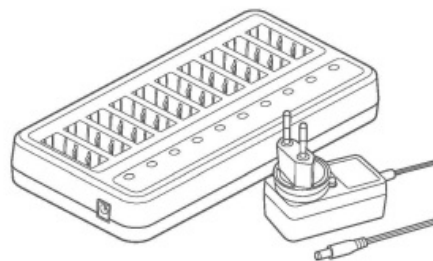


**WiTalk CB Battery Charger**




**WiTalk HUB Mini Base Station**



**WiTalk BP Rechargeable Battery**

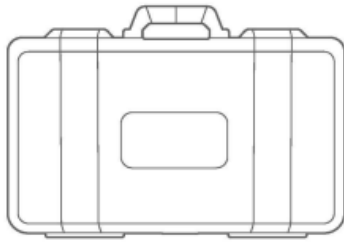

WiTalk Carrying Case (S/M/L)

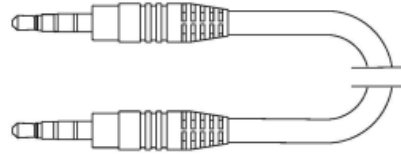

WiTalk Link Cable-30M (sold separately)

## WiTalkWT2D

- 1\*WiTalk DMH Headset
- 1\*WiTalk DRH Headset
- 2\* WiTalk BP Battery
- 2\* USB-C Charging Cable
- 1 \* WiTalk Carrying Case (S)

## WiTalkWT2S

- 1 \* WiTalk SMH Headset
- 1 \* WiTalk SRH Headset
- 2\* WiTalk BP Battery
- 2\* USB-C Charging Cable
- 1 \* WiTalk Carrying Case (S)

## WiTalkWT3D

- 1 \* WiTalk DMH Headset
- 2\* WiTalk DRH Headset
- 3\* WiTalk BP Battery
- 3\* USB-C Charging Cable
- 1 \* WiTalk Carrying Case (S)

## WiTalkWT3S

- 1 \* WiTalk SMH Headset
- 2\* WiTalk SRH Headset

- 3\* WiTalk BP Battery
- 3\* USB-C Charging Cable
- 1 \* WiTalk Carrying Case (S)

#### **WiTalkWT4D**

- 1 \* WiTalk DMH Headset
- 3\* WiTalk DRH Headset
- 4\* WiTalk BP Battery
- 4\* USB-C Charging Cable
- 1 \* WiTalk Carrying Case (S)

#### **WiTalkWT4S**

- 1 \* WiTalk SMH Headset
- 3\* WiTalk SRH Headset
- 4\* WiTalk BP Battery
- 4\* USB-C Charging Cable
- 1 \* WiTalk Carrying Case (S)

#### **WiTalkWTSD**

- 1 \* WiTalk DMH Headset
- 4\* WiTalk DRH Headset
- 5\* WiTalk BP Battery
- 1 \* WiTalk CB Battery Charger
- 1 \* WiTalk Carrying Case (M)

#### **WiTalkWTSS**

- 1\*WiTalkSMH Headset
- 4\* WiTalk SRH Headset
- 5\* WiTalk BP Battery
- 1 \* WiTalk CB Battery Charger
- 1 \* WiTalk Carrying Case (M)

## **WiTalkWT6D**

- 1 \* WiTalk HUB Base Station
- 5\* WiTalk DRH Headset
- 6\* WiTalk BP Battery
- 1 \* WiTalk CB Battery Charger
- 1 \* WiTalk LBH Headset
- 1 \* WiTalk Carrying Case (M)

## **WiTalkWT6S**

- 1 \* WiTalk HUB Base Station
- 5\* WiTalk SRH Headset
- 6\* WiTalk BP Battery
- 1 \* WiTalk CB Battery Charger
- 1 \* WiTalk LBH Headset
- 1 \*WiTalk Carrying Case (M)

## **WiTalkWT7D**

- 1 \* WiTalk HUB Base Station
- 6\* WiTalk DRH Headset
- 7\* WiTalk BP Battery
- 1 \* WiTalk CB Battery Charger
- 1 \* WiTalk LBH Headset
- 1 \* WiTalk Carrying Case (L)

## **WiTalkWT7S**

- 1 \* WiTalk HUB Base Station
- 6\* WiTalk SRH Headset
- 7\* WiTalk BP Battery
- 1 \* WiTalk CB Battery Charger
- 1 \* WiTalk LBH Headset
- 1\* WiTalk Carrying Case (L)

## **WiTalkWTSD**

- 1 \* WiTalk HUB Base Station
- 7\* WiTalk DRH Headset
- 8\* WiTalk BP Battery
- 1 \* WiTalk CB Battery Charger
- 1 \* WiTalk LBH Headset
- 1 \* WiTalk Carrying Case (L)

## **WiTalkWTSS**

- 1 \* WiTalk HUB Base Station
- 7\* WiTalk SRH Headset
- 8\* WiTalk BP Battery
- 1 \* WiTalk CB Battery Charger
- 1 \* WiTalk LBH Headset
- 1 \* WiTalk Carrying Case (L)

## **WiTalkWT9D**

- 1 \* WiTalk HUB Base Station
- 8\* WiTalk DRH Headset
- 9\* WiTalk BP Battery
- 1 \* WiTalk CB Battery Charger
- 1 \* WiTalk LBH Headset
- 1 \* WiTalk Carrying Case (L)

## **WiTalkWT9S**

- 1 \* WiTalk HUB Base Station
- 8\* WiTalk SRH Headset
- 9\* WiTalk BP Battery
- 1 \* WiTalk CB Battery Charger
- 1 \* WiTalk LBH Headset
- 1 \* WiTalk Carrying Case (L)

## Statement

Please read this manual carefully before using the products and strictly operate & store it in accordance with the instructions. Please save the manual for your future reference. If you need further assistance than the user manual, please consult your retailer for help or email us : [info@saramonic.com](mailto:info@saramonic.com).



For better recording experience, the application SmartRecorder is recommended.

Scan the QR code and follow us!



A16 Building, Intelligent Terminal Industrial Park of Silicon Valley Power, Guanlan, Longhua District, Shenzhen, China

- [400-613-1096](tel:400-613-1096)
- [www.saramonic.com](http://www.saramonic.com)
- [info@saramonic.com](mailto:info@saramonic.com)

## Frequently Asked Questions

- **Q: How many headsets can work simultaneously with the WiTalk HUB?**

A: The WiTalk HUB can work with up to eight remote headsets simultaneously.

- **Q: Can different types of headsets be paired together?**


A: Yes, both master and remote headsets from the WiTalk series can be paired with each other or the base station.



• **Q: How far is the communication range of the WiTalk system?**

A: The WiTalk system offers a communication range of up to 400m.

# Documents / Resources

	<p><a href="#">Saramonic WiTalk HUB Wi Talk System Full Duplex Wireless Intercom Headset System [pdf]</a> User Manual</p> <p>WiTalk HUB, WiTalk LBH, WiTalk DMH, WiTalk SMH, WiTalk DRH, WiTalk SRH, WiTalk CB, WiTalk HUB Wi Talk System Full Duplex Wireless Intercom Headset System, WiTalk HUB, Wi Talk System Full Duplex Wireless Intercom Headset System, Duplex Wireless Intercom Headset System, Wireless Intercom Headset System, Intercom Headset System, Headset System</p>
---	---

## References

- [User Manual](#)

■ Saramonic

◆ Duplex Wireless Intercom Headset System, Headset System, Intercom Headset System, Saramonic, Wi Talk System Full Duplex Wireless Intercom Headset System, Wireless Intercom Headset System, WiTalk CB, WiTalk DMH, WiTalk DRH, WiTalk HUB, WiTalk HUB Wi Talk System Full Duplex Wireless Intercom Headset System, WiTalk LBH, WiTalk SMH, WiTalk SRH

---

## Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

**Post Comment**

**Search:**

e.g. whirlpool wrf535swhz

**Search**

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.