

# **Satel®**

## **INT-KLCD-W**

### **Keypad for**

### **Alarm**

### **Control Panel**



## **satel INT-KLCD-W Keypad for Alarm Control Panel User Manual**

[Home](#) » [Satel](#) » **satel INT-KLCD-W Keypad for Alarm Control Panel User Manual** 

### **Contents**

- [1 satel INT-KLCD-W Keypad for Alarm Control Panel](#)
- [2 Product Usage Instructions](#)
- [3 Frequently Asked Questions](#)
- [4 SAFETY](#)
- [5 Product Overview](#)
- [6 Main features](#)
- [7 Specifications](#)
- [8 Mounting side view](#)
- [9 PACKAGE](#)
- [10 Documents / Resources](#)
  - [10.1 References](#)

# **Satel®**

**satel INT-KLCD-W Keypad for Alarm Control Panel**



## Product Information

### Specifications:

- **Manufacturer / Brand:** SATEL
- **Model:** INT-KLCD-W
- **Main Features:** LCD display for text messages, daily operations, programming for INTEGRA / CA-64 series alarm control system
- **Power Supply:** 12 V DC
- **Current Consumption:** max. 101 mA
- **Weight:** 0.23 kg
- **Dimensions:** 140 x 126 x 26 mm
- **Guarantee:** 2 years

## Product Usage Instructions

### Installation

Ensure the keypad is securely mounted in a convenient location within reach. Connect the keypad to the alarm control panel following the provided instructions.

### Powering On

Connect the keypad to the 12 V DC power supply. The LCD display should light up, indicating the keypad is powered on.

### Daily Operations

Use the keypad to arm/disarm the alarm system, view text messages on the LCD display, and navigate through

menu options for system programming.

## Programming

Access the programming mode using the keypad commands specified in the user manual. Follow the on-screen instructions to customize settings for your alarm control system.

## Frequently Asked Questions

- **Q: Can the INT-KLCD-W keypad be used with other alarm control systems?**
  - A: The INT-KLCD-W keypad is specifically designed for use with the INTEGRA / CA-64 series alarm control system and may not be compatible with other systems.
- **Q: How do I reset the keypad to its factory settings?**
  - A: Refer to the user manual for instructions on resetting the keypad to its factory settings. Typically, this involves entering a specific code or sequence of commands.

## SAFETY

### Warning!

Please read the user manual included in this work as it contains important information related with safety of installation and use of the device. Only persons who read the user manual may use the device. The user manual must be kept because it may be required in the future. The device is to be used exclusively for purposes specified in this user manual. The device must be unpacked prior to starting-up. After removing the packaging make sure the device is in working order. If the product has defects, it should not be used until it is repaired. The product is intended for use at home and commercial use and may not be used for other than intended use. The manufacturer is not liable for damages resulting from not adhering to the rules contained in the user manual, therefore, we recommend to follow the aforementioned safety rules for operation and maintenance of the device. In this way you will ensure yourself safety and avoid causing damage to the device. The manufacturer and the supplier are not liable for losses or damages arising out of the product, including financial or intangible losses, loss of profits, income, data, pleasure from use of the product or other products related with it – indirect, incidental or consequential loss or damage. The above provisions apply whether the loss or damage concerns:

1. Deterioration of quality or the lack of operation of the products or products related with it due to damage as well as the lack of access to the product when it is undergoing repair, which results in stoppage the loss of user's time or a break in business activity;
2. Improper results of operation of the product or products related with it;
3. It applies to losses and damages according to any legal category, including negligence and other losses, termination of a contract, expressed or implied guarantee and strict liability (even if the manufacturer or the supplier was notified about the possibility of occurrence of such damages).

### Safety measures:

Particular attention at designing was directed to quality standards of the device where ensuring safety of operation is the most important factor.

The device must be secured against contact with caustic, staining and viscous fluids. The device was designed in such a way that it restarts operation when power supply is restored after a break. Attention! We recommend using protections to further protect the device from possible overvoltages in installations. Surge protectors are effective protection against accidental pass to the device voltages higher than the rated. Damages caused by pass the

voltages higher than specified in manual, are not under warranty. Turn off the device before transporting it. Prior to connecting the device to a power source check whether the supplied voltage is consistent with rated voltage specified in the user manual.

### Proper product disposal:

A marking of a crossed out waste bin indicates that the product may not be disposed together with other household waste in the entire EU. To avoid possible damage to the natural environment of health due to uncontrolled waste disposal, therefore, it should be handed over for recycling, propagating in this way sustainable use of natural resources. To return a worn-out product, use a collection and disposal system of this type of equipment or contact a seller from whom it was purchased. He will then be recycled in an environmentally friendly way.

### Product Overview



The INT- KLCD – W keypad is intended for daily operations and programming the INTEGRA / CA-64 series alarm control system. With the LCD display showing text messages, even advanced functionalities of the alarm control unit are simple and convenient.

Support: INTEGRA, CA-64

### Main features

- White button illumination
- 2 Inputs
- LEDs indicating device operation state
- Alarms: keypad hold-down PANIC, FIRE and AUX
- Buzzer for acoustic signaling of some system events
- Panel communication loss indication
- RS-232 port allows to programming using the PC with GUARDX software installed


- Microswitch as tamper contact

## Specifications

- Power supply: 12 V DC
- Current consumption: max. 101 mA
- Operation temp: -10 °C ... 55 °C
- Weight: 0.23 kg
- Dimensions: 140 x 126 x 26 mm
- Manufacturer / Brand: SATEL
- Guarantee: 2 years



**View after remove the cover**

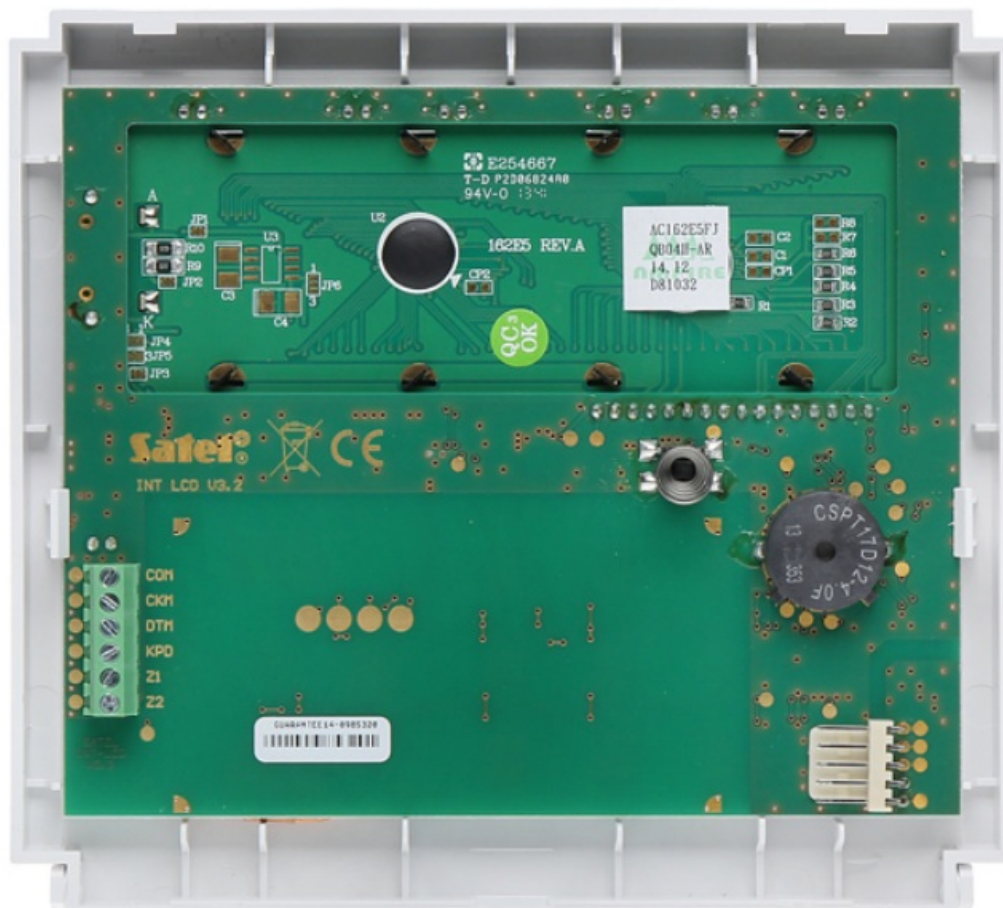

Mounting side view




**In the kit**



**PACKAGE**

- Dimensions (L x W x H): 0x0x0 mm Gross Weight: 0 kg

**Documents / Resources**

	<p><a href="#">satel INT-KLCD-W Keypad for Alarm Control Panel</a> [pdf] User Manual</p> <p>INT-KLCD-W Keypad for Alarm Control Panel, INT-KLCD-W, Keypad for Alarm Control Panel, Alarm Control Panel, Control Panel, Panel</p>
-----------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

**References**

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.