



# Satel SO-PRG MIFARE Card Programmer Installation Guide

[Home](#) » [Satel](#) » Satel SO-PRG MIFARE Card Programmer Installation Guide 

Satel SO-PRG MIFARE Card Programmer



## Contents

- [1 Important Information](#)
- [2 Connecting to the computer](#)
- [3 Customers Support](#)
- [4 Documents / Resources](#)
  - [4.1 References](#)
- [5 Related Posts](#)

## Important Information

The SO-PRG programmer is used to program the MIFARE® cards (CR SOFT program required). It can also be used to read the numbers of programmed cards and write them to another program (the HID keyboard mode).

## Connecting to the computer

Connect the programmer USB port with the computer USB port. Use a USB cable suitable for data transfer. The Windows operating system will automatically detect the device and install appropriate drivers. When the drivers are installed, a virtual serial COM port and a HID-compliant keyboard will be available on the computer.



After the programmer is connected to the computer, all the programmer LED indicators will be flashing for several seconds to indicate start-up.


The HID-compliant keyboard is not available when the programmer is connected with the CR SOFT program.

The declaration of conformity may be consulted at [www.satel.pl/ce](http://www.satel.pl/ce)

## Customers Support




Full manual is available on [www.satel.pl](http://www.satel.pl). Scan the QR code to go to our website and download the manual.

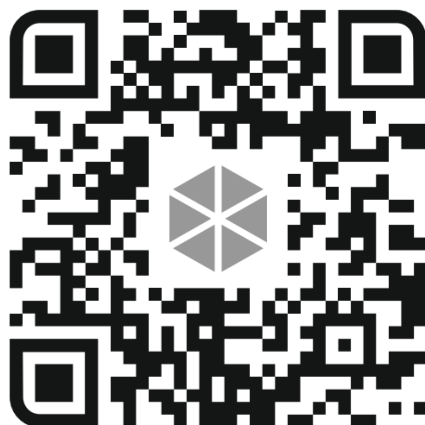

SATEL sp. z o.o. • ul. Budowlanych 66 • 80-298 Gdańsk • POLAND  
tel. +48 58 320 94 00  
[www.satel.pl](http://www.satel.pl)



	<p><a href="#">Satel SO-PRG MIFARE Card Programmer</a> [pdf] Installation Guide</p> <p>SO-PRG MIFARE Card Programmer, SO-PRG, MIFARE Card Programmer, Card Programmer, Programmer</p>
---	---

References

- [User Manual](#)