



SAVCH HR-OP-A2 Extension Operation Keypad User Manual

[Home](#) » [SAVCH](#) » SAVCH HR-OP-A2 Extension Operation Keypad User Manual 

SAVCH HR-OP-A2 Extension Operation Keypad



Contents


- [1 External dimensions and Installation dimensions](#)
- [2 Parameter function description](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)

External dimensions and Installation dimensions

otherwise the memory of extension operation panel is empty. When completed a operation of parameter uploading , the parameter which is set in the inverter will save in the memory of extension panel at all times. After parameter downloading complete. the parameter in the memory of extension operation panel still exist, so it can make repeated copy of multi-inverter.

Before parameter download to inverter, the inverter will check the integrality of parameter data in extension operation panel. If memory of extension operation panel is empty , it can not download parameter , at the same time suggested the wrong information “EErr” that memory is empty. “PCPY” the four letters glitter during parameter download or upload. If parameter load successfully then display “good”, If display ” Err” that show loading failing, please make anew uploading or downloading for parameter.

Documents / Resources

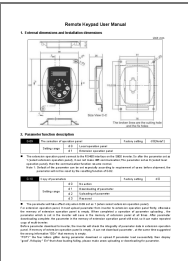

[SAVCH HR-OP-A2 Extension Operation Keypad \[pdf\] User Manual](#)
HR-OP-A2 Extension Operation Keypad, HR-OP-A2, Extension Operation Keypad, Operation Keypad, Keypad

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.