



SCAME 204-CA23B-T2T2E Columns CA 2 Sockets with Lock Instruction Manual

[Home](#) » [SCAME](#) » SCAME 204-CA23B-T2T2E Columns CA 2 Sockets with Lock Instruction Manual 

Contents


- [1 SCAME 204-CA23B-T2T2E Columns CA 2 Sockets with Lock](#)
- [2 MOUNTING](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)




SCAME 204-CA23B-T2T2E Columns CA 2 Sockets with Lock



MOUNTING

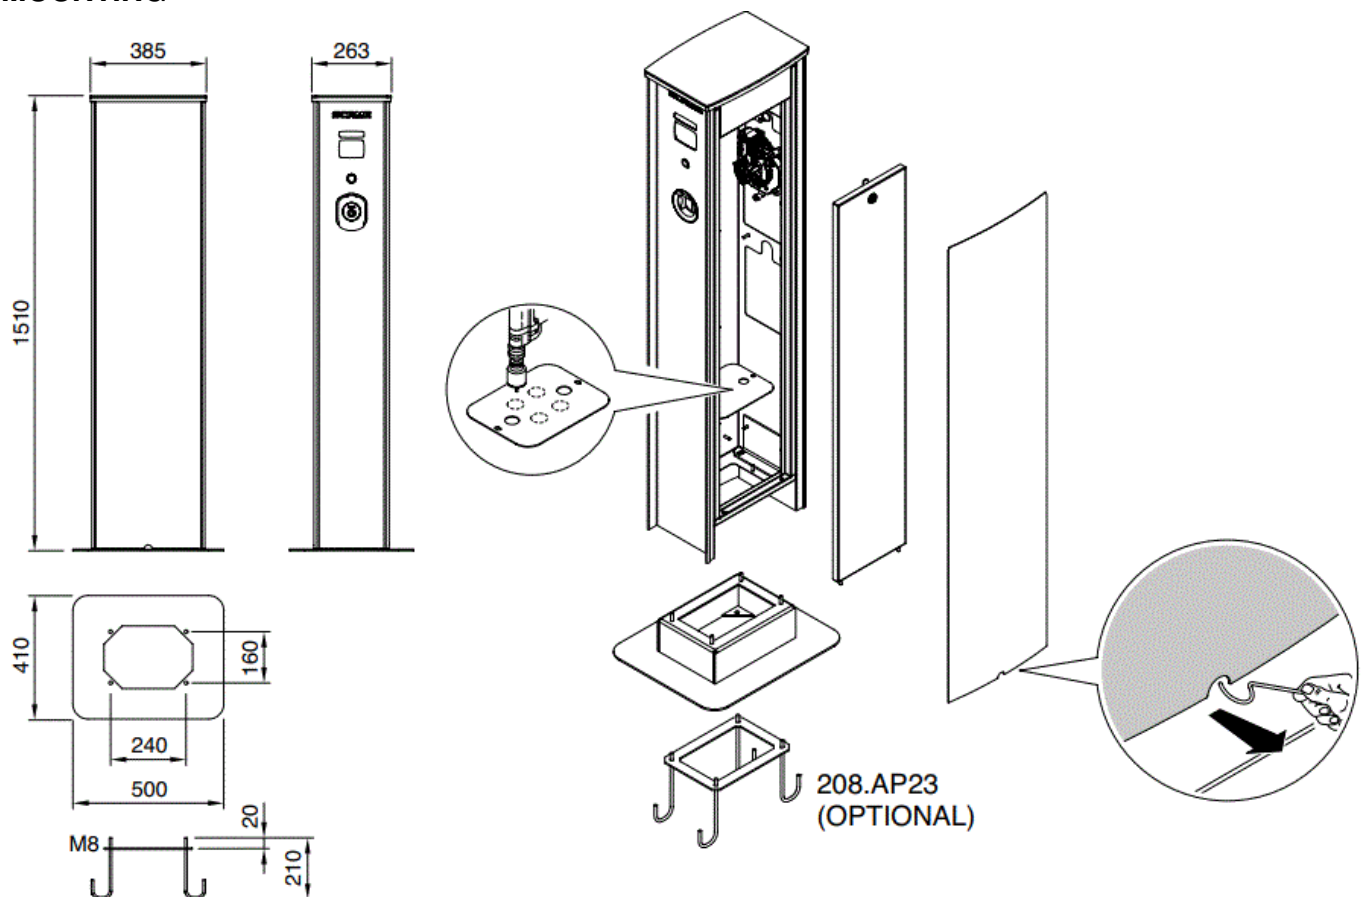


WIRING

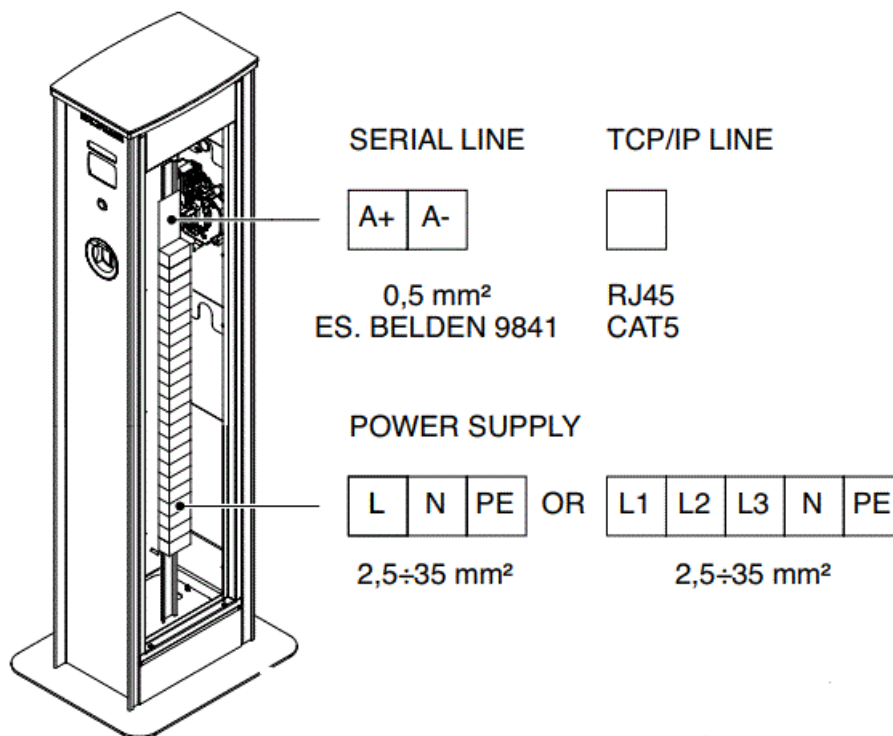


- **L-L:** 380 ÷ 400 Vac
 - **L-N:** 220 ÷ 230 Vac
- **N-PE:** < 5 Vac
 - **f:** 50/60 Hz
- **Rt:** < 150 S
 - **THD:** < 8%
- Activation
 - **General:** ON
- Deactivation
 - **General:** OFF
- dimensions in mm

WORKING

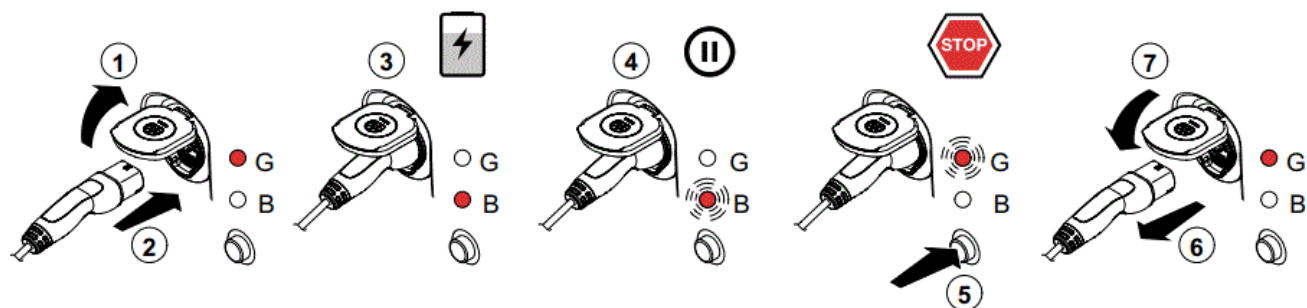

PERSONAL

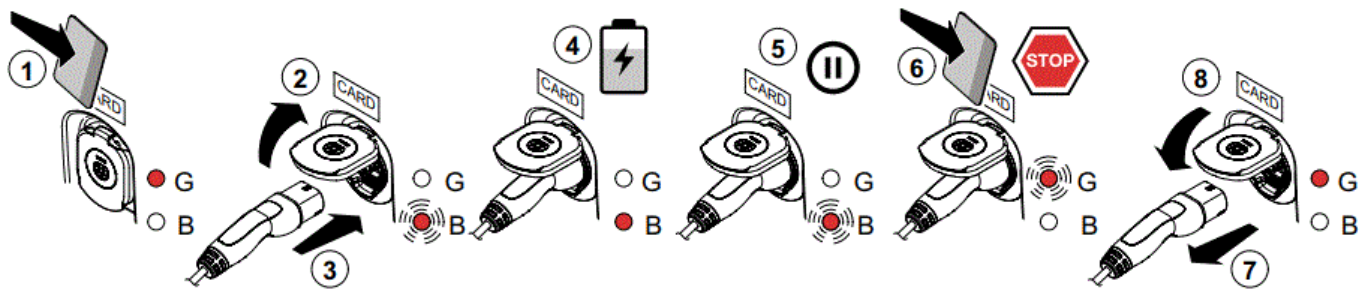


- **G:** GREEN
- **B:** BLUE
- Free Personal
- With the button pressed down, switch the master card on the reader.

NOTES

- This device shall be installed and maintained by qualified personnel
- The manufacturer can not be held responsible for any failure to comply with these instructions.
- To download the user manual of charging stations visit our website:
- <https://www.emobility-scame.com/web/ita/download>
- **WORLDWIDE**
- **ScameOnLine**
- www.scame.com
- e-mobility@scame.com



 Documents / Resources

	SCAME 204-CA23B-T2T2E Columns CA 2 Sockets with Lock [pdf] Instruction Manual 204-CA23B-T2T2E Columns CA 2 Sockets with Lock, 204-CA23B-T2T2E, Columns CA 2 Sockets with Lock, Columns CA 2 Sockets, CA 2 Sockets, Sockets
---	---

References

- [Home - Scame Global](#)
- [Download](#)