



# SCANGRIP Bluetooth Light Control App User Guide

[Home](#) » [SCANGRIP](#) » SCANGRIP Bluetooth Light Control App User Guide 

## SCANGRIP Bluetooth Light Control App User Guide



### Contents

- [1 Settings](#)
- [2 Scanning and connecting](#)
- [3 Group function](#)
  - [3.1 Units screen](#)
  - [3.2 Groups screen](#)
  - [3.3 Group control screen](#)
- [4 Light control functions for NOVA 10K](#)
- [5 Light control functions for NOVA SPS series](#)
  - [5.1 Light control functions for MULTIMATCH Series](#)
- [6 Light control functions for AREA 10 SPS](#)
- [7 Light control functions for SITE LIGHT Series](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)

### Settings

 
**Settings** Enable or disable notification of low battery or adjust the time in which the app scans for new lamps.

**Consent** Review and change your consent to gathering of analytical and crash data.

**Web Site** Press to access our web site.

**Privacy policy** Press to read the privacy policy.

**Help** Press to access the support page

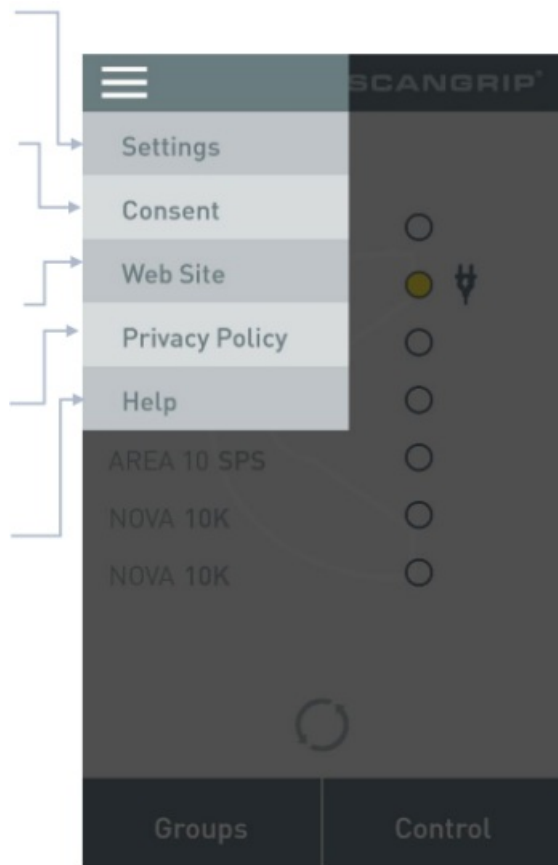

## Scanning and connecting

### Lamp status

Is shown when an active connection is made. Displays power status and if the lamp has PIN lock enabled.

### Select up to 4 lamps

Select a lamp by pressing their name or the yellow selection dot.

### Control > Lamp


Press "Control" and select a lamp to control one of the connected lights.

### Refresh/Scan

Press the update icon or swipe down to update the list of lamps.

### Groups

 Press "Groups" to access Groups screen. Can also be accessed by swiping to the left.

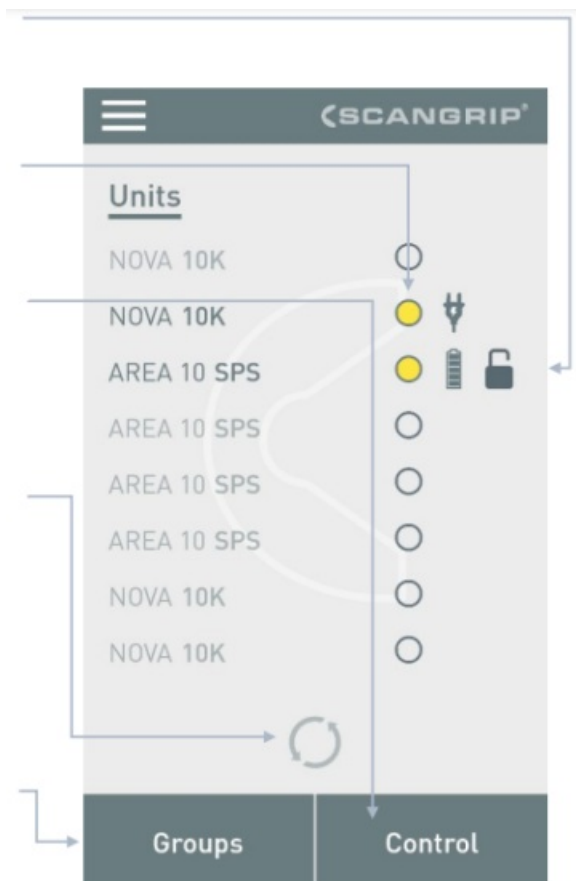

**NOTE:**

If the lamp or no lamps can be found on Android, check that location data (GPS) is enabled and the app has permission to access location.

## Group function

### Units screen

#### Select up to 4 lamps

Select a lamp by pressing name or the yellow selection dot.

 
NOVA 10K and NOVA SPS lamps can be grouped, other models can only be grouped with lamps from the same series.

#### Control -> Create group

Press "Control" and select "Create group" to create a group with the connected lights.

### Groups

Press "Groups" to access Groups screen. Can also be accessed by swiping to the left.

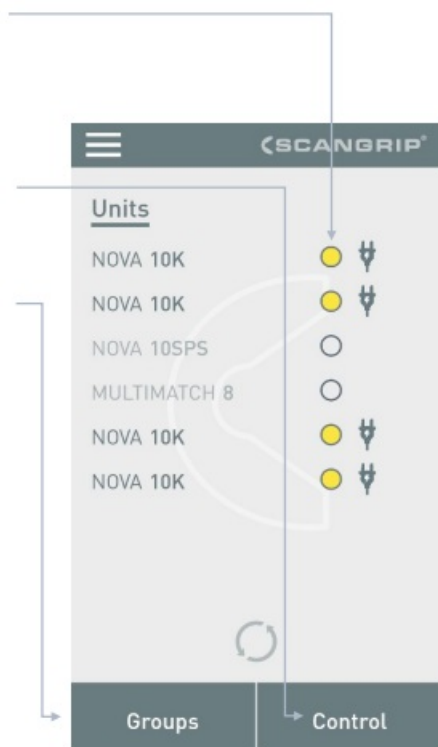

### Groups screen

#### Control

 
Press to control or delete the selected group.

#### Group selection

Select a group by pressing name or the yellow selection dot.

### Units screen

Press to access Units screen.

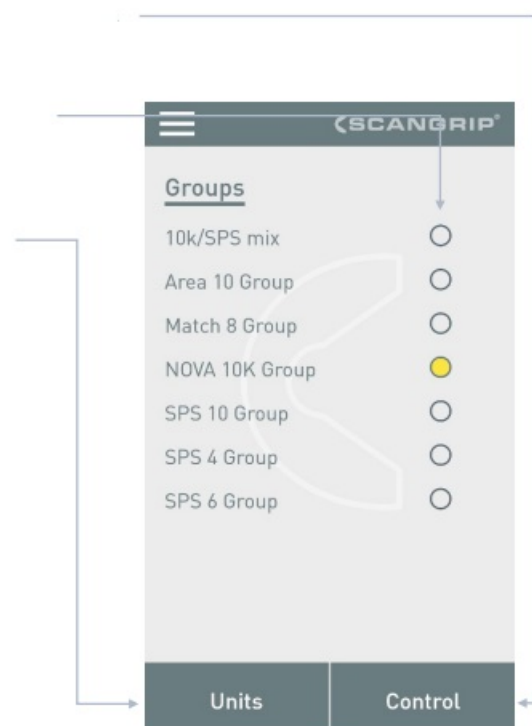

## Group control screen

### On/Off synchronization

The first press of the button turns on the lamps and synchronizes the group to the chosen setting.

### Light icon

 
Will be off until first press on On/Off, no matter if a lamp in the group is on.

### Sliders

Values will not be sent to lamps until the group is on.

### Groups

Press to access Groups screen.

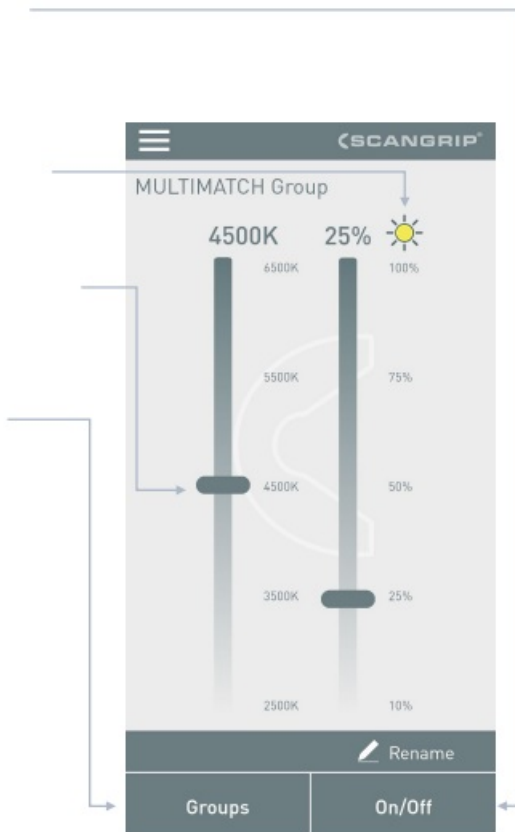

## Light control functions for NOVA 10K

### Light icon

Shows if the lamp is on and changes with the brightness.

### Current brightness

Changes to display the current brightness as shown on the slider.

### Brightness slider

 
Adjust slider or press value to the right to change the brightness.

### Rename

Press to change the name of the lamp in the app.

### Units

Press 'Units' button to return to the Units screen.

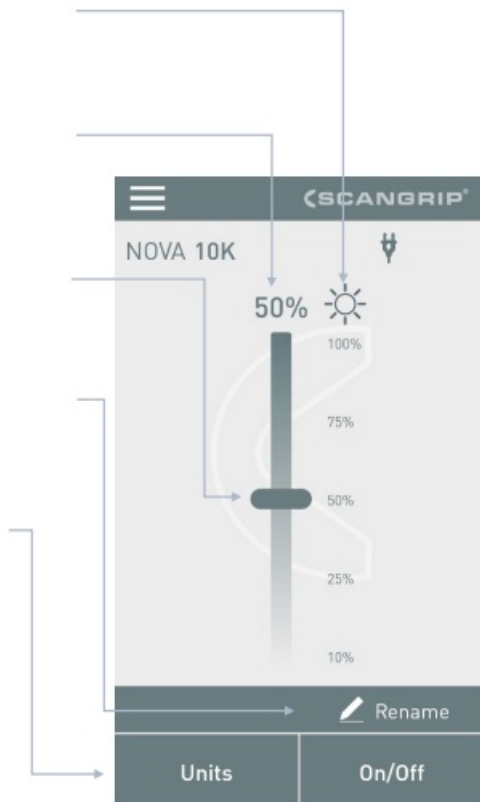

## Light control functions for NOVA SPS series

### Power status

Shows operation time left and battery level depending on whether it is connected to power supply or is in back-up mode. Time left is updated every time a command is sent.

### Light icon

Shows if the lamp is on and changes with the brightness.

### Current brightness

Changes to display the current brightness as shown on the slider.

### Brightness slider

Adjust slider or press value to the right to change the brightness.

### Rename

 
Press to change the name of the lamp in the app.

### PIN lock

Shows PIN status. Press to lock or clear PIN code on lamp.

### Units

Press 'Units' button to return to the Units screen.

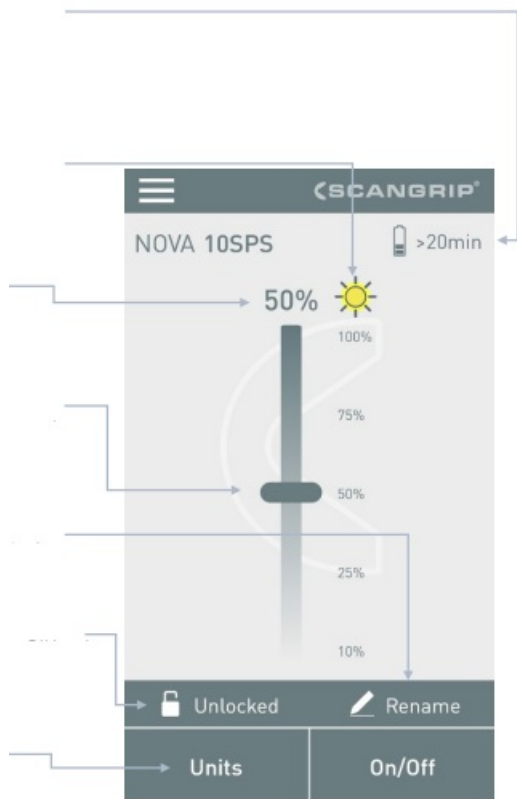

## Light control functions for MULTIMATCH Series

### Power status

Shows operation time left and battery level depending on whether it is connected to power supply or is in back-up mode. Time left is updated every time a command is sent.

### Light icon

Shows if the lamp is on and changes with the brightness.

### Current brightness

Changes to display the current brightness as shown on the slider.

### Current CCT

Changes to display the current color temperature (CCT) as shown on the slider.

### Brightness slider

Adjust slider or press value to the right to change the brightness.

### CCT slider

Adjust slider or press value to the right to change the color temperature.

### Rename

 
Press to change the name of the lamp in the app.

### PIN lock

Shows PIN status. Press to lock or clear PIN code on lamp.

### Units

Press 'Units' button to return to the Units screen

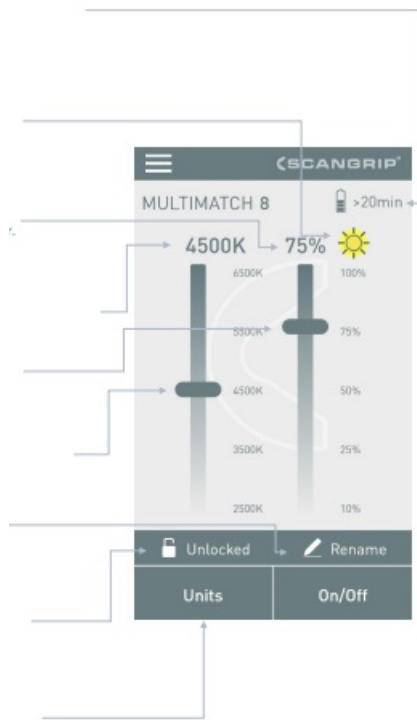

## Light control functions for AREA 10 SPS

### Power status

Shows operation time left and battery level as well as when in back-up mode and mains power. Time left is updated every time a command is sent.

### Light icon

Shows if the lamp is on and changes with the brightness.

### Current brightness

Changes to display the current brightness as shown on the slider.

### Brightness slider

Adjust slider or press value to the right to change the brightness.

### 180°/360° buttons

Press to change between complete and directional lighting.

### Rename

Press to change the name of the lamp in the app.

 
### PIN lock

Shows PIN status. Press to lock or clear PIN code on lamp.

### Units

Press 'Units' button to return to the Units screen.



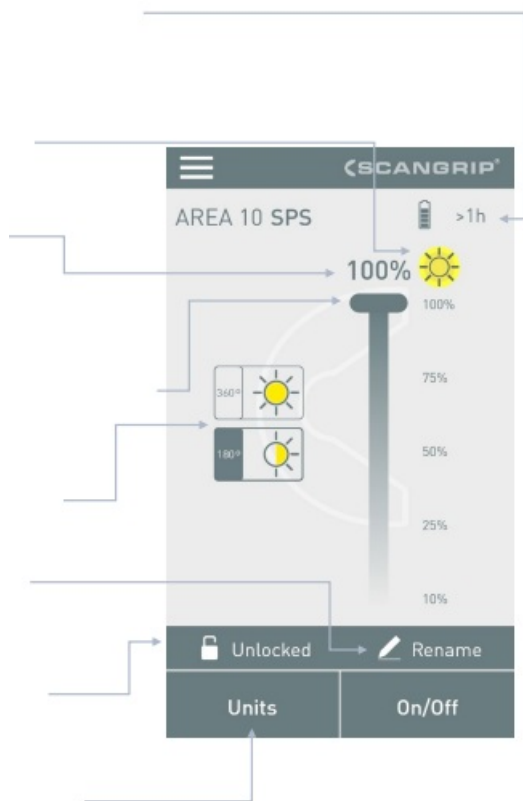

## Light control functions for SITE LIGHT Series

### Power status

Only mains powered. A loading spinner appear until the command is received.

### Light icon

Shows if the lamp is on and changes with the brightness.

### Current brightness

Changes to display the current brightness as shown on the slider.

### Brightness slider

Adjust slider or press value to the right to change the brightness.

### Rename

 
Press to change the name of the lamp in the app.

### PIN lock

Shows PIN status. Press to lock or clear PIN code on lamp.

### Units

Press "Units" button to return to the Units screen.

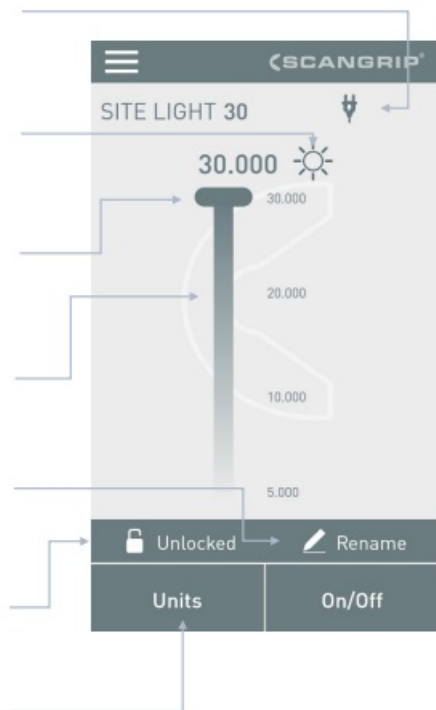

## Documents / Resources

<div><div><div><div><div><div><span></span></div><div>SCANGRIP</div></div></div><div><div><div><span></span></div><div>Quick guide for the SCANGRIP APP</div></div><div><div>Table of contents</div><div><div><div>1. Getting started</div><div>2. Installation</div><div>3. Setup</div><div>4. Usage</div><div>5. Troubleshooting</div><div>6. Light control buttons</div><div>7. Light control buttons for the SCANGRIP APP</div><div>8. Light control buttons for the SCANGRIP APP</div><div>9. Light control buttons for the SCANGRIP APP</div></div></div></div></div></div></div></div>	<p><a href="#">SCANGRIP Bluetooth Light Control App</a> [pdf] User Guide Bluetooth Light Control App</p>
---	--

Manuals+.