

Scanstrut SC-CW-06F ROKK Wireless Instructions

Home » SCANSTRUT » Scanstrut SC-CW-06F ROKK Wireless Instructions





ROKK Wireless – Nest. (SC-CW-06F)

Installation Instructions

Use of the bracket with unapproved products, or overloading, invalidates any bracket warranty.

Contents

- **1 Technical Information**
- 2 Parts list
- 3 Tools Required
- 4 Documents /

Resources

5 Related Posts

Technical Information

Charge/Storage pocket

Max phone size: 176mm (6.92") x 92mm (3.62")

(Including case)

Wireless charger SC-CW-01F

Input voltage range: Input current max: Output power:

Standby current draw:


Certifications:


10-30V DC (12/24V system) 10W (9V, 1.1A) < 0.2W Qi, CE, UKCA, FCC, ROHS, UNECE R1

Waterproof rating: IPX6 front and back

SC-CW-01E-005 Wireless Charger


Parts list

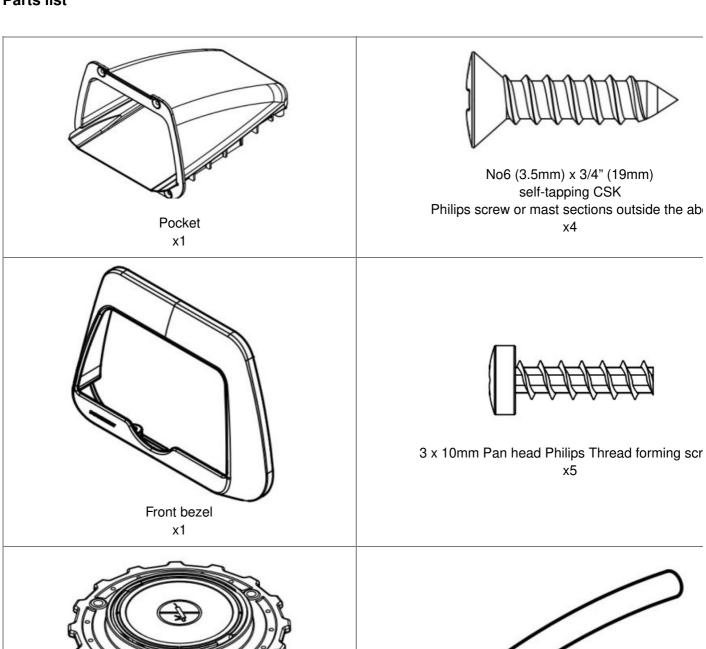

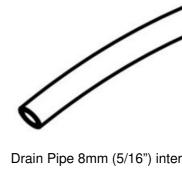


Drain Pipe 8mm (5/16") internal diameter (Optional, not included) x1

Tools Required

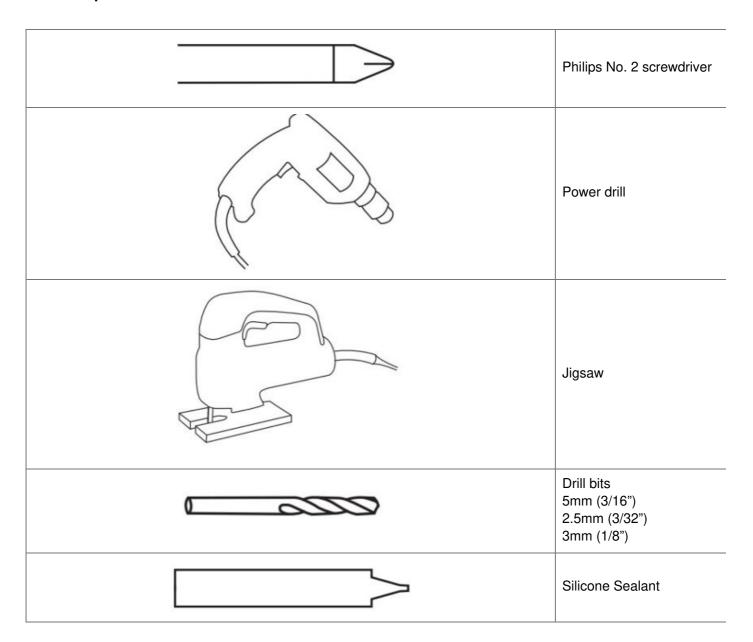





READ THE IMPORTANT SAFETY INFORMATION LEAFLET BEFORE INSTALLING

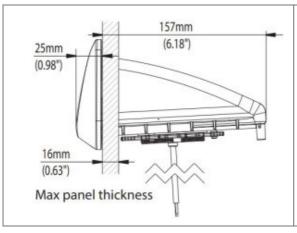


1. Choose mounting location ensuring it is adequate space behind

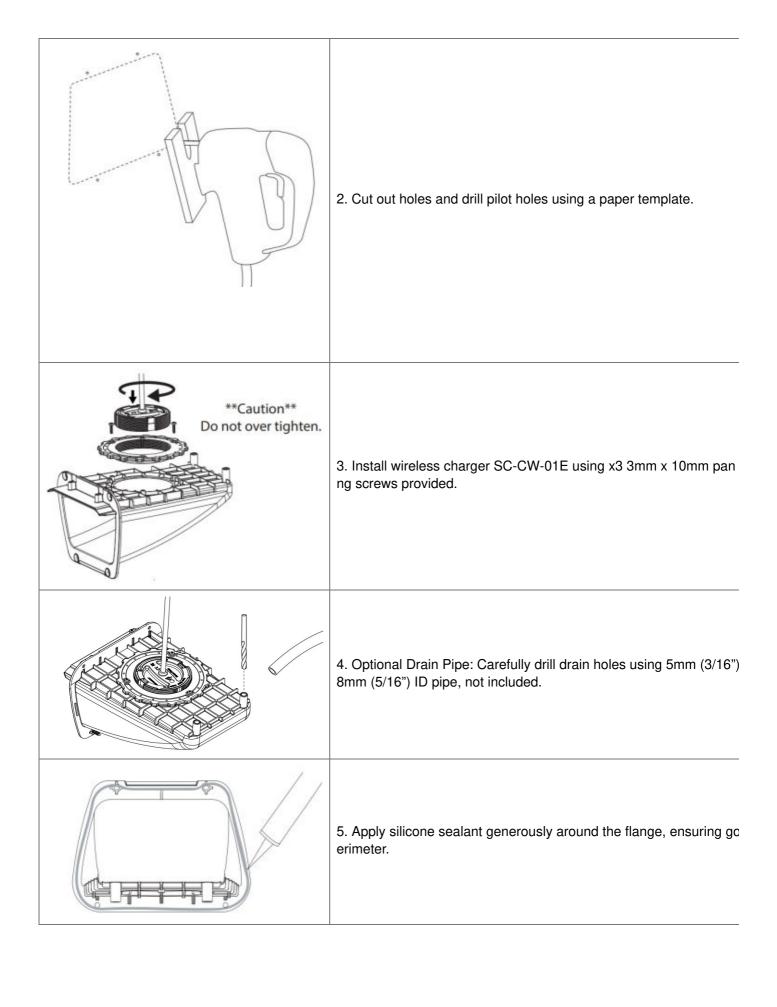

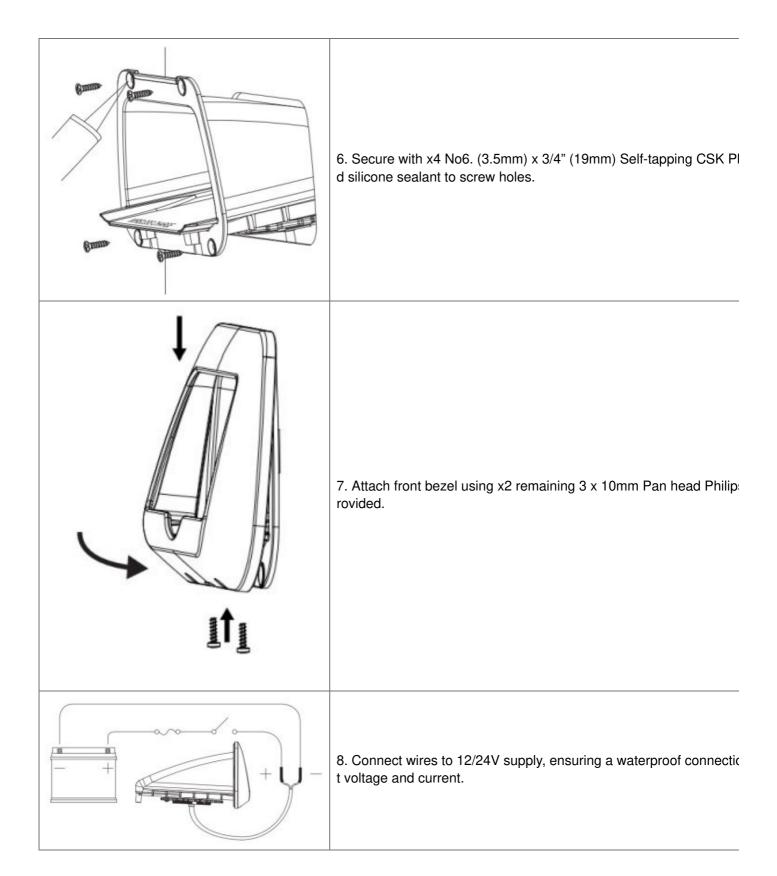

Drill x4 holes for No.6 Screws

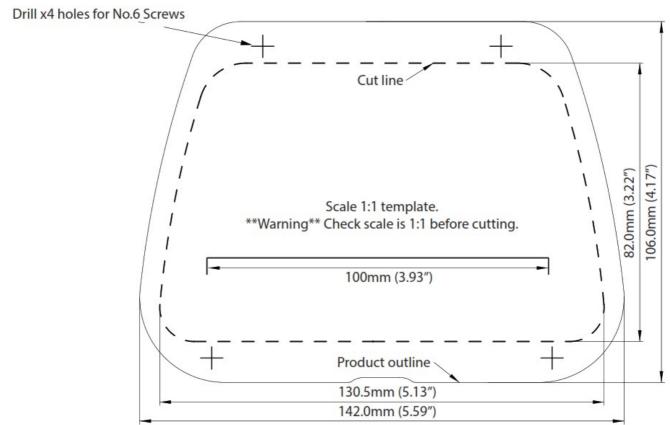

Suggested pilot holes

Material	No. 6 Screw
Soft Material e.g Plywood	2.5mm (3/32")
Hard Material e.g acrylic hardwoods	3mm(1/8")

Documents / Resources



<u>Scanstrut SC-CW-06F ROKK Wireless</u> [pdf] Instructions SC-CW-06F ROKK Wireless, ROKK Wireless

Manuals+,