



SCARLETT SC-HB42F96 Food Processor Blender Instruction Manual

[Home](#) » [SCARLETT](#) » SCARLETT SC-HB42F96 Food Processor Blender Instruction Manual 

SCARLETT®

SC-HB42F96
INSTRUCTION MANUAL



www.scarlett.ru
www.scarlett-europe.com


Contents

- [1 DESCRIPTION](#)
- [2 INSTRUCTION MANUAL IMPORTANT SAFEGUARDS](#)
- [3 PREPARATION FOR OPERATING](#)
- [4 OPERATION](#)
- [5 CLEANING AND CARE](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

DESCRIPTION

- 1. Motor unit
- 2. Bowl (600 ml)
- 3. Bowl drive shaft
- 4. Ice chopper/grinder.
- 5. Whisk stick
- 6. Variable speed control switch
- 7. Pulse button
- 8. TURBO button
- 9. Hand blender
- 10. Measuring cup (600 ml)
- 11. Accessory adapter

220-240 V ~50 Hz	Nominal Power 1000 W	1.2 / 1.33 kg	<div><div>403</div><div>52</div><div>52</div><div>mm</div></div>
------------------	----------------------	---------------	------------------------------------------------------------------

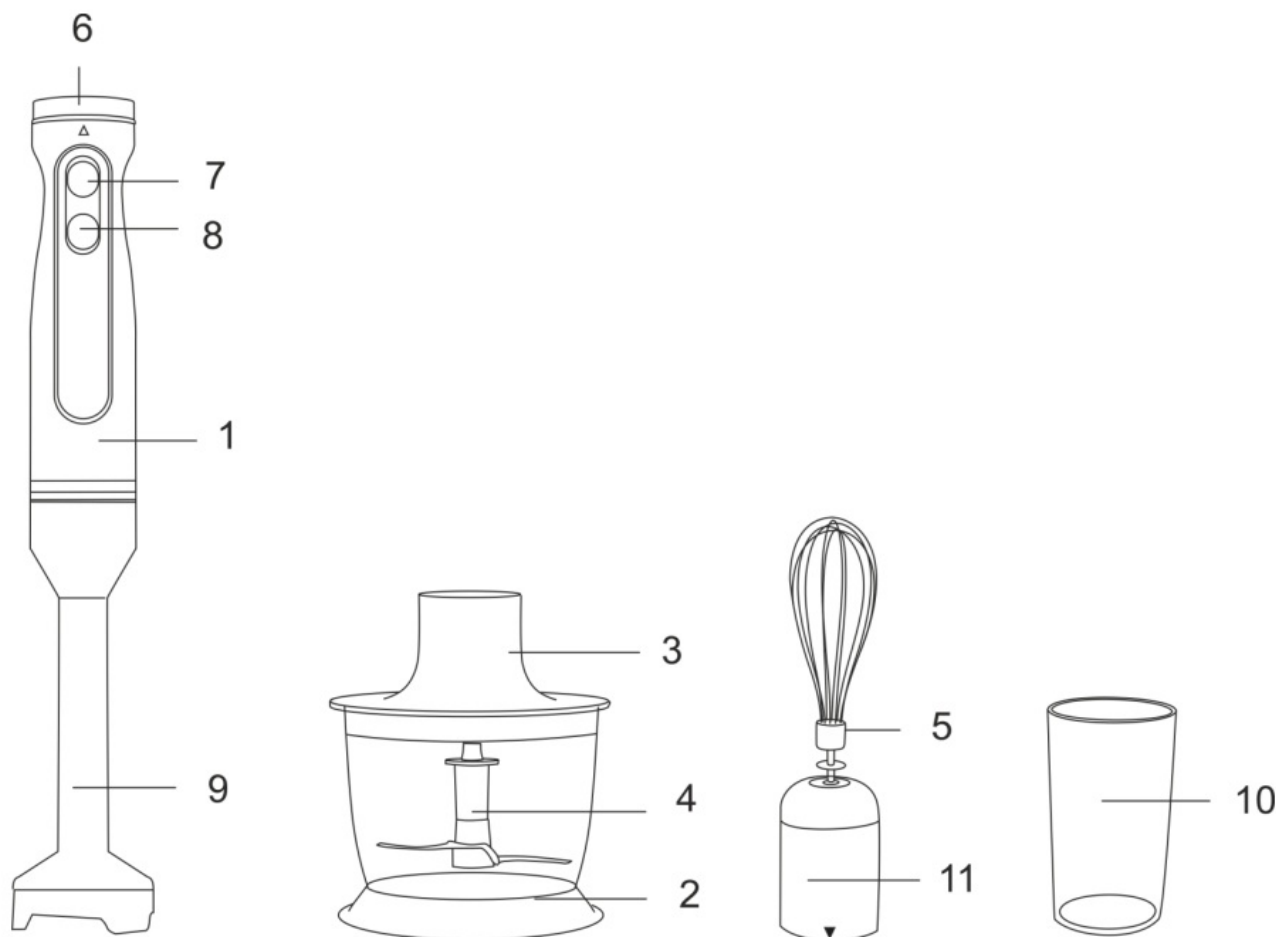

INSTRUCTION MANUAL IMPORTANT SAFEGUARDS

- Please read these operating instructions carefully before connecting your blender to the power supply, in order to avoid damage due to incorrect use.
- Before the first switching on check that the voltage indicated on the rating label corresponds to the mains voltage in your house.
- Incorrect operation and improper handling can lead to malfunction of the appliance and injuries to the user.
- The appliance is intended for use only in domestic aims. The unit is not intended for industrial and commercial use, and also for use in:
 - kitchen area for the stuff of shops, offices and the other industrial places
 - farm houses
 - hotels, motels, rest homes and other similar places by residents.
- Do not use outdoors or in damp area.
- Always unplug the appliance from the power supply before cleaning and when not in use.
- To prevent risk of electric shock and fire, do not immerse the appliance in water or any other liquids.
- The appliance is not intended for use for physically, sensory or mental disabled person (including children) or for person with lack of life experience or knowledge, if only they are under supervision or have been instructed about the use of the unit by responsible person.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.

- Children must be under control in order not to be allowed to play with the appliance.
- Do not leave the appliance switched on when not in use.
- Do not use other attachments than those supplied.
- In case of power cord is damaged, its replacement should be done by the manufacture or service department or the other high-skill person to avoid any danger.
- Keep the cord away from sharp edges and hot surfaces.
- Do not pull, twist, or wrap the power cord around the appliance.
- When you have finished, before extracting the products and tips, unplug the appliance and wait until the motor.
- **WARNING:**The blades are extremely sharp and therefore dangerous. Handle with caution! IM022
- **WARNING:** It is prohibited to overfill the unit or use it without ingredients. Do not exceed the continuous operating time.
- Never place hot ingredients into the bowl(> 70 °C).
- Do not attempt to repair, adjust or replace parts in the appliance. Repair the malfunctioning appliance in the nearest service center.
- If the product has been exposed to temperatures below 0°C for some time it should be kept at room temperature for at least 2 hours before turning it on.
- The manufacturer reserves the right to introduce minor changes into the product design without prior notice, unless such changes influence significantly the product safety, performance, and functions.
- Manufacturing date is indicated on the unit and/or on packing as well as in accompanying documents in the following format XX.XXXX where first two figures XX is the month of production, and following four figures XXXX is the year of production.

PREPARATION FOR OPERATING

- Prior to initial use wash all removable parts with warm water with cleansing agent and dry up carefully. Wipe the outside of the motor base with moist tissue.
- It is strongly prohibited to immerse the motor base into any liquids and/or to clean it with water.

IMMERSION BLENDER

- This unit is ideal for making cream soups, sauces and dressings, baby food, and also for blending various cocktails.
- Connect the attachment to the main unit. For secure connection turn the attachment counterclockwise.
- To prevent splashing, immerse the blender into products to be blended prior to switching it.

CHOPPING BLADE / MINI-CHOPPER

- Mini-chopper is ideal for chopping greenery and vegetables, cheese, majority of nuts, dried fruits. Hard products, such as meat, onion, carrots, need to be cut before processing. Nutshells must be removed, meat must be separated from bones and tendons.
- The chopper is not suitable for crushing ice and chopping hard products, such as coffee grains, nutmegs, cereals.
- **Caution!** The chopping blade is very sharp! Hold the blade by the top plastic area only!
- Place the blade on the central finger in the jar.

- Add ingredients into the jar.
- Cover the jar with the drive. Cover the jar with the drive. To fasten the drive, align the drive locks with the jar slots.
- Place the motor base into the jar drive until tightened.
- While chopping, hold the motor base with one hand, accessory jar – with the other hand.
- When finished, remove the motor base first.
- Then remove the jar drive.
- Remove the blade carefully.
- At this point you may remove chopped ingredients from the jar.

ACCESSORY FOR WHISKING / LIQUID PRODUCTS BLENDING

- Use the whisk for creaming, eggbeating, desserts blending. Never use this accessory for kneading.
- Insert the accessory into adapter and place them on the motor base.
- For secure connection turn the attachment counter-clockwise.
- Prior to start processing, immerse the whisk into the jar with ingredients. Start processing at low speed.

OPERATION

- Make sure you have assembled the unit completely and in a proper way.
- Plug the unit to power supply.
- Select the desired speed with the switch.
- The blender is equipped with “TURBO” mode. Press and hold TURBO button to increase the power in maximum. To return to normal speed, release the button.

PULSE MODE

- Press and hold the pulse button. The unit will operate while the button is held pressed.

FOOD	MAXIMUM QUANTITY	MAXIMUM TIME, sec
Almonds	100g	15
Boiled eggs	200q	10
Breadcrumbs	20q	15
Garlic	150q	Pulse
Gruyere	100g	15
Ham	200g	15
Hazelnuts	100g	15
Ice cream	200q	20
Light Batter	0.4 L	15
Onions	200g	Pulse
Parsley	30q	10
Pepper	0.2 L	30
Shallots	200g	Pulse
Spice	0.2 L	30
Steak	150-200q	15
Walnuts	100q	15
Ice	200g	Pulse

NOTE: continuous operation time of the processor must not exceed 1 minute, rest time between operation must be at least 4 minutes (for mini-chopper 0.5 min / 3 min).

 
- It is strongly prohibited to remove any of accessories while the unit is operating.

CLEANING AND CARE

- Switch off and unplug the appliance.
- Wash the accessories immediately and avoid soaking them in water for long periods; wash in warm sudsy water after each use. Dry all accessories with a clean soft cloth.
- Wipe the housing with a damp cloth.
- Do not use scouring pads, abrasive and harsh detergents.

STORAGE

- Be sure that the appliance is unplugged.
- Complete all requirements of Chapter CLEANING AND CARE.
- Keep the appliance in a dry clean place.



Valid utilization will help to save valuable resources and avoid negative work on the public health and environment which happens with incorrect using garbage.

UA-TR-010

[illegible]

- [Scarlett](#)
- [Scarlett](#)
- [ĐžŃ.,Đ Ń†Đ.Đ°Đ»ŃĈĐ½Ń.Đ¹ ŃĐ°Đ¹Ń, Ń.ĐμŃ...Đ¹⁄₂Đ.Đ°Đ. Scarlett - Đ±Ń.Ń.Đ³⁄₄Đ²Đ°Ń Ń.ĐμŃ...Đ¹⁄₂Đ.Đ°Đ°, Ń.ĐμŃ...Đ¹⁄₂Đ.Đ°Đ° Đ´Đ»Ń Đ°ŃfŃ...Đ¹⁄₂Đ.Đ.Đ´Đ»Ń Đ´Đ³⁄₄Đ¹⁄₄Đ°, Đ°Đ»Đ.Đ¹⁄₄Đ°Ń.Đ Ń†ĐμŃŃĐ°Đ³⁄₄Đμ Đ³⁄₄Đ±Đ³⁄₄ŃĈŃfĐ´Đ³⁄₄Đ²Đ°Đ¹⁄₂Đ.Đμ](#)
- [ĐžŃ.,Đ Ń†Đ.Đ°Đ»ŃĈĐ½Ń.Đ¹ ŃĐ°Đ¹Ń, Ń.ĐμŃ...Đ¹⁄₂Đ.Đ°Đ. Scarlett - Đ±Ń.Ń.Đ³⁄₄Đ²Đ°Ń Ń.ĐμŃ...Đ¹⁄₂Đ.Đ°Đ°, Ń.ĐμŃ...Đ¹⁄₂Đ.Đ°Đ° Đ´Đ»Ń Đ°ŃfŃ...Đ¹⁄₂Đ.Đ.Đ´Đ»Ń Đ´Đ³⁄₄Đ¹⁄₄Đ°, Đ°Đ»Đ.Đ¹⁄₄Đ°Ń.Đ Ń†ĐμŃŃĐ°Đ³⁄₄Đμ Đ³⁄₄Đ±Đ³⁄₄ŃĈŃfĐ´Đ³⁄₄Đ²Đ°Đ¹⁄₂Đ.Đμ](#)
- [Dictionary](#)