


Schneider Electric XB4BA31 Harmony Non Illuminated Push Button

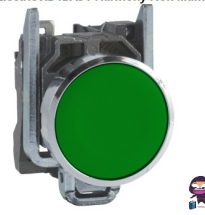

Schneider Electric XB4BA31 Harmony Non Illuminated Push Button Instruction Manual

[Home](#) » [Schneider Electric](#) » Schneider Electric XB4BA31 Harmony Non Illuminated Push Button Instruction Manual 

Contents

- [1 Schneider Electric XB4BA31 Harmony Non Illuminated Push Button](#)
- [2 Product End of Life Instructions](#)
- [3 Potential disassembly risks](#)
- [4 End of Life Instructions](#)
- [5 Additional information](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)



Schneider Electric XB4BA31 Harmony Non Illuminated Push Button



Product Specifications

- **Manufacturer:** Schneider Electric Industries SAS
- **Brand Name:** Harmony XB4 Non Illuminated Push Button **Product Function:** Used to turn on and off control circuits in industrial applications
- **Product Reference:** XB4BA31
- **Total Product Mass:** 75 g
- **Product Dimensions:** H 46.5mm x L 52mm x D 30mm
- **Date of Information Release:** 10/2023

Product Usage Instructions

Installation

1. Ensure power source is turned off before installation.
2. Mount the push button securely using appropriate screws in a suitable location.
3. Connect the control circuit wires to the terminals as per the wiring diagram.

Frequently Asked Questions (FAQ)

Q: Is this push button suitable for outdoor use?

A: No, this push button is designed for indoor use in industrial settings.

ENVEOLI2308035_V1 – End of Life Instructions – Harmony XB4 Non Illuminated Push Button

Product End of Life Instructions

Harmony XB4 Non Illuminated Push Button




Potential disassembly risks

CAUTION

HAZARD OF PARTS WITH SHARP EDGES Apply appropriate personal protective equipment (PPE) during disassembly. Failure to follow these instructions can result in injury.

End of Life Instructions

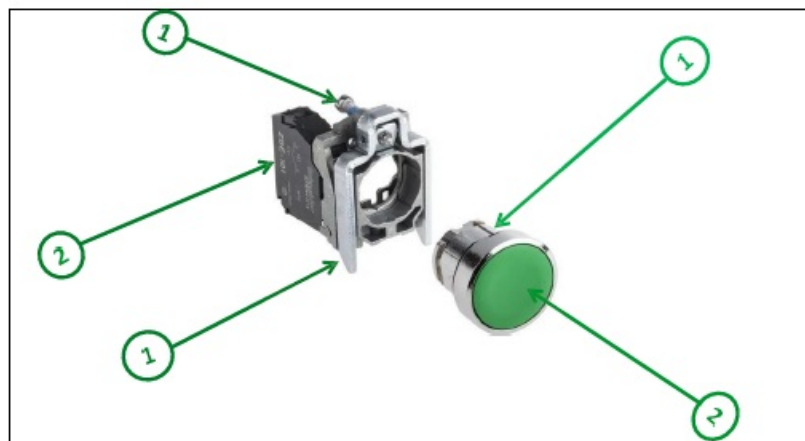

Recommendation	Number on drawing	Component / Material	Weight (in g)	Comment
To be dismantled	1	Screw, Spring, Bezel, Bracket	64.42	Metal Parts
To be dismantled	2	Head Cap, Contact Cover, Housing	10.03	Plastic Parts
Other		Liquid and Pasty Substances	0.5	Ink, Glue, Solvent

	Product description
Manufacturer identification	Schneider Electric Industries SAS
Brand name	Schneider Electric
Product function	Push button switch is usually used to turn on and off the control circuit and it is a kind of control switch appliance that is widely used in industrial applications.
Product reference	XB4BA31
Total representative product mass	75 g
Representative product dimensions	H 46.5mm x L 52mm x D 30mm
Accessories	No accessories needed
Date of information release	10/2023

Additional information

Legal information	This product family is in the scope of European Union directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE). The product family must be disposed according to the legislation of the country. This document is intended for use by end of life recyclers or treatment facilities. It provides the basic information to assure an appropriate end of life treatment for the components and materials of the product.	
In case of special transportation: transportation method	No specific means of transportation are required.	
Recyclability potential	84%	Recyclability rate has been calculated based on REEECY'LAB tool developed by Ecosystem, for components/materials not covered by the tool, data from the "ECO'DEEE recyclability and recoverability calculation method" was taken. If no data was found a conservative assumption was used (0% recyclability).


Schneider Electric Industries SAS

Country Customer Care Center <http://www.schneider-electric.com/contact>
35, rue Joseph Monier

CS 30323

- F- 92500 Rueil Malmaison Cedex
- RCS Nanterre 954 503 439
- Capital social 928 298 512 € www.se.com
- ENVEOLI2308035_V1

Documents / Resources

 The image shows a document titled "Product End of Life Instructions" for the "Harmony XB4BA31 Non Illuminated Push Button". It features a photograph of the push button, which has a green circular face and a silver-colored metal body. A green arrow points to the right, indicating a link to the full instruction manual. The Schneider Electric logo is visible at the bottom right of the document.	<p>Schneider Electric XB4BA31 Harmony Non Illuminated Push Button [pdf] Instruction Manual</p> <p>XB4BA31, XB4BA31 Harmony Non Illuminated Push Button, XB4BA31, Harmony Non Illuminated Push Button, Non Illuminated Push Button, Illuminated Push Button, Push Button</p>
--	---

References

- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.