



## SCHWAIGER 661569 Intermediate Socket Outlet with Timer User Guide

[Home](#) » [Schwaiger](#) » SCHWAIGER 661569 Intermediate Socket Outlet with Timer User Guide 

### Contents

- [1 SCHWAIGER 661569 Intermediate Socket Outlet with Timer](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Intended use](#)
- [5 General safety and maintenance instructions](#)
- [6 OPERATION IN DETAIL](#)
- [7 Technical data](#)
- [8 Maintenance & cleaning](#)
- [9 Documents / Resources](#)
  - [9.1 References](#)
- [10 Related Posts](#)

**SCHWAIGER**®

**SCHWAIGER 661569 Intermediate Socket Outlet with Timer**



## Product Information

### Product Details

- ON/OFF/+ Knopf (Button)
- Knopf (Button)
- Zeitskala (Time Scale)
- 1x Schutzkontakt-Steckdose (1x Schuko Socket)

### General Safety and Maintenance Instructions

- **WARNING!** – Children must not play with the product.
- **WARNING!** – Cleaning and user maintenance must not be carried out by children without supervision.
- **NOTE!** – Use only suitable original spare parts.

### Technical Data

- Item number: 661569
- Model description: SDZ12
- Power supply: 1x Schuck plug (type F)
- Output current: 15.0 A
- Output power: 3500 W (max.)
- Protection class: IP20
- Timer setting: 10 minutes / 20 minutes / 30 minutes / 40 minutes / 50 minutes / 1 hour / 2 hours / 4 hours / 6 hours / 8 hours / 10 hours / 12 hours
- Dimensions: 52 x 58 x 82 mm
- Weight: Not specified
- Colour: Not specified

### Maintenance & Cleaning

- **NOTE:** Clean the product with a soft, dry cloth.

### Manufacturer Information

No manufacturer information provided in the user manual.

### Product Usage Instructions

1. Remove the product from the packaging.
2. Check if the delivery is complete.
3. Check whether the product or the individual parts show any damage. If damaged, do not use the product.  
Contact the hotline or email address specified in the instruction manual.
4. Connect the product to a power source. It will enter continuous operation and will not turn off automatically.
5. To set the operating time, select the desired time duration from the available options on the time scale.
6. To deactivate the timer, follow the instructions provided in the manual.

7. If you want to switch off the product manually before the set time has elapsed, press and hold the ON/OFF/+ button (1) for approximately 2 seconds. The LEDs will no longer light up, and you will hear a short click. The product will be completely switched off.

Congratulations and thank you for purchasing this Schwaiger product. This user guide is designed to help you use and operate the device. Read through the instructions for use carefully. Store this guide safely throughout the product's entire service life and pass it on to any subsequent users or owners. Check that the supplied package is complete and ensure that none of the parts are defective or damaged.


## Intended use

The product is exclusively designed as an intermediate socket outlet with a timer for supplying power to suitable electrical appliances in dry indoor areas. The product has a Schuko socket with a maximum output power of 3,500 W as well as an adjustable automatic switch-off function for terminating the power supply to connected appliances.

The product is intended for private use only and is not suitable for commercial use.

Only use the product as described in this user manual. Any other use is considered improper and may result in property damage.

## Product details

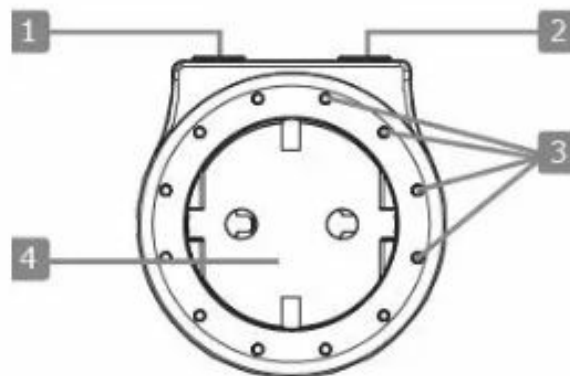

1	ON/OFF/+ button
2	– button
3	Time scale
4	1x Schuko socket

## General safety and maintenance instructions

### WARNING: Risk of electric shock

Faulty electrical installation or excessive mains voltage can lead to electric shock.

- Do not operate the product if it shows visible damage.
- Always check the product for damage before use. Damaged electrical equipment as well as kinked power cords or bare wires increase the risk of electric shock.
- Do not open the housing but entrust the repair to specialists. Contact a specialist workshop for this purpose.

Liability and warranty claims are excluded in the event of repairs carried out independently, improper connection or incorrect operation.

- The mains plug of the device must fit into the socket. The power plug is not allowed to be modified in any way. Do not use adapter plugs together with protective grounded electrical equipment. Unmodified power plugs and matching outlets reduce the risk of electric shock.
- The mains plug of the device must fit into the socket. The power plug is not allowed to be modified in any way. Do not use adapter plugs together with protective grounded electrical equipment. Unmodified power plugs and matching outlets reduce the risk of electric shock.
- Never immerse the product in water.
- Never touch the product with wet hands.
- Keep the product away from open flames and hot surfaces.
- Never operate the product in wet areas or in the rain.
- Do not expose the product to rain or extreme weather conditions e.g., sub-zero temperatures, hail, extreme heat.
- Never place the product in such a way that it can fall into water.
- Never reach for an electrical device if it has fallen into water.
- Make sure that no liquid gets into the product and, if necessary, dry the product thoroughly before using it again.
- Ensure that children do not insert any objects into the product.
- Devices that have another connection in addition to the power connection (e.g., antenna line, telephone line, etc.) must have their own overvoltage protection for this input. Plugged-in power supply units must not exceed a temperature of 50°C.
- The prerequisite for proper functioning of the product is a functioning protective conductor connection of the wall socket (protective contact socket) at which the product is operated.
- Despite the high energy dissipation capacity, there is no absolute safety of the connected devices in case of direct lightning strike.
- Never plug in several power outlets in series.
- The product is only deenergized when the mains plug is pulled out.
- Avoid physical contact with earthed surfaces such as pipes, heaters, cookers, and refrigerators. There is an increased risk of electric shock if your body is earthed.
- When you are not using the product, cleaning it or if a malfunction occurs, always switch off the product and disconnect the power plug.

## **WARNING**

Hazards for children and persons with reduced physical, sensory, or mental abilities (for example, partially disabled persons, elderly persons with reduced physical and mental abilities) or lack of experience and knowledge (for example, older children).

- This product can be used by children aged from eight years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved. Children must not play with the product. Cleaning and user maintenance must not be carried out by children without supervision.
- Keep children younger than eight years away from the.

- Do not leave the product unattended during operation.
- Do not allow children to play with the packaging film. Children can get caught in it while playing and suffocate.

### **Fire hazard!**

Improper handling of the product may cause a fire.

- Keep the product away from water, other liquids, open flames, and hot surfaces.
- Do not cover the product with objects or clothing.
- Do not place open fire sources, such as lighted candles, on or near the product.
- Keep a distance of at least 5 cm from easily flammable materials.

### **Explosion hazard!**

Do not operate the device in an explosive environment containing flammable liquids or gases. Never exceed the specified maximum input voltage.

- Avoid strong vibrations.
- Do not expose the device to extreme temperature fluctuations. Do not put it into use until it has adjusted to the ambient temperature.
- Do not operate the device in the vicinity of strong magnetic fields, such as motors, transformers or similar.
- Never plug multiple power outlets in series.
- Only use a wall socket that is easily accessible. This way, the mains plug can be pulled out quickly in emergencies.
- Never operate the socket covered.
- Do not connect devices with a total power greater than 3,500 W or a total current consumption greater than 15.0 A to the product.

### **NOTE!**

#### **Risk of damage!**

Improper handling of the product may result in damage to the product.

- Never place the product on or near hot surfaces (e.g., stove tops).
- Do not bring the product into contact with hot parts.
- Never expose the product to high temperature (heating, etc.) or weather (rain, etc.).
- Never pour liquid into the product.
- Never immerse the product in water for cleaning and do not use a steam cleaner for cleaning. The product may otherwise be damaged.
- Do not use the product if the plastic components of the product are cracked or deformed. Replace damaged components only with suitable original spare parts.

## **OPERATION IN DETAIL**

### **Check product and scope of delivery**

#### **Risk of damage!**

If you open the packaging carelessly with a sharp knife or other pointed objects, the product can be damaged quickly.

- Be very careful when opening it.
1. Remove the product from the packaging.
  2. Check if the delivery is complete.
  3. Check whether the product or the individual parts show any damage. If this is the case, do not use the product. Contact the hotline or e-mail address specified in this instruction manual.

### **Connecting the product**

- Plug the product into an easily accessible and properly installed protective contact socket.
- The LEDs on the time scale (3) will then light up briefly to indicate that the product is being supplied with power.
- Then press and hold the ON/OFF/+ button (1) for about 2 seconds until the LED on the ON/OFF/+ button (1) lights up and you hear a short click. The timer is now ready for operation.
- Now insert the plug of a suitable electrical appliance into the Schuck socket (4) of the product. The product is now in continuous operation and is not switched off automatically.

### **Setting the operating time**

- Press the ON/OFF/+ button (1) to set the timer to 10 minutes. The LED on the time scale (3) now lights up green when „10 min“ is displayed.
- To change the desired operating time, press the ON/OFF/+ button (1) once or several times. The set operating time is increased and the LED on the time scale (3) lights up green above the selected time. You can choose from a total of 12 different time settings: 10 minutes / 20 minutes / 30 minutes / 40 minutes / 50 minutes / 1 hour / 2 hours / 4 hours / 6 hours / 8 hours / 10 hours / 12 hours.
- To reduce the set operating time again, press the – button (2) once or several times.
- After the set time has elapsed, the connected unit is switched off automatically.

### **Deactivating the timer**

- To switch off the timer, press the ON/OFF/+ button (1) either once or several times until you reach the display „12 h“ or press the – button (2) once or several times until you reach the display „10 min“.
- Then press the ON/OFF/+ button (1) or the – button (2) once more to switch the product to continuous operation.
- The LEDs on the time scale (3) no longer light up and the timer is deactivated.

### **Switching off the product manually**

If you want to switch off the product yourself before the set time has elapsed, press, and hold the ON/OFF/+ button (1) for approx. 2 seconds. The LEDs will no longer light up and you will hear a short click. The product is now completely switched off.

### **Technical data**

Item number	661569	Protection class	IP20
Modell description	SDZ12	Timer setting	10 minutes / 20 minutes / 30 minutes / 40 minutes / 50 minutes / 1 hours / 2 hours / 4 hours / 6 hours / 8 hours / 10 hours / 12 hours
Connections	1x Schuko plug (type F) 1x Schuko socket (type F)	Dimensions	52 x 58 x 82 mm
Power supply	230 V , 50 Hz	Weight	84 g
Output current	15.0 A	Colour	white
Output power	3500 W (max.)		

## Maintenance & cleaning

### NOTE!

#### Risk of electric shock!

Always unplug the power cord before cleaning the product.

Also disconnect all power plugs of the connected electrical devices from the product.

#### Short circuit hazard!

Water or other liquids entering the housing can cause a short circuit.

- Never immerse the product in water or other liquids.
- Make sure that no water or other liquids get into the housing.

Do not use aggressive cleaning agents, brushes with metal or nylon bristles, or sharp or metallic cleaning objects such as knives, hard spatulas, and the like. These can damage the surfaces.

1. Disconnect the power plug before cleaning the product.
2. Clean the product with a soft, dry cloth.
3. If the product is stubbornly dirty, use a slightly damp cloth and a little mild detergent if necessary.
4. Allow all parts to dry completely afterwards.

### Storage

All parts must be completely dry before storing.

### Disposal

Do not dispose of batteries or electric and electronic devices in the normal household waste. The consumer is legally obliged to return electrical and electronic devices, and batteries that are at the end of their useful life to the point of sale or public collection points that have been set up for this purpose. Legislation in the country of use stipulate the specific requirements regarding disposal. The symbol on the product, the user guide or the packaging indicates this legal requirement.

## Disclaimer

Schwaiger GmbH does not accept any liability or warranty for damages that are sustained due to improper installation or mounting, improper use of the product or non-compliance with the safety instructions.

## Manufacturer's information

Dear Customer, Please contact our Technical Support if you need technical advice and your retailer is unable to help you. Our technical support is available in german.

Schwaiger GmbH

Würzburger Straße 17

90579 Langenzenn

Hotline: +49 (0) 9101 702-299

[www.schwaiger.de](http://www.schwaiger.de)

[info@schwaiger.de](mailto:info@schwaiger.de) 661569 Geschäftszeiten: Montag bis Freitag: 08:00 – 17:00 Uhr

Office Hours: Monday to Friday: 8:00 a.m. – 5:00 p.m.

## Documents / Resources



**[SCHWAIGER 661569 Intermediate Socket Outlet with Timer](#)** [pdf] User Guide

661569 Intermediate Socket Outlet with Timer, 661569, Intermediate Socket Outlet with Timer, Socket Outlet with Timer, Outlet with Timer

## References

-  [Schwaiger GmbH](#)