

SCHWAIGER SDLR42USB 4-Way Socket Outlet User Guide

Home » Schwaiger » SCHWAIGER SDLR42USB 4-Way Socket Outlet User Guide The Company of the Company





USER GUIDE

Congratulations and thank you for purchasing this Schwaiger product. This user guide is designed to help you use and operate the device.

Read through the instructions for use carefully. Store this manual safely throughout the product's entire service life and pass it on to any subsequent users or owners.

Check that the supplied package is complete and ensure that none of the parts is defective or damaged.

Intended use

These multiple sockets are used exclusively for the power supply of suitable electrical appliances in dry indoor areas. With this product, you can charge two devices simultaneously via USB and connect four devices via the Schuko sockets. For storage, the power cable can be coiled up on the reel to save space and protect it.

The maximum power of the Schuko sockets is 3.680 watts in total, and the maximum load capacity of the USB sockets is 2.5 A in total. The product is not intended for commercial or other use.

Contents

- 1 General safety and maintenance instructions
- 2 Product detail
- 3 Basic functions
- 4 Technical data
- 5 Cleaning and maintenance
- 6 Documents / Resources
- **7 Related Posts**

General safety and maintenance instructions



- This product is intended for private, non-commercial household use.
- This product is an electronic product that must be kept away from children.
- This product is not a toy! Therefore, keep it out of the reach of children.
- The safety light can become damaged if handled incorrectly.
- Do not drop the product or expose it to strong shocks.
- Never expose the product to high temperatures or extreme cold.
- Only connect the product if the mains voltage of the socket matches the information on the type Never exceed the permissible maximum load capacity of the multiple sockets (max. 3.680 W).
- Only plug IT devices into the USB ports.
- Stop using the multiple sockets if plastic components become cracked, broken, or warped.
- Protect the product from moisture, water, rain, snow, or drizzle, and use the product only in dry environments.
- Do not disassemble the product into its individual parts. Incorrect assembly can cause electric shocks or malfunctions.
- Do not place burning candles or other open flames on or near the product.
- Do not use the product near heat sources such as radiators or other heat-emitting devices.
- Never store the multiple sockets in such a way that they can fall into a bathtub or washbasin.
- Never disconnect the mains plug from the socket by pulling on the connecting cable, but always pull on the mains plug.
- Do not bend the connecting cable and do not lay it over sharp edges.
- When not using the product, unplug the power cord from the outlet.



WARNING

There are dangers for children and persons with reduced physical, sensory or mental abilities (e.g. partially disabled persons, elderly persons with limited physical and mental abilities) or lack of experience and knowledge (e.g. older children).



WARNING

Fire hazard!


Faulty electrical installation or excessive mains voltage can lead to electric shock.

- Never operate the multiple sockets while covered.
- Make sure that neither clothing nor other objects are on the multiple sockets.
- Place the multiple sockets in such a way that no heat can build up through adjacent objects or furniture.
- Keep the USB multiple sockets away from easily flammable materials and objects.
- Do not use multiple sockets in areas where there is a risk of explosion or fire.

CAUTION

The product is switched off only when the mains plug is disconnected!

Product detail

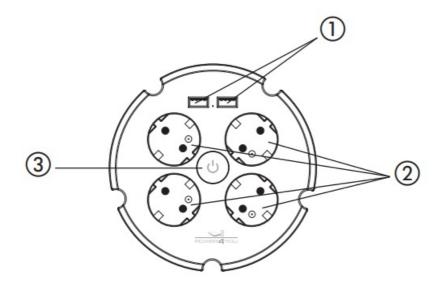

1	2x USB ports
2	4x earthed socket
3	Power On/Off Button

Contents

- · 4-way socket outlet
- user guide

Basic functions



Please check if the product is damaged before putting it into operation.

If it is damaged, do not use the product!

Process:

- Unroll the power cable to the desired length. Make sure that the device is switched off and that the connecting cable cannot become a tripping hazard.
- Plug the Schuko plug into the socket.
- You can now connect up to four electrical devices to the Schuko sockets and up to two compatible devices with a USB plugged into the USB ports of your multiple sockets.
- Press the On/Off button to turn on the multiple sockets. The button clicks audibly. Your connected devices will now be powered.
- Press the On/Off button again to turn off the multiple sockets. The button returns to its original position.

Technical data

Model description	SDLR42USB
Connections	2x USB 2.0 A port 4x Schuko socket (Typ F) Ix Schuko plug (Typ F)
Power Supply	230 V AC, 50 Hz
Output current	16 A
Output power	max. 3.680 W
Average active efficiency	80,59%
Efficiency at low load (10 %)	73,63%
No-load power consumption	0,1 W
USB power supply	5 V DC
USB output current	2,5 A (total)
USB output power	12,5 W
Overcharge protection	yes
Short-circuit protection	yes
Cable length	1,5 m
Dimension	150 x 40 x 150 mm
Weight	465 g
Color	white

Cleaning and maintenance

 \triangle

You must disconnect the device from the main socket before cleaning.

Ensure that no liquids get into the product while you are cleaning it. It is forbidden to use solvent-based or aggressive cleaning agents, spirits,s or thinners as you may damage the product surface coating or finish. You should therefore clean the product with a lint-free, ever so slightly damp soft cloth only.

Disposal

The product is delivered in packaging made of recyclable materials to protect against damage during transport. Sort and dispose of these materials in the designated containers. Ask your local disposal company or local council about how to dispose of the product in an environmentally correct way.

Do not dispose of batteries or electric and electronic devices in the normal household waste. The consumer is legally obliged to return electrical and electronic devices and batteries that are at the end of their useful life to the point of sale or public collection points that have been set up for this purpose. Legislation in the country of use stipulates the specific requirements regarding disposal. The symbol on the product, the user guide, or the packaging indicates this legal requirement.

Disclaimer

Schwaiger GmbH does not accept any liability or warranty for damages that are sustained due to improper installation or mounting, improper use of the product, or non-compliance with the safety instructions.

Manufacturer's information

Dear Customer, Please contact our Technical Support if you need technical advice and your retailer is unable to help you. Our technical support is available in English or German.

Information on warranty

The warranty period starts when the device is purchased. The purchase receipt serves as proof of this date. Keep these documents in a safe place. Our warranty is based on our warranty conditions valid at the time of purchase.



Schwaiger GmbH

Hotline: +49 (0) 9101 702-299 | www.schwaiger.de | info@schwaiger.de

Documents / Resources



<u>SCHWAIGER SDLR42USB 4-Way Socket Outlet</u> [pdf] User Guide SDLR42USB, 4-Way Socket Outlet

Manuals+,