



Schwaiger TILA0101 RGB Table Lamp With Touch Control Instruction Manual

[Home](#) » [Schwaiger](#) » Schwaiger TILA0101 RGB Table Lamp With Touch Control Instruction Manual 

SCHWAIGER®

OPERATING INSTRUCTIONS AND SAFETY INSTRUCTIONS



TILA0101
TILA0102
TILA0103

Contents

1 GENERAL

2 PACKAGE CONTENTS

3 General safety and warning instructions

4 OPERATION IN DETAIL

5 TECHNICAL DATA

6 MAINTENANCE & CLEANING

7 Manufacturer's information

8 Documents / Resources

8.1 References

GENERAL

Read the user guide and keep it in a safe place

Congratulations and thank you for purchasing this Schwaiger Product. This user manual is an integral part of this product. It contains important information on commissioning and handling.

This user manual is intended to assist you in using the product. Read through the instructions for use carefully.

Store this guide safely throughout the product's entire service life and pass it on to any subsequent users or owners. Check that the supplied package is complete and ensure that none of the parts are defective or damaged.


INTENDED USE

The product is designed exclusively for atmospheric table lighting indoors or outdoors.

The product is intended for private use only and is not suitable for commercial use.

Only use the product as described in this user manual. Any other use is considered improper and may result in property damage.

PACKAGE CONTENTS

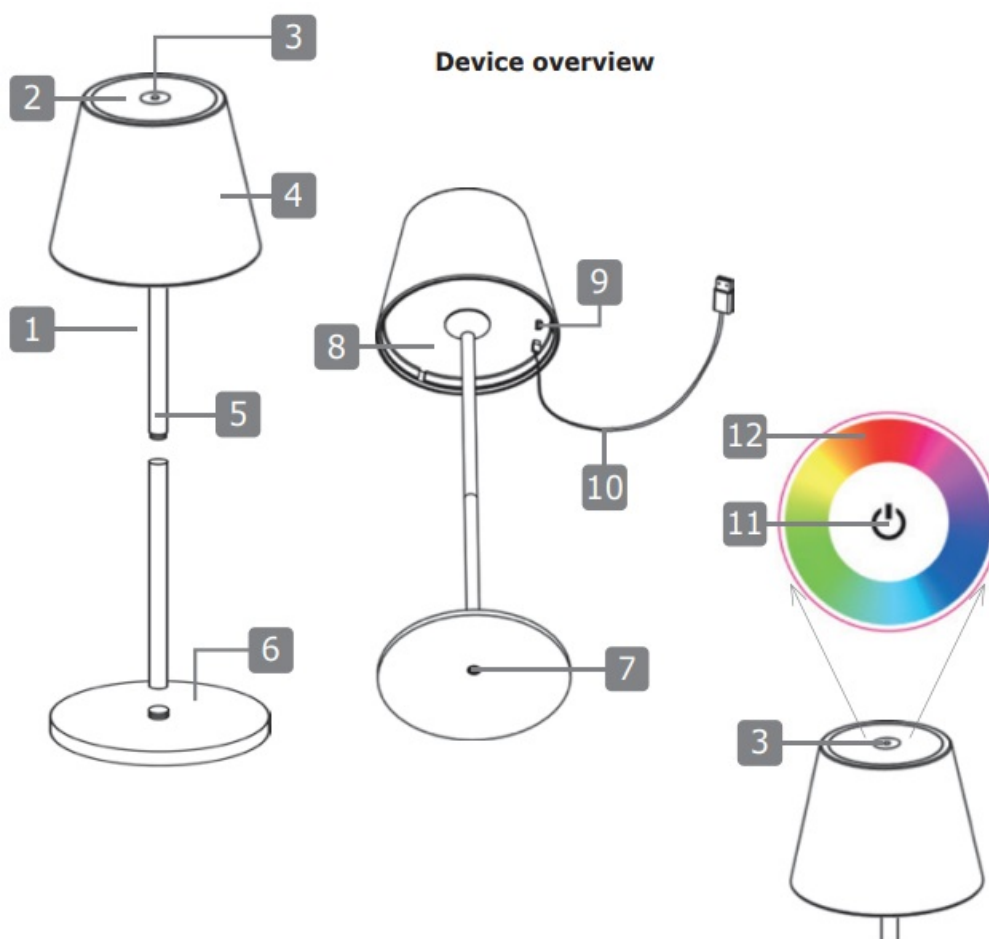

Keys & Components			
1	RGB LED Table Lamp	7	Screw Thread Stand
2	LED illuminated surface	8	LED-Spots
3	Touch Sensor	9	USB Type C charging socket
4	Lampshade	10	USB Type C charging cable
5	Screw Thread Tube	11	On/off switch
6	Stand Base	12	RGB Color Setting

General safety and warning instructions



WARNING!

Risk of electric shock!

Faulty electrical installation or excessive mains voltage can lead to electric shock.

- If you use a USB charger, only connect it if the mains voltage of the socket matches the specification on the type plate.
- To charge the installed Li-ion battery, use only power supplies that comply with the SELV standard according to IEC 61558-2-6 or IEC 61347-2-13 or ES1 / IEC 62368-1 according to IEC 62368-3.
- Do not operate the product if it has visible damage or the USB charging cable is defective.
- Do not open the housing but entrust the repair to specialists. Contact a specialist workshop for this purpose. Liability and warranty claims are excluded in the event of repairs carried out independently, improper connection or incorrect operation.
- Only parts that correspond to the original device data may be used for repairs. This product contains electrical and mechanical parts which are essential for protection against sources of danger.
- Never touch the product or the connecting cable or the mains plug with wet hands.
- Never pull the USB plug out of the charging socket by the USB charging cable, but always hold the USB plug.
- Never use the USB charging cable as a carrying handle.
- Keep the product and USB charging cable away from open flames and hot surfaces.
- Route the USB charging cable so that it does not become a tripping hazard.
- Do not bend the USB charging cable or place it over sharp edges.
- Never operate the product in wet areas or in the rain.
- Do not expose the product to rain or extreme weather conditions e.g., sub-zero temperatures, hail, extreme heat.
- Never place the product in such a way that it can fall into water.
- Charge the product indoors.
- Never reach for an electrical appliance if it has fallen into water. In such a case, immediately unplug the USB charger from the charging socket.
- Make sure that no liquid gets into the product and, if necessary, dry the product well before restarting.
- Make sure that children do not put objects in the product.
- When you are not using the product, cleaning it or if there is a malfunction, always turn off the product and unplug the USB charging cable from the charging socket.
- The light source of this luminaire is irreplaceable; when the light source has reached the end of its service life,

the entire luminaire must be replaced.



WARNING!

Hazards for children and persons with reduced physical, sensory or mental abilities (for example, partially disabled persons, elderly persons with reduced physical and mental abilities) or lack of experience and knowledge (for example, older children).

- This product can be used by children aged from eight years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved. Children must not play with the product. Cleaning and user maintenance must not be carried out by children without supervision.
- Keep children younger than eight years away from the product and the connecting cable.
- Do not leave the product unattended during operation.
- Do not allow children to play with the packaging film. Children can get caught in it while playing and suffocate.



WARNING!

Fire hazard!

Improper handling of the product and battery may cause an explosion or fire.

- The battery is permanently installed in the case; it cannot be replaced. When the battery has reached its end of life, the complete product must be disposed.
- Keep the product away from water, other liquids, open flames, and hot surfaces.
- Do not cover the product and the USB charging cable with objects or clothing.
- Do not place open sources of fire, such as lit candles, on or near the product.
- Keep a distance of at least 5 cm from highly flammable materials.
- Charge the battery of the device regularly, even if you do not use it for a longer period of time (about every 3 months). Otherwise, the battery may become deeply discharged and permanently unusable.
- Due to the battery technology used, no previous discharge of the battery is necessary during the charging process, so it can be recharged regardless of the charge status.
- Place the product on a heat-resistant surface during charging. Slight heating during charging is normal.
- Leaking or damaged batteries can cause burns if they come into contact with the skin. Therefore, use suitable protective gloves in this case.
- Liquids leaking from batteries are chemically very aggressive. Objects or surfaces that come into contact with them can be severely damaged.



CAUTION!

Risk of injury!



The light from the LED lamp is bright and can damage the eyes when viewed from an insufficient distance.

- Never look into the illuminated LED lamp from a short distance.
- Never look at the illuminated LED lamp with a magnifying glass or other optical instruments.



IMPORTANT!

Risk of damage!

Improper handling of the product may result in damage to the product.

- Place and operate the product on an easily accessible, level, dry, heat-resistant, vibration-free, and sufficiently stable base to prevent the product from falling. Do not place the product at the edge or on the edge of the base.
- Never place the product on or near hot surfaces (e.g. stovetops).
- Do not bring the product and the USB charging cable into contact with hot parts.
- Never expose the product to high temperatures (heating, etc.) or weather conditions (rain, etc.).
- Never add liquid to the product.
- Never submerge the product in water for cleaning and do not use a steam cleaner for cleaning. Otherwise, the product may be damaged.
- Do not use the product if the plastic components of the product are cracked, cracked or deformed. Replace damaged components only with suitable original spare parts.

OPERATION IN DETAIL

Assemble the product

For a secure hold, mount the RGB LED table lamp (1) before first use.

Take the two stand tubes (5) and screw them together. Take the two tubes screwed together and screw it into the screw thread (7) on the top of the stand base (6).

i The upper tube (5) and lampshade (4) are already connected to each other and do not need to be mounted.

Charging the product

It is recommended to fully charge the built-in battery of the RGB LED table lamp (1) before using the product for the first time.

i IMPORTANT!

Risk of damage!

Charging the product with an unsuitable USB charger may cause damage to the product.

- Only use USB chargers with max. 5V DC output voltage for charging.
1. Place the product on a dry, horizontal surface that is not sensitive to heat for charging.
 2. Unwrap the supplied USB Type-C charging cable (10) completely.
 3. Open the plastic cover on the bottom of the lampshade (4).
 4. Plug the USB Type-C connector into the USB Type-C charging socket (9).
 5. Plug the USB plug into a suitable USB charger or into an active USB socket (e.g. laptop, computer).

During the charging process, the LED light surface (2) on the top of the lampshade (4) lights up red.

The charging time is about 6.5 hours.

When the product is fully charged, the LED light surface (2) will turn green.

You can use the product afterwards.

Switching the product on/off

i The product has a touch sensor (3) on the top of the lampshade (4) for control. In the middle of the touch sensor is the On/Off switch(11).

The RGB color setting (12) is arranged in a ring around this switch.

- Press the On/Off switch (11) on the touch sensor (3) briefly to switch on the product. Both the LED light surface (2) on the top and the LED spots (8) on the bottom of the lampshade (4) now glow warm white.
- Short press the power button (11) on the touch sensor (3) again to turn on the RGB color change mode. Both the LED light surface (2) and the LED spots (8) now automatically light up in different colors.
- Press the On/Off button (11) on the touch sensor (3) again briefly to switch the product off again.

Setting brightness

The LED light surface (2) and the warm white LED spots (8) are dimmable. To adjust their brightness, proceed as follows:

- Turn on the product as described above.
- Press and hold the On/Off Switch (11) on the touch sensor (3) to increase the brightness. Release the On/Off Switch (11) when you have reached the desired brightness level.
- Press and hold the On/Off Switch (11) on the touch sensor (3) again to lower the brightness. Release the power button (11) when you reach the desired brightness level.

You can repeat this process as many times as you like. The functions „Increase Brightness” and „Decrease Brightness” alternate.

To switch off the product again, briefly press the On/Off switch (11) on the touch sensor (3) twice.

i The product has a total of 8 RGB LEDs and 18 warm white LEDs. Depending on whether the product glows warm white or is in RGB color mode, different LEDs light up. All LEDs never light up together.

Setting luminous color

The LED light surface (2) and the RGB LED spots (8) can light up in different colors. To switch them on, proceed as follows:

- Switch on the product as described above.
- Touch the RGB color setting (12) at the position with the desired color to set the corresponding light color. Both the LED light surface (2) and the LED spots (8) light up permanently in the set light color.
- Briefly press the On/Off switch (11) on the touch sensor (3) to switch on the RGB color changing mode. The product now lights up automatically alternating in different colors.

To switch the product off again, briefly press the On/Off switch (11) on the touch sensor (3).

TECHNICAL DATA

Color / Item number	White: TILA0101 Black: TILA0102 Anthracite: TILA0103
Connections	1x USB Type-C socket
Power supply	5 V DC, 1000 mA
Battery	Lithium-Ion battery
Battery	4000 mAh
Leds	8x RGB LED, 18x LED warm white
Power LEDs	0.18W (RGB LED) 0,20W (LED warm white)
Luminous flux	200 lm
Colour temperature	3000 K
Lifetime	Approx. 50 000 h
Dimmable	Yes (only warm white LEDs)
Charging time	approx. 6.5 h
Lighting time	approx. 15 h (RGB light) / approx. 8 h (warm white light)
Protection	IP44
Protection class	III
Product Material	plastics, metal
Dimensions (WxHxD)	120 mm x 250 (380) mm x 120 mm
Weight	854 g

MAINTENANCE & CLEANING

IMPORTANT!

Short circuit hazard!

Water or other liquids entering the housing can cause a short circuit.

- Never immerse the product in water or other liquids.
- Make sure that no water or other liquids get into the housing.

IMPORTANT!

Risk of damage!

Improper handling of the product may result in damage to the product.

- Do not use aggressive cleaning agents, brushes with metal or nylon bristles, or sharp or metallic cleaning objects such as knives, hard spatulas, and the like. These can damage the surfaces.

1. Before cleaning, turn off the product and remove the USB cable.
2. Clean the product with a soft, dry cloth.

3. If the product is stubbornly dirty, use a slightly damp cloth and a little mild detergent if necessary.
4. Allow all parts to dry completely afterwards.

Storage

All parts must be completely dry before storing.

- Always store the product in a dry place.
- Store the product out of children's reach in a securely locked place and at a storage temperature between 5 °C and 20 °C (room temperature).

Conformity

CE The CE marking is Schwaiger GmbH's declaration that the product meets the essential protection requirements stipulated in the applicable directives and regulations.

Disposal



Do not dispose of batteries or electric and electronic devices in the normal household waste. The consumer is legally obliged to return electrical and electronic devices and batteries that are at the end of their useful life to the point of sale or public collection points that have been set up for this purpose. Legislation in the country of use governs individual details regarding disposal.

The symbol on the product, the user guide or the packaging indicates this legal requirement.

Disclaimer

Schwaiger GmbH does not accept any liability or warranty for damages that are sustained due to improper installation or mounting, improper use of the product or non-compliance with the safety instructions.

Manufacturer's information

Dear Customer,

Please contact our Technical Support if you need technical advice and your retailer is unable to help you.

Warranty

The warranty period starts when the product is purchased. The purchase receipt, such as a till receipt, invoice or delivery slip, serves as proof of this date. Keep these documents in a safe place. Our warranty is based on our warranty conditions valid at the time of purchase.

Office Hours (Technical Support in German)

Monday to Thursday: 8:00 a.m. – 5:00 p.m.

Friday: 08:00 a.m. – 2:30 p.m.

Schwaiger GmbH | Würzburger Straße 17 | 90579 Langenzenn | Hotline: +49 (0) 9101 702-299
www.schwaiger.de | info@schwaiger.de | Office Hours: Monday to Friday: 8:00 a.m. – 5:00 p.m.

All technical data and illustrations are subject to errors, deviations & modifications.



<https://bit.ly/41xy2QC>

TILA0101_TILA0102_TILA0103_BDA

Documents / Resources



[Schwaiger TILA0101 RGB Table Lamp With Touch Control](#) [pdf] Instruction Manual
TILA0101 RGB Table Lamp With Touch Control, TILA0101, RGB Table Lamp With Touch
Control, Table Lamp With Touch Control, Lamp With Touch Control, Touch Control, Control

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.