



SCOTT S2 Double Sear Release



SCOTT S2 Double Sear Release Instructions

[Home](#) » [SCOTT](#) » SCOTT S2 Double Sear Release Instructions 

Contents

- [1 SCOTT S2 Double Sear Release](#)
- [2 Specifications](#)
- [3 Frequently Asked Questions](#)
- [4 INTRODUCTION](#)
- [5 LENGTH ADJUSTMENT](#)
- [6 TRIGGER ADJUSTMENT](#)
- [7 TENSION ADJUSTMENT](#)
- [8 ADJUSTING AND REPLACING TRIGGERS](#)
- [9 SOLID CONNECTOR ADJUSTMENT](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)



SCOTT S2 Double Sear Release



Specifications

- Model: S2 and S2 Solid
- Features: Double sear trigger, open hook jaw, solid flip-back connection or NCS length adjustment
- Adjustments: Travel, length, tension
- Compatibility: Designed for archers seeking precision and adaptability

Frequently Asked Questions

Q: How can I find out if my product is covered by patents?


A: Visit scottarchery.com/pages/patents for a complete list of Scott Archery patents to determine if your product is covered.

INTRODUCTION

The S2 and S2 Solid offer unmatched versatility with a solid flip-back connection or NCS length adjustment options. This wrist strap release includes a double sear trigger and an open hook jaw, ensuring a crisp, consistent shot every time. With travel, length, and tension adjustments, the S2 provides complete customization to suit your shooting style. It's designed for archers who demand precision and adaptability in every release.


LENGTH ADJUSTMENT

To adjust the length of your Scott Release with a Nylon Connector Strap (NCS), loosen both #4-40 socket head cap screws (Fig 1) which attach the lock-down clamp to the bracket sewn into the release strap using a 3/32" hex tool. Move the nylon connector strap to the desired length and retighten both screws.

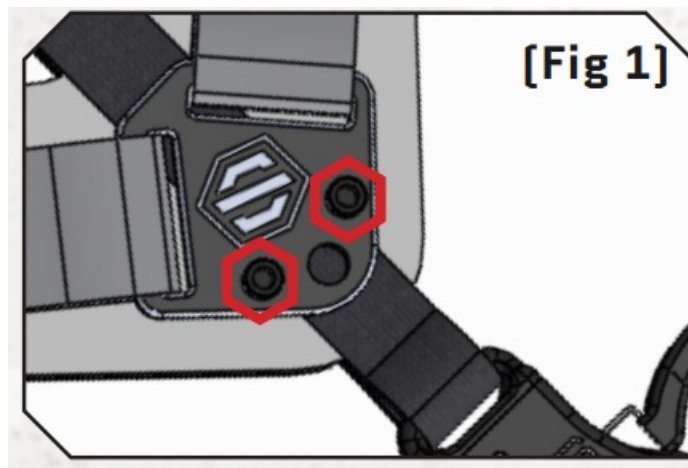


TRIGGER ADJUSTMENT

To adjust the trigger travel of the S2, turn the #4-40 set screw located below the trigger using a .050" Allen Key (Fig 2). To increase travel, turn screw counterclockwise in $\frac{1}{4}$ " turn increments. Test after each adjustment. To decrease travel, turn screw clockwise in $\frac{1}{4}$ " increments. Test after each adjustment. Note that adjusting too far in the clockwise direction will render your release in-operable. The minimum recommended travel adjustment setting can be found by pressing the cocking lever on the release and tightening the travel screw (Fig 2) until the release fires, then turn the adjustment screw out (counterclockwise a minimum of $\frac{1}{2}$ turn).

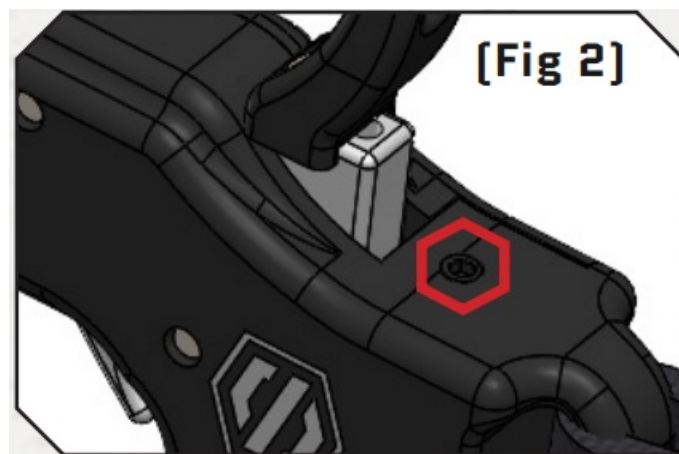


TENSION ADJUSTMENT

To adjust the trigger tension on the S2, turn the two #8-32 set screws located on the front of the release with a $\frac{5}{64}$ " Allen Key (Fig 3). To increase tension, turn the screws clockwise in $\frac{1}{4}$ " increments. Tightening too far will render your release in-operable. To decrease tension, turn the screws counterclockwise in $\frac{1}{4}$ " increments. Each screw can be turned individually to find the archers desired tension.

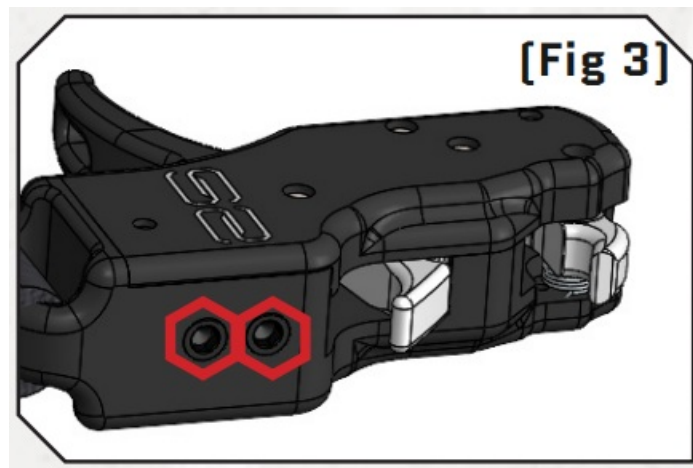

ADJUSTING AND REPLACING TRIGGERS

The S2 comes with dual trigger mounting locations as well as two trigger style options. A forward and swept back trigger allow for optimal trigger positioning to fit the archer's preference (Fig 4). To replace a trigger, remove the #2/56 button head screw with a .050" Allen Key (Fig 5). Pick the desired trigger style and mounting location (Fig 6) and re-tighten the screw.

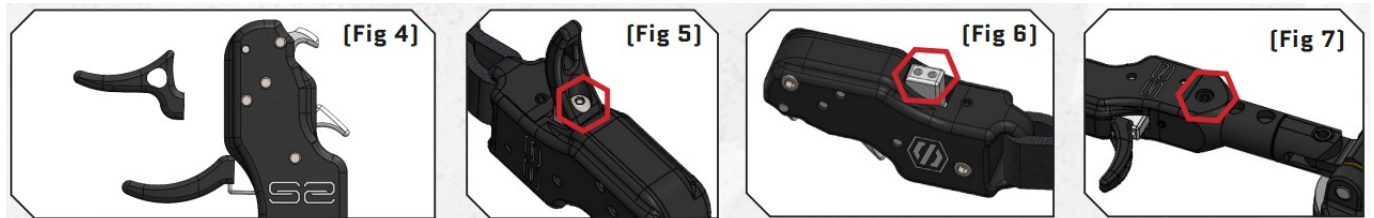

SOLID CONNECTOR ADJUSTMENT

To adjust the length of your Scott™ Release with a solid connector, first remove the #4-40 socket head cap screw from the side of the release head (Fig 7). Then set the release head to the desired length and reinsert the screw in the corresponding hole on the release head to tighten. DO NOT OVER-TIGHTEN, AS IT MAY STRIP THE THREADS IN THE RELEASE HEAD.

WARRANTY SERVICES:

IMPORTANT: In the unlikely event that you require service on your product, please contact Customer Service at 1 [877-503-5483](tel:877-503-5483). If necessary, our Customer Service Agents will provide you with a Return Merchandise Authorization (RMA) number and instructions on how to ship the product(s) back. It's important that you contact a Customer Service Agent before returning any item. Please be sure to include your RMA number when returning an item, so that we can identify the return as yours. Without the RMA, we will not be able to process your return, and your item will not be returned to you.

PATENT INFORMATION:

This product maybe covered by one or more patents. A complete list of Scott Archery patents can be found by visiting scottarchery.com/pages/patents

Documents / Resources



[SCOTT S2 Double Sear Release](#) [pdf] Instructions

S2 Double Sear Release, S2, Double Sear Release, Sear Release, Release

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.