

Contents [[hide](#)]

- [1 ScreenBeam 960 Wireless Display Receiver](#)
- [2 Specifications](#)
- [3 Package Contents](#)
- [4 Connect the Receiver to the Display](#)
- [5 Set Up Network Connection](#)
- [6 Supported Features](#)
- [7 FAQs](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)

ScreenBeam™

ScreenBeam 960 Wireless Display Receiver



Specifications

- **Product Name:** ScreenBeam 960 Wireless Display Receiver

- **System Requirements:** Windows 7 and later, macOS 10.10 and later, iOS 9 and later, or Android 4.2 or later with Miracast
- **Network Requirements:** Refer to online support for the most recent information

Package Contents

- Quick Start Guide (this document)
- ScreenBeam 960 receiver
- Power supply
- HDMI® cable
- Regulatory documents

Requirements

Minimum System Requirements

The latest Windows 7 and later, macOS 10.10 and later, iOS 9 and later, or Android 4.2 or later with Miracast; refer to online support for the latest list.

Network Requirements

Refer to the online support for the most recent information.

Note: Additional network configuration is not required for a Wi-Fi Miracast-enabled device to connect. Verify Group Policy and firewall settings to allow Wi-Fi Direct groups or hosted networks.

Setup Requirements

- ScreenBeam 960 receiver
- Display with an available HDMI® input
- An Ethernet network connection with a DHCP IP or a Wi-Fi router.

Connect the Receiver to the Display

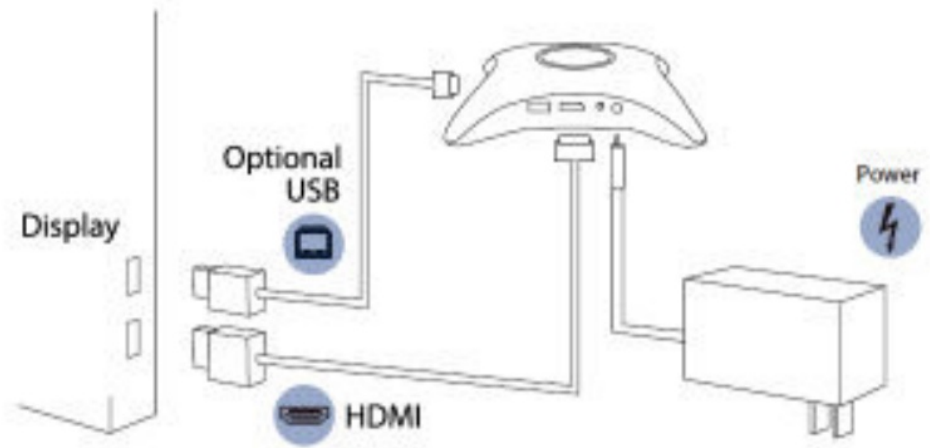


Figure 1 *Connection guide*

1. Place the receiver next to the display.
2. Connect one end of the provided HDMI® cable to the receiver's HDMI® port and the other end to an available HDMI® port on the display.
Note: For VGA connection details, refer to the ScreenBeam 960 User Guide.
3. Optional: If the display has USB HID touch capability, insert the HID USB connector into the USB port of the receiver. (USB Cable is not included)
4. Connect the receiver's power supply to the receiver's power port, then to an electrical outlet.
5. Optional: Connect one end of the Ethernet cable to the receiver's Ethernet port and connect the other end to the network switch with a DHCP IP. (Ethernet cable is not included.)
Note: Refer to section B for more information on setting up a network connection.
6. Turn on the display and switch to the corresponding input connected to the receiver.
7. Wait about 30 seconds, then verify that the Ready to Connect screen appears on the display.

Set Up Network Connection

ScreenBeam requires a network connection for various purposes: Wireless display over LAN, support, and management of the receiver. ScreenBeam can be connected to the network via a wired or Wi-Fi connection.

Wired Connection

If ScreenBeam is connected to a DHCP-enabled network, the Ready to Connect screen will show the IP address assigned to the ScreenBeam.

Wi-Fi connection or a Static IP address

This requires additional steps to configure the receiver with the proper network information. Detailed instructions are available online at <https://support.screenbeam.com>. For initial testing purposes, we recommend using an wired network connection with DHCP enabled.

Connect Client Device

This section provides instructions on how to connect using native screen mirroring from the most common operating systems. Refer to www.screenbeam.com/setup for details and instructions for all other operating systems.

Note: The web page will display the instructions based on the client device OS. Use the links at the bottom of the web page to select OS-specific instructions.

Connect using Windows 10/8.1

To connect using Windows 10, follow the instructions below. Steps for Windows 8.1 may vary.

1. Open the action center by swiping from the right side of the touchscreen or selecting the speech bubble icon in the lower right corner of the screen. (Windows key + K)
2. Select Connect and wait for available receiver(s) to appear.
3. Select the receiver name that matches the receiver name shown on the Ready to Connect screen.
4. Enter the PIN code if required. If the PIN code is not displayed, try the hidden PIN “12345670” or contact the admin for ScreenBeam.
5. Optional: Select the box Allow mouse, keyboard, touch, and pen input from this device if the display panel/ projector supports interactive touch. Refer to section F for More details on using interactive touch.
6. Optional: Select Change projection mode and choose Extend or Duplicate if desired.

Note: To disconnect or change the projection mode, return to the Connect menu.

Connect using iOS

To connect using iOS 11 or 12 on iPad or iPhone, follow the instructions below. Steps for other iOS versions may vary.

1. Verify the iOS device's Wi-Fi is on and connected to the same network to which the ScreenBeam 960 is connected.
2. Open the Control Center by either swiping up from the bottom or swiping down from the upper right corner of the iOS device's screen. Tap the Screen Mirroring icon and wait for the available receiver(s) to appear.
3. Select the receiver name that matches the receiver name shown on the Ready to Connect screen.
4. Enter the PIN code if required.

Note: To disconnect, return to the Screen Mirroring option in the Control Center and select Stop Mirroring.

Connect using macOS

To connect using macOS on a MacBook, follow the instructions below. Steps for other macOS versions may vary.

1. Verify the macOS device's Wi-Fi is on and connected to the same network to which the ScreenBeam 960 is connected.
2. On the menu bar, select the screen mirroring icon and wait for the available receiver(s) to appear.

Note: If the screen mirroring option icon is not visible, go to Apple menu > System Preferences > Displays, then select the "Show mirroring options in the menu bar when available" check box.

3. Select the receiver name that matches the receiver name shown on the Ready to Connect screen.
4. Enter the PIN code if required.
5. Select the Use as Separate Display option to extend the desktop.

Note: To disconnect, return to the screen mirroring menu and select Mirroring Off.
Congratulations!

The display is now enabled for wireless screen mirroring. The following sections cover the receiver's management and configuration. For FAQs, troubleshooting tips, and support, visit: <https://support.screenbeam.com>.

Configure ScreenBeam Receiver

ScreenBeam 960 can be configured by using the ScreenBeam CMS software or accessing the ScreenBeam's local management interface (LMI). Using ScreenBeam CMS Software, ScreenBeam Central Management System (CMS) is a highly recommended complementary tool for multi-unit deployment, configuration, and administration.

1. To obtain CMS software and the CMS User Guide, go to:

<https://support.screenbeam.com/cms>.

2. Refer to the CMS User Guide for setup instructions.

Note: Access to the LMI is prohibited by default if ScreenBeam 960 is connected to ScreenBeam CMS for management. This option can be changed in the receiver's settings.

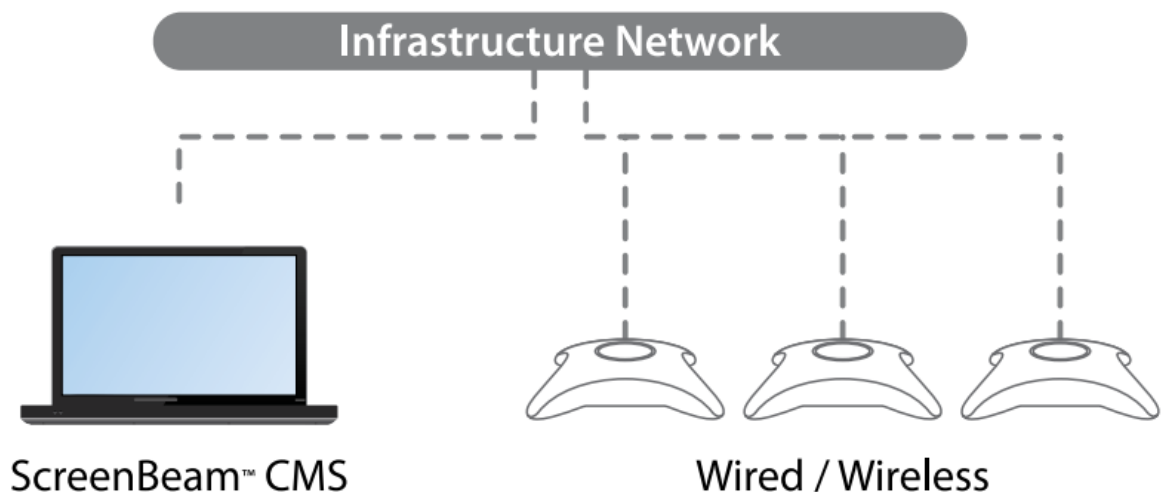


Figure 2 *Receivers managed by ScreenBeam CMS*

Using Local Management on ScreenBeam

Local management interface can configure and update a single ScreenBeam. LMI is not needed when using ScreenBeam CMS.

Accessing the ScreenBeam LMI

Two methods exist to access the LMI.

Method 1: Network Connection via DHCP

1. Using a shielded RJ-45-terminated Cat5e or better Ethernet cable, connect the

ScreenBeam Ethernet port to a DHCP-enabled network.

2. The Ready to Connect screen on the display will show the assigned IP address of the ScreenBeam. Enter this address into the web browser of a PC or Apple device on the same network as the ScreenBeam.
3. The browser may give an error stating “The connection or site is not secure or private.” Manually accept the connection as follows:
 1. Chrome browser: click Advanced, then click Proceed.
 2. Edge/IE browser: click Details, then Go on to the web page (not recommended).
 3. Firefox browser: click Advanced, then click Add Exception, then click Confirm Security Exception.
4. When the ScreenBeam management page appears, enter the Username Administrator and Password screenbeam (both are case-sensitive).
5. Click Login, and the Device Configuration page appears.

Method 2: Wireless P2P Direct Connection

1. Using a Windows 10/8.1 device, connect the device to the ScreenBeam per Section B above.
2. Once connected, use a web browser and enter <https://192.168.16.1> to access the LMI.
3. Follow the directions from Method 1 from Step 3 on.

Note: Sections E and F provide the necessary configurations and customizations for deployment.

Customize ScreenBeam Settings

Under the Device Configuration Page

Assign a new Device Name

1. From the Device Name Access option, select Enable.
2. Select the Device Name text box, then enter a new name (example: Conference TV).

Note: Each receiver should have a unique name; this makes it easier for users to identify and connect to the correct display. Supported naming characters are A-Z, a-z, 0-9, -, _

Change the Administrator's Password

1. Select the Administrator Password text box and enter the new password.
2. Select the Apply/Save button to save any changes.

Under the Features Page

Configure Force PIN Pairing Option

By default, the Force PIN Pairing option is enabled, and the PIN code is generated randomly. A unique PIN will be generated each time a new user/device attempts to connect. To change the PIN pairing type or PIN code:

1. Select either ON to force PIN or OFF to not force PIN upon connection.
2. If Force PIN Pairing is ON, select either Each connection or First connection only.
3. Select Random or Static for PIN code generation.
4. If Static, then enter PIN of choice. Keep a note of the new PIN for user distribution.

Note: Only the first seven digits of the PIN can be set in configuration; the eighth digit will be automatically chosen by the ScreenBeam and appended to the first seven.

5. Select the Apply/Save button to save any changes.

Configure HDMI® /VGA Port Power Management

By default, ScreenBeam is designed to display the Ready to Connect screen continuously. To extend display life and/or reduce power consumption:

1. Select either Screen Saver or Display Off.
2. Enter a desired time for the setting to take effect.
3. Optional: Select a wake-up mode.
4. Select the Apply/Save button to save any changes.

Using Interactive Touch Display

ScreenBeam 960 supports touch or pen over a wireless connection with Windows 10 for collaboration using the touch display.

System Requirements

OS: Windows 10 build version 1607 (or later)

CPU: 4th Gen Intel Core i-Series 4xxx or AMD equivalent (or better) **RAM:** 4 GB

Setup Requirements

1. Interactive touch display or projector
2. USB Type-A to Type-B cable

Supported Features

1. Support USB HID display, projector, or whiteboard
2. Up to 20-point touch
3. Up to four simultaneous passive pens. Works best with an InGlass™ Technology-enabled display. Refer to the online compatibility list at:
<https://support.screenbeam.com/touch/compatibility>

Setup and Instructions

1. Connect the USB Type-A end to the ScreenBeam 960 receiver's USB port
2. Connect the USB Type-B end to the USB Type-A following the instructions in section B.

Note: If the display provides more than one touch output, make sure the USB Type-B end is connected to the same touch output as the HDMI® input.

3. Connect Windows 10 device to ScreenBeam 960 (see Start using the display by touching the screen. Launch an app and draw using a finger or a pen.
4. Start using the display by touching the screen. Launch an app and draw using a finger or a pen.

Deploying ScreenBeam Receiver

Please read the deployment guide for best practices and tips before placing the ScreenBeam 960 at the site for users.

1. Unplug the power supply and HDMI® cable from the ScreenBeam 960 receiver.
2. Move the receiver to its permanent location.

Note: Access to a wired or wireless LAN connection is required.

3. Plug the HDMI® cable into the receiver and the display.
4. Plug in the receiver's power supply.
5. Switch the display to the correct input and verify that the Ready to Connect screen appears.
6. Verify that the ScreenBeam 960 obtains a valid IP address

Before Beginning Deployment

Before deploying ScreenBeam products, check for the latest firmware release documentation and tech tips.

- For the screenBeam deployment guide, firmware upgrades, and release notes, go to: <https://support.screenbeam.com/960>
- For Miracast™ or native macOS/iOS wireless display connection tutorial, go to: <https://www.screenbeam.com/setup>
- For ScreenBeam Central Management System (CMS) software, go to: <https://support.screenbeam.com/cms>
- For Open Source information, go to: <https://opensource.screenbeam.com>

Support Information

For FAQs, troubleshooting tips, and support, visit:

<https://support.screenbeam.com> To open a ticket for support, [visit](#):

<https://support.screenbeam.com/ticket>

Website: www.screenbeam.com

FAQs


Q.1. Where can I find firmware upgrades for ScreenBeam products?

A.You can find firmware upgrades, deployment guides, and release notes on the official support website at <https://support.screenbeam.com/960>.

Q.2. How do I connect using Windows 10?

A.To connect using Windows 10, open the action center and select Connect. Wait for available receivers to appear and follow the on-screen instructions.

Documents / Resources

	<p>ScreenBeam 960 Wireless Display Receiver [pdf] User Guide</p> <p>0948-0128-000, 960 Wireless Display Receiver, 960, Wireless Display Receiver, Display Receiver, Receiver</p>
---	--

References

- [User Manual](#)

■ ScreenBeam

🔍 0948-0128-000, 960, 960 Wireless Display Receiver, Display Receiver, Receiver, ScreenBeam, Wireless Display Receiver

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.

