




# SCREENLINE AC231-01 Kit RF Remote Controller Instructions

[Home](#) » [SCREENLINE](#) » SCREENLINE AC231-01 Kit RF Remote Controller Instructions 

## SCREENLINE AC231-01 Kit RF Remote Controller Instructions



## Contents

- 1 1. Features
- 2 2. Parameters
- 3 3. Installation and wiring
- 4 4. Operations
- 5 5. Troubles and solutions
- 6 Documents / Resources

## 1. Features

Fancy shape designed, popular for all decorations

Casing is fireproof and anti UV design, safety and anti-aging Slid up casing, easy for installation

 
Standard 6P crystal socket interface, available for dry contact manual switch.

Direction changing is available under both manual and remote.

## 2. Parameters

Model	Voltage input	Working temperature	Rated power	Receiving sensibility	Transmitter quantity	Operation mode
AC231-01	230VAC/120VAC	-40° C ~ +85° C	≤ 500 W	-110 dBm	≤ 20 pcs	Remote/Manual

## 3. Installation and wiring

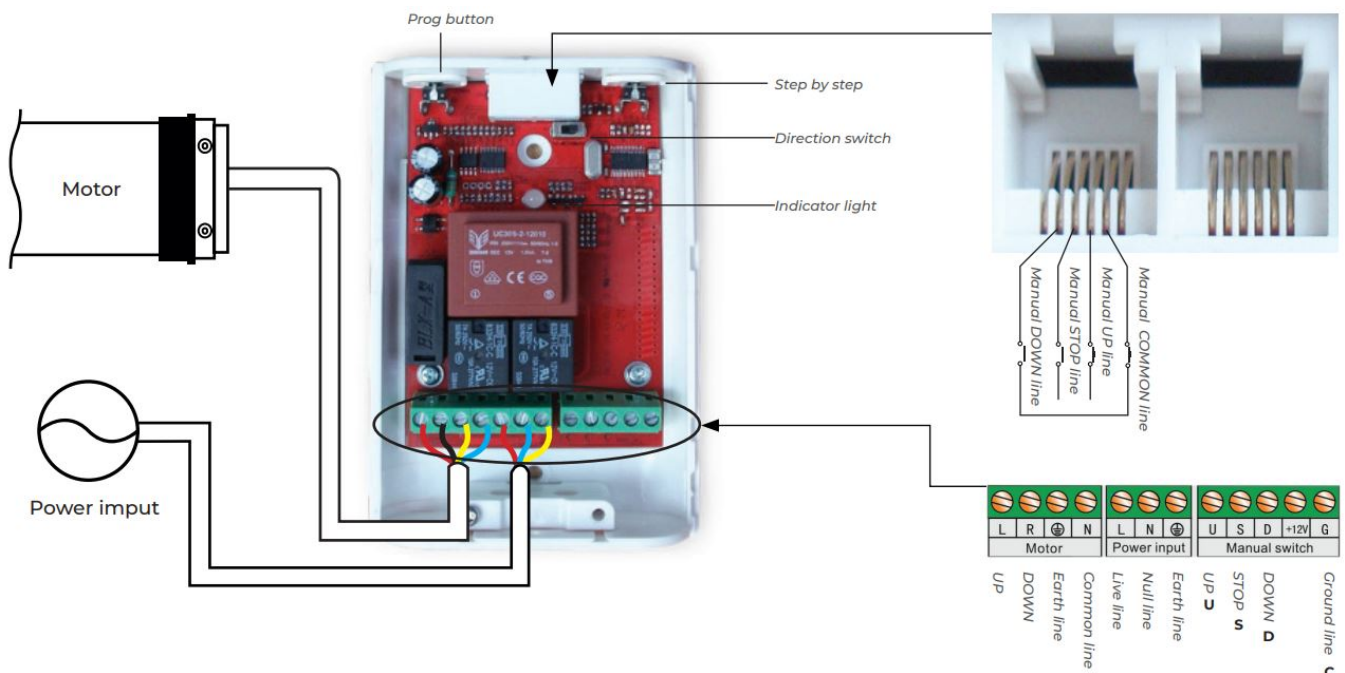

⚠ The working mode for external manual switch is no power dry contact mode, the function of this two interface is the same.


Please follow the electricity standard and below rules:

- To avoid the receiving error, please do not make receiver to connect metal things
- Keep >1.5m distance between receiver and the ground
- Keep >0.3m distance between receiver and the ceiling
- Keep >0.3m distance between receiver and the transmitter
- For security, please cut off the power before wiring
- To keep components quality, please avoid static. Please use soft cables.


– Please protect cables loader from longitudinal force after installation.

## 4. Operations
 
### Transmitter pairing

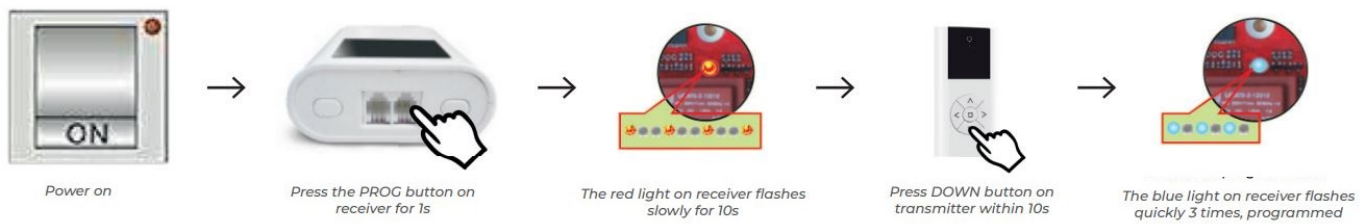

### Direction changing

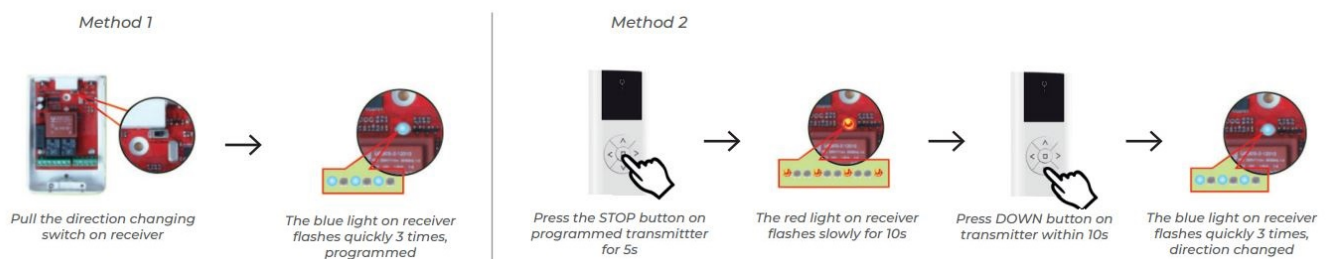 


### Add new transmitter

Every receiver can programme with at most 20pcs transmitters, the 21st one will cover the 20th automatically



 
### Delete single transmitter

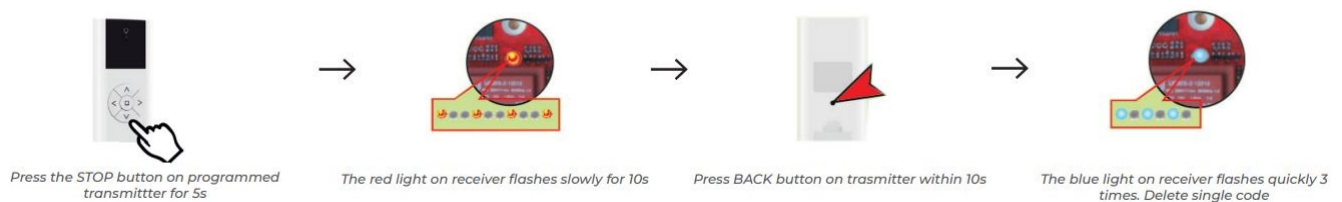

### Delete all transmitter
 
#### Method 1

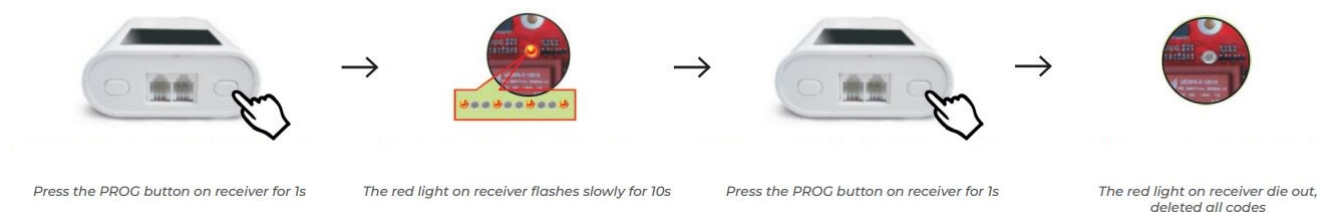

#### Method 2



### Control mode

There will be 0.5s for motor to change rotation, the longest time rotation is 5 min.

## 5. Troubles and solutions

### Troubles Solutions

Indicator light is on, but no reaction → Please check the wiring and channel choosing

Indicator on transmitter off or dull light → Please check the battery power (battery installation)

Transmitter and receiver work commonly, motor has no rotating → Please check motor wiring



Via Nazionale, 1/n – 1/u 38V30i8a600N6Ba0zeBisoeensnaeel nelle, o1l/(onTN(-T1)N/u)  
+ 3+93094064468438030000303 [infion@fscreenline.it](mailto:infion@fscreenline.it)

## Documents / Resources

	<p><a href="#">SCREENLINE AC231-01 Kit RF Remote Controller</a> [pdf] Instructions</p> <p>AC231-01 Kit RF Remote Controller, AC231-01 Kit, RF Remote Controller, Remote Controller, Controller</p>
--	--