SCS sentinel CAC0047 SwitchBell Wired Push Button **Installation Guide**

Home » SCS sentinel » SCS sentinel CAC0047 SwitchBell Wired Push Button Installation Guide






Contents

1 SCS sentinel CAC0047 SwitchBell Wired Push Button Installation

2 Documents / Resources

SCS sentinel CAC0047 SwitchBell Wired Push Button Installation Guide

INSTALLATION

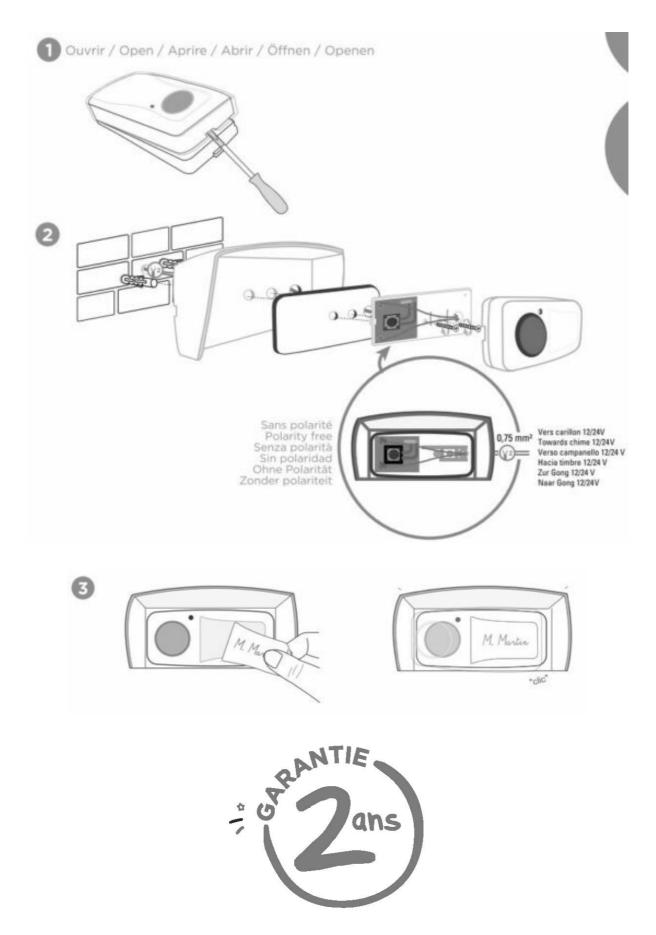

2 years warranty. It is imperative to keep a proof of purchase during the whole warranty period.



0 892 350 490

011-2339876



For an individual answer, use our online chat on our website www.scs-sentinel.com

This manual is an integral part of your product. Keep it in a safe place for future reference. Use the equipment only for its intended purpose. Do not clean the appliance with abrasive or corrosive substances. Only use a soft cloth. Do not let children play with the product or with the packaging's.



Don't throw out of order products with the household waste (garbage). The dangerous substances that they are likely to include may harm health or the environment. Make your retailer take back these products or use the selective collect of garbage proposed by your city.

The UE declaration of conformity may be consulted on the website: www.scs-sentinel.com/downloads.

The outdoor unit is protected against solid objects larger than 1 millimeter and against small water splashes from all directions.



Documents / Resources



SCS sentinel CAC0047 SwitchBell Wired Push Button [pdf] Installation Guide CAC0047 SwitchBell Wired Push Button, CAC0047, SwitchBell Wired Push Button, Wired Push Button, Push Button, Button

Manuals+,