



# scs sentinel CodeGate Wireless Coding Key Code Keyboard Instructions

[Home](#) » [SCS sentinel](#) » scs sentinel CodeGate Wireless Coding Key Code Keyboard Instructions 



 
**CodeGate**  
**sans fil**

This manual is an integral part of your product. These instructions are provided for your safety. Read this manual carefully before installing and keep it in a safe place for future reference

## Contents

- [1 INSTALLING](#)
- [2 PROGRAMMING](#)
- [3 TECHNICAL FEATURES](#)
- [4 WARNING](#)
- [5 Documents / Resources](#)
  - [5.1 References](#)


## INSTALLING

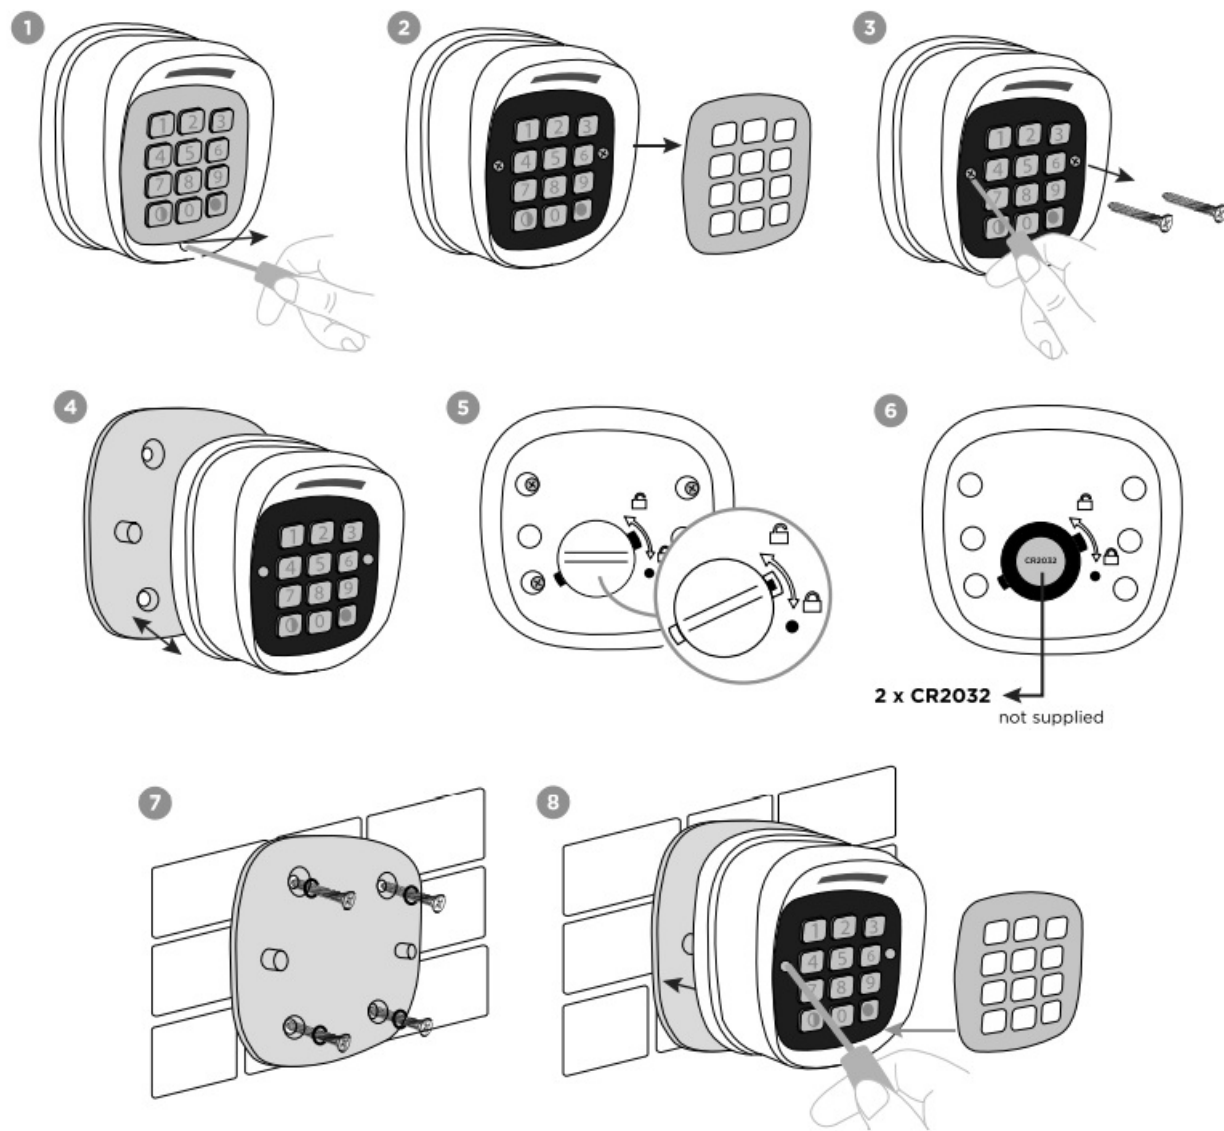

- Pedestrian opening
- Total opening

Test the keyboard in the desired location before installing it


**Free-field range**

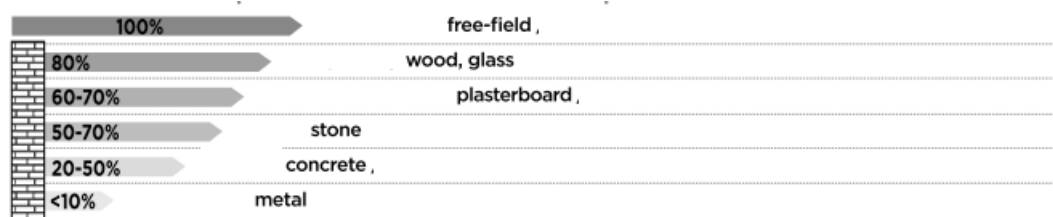 

## PROGRAMMING

### PAIRING:

– Press the RF button on your gate opener electronic PCB board as if you were programming a remote control.

- On the keypad, press 11 (or the last stored code) and then press  for 1 sec.  
The keypad is registered on the gate opener board.

### CHANGING THE CODE:






Customize the code from 1 to 8 digits maximum.

Example for partial opening code:




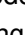
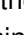


The same code can be programmed individually for different types of opening. However, for safety reasons, we recommend that you use different codes.











#### Code for partial opening :

- While maintaining the key 0, press  for 1 sec.
- Release the button  then the 0. A long beep sounds.
- Enter 11 (default code) or the last stored code +  (1 sec.) A long beep sounds and the green light comes on.
- Enter the new code then confirm by pressing the button  (1 sec.).
- Re-enter the new code, then confirm by pressing the button  (1 sec.). A long beep sounds and the green light comes on.

#### Code for total opening :

- While maintaining the key 0, press  for 1 sec.
- Release the button  then the 0. A long beep sounds.
- Enter 22 (default code) or the last stored code +  (1 sec.) A long beep sounds and the green light comes on.
- Enter the new code then confirm by pressing the button  (1 sec.).
- Re-enter the new code, then confirm by pressing the button  (1 sec.). A long beep sounds and the green light comes on.

#### Code for radio receiver programming:

 
- While maintaining the key 0, press  et  simultaneously for 1 sec.
- Release the buttons  and  then the 0. A long beep sounds.
- Enter 33 (default code) or the last stored code +  and  simultaneously (1 sec.) A long beep sounds and the green light comes on.
- Enter the new code then confirm by pressing the buttons  and  simultaneously (1 sec.).
- Re-enter the new code, then confirm by pressing the buttons  and  simultaneously (1 sec.). A long beep sounds and the green light comes on.



#### 'LOW BATTERY WARNING

If the keypad emits 2 beeps when a key is pressed, the batteries are low. They need to be replaced.

### DELETING CODES

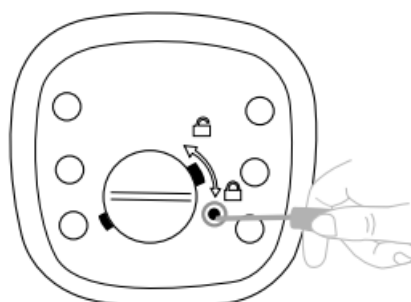

RESET

Press and hold the button for about 10 seconds. A long beep sounds and the white light comes on. The pairing and personalised codes are deleted.

## TECHNICAL FEATURES

Maximum transmitted power	< 10mW
Frequency	433.92 MHz
Power supply	6V OC / 2 pile lithium CR2032 (non fournie / not supplied / . no fornita /no incluida / nao fornecido)
Standby consumption,	10µA
Transmit power consumption	17 mA
Operating temperature	-20 a +60°C

Meaning of markings.

 
— Direct current

The outdoor unit is protected against harmful dust deposits and water jets from all direction.

## WARNING



Do not ingest battery, Chemical Burn Hazard. If the button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention. Do not clean the product with abrasive or corrosive substances. Use a simple cloth. Do not allow children to play with the product or packaging.

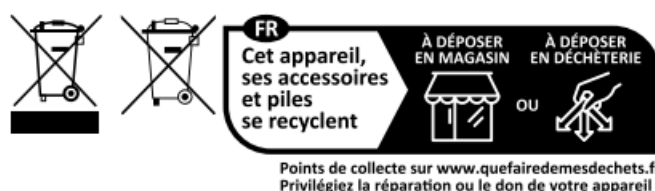

Don't throw batteries or out of order products with the household waste (garbage). The dangerous substances that they are likely to include may harm health or the environment. Make your retailer take back these products or use the selective collect of garbage proposed by your city.

Hereby, SCS Sentinel declares that this product complies with the essential requirements and other relevant provisions of Directive 2014/53/UE. The UE declaration of conformity may be consulted on the website : [www.scs-sentinel.com/downloads](http://www.scs-sentinel.com/downloads).



2 years warranty. It is imperative to keep a proof of purchase during the whole warranty period.



**0 892 350 490**

Service 0,15 € / min  
+ prix appel

Horaires du service, voir sur : [www.scs-sentinel.com/contact](http://www.scs-sentinel.com/contact)

**011-2339876**

**937376105**



For an individual answer, use our online chat on our website [www.scs-sentinel.com](http://www.scs-sentinel.com)

 
**scs sentinel**

110, rue Pierre-Gilles de Gennes 49300 Cholet – France



**V.072023- IndA**

## Documents / Resources

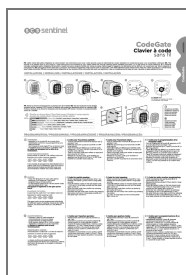

[scs sentinel CodeGate Wireless Coding Key Code Keyboard](#) [pdf] Instructions  
CodeGate Wireless Coding Key Code Keyboard, CodeGate, Wireless Coding Key Code Keybo  
ard, Coding Key Code Keyboard, Key Code Keyboard, Code Keyboard, Keyboard

## References

- [User Manual](#)