

# scs sentinel PAP0015 VisioDoor 7 Plus Additional Monitor for Door Entry System User Manual

<u>Home</u> » <u>SCS sentinel</u> » scs sentinel PAP0015 VisioDoor 7 Plus Additional Monitor for Door Entry System User Manual <sup>™</sup>

scs sentinel PAP0015 VisioDoor 7 Plus Additional
Monitor for Door Entry System User Manual



# Visi Door 7+ Moniteur additionnel

pour interphone vidéo

Additional monitor for door entry system

PAP0015

VisioDoor 7+





V.122021 - IndC

#### **Contents**

- **1 A- SAFETY INSTRUCTIONS**
- **2 B- DESCRIPTION** 
  - 2.1 B1- Content/ Dimensions
- 2.2 B2- Components
- **3 C- WIRING/ INSTALLING** 
  - 3.1 C1- Installing
  - 3.2 C2- Wiring diagram
- 4 D- USING
  - 4.1 D1- Call from the outdoor
  - station
  - 4.2 D2- Main screen
- 4.3 D3- Intercom function
- 4.4 D4- Display
- 4.5 D5- Photos and videos display
- 4.6 D6- Silent mode
- 4.7 D7- Camera display-monitoring
- **5 E-SETTINGS**
- **6 F- TECHNICAL FEATURES**
- **7 G-WARRANTY**
- **8 H-WARNINGS**
- 9 Documents / Resources
- 10 Related Posts


#### **A-SAFETY INSTRUCTIONS**

This manual is an integral part of your product.


These instructions are provided for your safety. Read this manual carefully before installing and keep it in a safe place for future reference. Select a suitable location. Make sure you can easily insert screws and wall plugs into the wall. Do not connect your electrical appliance until your equipment is totally installed and controlled. The installation, electric connections and settings must be made using best practices by a specialized and qualified person. The power supply must be installed in a dry place. Check the product is only used for its intended purpose.

#### **B-DESCRIPTION**

#### **B1- Content/ Dimensions**

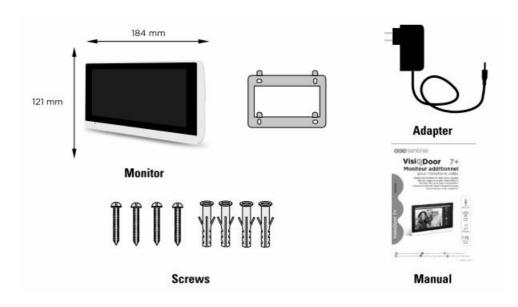


#### **B2- Components**

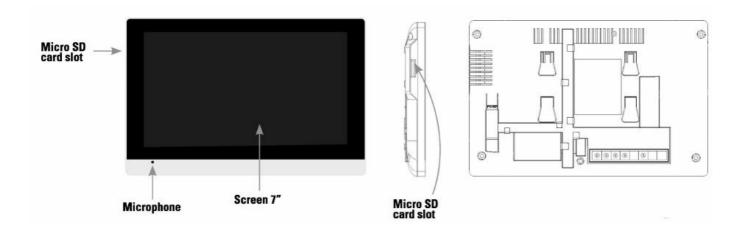


#### **C- WIRING/ INSTALLING**

#### C1- Installing

#### **Indoor monitor**

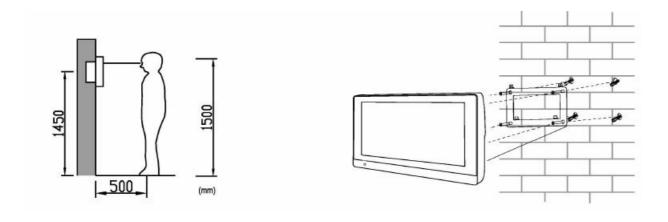

C2- Wiring diagram

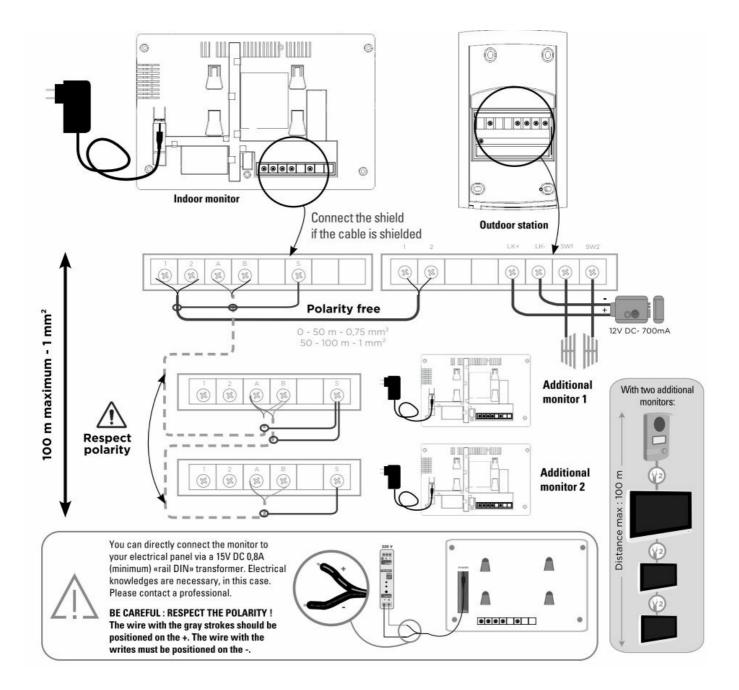

#### **D-USING**

#### D1- Call from the outdoor station




The monitor can take up to 15 seconds to turn on.

Do not operate the door station until the home screen appears on the monitor.




#### D2- Main screen

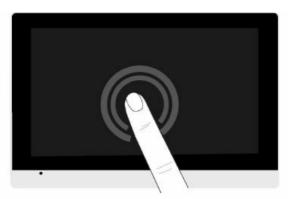



Exit the standby mode, only touching the screen.

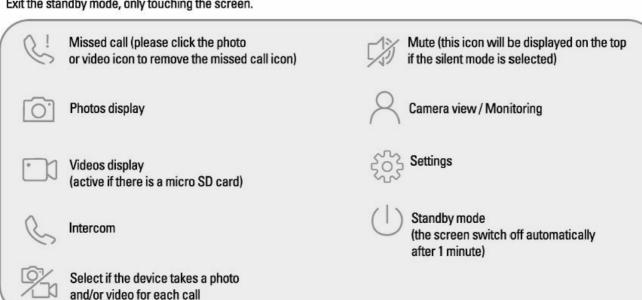


#### **D3-Intercom function**

You can connect up to 2 additional monitors to the same outdoor station and talk to another monitor. Press call icons to start/end the call.





#### **D4- Display**

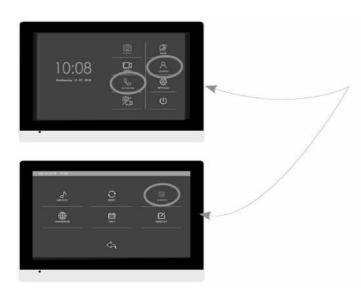

- 1/ When a monitor is talking to the outdoor unit, the «intercom» «screen» and «camera» functions of the other monitors will be gray, which means that those functions cannot be used temporarily.
- 2/ When a monitor is talking to another monitor, the «intercom» «screen» and «camera» functions of the other monitors will be gray, which means that those functions cannot be used temporarily.

D5- Photos and videos display







STORAGE Display photos of the device

Micro SD Display photos of the micro SD card

Delete photo


Back to main screen






 $\triangle$ 

Videos will be recorded on micro SD card. The video recording will not be possible without Micro SD card

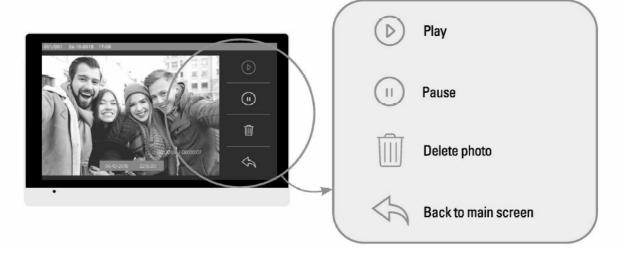

D6- Silent mode



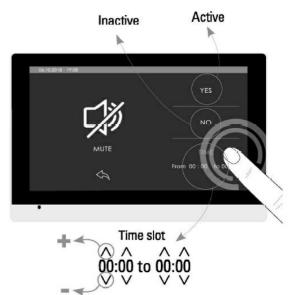

#### D7- Camera display-monitoring





You can view the street only by clicking the camera icon (monitoring function)

#### **E-SETTINGS**







Set the ring melody



Reset



Settings



Set the language of the monitor



Set the date & time of the monitor



Memory setting page. Delete all images or videos on the Micro SD card, copy all images on the Micro SD card and format Micro SD card



Back to main screen



#### Melody



The ringtone of additional monitor cannot be set at outdoor unit. So in the Melody interface, there is no selection to enable or disable the ringtone.



The «melody» function of the host monitor cannot be used via the main screen when the additional monitor is

talking to the outdoor unit.



#### Reset




This function resets all the data and all the device's factory settings.



#### **Settings screen**



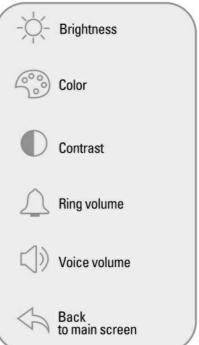



## Set the language




#### Set the date & time







## Memory

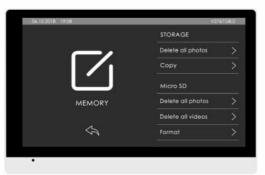

Copy : copy the photos from the monitor to the micro SD card in the BKUP PIC folder.

Format: Delete the micro SD card content.

#### F- TECHNICAL FEATURES

#### **Indoor monitor**

15V DC 0,8A
7 inch digital TFT LCD touch screen
1024(RGB) x 600
Built-in memory (14MB) when full the newest photo will automatically overwrite the oldest one
MicroSD card (4 GB - 32 GB class 4 - 10)  MicroSD card must be formated by monitor before using
Support 2 additional monitors

#### **Adapter**

Model identifier	SH-6000-15V-1A	
Input voltage	110-240V AC	
Input AC frequency	50/60Hz	
Output voltage	15V DC	
Output current	0.8A	
Output power	12W	
Average active efficiency	84.56%	
Efficiency at low load (10%)	77.15%	
No-load power consumption	0.065W	



SCS Sentinel grants to this product a warranty period, beyond the legal time, as a sign of quality and reliability.

The invoice will be required as proof of purchase date. Please keep it during the warranty period. Carefully keep the barcode and the proof of purchase, that will be necessary to claim warranty.

#### **H-WARNINGS**

- Maintain a minimum distance of 1 D cm around the device for sufficient ventilation.
- Be sure that the device is not blocked by paper, tablecloth, curtain or other items that would impede airflow.
- Keep matches, candles and flames away from the device.
- Product functionality can be influenced by a strong electromagnetic interference.
- This equipment is intended for private consumer use only.
- The appliance should not be exposed to dripping or splashing water; no objects filled with liquids, such as
  vases, should be placed near the appliance.
- The mains plug is used as disconnect device and shall remain readily operable during intended use.
- The monitor and the adapter must only be used indoors.
- Connect all the parts before switching on the power.
- Only connect your appliance using the provided adapter.
- Do not cause any impact on the elements as their electronics are fragile.
- Do not block the microphone.
- When installing the product, keep the packaging out of reach of children and animals. It is a source of potential danger.
- This appliance is not a toy. It is not designed to be used by children.



💫 Disconnect the appliance from the main power supply before service. Do not clean the product with solvent, abrasive or corrosive substances. Only use a soft cloth. Do not spray anything on the appliance.

Make sure that your appliance is properly maintained and regularly checked in order to detect any sign of wear. Do not use it if a repair or adjustment is needed. Always call on qualified personnel.

Don't throw out of order products with the household waste (garbage). The dangerous substances that they are likely to include may harm health or the environment. Make your retailer take back these products or use the selective collect of garbage proposed by your city.

=== Direct current Alternating current

Model class II

The monitor is for indoor use only



www.scs-sentinel.com



http://scslaboutique.com/







110, rue Pierre-Gilles de Gennes 49300 Chalet - France

**Documents / Resources** 



#### scs sentinel PAP0015 VisioDoor 7 Plus Additional Monitor for Door Entry System [pdf] Us

er Manual

PAP0015, VisioDoor 7 Plus, Additional Monitor for Door Entry System, VisioDoor 7 Plus Additional Monitor for Door Entry System, PAP0015 Additional Monitor for Door Entry System, PAP0015 VisioDoor 7 Plus Additional Monitor for Door Entry System, PAP0015 VisioDoor 7 Plus Additional Monitor, VisioDoor 7 Plus Additional Monitor, Additional Monitor

Manuals+,