



SCT Panasonic RC-PSE-P40 Generic Controller User Guide

[Home](#) » [SCT](#) » SCT Panasonic RC-PSE-P40 Generic Controller User Guide 

Contents


- [1 SCT Panasonic RC-PSE-P40 Generic Controller](#)
- [2 Module Dimensions](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)



SCT Panasonic RC-PSE-P40 Generic Controller




Panasonic Models: AW-HE40, AW-HE42, AW-HE60, AW-HE130, AW-UE70 (shown) & AW-UE100

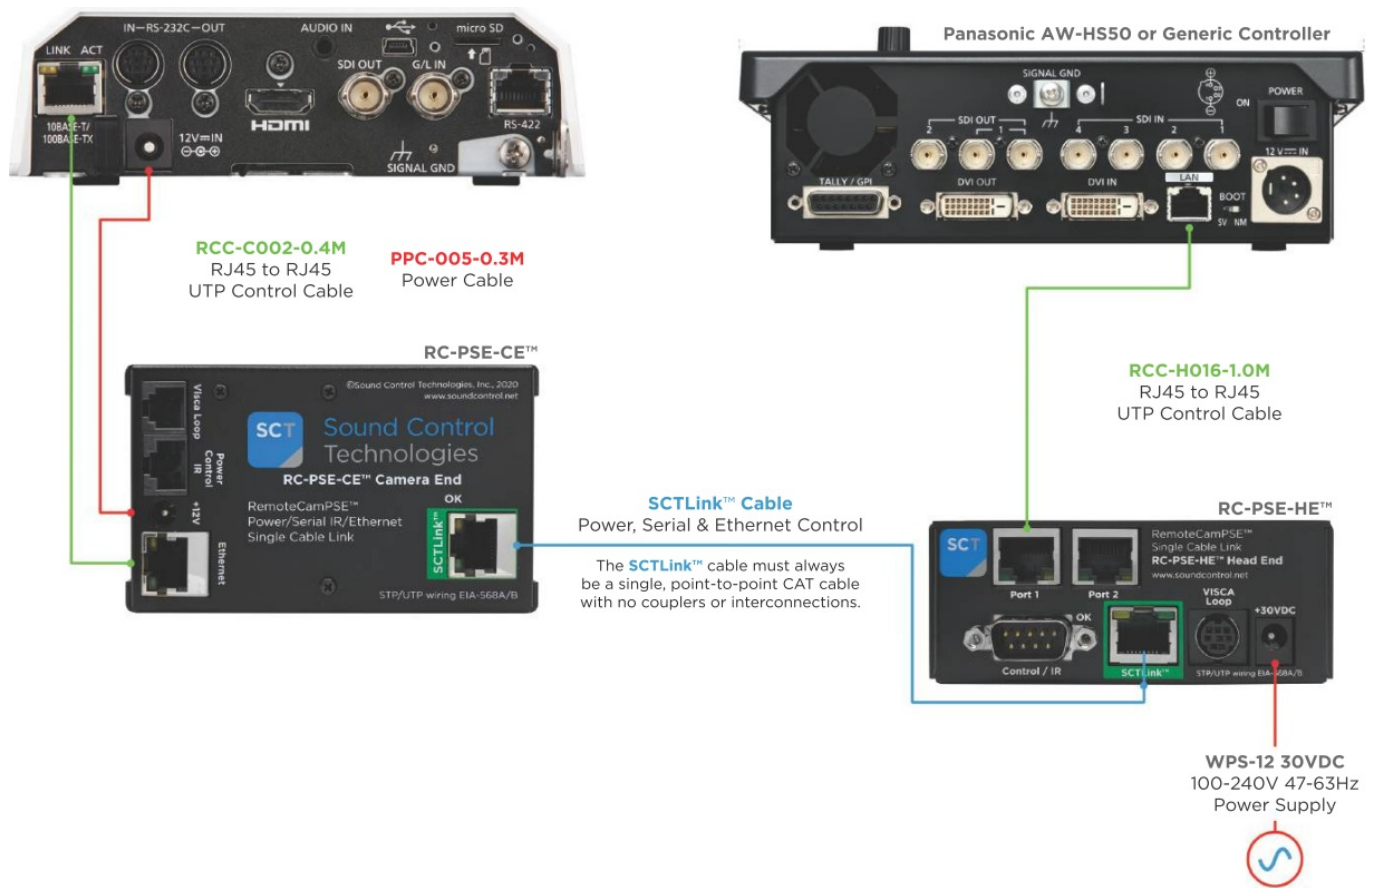

Warning

- Do not connect Visca Loop (out from camera) cable to the last camera in a daisy chain.
- This will terminate control on all cameras.

SCTLink™ Cable Specs

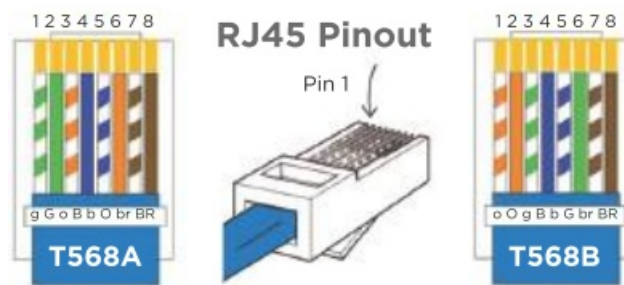


- Integrator-Supplied CAT5e/CAT6 STP/UTP Cable T568A or T568B (10m-100m min/max Length).

Module Dimensions

- **RC-PSE-CE™**: H: 0.875" (22mm) x W: 2.5" (63mm) x D: 3.6875" (93mm)
- **RC-PSE-HE™**: H: 1.5" (38mm) x W: 3.75" (95mm) x D: 3.625" (92mm)

Documents / Resources

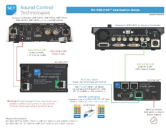

[SCT Panasonic RC-PSE-P40 Generic Controller](#) [pdf] User Guide

AW-HE40, AW-HE42, AW-HE60, AW-HE130, AW-UE70, AW-UE100, RC-PSE-P40, Panasonic
RC-PSE-P40 Generic Controller, Panasonic, Generic Controller, Controller