



SCT RTK-MINI-TX RTK Mini Transmitter Module User Guide

[Home](#) » [SCT](#) » SCT RTK-MINI-TX RTK Mini Transmitter Module User Guide 

Contents

- [1 SCT RTK-MINI-TX RTK Mini Transmitter Module](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 RemoteTableKit-Mini™ RTK-MINI™ Application Guide](#)
- [5 Module Dimensions](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)



SCT RTK-MINI-TX RTK Mini Transmitter Module



Product Information

- **Product Name:** RemoteTableKit-Mini™
- **Model:** RTK-MINITM
- **Application:** Cisco Room USB [Room Kit Mini]
- **Updated:** 07/17/2023

Components:

- RCC-C002-0.3M RJ45 to RJ45 UTP Control Cable

- WPS-12 30VDC 100-240V 47-63Hz Power Supply
- RTK-MINI-RXTM Receiver Module
- RCC-H016-1.0M RJ45 to RJ45 UTP Control Cable
- Cisco Touch10 Ethernet/POE (Cisco Provided)
- RTK-MINI-TXTM Transmitter Module
- RCC-H001-2.0M HDMI to HDMI Video Cable
- Laptop
- Cisco-Provided Power Supply
- RCC-C001-0.3M HDMI to HDMI Video Cable
- SCTLinkTM Cable (Ethernet/POE | HDMI | USB)

Module Dimensions:

- RTK-MINI-TXTM: H: 1.394(35mm) x W: 7.283(185mm) x D: 4.484(114mm)
- RTK-MINI-RXTM: H: 1.394(35mm) x W: 7.283(185mm) x D: 4.484(114mm)


SCTLinkTM Cable Specifications:

- Must be a single, point-to-point CAT cable
- No couplers or interconnections allowed
- Integrator-Supplied CAT6 STP/UTP Cable
- T568A or T568B pinout
- Recommended length: 10m-100m

Product Usage Instructions

1. Connect the RCC-C002-0.3M RJ45 to RJ45 UTP Control Cable to either the Tx or Rx port.
2. Connect the WPS-12 30VDC 100-240V 47-63Hz Power Supply to the power input of the RTK-MINI-RXTM Receiver Module.
3. Use the RCC-H016-1.0M RJ45 to RJ45 UTP Control Cable to connect the Cisco Touch10 Ethernet/POE (provided by Cisco).
4. Connect the RTK-MINI-TXTM Transmitter Module using the RCC-H001-2.0M HDMI to HDMI Video Cable.
5. For laptop connection, use the Cisco-Provided Power Supply and RCC-C001-0.3M HDMI to HDMI Video Cable.
6. To establish the SCTLinkTM connection, use a single, point-to-point CAT6 STP/UTP Cable with T568A or T568B pinout.
7. Ensure the SCTLinkTM Cable has no couplers or interconnections.
8. Recommended length for the SCTLinkTM Cable is between 10m-100m.
9. Follow the RJ45 pinout for proper connection: T568A (o O g B b G br BR) or T568B (g G o B b O br BR).

RemoteTableKit-Mini™ RTK-MINI™ Application Guide

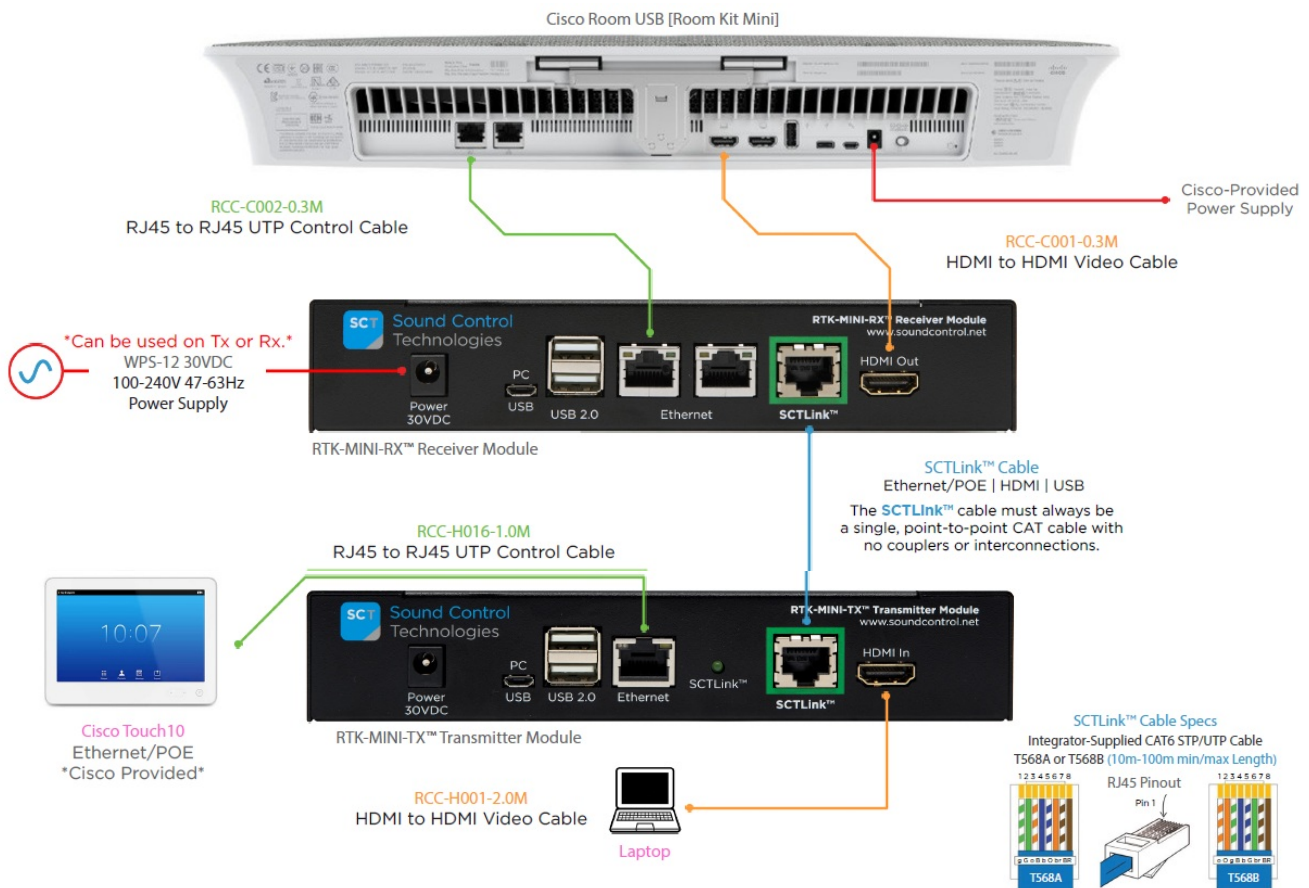

Module Dimensions

- RTK-MINI-TX™: H: 1.394" (35mm) x W: 7.283" (185mm) x D: 4.484" (114mm)
- RTK-MINI-RX™: H: 1.394" (35mm) x W: 7.283" (185mm) x D: 4.484" (114mm)

Documents / Resources

	SCT RTK-MINI-TX RTK Mini Transmitter Module [pdf] User Guide RTK-MINI-RXTM, RTK-MINI-TXTM, RTK-MINI-TX RTK Mini Transmitter Module, RTK Mini Transmitter Module, Transmitter Module, Module
--	---