



SCT RTK-PLUS Remote Table Kit User Guide


[Home](#) » [SCT](#) » SCT RTK-PLUS Remote Table Kit User Guide 

Contents

- 1 SCT RTK-PLUS Remote Table Kit
- 2 Product Information
- 3 Product Usage Instructions
- 4 INSTALLATION GUIDANCE
- 5 RTK-Transmitter™ Table Module
- 6 Module Dimensions
- 7 Documents / Resources



SCT RTK-PLUS Remote Table Kit

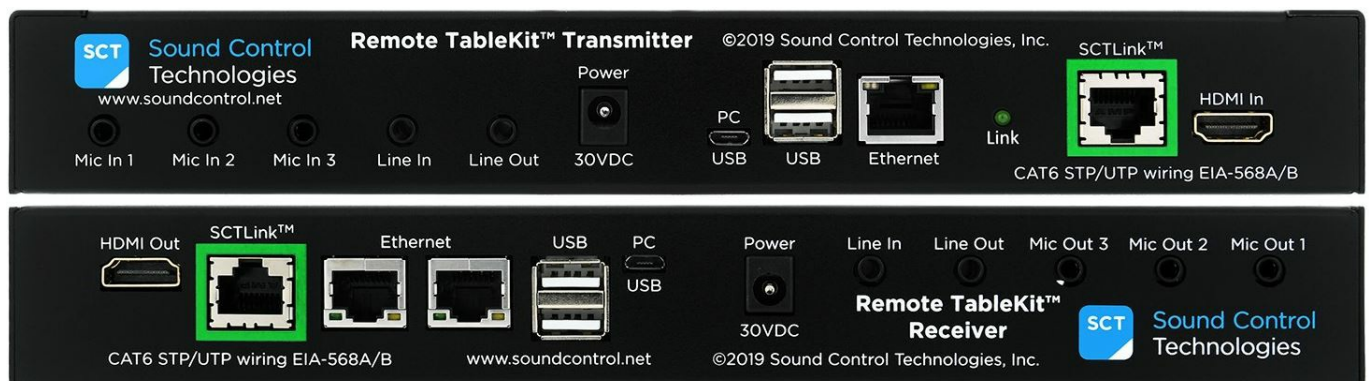

Product Information

The CiscoMicrophone is a compatible accessory for the Cisco Table-J. It supports the RCC-M006-1.0M USB-B Micro to USB-A cable. Please note that this cable needs to be purchased separately. The microphone also features HDMI and USB-B Micro ports for connectivity. Additionally, it is designed to work with the CiscoNavigator Ethernet/POE (Power over Ethernet) connection, which is provided by Cisco.

Product Usage Instructions


To use the CiscoMicrophone with your Cisco Table-J, follow these steps:

1. Ensure that you have the RCC-M006-1.0M USB-B Micro to USB-A cable. If you do not have it, purchase it separately.
2. Connect one end of the RCC-M006-1.0M cable to the USB-B Micro port on the microphone.
3. Connect the other end of the RCC-M006-1.0M cable to an available USB-A port on your Cisco Table-J.
4. If you intend to use HDMI, connect an HDMI cable to the HDMI port on the microphone and the corresponding HDMI port on your display device.
5. If your Cisco Table-J supports Ethernet/POE, connect the provided Cisco Navigator Ethernet/POE cable to the respective port of the microphone. Ensure that the other end of the cable is connected to a compatible network or power source.
6. Once all connections are made, ensure that your Cisco Table-J is powered on and functioning correctly.
7. Your CiscoMicrophone is now ready to use. Adjust the microphone settings on your Cisco Table-J or any connected devices as needed.

Note: If you need to connect the microphone to a device with a USB-C port, you will require the RCC-M005-0.3M USB-A to USB-C cable, which needs to be purchased separately. Follow similar steps as above, replacing the RCC-M006-1.0M cable with the RCC-M005-0.3M cable.

INSTALLATION GUIDANCE

RTK-Transmitter™ Table Module

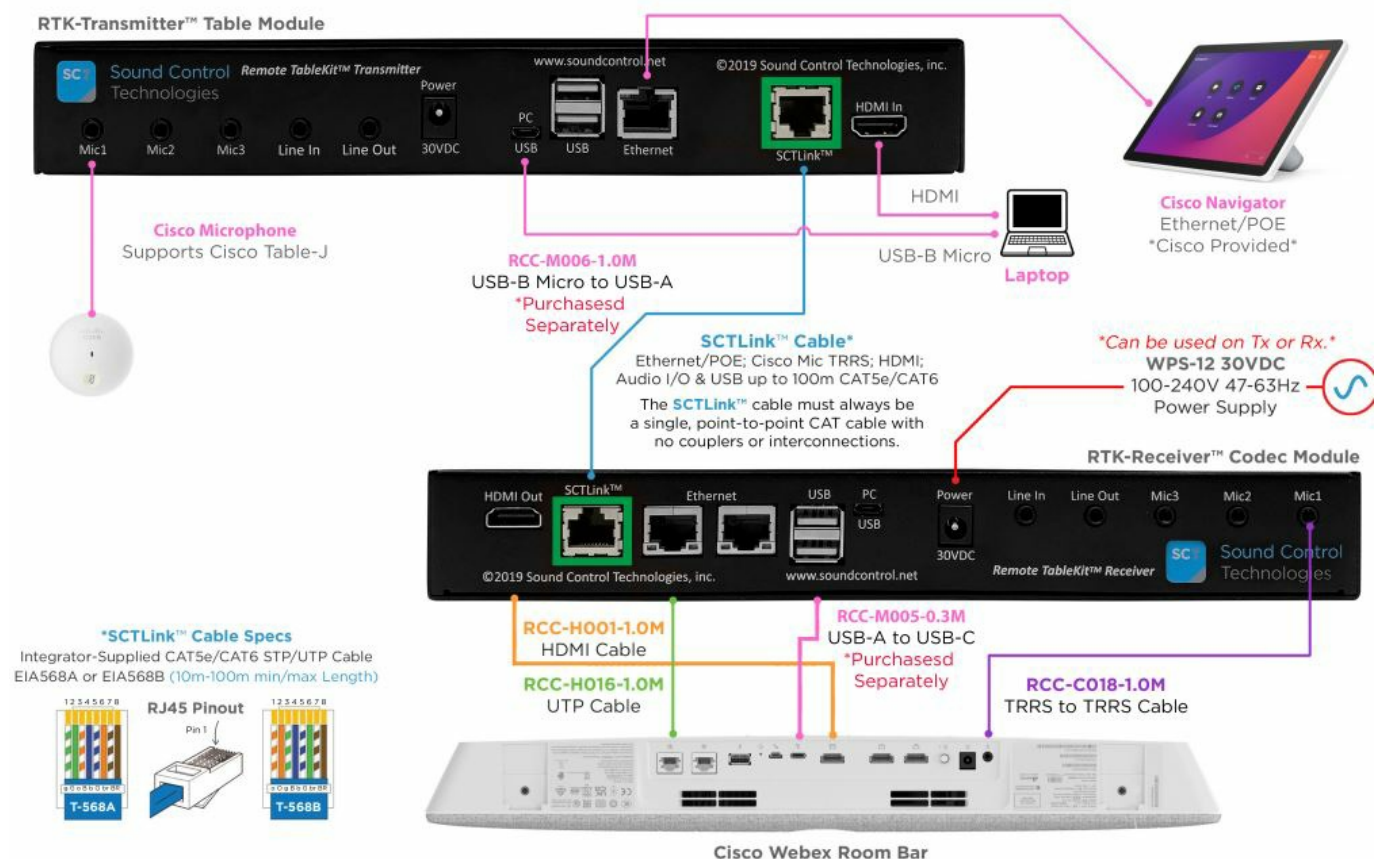

Module Dimensions

- **RTK-TX™:**


- **H:** 1.39" (35mm) x
- **W:** 10.22" (259mm) x
- **D:** 4.51" (114mm)

- **RTK-RX™:**

- **H:** 1.39" (35mm) x
- **W:** 10.22" (259mm) x
- **D:** 4.51" (114mm)

Updated: 03/07/2023

Documents / Resources

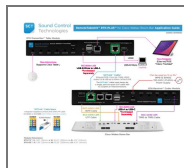

[SCT RTK-PLUS Remote Table Kit](#) [pdf] User Guide
RTK-PLUS Remote Table Kit, RTK-PLUS, Remote Table Kit, Table Kit