

# SEALEVEL DIO-32B Digital I-O Interface User Manual

[Home](#) » [SEALEVEL](#) » SEALEVEL DIO-32B Digital I-O Interface User Manual 

## Contents

- 1 SEALEVEL DIO-32B Digital I-O Interface
- 2 Introduction
- 3 Before You Get Started
  - 3.1 What's Included
- 4 Card Setup
- 5 Software Installation
- 6 Physical Installation
- 7 Programming the DIO-32B
- 8 Electrical Characteristics
- 9 Specifications
- 10 Example Circuits
- 11 Appendix A – Troubleshooting
- 12 Appendix B – How To Get Assistance
- 13 Appendix C – Silk Screen – 3093 PCB
- 14 Appendix D – Compliance Notices
  - 14.1 Federal Communications Commission (FCC) Statement
- 15 Warranty
- 16 Documents / Resources
  - 16.1 References
- 17 Related Posts

**SEALEVEL**

## SEALEVEL DIO-32B Digital I-O Interface



### Introduction

The DIO-32B digital I/O interface provides 16 optically isolated inputs and 16 reed relay outputs. The inputs (rated for 3-13V) protect the PC and other sensitive equipment from spikes and ground loop current that can be generated in industrial environments, while the outputs provide high quality, long life, low current (10 Watt maximum), dry contact switch closures. Reed relays are well suited for low-current applications. The relays are normally open and close when energized. The DIO-32B is designed to be used with a variety of Operating Systems, including Windows, Linux, and DOS. The Seal/O API (Application Programmer Interface) included in the software available for the DIO-32B provides a variety of useful high-level function calls implemented as a Windows dynamic link library (DLL) and as a Linux kernel module and library. In addition to the API, Seal/O includes sample code and utilities to simplify software development.

### Other Sealevel ISA Digital I/O Products

| Model No. | Part No.   | Description                                     |
|-----------|------------|-------------------------------------------------|
| DIO-16    | (P/N 3096) | – 8 Reed Relay Outputs / 8 Opto-Isolated Inputs |
| ISO-16    | (P/N 3094) | – 16 Optically Isolated Inputs                  |
| REL-16    | (P/N 3095) | – 16 Reed Relay Outputs                         |
| REL-32    | (P/N 3098) | – 32 Switched Relay Outputs                     |
| PIO-48    | (P/N 4030) | – 48 TTL Inputs/Outputs                         |

### Before You Get Started

#### What's Included

The DIO-32B is shipped with the following items. If any of these items are missing or damaged, please contact Sealevel for replacement.

- Item# 3093 – DIO-32B ISA Adapter

- Item# CA111 – 6” Ribbon Cable with IDC 20-Pin to DB-37 Male

## **Advisory Conventions**

### **Warning**

The highest level of importance is used to stress a condition where damage could result to the product, or the user could suffer serious injury.

### **Important**

The middle level of importance is used to highlight information that might not seem obvious or a situation that could cause the product to fail.

### **Note**

The lowest level of importance is used to provide background information, additional tips, or other non-critical facts that will not affect the use of the product.

### **Optional Items**

Depending upon your application, you are likely to find one or more of the following items useful for interfacing the DIO-32B to real-world signals. All items can be purchased from our website ([www.sealevel.com](http://www.sealevel.com)) or by calling (864) 843-4343.

#### **DB-37 Male to DB-37 Female Extension Cable – (Item# CA112)**

This cable provides a 6’ extension to the CA165. It has one DB37 Male connector and one DB37 female connector.

#### **DB-37 Male/Female Terminal Block (Item# TB02-KT)**

Break out serial and digital connectors to screw terminals for easy field connection. The TB02 terminal block is designed with both DB37 male and female connectors, therefore; it can be used with any DB37 board regardless of the board’s port gender.

#### **Cable and Terminal Block Kit (Item# KT101)**

The KT101 includes the TB02 terminal block and CA112 cable. To fully connect the DIO-32B two KT101 kits will be required.

## **Card Setup**

The DIO-32B contains several jumper straps that must be set for proper operation.

### **Address Selection**

The DIO-32B occupies 4 consecutive I/O locations. The DIP-switch (SW1) is used to set the base address for these locations. Be careful when selecting the base address as some selections conflict with existing PC ports. The following table shows several examples that usually do not cause a conflict.

| Address | Binary       | Switch Settings |     |     |     |     |    |     |     |
|---------|--------------|-----------------|-----|-----|-----|-----|----|-----|-----|
|         |              | 1               | 2   | 3   | 4   | 5   | 6  | 7   | 8   |
| 100-104 | 01 0000 00xx | Off             | On  | On  | On  | On  | On | On  | On  |
| 104-108 | 01 0000 01xx | Off             | On  | On  | On  | On  | On | On  | Off |
| 200-204 | 10 0000 00xx | On              | Off | On  | On  | On  | On | On  | On  |
| 280-283 | 10 1000 00xx | Off             | On  | Off | On  | On  | On | On  | On  |
| 284-287 | 10 1000 01xx | Off             | On  | Off | On  | Off | On | On  | Off |
| 2EC-2EF | 10 1110 11xx | Off             | On  | Off | Off | Off | On | Off | Off |
| 300-303 | 11 0000 00xx | Off             | Off | On  | On  | On  | On | On  | On  |
| 320-323 | 11 0010 00xx | Off             | Off | On  | On  | Off | On | On  | On  |
| 388-38B | 11 1000 10xx | Off             | Off | Off | On  | On  | On | Off | On  |
| 3A0-3A3 | 11 1010 00xx | Off             | Off | Off | On  | Off | On | On  | On  |
| 3A4-3A7 | 11 1010 01xx | Off             | Off | Off | On  | Off | On | On  | Off |


The following illustration shows the correlation between the DIP-switch setting and the address bits used to determine the base address. In the example below, address 300 is selected as the base address. Address 300 in binary is XX 11 0000 00XX where X = a non-selectable address bit and address bit A9 is always a 1.



Setting the switch 'On' or 'Closed' corresponds to a '0' in the address while leaving it 'Off' or 'Open' corresponds to a '1'.

### IRQ Header E2

Interrupts can be generated by Port A, bit 0 going low if enabled at jumper location (E2). Interrupt request signals 2/9 through 7 (IRQ 2/9 – 7) can be selected by placing the jumper in the appropriate position. Other inputs can be 'wire OR ed.' to also generate interrupts if desired. Please consult the factory for more information.

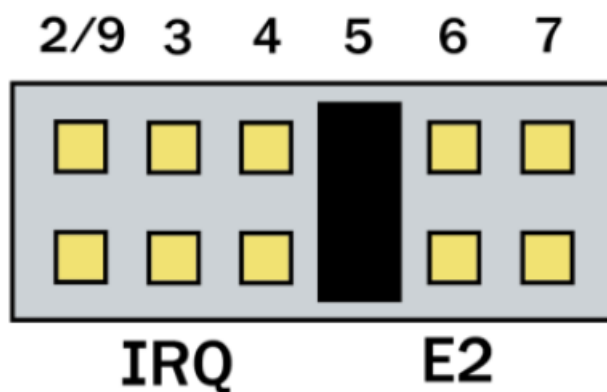

## Software Installation

### Windows Installation

Do not install the Adapter in the machine until the software has been fully installed. Only users running Windows 7 or newer should utilize these instructions for accessing and installing the appropriate driver via Sealevel's website. If you are utilizing an operating system prior to Windows 7, please contact Sealevel by calling 864.843.4343 or emailing [support@sealevel.com](mailto:support@sealevel.com) to receive access to the legacy driver download and installation instructions.

1. Begin by locating, selecting, and installing the correct software from the Sealevel software driver database.
2. Select the Part Number (P/N: 3093) for your adapter from the listing.
3. Select 'Download Now' for the version of SealO Classic for Windows. The setup file will automatically detect the operating environment and install the proper components. Next (depending on your browser) select the 'Run this program from its current location or 'Open' option. Follow the information presented on the screens that follow.
4. A screen may appear with the declaration: "The publisher cannot be determined due to the problems below: Authenticode signature not found." Please select the 'Yes' button and proceed with the installation. This declaration simply means that the Operating System is not aware of the driver is loaded. It will not cause any harm to your system.
5. During setup, the user may specify installation directories and other preferred configurations. This program also adds entries to the system registry that are necessary for specifying the operating parameters for each driver. An uninstall option is also included to remove all registry/ini file entries from the system.

Windows NT Card Installation: After accomplishing the above steps, bring up the Control Panel and double-click on the SealO Devices icon. To install a new card, click "Add Port." Repeat this procedure for as many SealO cards as you wish to install.

## **Linux Installation**

- You MUST have "root" privileges to install the software and drivers.
- The syntax is case-sensitive.
- Users can obtain a README file included in the SealO Linux package which contains important installation and configuration instructions that makes the Linux installation more user-friendly.

1. Begin by locating, selecting, and installing the correct software from the Sealevel software driver database.
2. Select the Part Number (P/N: 3093) for your adapter from the listing.
3. Select 'Download Now' for the version of SealO Classic for Linux.
4. Copy seaio.tar.gz to your home directory by typing: `cp seaio.tar.gz ~`
5. Change to your home directory by typing: `cd`
6. Unzip and Untar the drivers and software by typing: `tar -xvzf seaio.tar.gz`
7. Change to the SealO directory by typing: `cd seaio`.
8. Users must download and compile a Linux kernel source.
9. Now compile and prepare the drivers for use by typing: `make install`
10. With the system off and unplugged, install your SealO PCI card (See Physical Installation).
11. Plug the system back in and boot Linux. Log in as "root".

### **Linux Installation, Continued**

12. Load the SealO driver by typing: `seaioload`
13. The driver has enabled the card and is ready to use.

To set up Linux to automatically load the driver; refer to a Linux manual concerning your specific distribution for help. For additional software support, please call Sealevel Systems' Technical Support, (864) 843-4343. Our technical support is free and available from 8:00 AM – 5:00 PM Eastern Time, Monday through Friday. For email support contact: [support@sealevel.com](mailto:support@sealevel.com).

## Physical Installation

The adapter can be installed in any PCI expansion slot.

Do not install the Adapter in the machine until the software has been fully installed.

1. Turn off PC power. Disconnect the power cord.
2. Remove the PC case cover.
3. Locate an available 5V PCI slot and remove the blank metal slot cover.
4. Gently insert the PCI adapter into the slot. Make sure that the adapter is seated properly.
5. After the adapter has been installed, the cables should be routed thru the opening in the bracket. This bracket also features a strain relief function that should be used to prevent unexpected cable removal.
6. Replace the screw you removed for the blank and use it to secure the adapter into the slot. (This is required to ensure FCC Part 15 compliance.)
7. Replace the cover.
8. Connect the power cord

The DIO-32B is now ready for use.

## Programming the DIO-32B

Sealevel's Seal/O software is available to assist in the development of reliable applications for the Sealevel Systems family of digital I/O adapters. Included in Sealevel's software are driver functions for use in accessing the I/O as well as helpful samples and utilities.

### Programming for Windows

The Seal/O API (Application Programmer Interface) provides a variety of useful high-level function calls implemented in a Windows dynamic link library (DLL). The API is defined in the help file (Start/Programs/SealO/SealO Help) under "Application Programmers Interface". This help file also includes detailed information dealing with the installation/removal of the software and information about latency, logic states, and device configuration.

For C language programmers we recommend using the API to access the DIO-32B. If you are programming in Visual Basic, using the ActiveX control included with Seal/O is advised.

### Samples and Utilities

A variety of sample programs and utilities (both executable and source code) is included with Seal/O. Further documentation on these samples can be found by selecting "Start/Programs/SealO/Sample Application Description".

### Programming for Linux

Seal/O for Linux consists of two major parts: a kernel module and a library. The kernel module is a simple IO pass-through device, allowing the library to handle the more sophisticated functions provided to Seal/O users. It is provided in a 'tarball' format and can easily be compiled and included in the kernel build.

## Application Programmers Interface (API)

Most modern operating systems do not allow direct hardware access. The SealIO driver and API have been included in the software available in order to provide control over the hardware in Windows and Linux environments. The purpose of this section of the manual is to help the customer with the mapping of the API to the actual inputs and relays for the 3093 specifically. Complete documentation of the API can be found in its accompanying help file.

### Digital I/O Interface

The DIO-32B provides four parallel input/output (I/O) ports. The ports are organized as ports A, B, C, and D. Port A and B are input ports interfaced to optically-isolated inputs, while ports C and D are reed relay output ports. Assuming an I/O address of 300 Hex the following table shows the Port Addresses.

| Base Address   | Hex | Decimal | Mode                          |
|----------------|-----|---------|-------------------------------|
| Port A Address | 300 | 768     | Optically Isolated Input Port |
| Port B Address | 301 | 769     |                               |
| Port C Address | 302 | 770     | Reed Relay Output Port        |
| Port D Address | 303 | 771     |                               |

### Input Ports

Ports A and B are 8-bit input ports connected to optically isolated input sensors. Each sensor can be used to interface a voltage input and then sense whether the voltage is on or off. Each sensor is isolated (with respect to a common ground) from every other sensor and also isolated with respect to the host PC ground. This means that signals such as low-level AC line voltage, motor servo voltage, and control relay signals can be 'sensed', or read by the PC, without the risk of damage due to ground loops or ground faults.

Each sensor input pair has a current limiting resistor that is used to limit the input current to the optoisolator. The optoisolator has two 'back-to-back' diodes internally. This allows AC or DC signals to be sensed, regardless of polarity. When the applied voltage is high enough to cause the led in the optoisolator to turn on, the output of the optoisolator goes low (0 volts), and the signal is read as a low logic level (binary 0) by the PC. When the input signal is too low to turn on the optoisolator, the output goes high, and the port bit is read by the PC as a high logic level (binary 1). The input impedance of each isolated input is approximately 560 ohms (factory default). The optoisolator requires approximately 3mA to turn on. The maximum input current is 50mA. There are two things to consider when selecting the input resistor. The first is the turn-on voltage for the circuit to sense, and the second is the maximum input voltage. Maximum input voltage must not provide too much power to the input resistor and must also not overdrive the optoisolator input current specification. The following formulas apply:

- Turn on Voltage = diode drop + (turn on current) x (resistance) [Ex:  $1.1 + (.003) \times R$ ]
- Input Current =  $((\text{input voltage}) - 1.1\text{V}) / (\text{resistor value})$
- Maximum voltage =  $1.1 + \text{square root of } (.25(\text{resistor value}))$

### Input Ports, Continued

The following table shows common input resistors and the ranges associated with each.

| Input Resistor | Turn-On | Input Range  | Max Input | Max Current |
|----------------|---------|--------------|-----------|-------------|
| 220Ω           | 1.8V    | 1.8 – 7.0V   | 8.5V      | 27mA        |
| 560Ω           | 2.8V    | 2.8 – 10.6V  | 12.9V     | 20mA        |
| 1KΩ            | 4.1V    | 4.1 – 13.8V  | 16.9V     | 15mA        |
| 2.2KΩ          | 7.7V    | 7.7 – 20.0V  | 24.5V     | 10mA        |
| 3.3KΩ          | 10.0V   | 10.0 – 24.0V | 30.0V     | 9mA         |
| 4.7KΩ          | 15.2V   | 15.2 – 28.0V | 35.0V     | 7mA         |

The turn-off voltage for all resistors is less than 1V. Increasing the input resistor accordingly can increase the maximum input voltage. Because socketed DIP resistors are utilized, they can easily be replaced with a different value. Sealevel, if necessary, can do this. The input circuits are not intended for monitoring 120-volt AC circuits. In addition to being too high a voltage for the circuits, it is dangerous to have that high a voltage on the card.

### Sensor Input Ports Pin Assignments

Inputs are interfaced via the DB-37 female connector on the card.

| Port A Bit | Port A Pins | Port B Bit | Port B Pins |
|------------|-------------|------------|-------------|
| 0          | 18,37       | 0          | 10,29       |
| 1          | 17,36       | 1          | 9, 28       |
| 2          | 16,35       | 2          | 8,27        |
| 3          | 15,34       | 3          | 7,26        |
| 4          | 14,33       | 4          | 6,25        |
| 5          | 13,32       | 5          | 5,24        |
| 6          | 12,31       | 6          | 4,23        |
| 7          | 11,30       | 7          | 3,22        |
| Ground     | 2,20,21     |            |             |
| +12 Volts  | 19          |            |             |
| +5 Volts   | 1           |            |             |

### Output Ports (Reed Relay)

Reed relays provide very high quality, long life, low current (10 Watt maximum), and dry contact switch closures. Reed relays are not suited for high current applications and can be destroyed by inductive load switching, where a spark occurs across the contacts internally. The relays are normally open and close when energized.

### Output Ports (Reed Relay) Pin Assignments (CA111)

Outputs are interfaced via the DB-37 male connector on the supplied connector cable (item# CA111).

| Port C Bit | Relay    | Port C Pins | Port D Bit | Relay | Port D Pins |
|------------|----------|-------------|------------|-------|-------------|
| 0          | K16      | 2,20        | 0          | K8    | 10,28       |
| 1          | K15      | 3,21        | 1          | K7    | 11,29       |
| 2          | K14      | 4,22        | 2          | K6    | 12,30       |
| 3          | K13      | 5,23        | 3          | K5    | 13,31       |
| 4          | K12      | 6,24        | 4          | K4    | 14,32       |
| 5          | K11      | 7,25        | 5          | K3    | 15,33       |
| 6          | K10      | 8,26        | 6          | K2    | 16,34       |
| 7          | K9       | 9,27        | 7          | K1    | 17,35       |
| Ground     | 18,36,37 |             |            |       |             |
| + 5 Volts  | 19       |             |            |       |             |
| + 12 Volts | 1        |             |            |       |             |

### Relative Addressing vs. Absolute Addressing

The SealIO API makes a distinction between “absolute” and “relative” addressing modes. In absolute addressing mode, the Port argument to the API function acts as a simple byte offset from the base I/O address of the device. For instance, Port #0 refers to the I/O address base + 0; Port #1 refers to the I/O address base + 1. Relative addressing mode, on the other hand, refers to input and output ports in a logical fashion. With the port argument of 0 and an API function meant to output data, the first (0th) output port on the device will be utilized. Likewise, with a Port argument of 0 and an API function designed to input data, the first (0th) input port of the device will be utilized. In all addressing modes, port numbers are zero-indexed; that is, the first port is port #0, the second port is #1, the third is #2, and so on.

### Direct Hardware Control

In systems where the users' program has direct access to the hardware (DOS) the tables that follow give the mapping and functions that the DIO-32B provides.

| Function Available | Port | Address Hex | Port Type                     |
|--------------------|------|-------------|-------------------------------|
| RD                 | A    | Base + 0    | Optically Isolated Input Port |
| RD                 | B    | Base + 1    |                               |
| RD/WR              | C    | Base + 2    | Reed Relay Output Port        |
| RD/WR              | D    | Base + 3    |                               |

### Reading the Inputs

The inputs are active Low. If no voltage is applied across one of the differential inputs it returns a one on that bit. If an AC or DC voltage is applied it returns a zero on that bit.

### Reading the Outputs

The relay ports return the ones that complement the value that is currently being used to drive the relays.

## Writing the Outputs

The output ports are the only ports that can be written. The relays on a standard DIO-32B are normally open. To close a relay one must be written to the appropriate bit.

## Register Description

All ports are set to input after reset or power up.

| Address |                  | Mode      | D7    | D6    | D5   | D4   | D3   | D2   | D1   | D0   |
|---------|------------------|-----------|-------|-------|------|------|------|------|------|------|
| Base+0  | Input Port A     | RD        | PAD7  | PAD6  | PAD5 | PAD4 | PAD3 | PAD2 | PAD1 | PAD0 |
| Base+1  | Input Port B     | RD        | PBD7  | PBD6  | PBD5 | PBD4 | PBD3 | PBD2 | PBD1 | PBD0 |
| Base+2  | Output Port C    | RD/W<br>R | PCD7  | PCD6  | PCD5 | PCD4 | PCD3 | PCD2 | PCD1 | PCD0 |
| Base+3  | Output Port D    | RD/W<br>R | PDD7  | PDD6  | PDD5 | PDD4 | PDD3 | PDD2 | PDD1 | PDD0 |
| Base+4  |                  | RD        | 0     | 0     | 0    | 0    | 0    | 0    | 0    | 0    |
| Base+5  | Interrupt Status | RD/W<br>R | IRQEN | IRQST | 0    | 0    | 0    | 0    | IRC1 | IRC0 |

## Interrupt Control

When enabled, interrupts are generated on Port A bit D0.

|       |                                        |             |                                |
|-------|----------------------------------------|-------------|--------------------------------|
| IRQEN | Interrupt enable                       | 1 = enabled | 0 = disabled ( 0 on power up ) |
| IRC0  | Interrupt mode select, see table below |             |                                |
| IRC1  | Interrupt mode select, see table below |             |                                |

## Interrupt Mode Selection Table

The interrupt source is Base+0 bit D0. When selecting the Interrupt Type, always disable interrupts prior to changing or setting states. This will help prevent inadvertent or unexpected interrupts from occurring.

| IRC1 | IRC0 | Interrupt Type |
|------|------|----------------|
| 0    | 0    | Low Level      |
| 0    | 1    | High Level     |
| 1    | 0    | Falling Edge   |
| 1    | 1    | Rising Edge    |

When using the High and Low Level interrupts, an interrupt occurs when input D0 changes to either a High or Low state. This will cause the computer to remain in an interrupt state until the input state changes.

## Interrupt Read

Reading the Interrupt Status port (Base+5) clears any interrupt pending.

|       |                       |                                 |
|-------|-----------------------|---------------------------------|
| IRQST | (D0) Interrupt Status | 1 = interrupt pending, 0 = none |
|-------|-----------------------|---------------------------------|

## Electrical Characteristics

### Features

- Selectable I/O port addressing from 100H – 3FFH.
- 2 sets of SPST relay with each having 8 relays.
- 2 eight-bit input ports.
- Highly reliable 10 VA DIP reed relays.
- Multiple adapters can reside in the same computer.
- All address, data, and control signals are TTL compatible.

## Specifications

### Input Ports

|                            |              |
|----------------------------|--------------|
| <b>Turn On Current</b>     | 3 mA         |
| <b>Isolator Diode Drop</b> | 1.1 VDC      |
| <b>Resistor Power Max</b>  | .25 W        |
| <b>Maximum Input Range</b> | 3-13 VDC/VAC |

### Output Relays

|                                    |                                                                      |
|------------------------------------|----------------------------------------------------------------------|
| <b>Contact Max Power Rating</b>    | 10 W                                                                 |
| <b>Contact Voltage Maximum</b>     | 100 VDC/VAC                                                          |
| <b>Contact Current Maximum</b>     | .5A AC/DC RMS                                                        |
| <b>Contact Resistance, Initial</b> | .15Ω                                                                 |
| <b>Rated Life</b>                  | Low Load: 200 million closures<br>Maximum Load: 100 million closures |
| <b>Contact Speed</b>               | Operate: .5 mS<br>Release: .5 mS<br>Bounce: .5 mS                    |
| <b>Maximum Operating Speed</b>     | 600 Hz                                                               |

### Temperature Range

|                  |               |
|------------------|---------------|
| <b>Operating</b> | 0°C – 70°C    |
| <b>Storage</b>   | -50°C – 105°C |

These printed circuit boards are solder mask over bare copper or solder mask over tin nickel.

**Power Consumption**

|                    |        |        |
|--------------------|--------|--------|
| <b>Supply line</b> | +5 VDC | +12VDC |
| <b>Rating</b>      | 800 mA | 800 mA |

**Specifications, Continued**

**Physical Dimensions**


|                                           |                      |
|-------------------------------------------|----------------------|
| <b>PCB Length</b>                         | 9.8 inches (24.8 cm) |
| <b>PCB Height (including Goldfingers)</b> | 4.2 inches (10.7 cm) |

**Manufacturing**


All Sealevel Systems Printed Circuit boards are built to UL 94V0 rating and are 100% electrically tested. These printed circuit boards are solder masks over bare copper or solder mask over tin nickel.

**Example Circuits**

**Input Circuit**

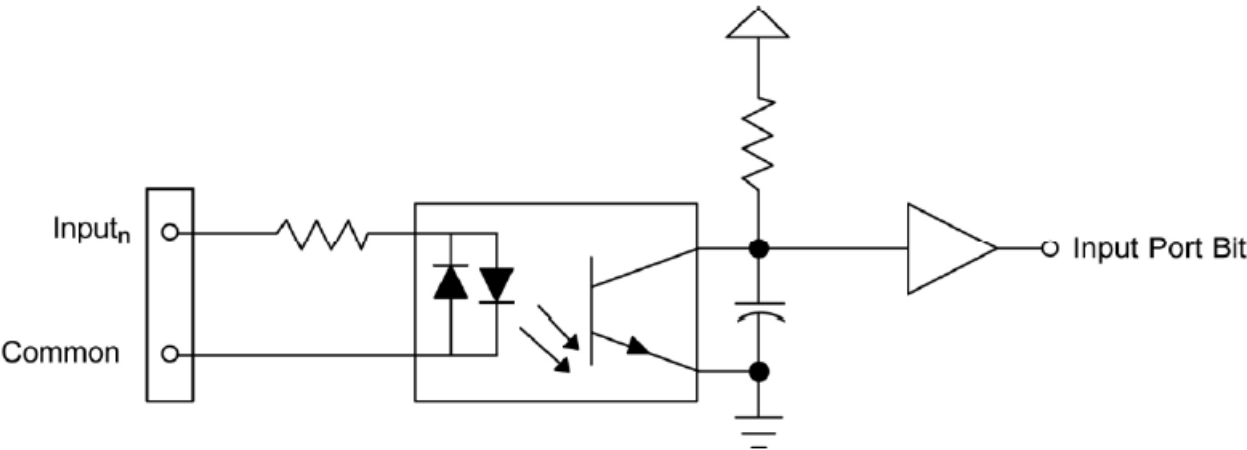

**Output Circuit**

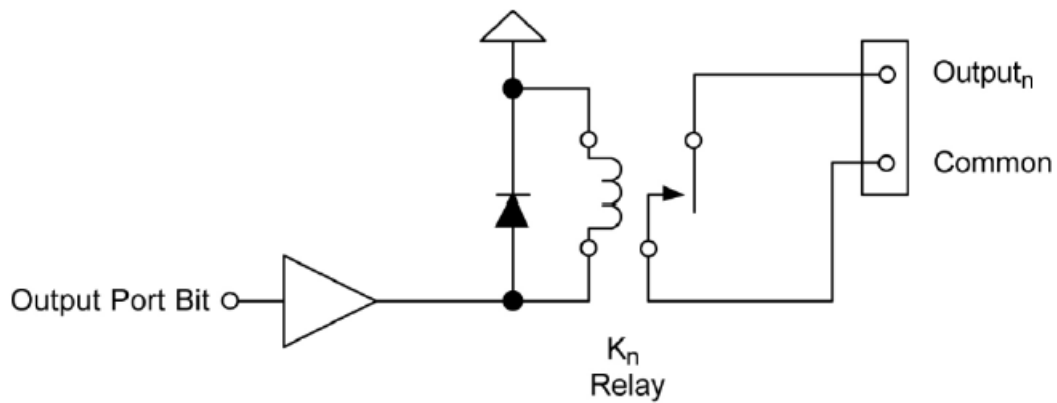

## Appendix A – Troubleshooting

Following these simple steps can eliminate the most common problems.

1. Install the software first. After installing the software then proceed to add the hardware. This places the required installation files in the correct locations.
2. Read this manual thoroughly before attempting to install the adapter in your system.
3. Use Device Manager under Windows to verify proper installation.
4. Use the SealO Control Panel applet or the Device Manager's property page for card identification and configuration.
5. The following are known I/O conflicts:
  - The 278 and 378 settings may conflict with your printer I/O adapter.
  - 3B0 cannot be used if a Monochrome adapter is installed.
  - 3F8-3FF is typically reserved for COM1:
  - 2F8-2FF is typically reserved for COM2:
  - 3E8-3EF is typically reserved for COM3:
  - 2E8-2EF is typically reserved for COM4:


If these steps do not solve your problem, please call Sealevel Systems' Technical Support, at (864) 843-4343. Our technical support is free and available from 8:00 AM-5:00 PM Eastern Time Monday through Friday. For email support contact [support@sealevel.com](mailto:support@sealevel.com).

## Appendix B – How To Get Assistance

Begin by reading through the Trouble Shooting Guide in Appendix A. If assistance is still needed please see below. When calling for technical assistance, please have your user manual and current adapter settings. If possible, please have the adapter installed on a computer ready to run diagnostics. Sealevel Systems provides an FAQ section on its website. Please refer to this to answer many common questions. This section can be found at <http://www.sealevel.com/faq.asp>. Sealevel Systems maintains a Home page on the Internet. Our home page address is [www.sealevel.com](http://www.sealevel.com). The latest software updates and newest manuals are available via our FTP site that can be accessed from our home page. Technical support is available Monday to Friday from 8:00 a.m. to 5:00 p.m. eastern time. Technical support can be reached at (864) 843-4343.

RETURN AUTHORIZATION MUST BE OBTAINED FROM SEALEVEL SYSTEMS BEFORE RETURNED MERCHANDISE WILL BE ACCEPTED. AUTHORIZATION CAN BE OBTAINED BY CALLING SEALEVEL SYSTEMS AND REQUESTING A RETURN MERCHANDISE AUTHORIZATION (RMA) NUMBER.

## Appendix C – Silk Screen – 3093 PCB

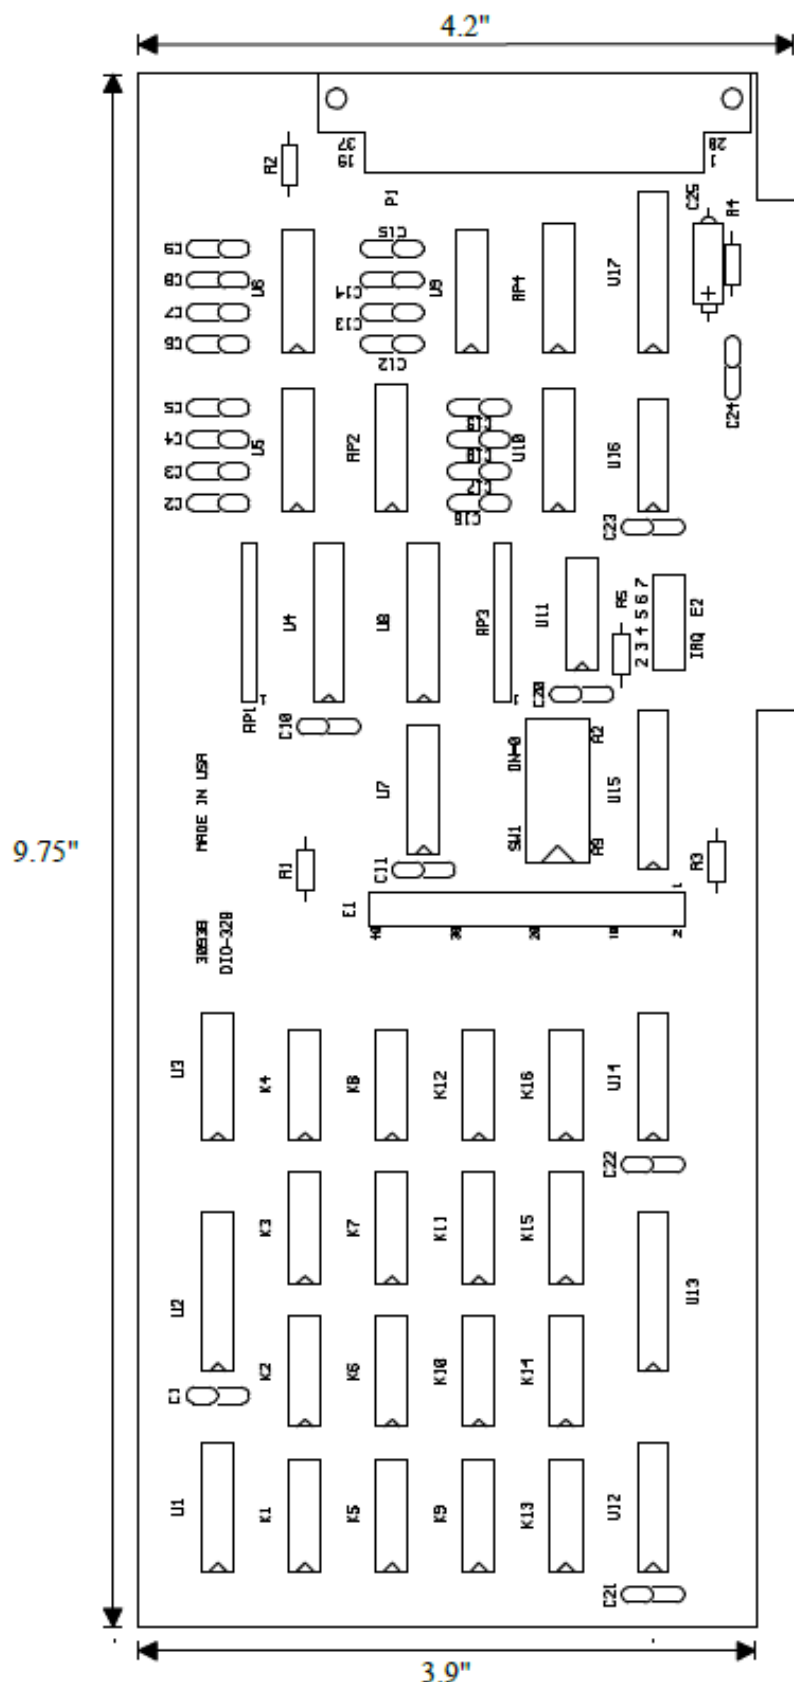

## Appendix D – Compliance Notices

### Federal Communications Commission (FCC) Statement

This equipment has been tested and found to comply with the limits for Class A digital devices, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate

radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in such case the user will be required to correct the interference at the user's expense.

### **EMC Directive Statement**

Products bearing the CE Label fulfill the requirements of the EMC directive (89/336/EEC) and of the low-voltage directive (73/23/EEC) issued by the European Commission. To obey these directives, the following European standards must be met:

- EN55022 Class A – “Limits and methods of measurement of radio interference characteristics of information technology equipment”
- EN55024 – “Information technology equipment Immunity characteristics Limits and methods of measurement”.

This is a Class A Product. In a domestic environment, this product may cause radio interference in which case the user may be required to take adequate measures to prevent or correct the interference. Always use the cabling provided with this product if possible. If no cable is provided or if an alternate cable is required, use high-quality shielded cabling to maintain compliance with FCC/EMC directives.

### **Warranty**

Sealevel's commitment to providing the best I/O solutions is reflected in the Lifetime Warranty that is standard on all Sealevel-manufactured I/O products. We are able to offer this warranty due to our control of manufacturing quality and the historically high reliability of our products in the field. Sealevel products are designed and manufactured at its Liberty, South Carolina facility, allowing direct control over product development, production, burn-in and testing. Sealevel achieved ISO-9001:2015 certification in 2018.

### **Warranty Policy**

Sealevel Systems, Inc. (hereafter “Sealevel”) warrants that the Product shall conform to and perform in accordance with published technical specifications and shall be free of defects in materials and workmanship for the warranty period. In the event of failure, Sealevel will repair or replace the product at Sealevel's sole discretion. Failures resulting from misapplication or misuse of the Product, failure to adhere to any specifications or instructions, or failure resulting from neglect, abuse, accidents, or acts of nature are not covered under this warranty. Warranty service may be obtained by delivering the Product to Sealevel and providing proof of purchase. The customer agrees to insure the Product or assume the risk of loss or damage in transit, to prepay shipping charges to Sealevel, and to use the original shipping container or equivalent. The warranty is valid only for the original purchasers and is not transferable.

This warranty applies to Sealevel manufactured Products. Products purchased through Sealevel but manufactured by a third party will retain the original manufacturer's warranty.

### **Non-Warranty Repair/Retest**

Products returned due to damage or misuse and Products retested with no problem found are subject to repair/retest charges. A purchase order or credit card number and authorization must be provided in order to obtain an RMA (Return Merchandise Authorization) number prior to returning Product.

### **How to obtain an RMA (Return Merchandise Authorization)**

If you need to return a product for warranty or non-warranty repair, you must first obtain an RMA number. Please contact Sealevel Systems, Inc. Technical Support for assistance:

- Available Monday – Friday, 8:00 AM to 5:00 PM EST
- Phone 864-843-4343
- Email [support@sealevel.com](mailto:support@sealevel.com).

Trademarks

Sealevel Systems, Incorporated acknowledges that all trademarks referenced in this manual are the service mark, trademark, or registered trademark of the respective company.

Documents / Resources

|                                                                                   |                                                                                                                                                                                |
|-----------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p><a href="#">SEALEVEL DIO-32B Digital I-O Interface</a> [pdf] User Manual</p> <p>DIO-32B, Digital I-O Interface, DIO-32B Digital I-O Interface, I-O Interface, Interface</p> |
|-----------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

References

- [Sealevel - I/O & Computing Products, Engineering and Manufacturing](#)
- [Sealevel - I/O & Computing Products, Engineering and Manufacturing](#)
- [FAQs - Sealevel](#)
- [Software Driver Search - Sealevel](#)