



# SEALEY AK39602.V2 Rivet and Threaded Nut Rivet Kit Instructions

[Home](#) » [SEALEY](#) » SEALEY AK39602.V2 Rivet and Threaded Nut Rivet Kit Instructions 

## Contents

- 1 SEALEY AK39602.V2 Rivet and Threaded Nut Rivet Kit
- 2 Instructions
- 3 SAFETY
- 4 INTRODUCTION
- 5 SPECIFICATION
- 6 CONTENTS
- 7 APPLICATIONS
- 8 OPERATION
- 9 MAINTENANCE
- 10 ALUMINIUM RIVETS
- 11 SERVICE PARTS
- 12 ENVIRONMENT PROTECTION
- 13 Documents / Resources
  - 13.1 References
- 14 Related Posts



**SEALEY AK39602.V2 Rivet and Threaded Nut Rivet Kit**



## Instructions

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance

**IMPORTANT:** PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.

- Refer to instruction manual
- Wear eye protection

## SAFETY

- **WARNING!** Ensure Health & Safety, local authority and general workshop practice regulations are adhered to when using this equipment.
- **WARNING!** Always wear approved eye or face protection when operating the riveter.
- **DO NOT** hold the workpiece by hand. Secure workpiece with a clamp, vice or other adequate holding device.
- **DO NOT** use the riveter for any purpose other than that for which it is designed.
- **DO NOT** operate the riveter if any parts are damaged or missing, as this may cause failure and/or personal injury.
- Familiarise yourself with the application and limitations of the riveter, as well as the potential hazards.

- Maintain the riveter in good condition (use an authorised service agent).
- Replace or repair damaged parts. Use genuine parts only. Unauthorised parts may be dangerous and will invalidate the warranty.
- Keep the work area clean, uncluttered and ensure that there is adequate lighting.
- Keep the riveter clean for best and safest performance.
- Keep children and unauthorised persons away from the work area.
- Check moving parts alignment on a regular basis.
- When not in use return to the case and store in a safe, dry, childproof area.

## INTRODUCTION


Drop-forged frame with patented folding mechanism for compact storage. Comfortable cushion grips. Heavy-duty head suitable for fixing blind rivets and threaded nut rivets to thin sheet material. Suitable for aluminium, steel and stainless steel.

## SPECIFICATION

- Model No: ..... AK39602
- Rivet Nuts ..... 5 Off
- Blind Rivet Sizes: ..... 3.2mm(1/8"), 4mm(5/32") .....4.8mm(3/16"),  
6mm(1/4"), 6.4mm(1/4")
- Folded Length: ..... 300mm
- Unfolded Length: ..... 520mm
- Rivet Materials: .....Aluminium, Steel, Stainless Steel

## CONTENTS

Check the contents of the kit against the item list and fig.1. If any item is found to be damaged or missing contact your Sealey stockist immediately.

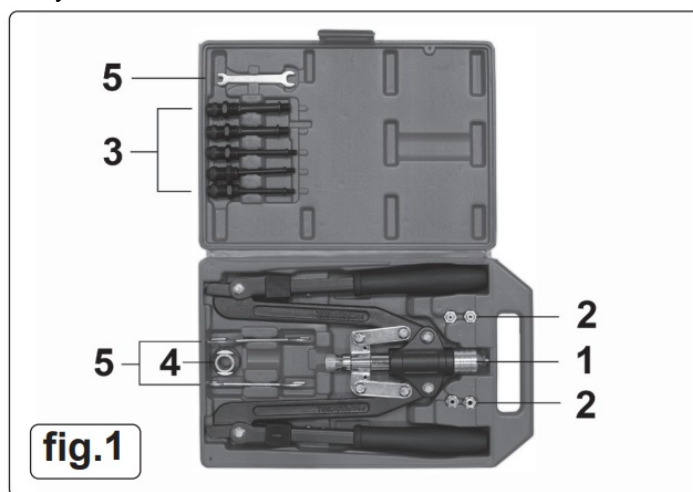

1. Riveter
2. Pop Rivet Mandrels, 5 (1 in riveter)
3. Nut Rivet Mandrels & Bars, 5, M4 x 0.7, M5 x 0.8, M6 x 1.0, M8 x 1.25, M10 x 1.5
4. Nosepiece for Nut Rivet Mandrel
5. Spanners, 5.5/8.5mm, 12/17mm, 15/19mm

## APPLICATIONS

The AK39602 kit is suitable for fitting threaded nut rivets of the following materials and sizes together with pop rivets up to 6.4mm (1/4") diameter.

Thread	M4 x 0.7	M5 x 0.8	M6 x 1.0	M8 x 1.25	M10 x 1.5
Aluminium	✓	✓	✓	✓	✓
Steel	✓	✓	✓	✓	✓

## OPERATION

### Pop Rivets



- Select the mandrel (fig.2.A) which matches the shaft diameter of the rivet and screw it to the nosepiece (fig.2.B) of the riveter.
- With the riveter handles extended and open, fully insert the rivet shaft into the mandrel.
- Place rivet in hole in the workpiece and squeeze the riveter handles closed to deform the rivet.
- If the rivet stem does not shear, open the handles, push the riveter further onto the stem and then close the handles again.
- When the stem shears, open the handles and remove the stem from the riveter.

### Threaded Nut Rivets

- Unscrew the pop rivet nosepiece (fig.2.B) from the riveter body.
- Unscrew the jaw case assembly (fig.5) from the draw bar body (fig.2.F).
- Screw the nut rivet nosepiece (fig.3.C) into the riveter body.
- Screw the appropriate mandrel bar (fig.3.D) into the draw bar body. Note left-hand thread.
- Screw the corresponding mandrel (fig.3.E) into the nosepiece.

**NOTE:** Always use mandrel and mandrel bar of the same size, determined by the size of nut rivet. To ensure that the nut rivet is compressed by the correct amount it is necessary to set the height of the mandrel by doing the following test.


- Prepare a sample of the workpiece material with a hole slightly larger than the nut rivet diameter.
- Screw the nut rivet fully onto the mandrel bar.
- Place the nut rivet in the hole in the sample and press down so that the nut flange is held firmly against the face of the sample. Squeeze the riveter handles to compress the nut rivet. When the rivet has formed a retaining bulge against the rear face of the sample (fig.4) keep light pressure on the handles and screw in the mandrel (fig.3.E) until the handles are closed. Lock the mandrel in position by tightening the lock nut. All following rivets will be deformed to the same degree when the handles are fully closed.
- The setting applies only to the one rivet size and the one workpiece thickness – the test must be repeated each time there is a change in nut size and/or workpiece thickness.
- Unscrew the mandrel bar from the nut rivet by turning the knurled end of the draw bar body (fig.2.F) and then screw on a new nut rivet for the next operation.

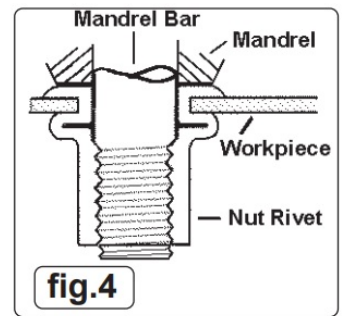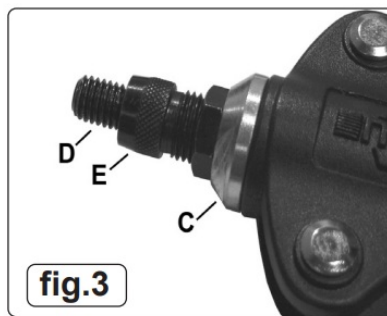

## MAINTENANCE

Keep all pivots lightly oiled.

The jaw case assembly (fig.5) should be disassembled, cleaned and oiled at regular intervals, depending on the frequency of use. The need for either cleaning or jaw replacement (fig.5.A) will be indicated by the riveter failing to grip the rivet shaft.

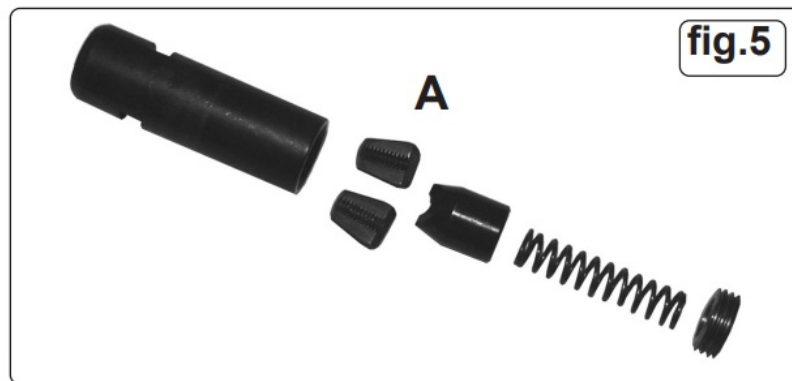

## ALUMINIUM RIVETS

Aluminium threaded and pop rivets are available from your Sealey stockist.

Nut Rivets	Thread	Quantity	Sheet Thickness
AK396/2	M4 x 0.7	50	0.5 – 2.5 mm
AK396/3	M5 x 0.8	50	0.5 – 2.5 mm
AK396/4	M6 x 1.0	15	1.0 – 4.0 mm
AK39602/1	M8 x 1.25	10	1.0 – 4.0 mm
AK39602/2	M10 x 1.5	10	1.0 – 4.0 mm


Pop Rivets	Quantity	Size
AK99/1	100	3.2(1/8") x 6.2mm
AK99/2	100	3.2(1/8") x 7.4mm
AK99/3	100	4.0(5/32") x 8.0mm
AK99/4	100	4.8(3/16") x 8.9mm
AK99/6	2000	3.2(1/8") x 10.2mm
AK99/7	1200	4.0(5/32") x 10.2mm
AK99/8	800	4.8(3/16") x 10.2mm

## SERVICE PARTS

The following service parts are available:

Part No.                      Description

- AK39602/05 Jaws
- AK39602/26M4 Mandrel and Bar, M4 Nut Rivet
- AK39602/26M5 Mandrel and Bar, M5 Nut Rivet
- AK39602/26M6 Mandrel and Bar, M6 Nut Rivet
- AK39602/26M8 Mandrel and Bar, M8 Nut Rivet
- AK39602/26M10 Mandrel and Bar, M10 Nut Rivet
- AK39602/9-3.2 Mandrel, 3.2mm Pop Rivet
- AK39602/9-4.0 Mandrel, 4.0mm Pop Rivet
- AK39602/9-4.8 Mandrel, 4.8mm Pop Rivet
- AK39602/9-6.0 Mandrel, 6.0mm Pop Rivet
- AK39602/9-6.4 Mandrel, 6.4mm Pop Rivet

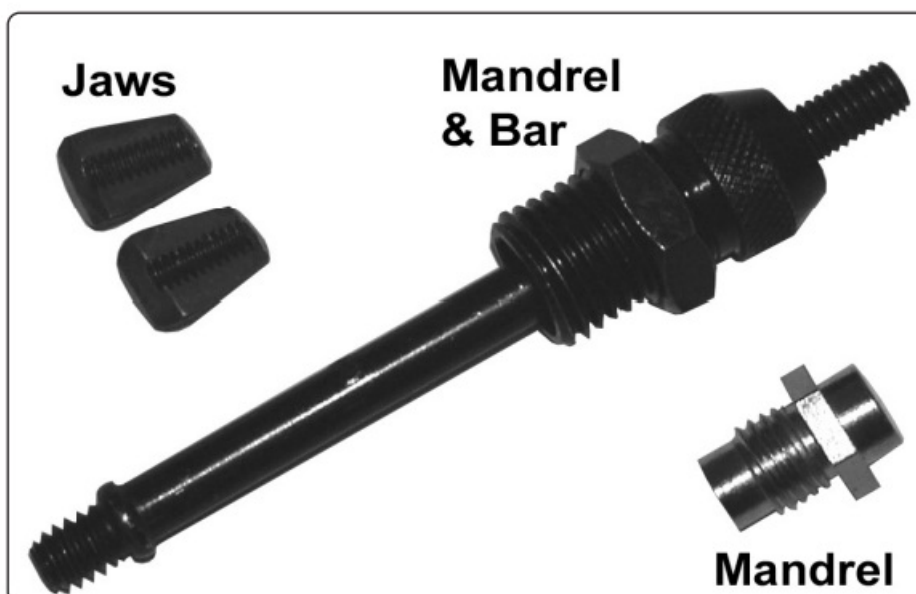

## ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.

**Note:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

**Important:** No Liability is accepted for incorrect use of this product.

**Warranty:** Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR


01284 757500

01284 703534

[sales@sealey.co.uk](mailto:sales@sealey.co.uk)

[www.sealey.co.uk](http://www.sealey.co.uk)

## Documents / Resources

	<p><a href="#">SEALEY AK39602.V2 Rivet and Threaded Nut Rivet Kit</a> [pdf] Instructions AK39602.V2, Rivet and Threaded Nut Rivet Kit, AK39602.V2 Rivet and Threaded Nut Rivet Kit, Threaded Nut Rivet Kit, Nut Rivet Kit, Rivet Kit</p>
---	--

## References

-  [Sealey - Leading Professional Tool & Workshop Equipment Supplier](#)