



**PI14,API15 Single  
Double Drawer Unit for  
API Workbenches**



# SEALEY API14,API15 Single Double Drawer Unit for API Workbenches Instruction Manual

[Home](#) » [SEALEY](#) » SEALEY API14,API15 Single Double Drawer Unit for API Workbenches Instruction Manual 

## Contents

- [1 SEALEY API14,API15 Single Double Drawer Unit for API Workbenches](#)
- [2 SAFETY](#)
- [3 INTRODUCTION](#)
- [4 SPECIFICATION](#)
- [5 ASSEMBLY](#)
- [6 MAINTENANCE](#)
- [7 SCANNER](#)
- [8 MORE INFORMATION](#)
- [9 FAQ](#)
- [10 Documents / Resources](#)
  - [10.1 References](#)
- [11 Related Posts](#)



**SEALEY API14,API15 Single Double Drawer Unit for API Workbenches**



## Specifications

- **Model No:** API14, API15
- **Capacity:** 40kg per Drawer
- **Compatibility:** API1500, API1800, API2100
- **Drawer Size (WxDxH):** Medium 300 x 450 x 70mm; 300 x 450 x 70mm – x2
- **Overall Size:** 405 x 580 x 180mm; 407 x 580 x 280mm

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble-free performance.

**IMPORTANT:** PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.

- Refer to instruction manual

## SAFETY

- **WARNING!** Ensure Health & Safety, local authority, and general workshop practice regulations are adhered to when using workbenches and associated workbench drawers.
- **WARNING!** Use the workbench on level and solid ground, preferably concrete. Avoid tarmacadam since the workbench may sink into the surface.
  - Locate the workbench in a suitable working area.
  - Keep the work area clean, and uncluttered, and ensure there is adequate lighting.
  - Keep the workbench clean and tidy per good workshop practice.
  - Keep children and unauthorized persons away from the working area.
  - Use the supplied rubber caps on all exposed self-tapping screw projections.
  - DO NOT remove a fully loaded drawer.

- DO NOT use the workbench drawers for any purpose other than that for which they are designed.
- DO NOT use the workbench drawers out of doors.
- DO NOT get the workbench drawers wet or use in wet locations or areas where there is condensation.
- DO NOT clean the workbench drawers with any solvents which may damage the painted surfaces.

**NOTE:** The assembly of this product to the workbench will require assistance.

## INTRODUCTION

 
 
 
 
Slim-width single or double-drawer units for our API Series of Industrial Workbenches, to give the option of more under-bench access. Supplied fixing kit allowing the unit to be securely mounted. Drawers run on heavy-duty ball-bearing drawer slides with a load bearing of up to 40kg. Each drawer is fitted with fixed dividers running front to back and supplied with cross dividers for a personalized storage layout. Supplied with a high-quality lock and two coded keys.

## SPECIFICATION

- Model No:.....  
API14.....API15
- Capacity:..... 40kg per Drawer.....40kg  
per Drawer
- Compatibility:..... API1500, API1800, API2100..... API1500, API1800,  
API2100
- Drawer Size (WxDxH):.....Medium 300 x 450 x 70mm.....300 x 450 x  
70mm- x2
- Overall Size:..... 405 x 580 x 180mm.....407 x 580 x  
280mm

Item	Description	Quantity
1	Enclosure c/w Ball Bearing Tracks	1
2	Drawer c/w Runner Tracks	1 set per drawer (2 drawers Model No API15)
3	Central Mullion Partition	1 per drawer
4	Transom Partition Plate	4 per drawer
5	Self Tapping Screw	8 per drawer
6	Safety Cap	8 per drawer
7	Bridge Channel (c/w captive nuts)	2
8	Hex Head Screw M8 x 20 c/w spring & plain washers	4 sets
9	Drawer Key (record the key code)	2

## ASSEMBLY

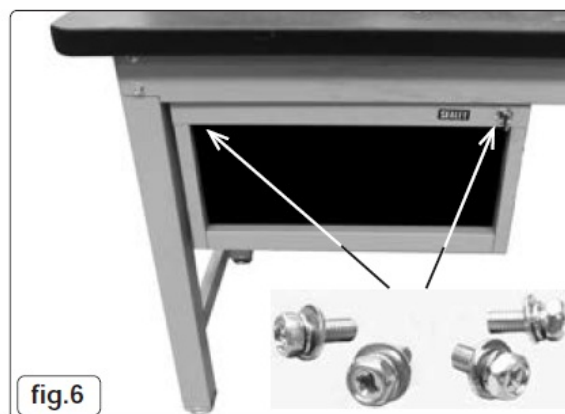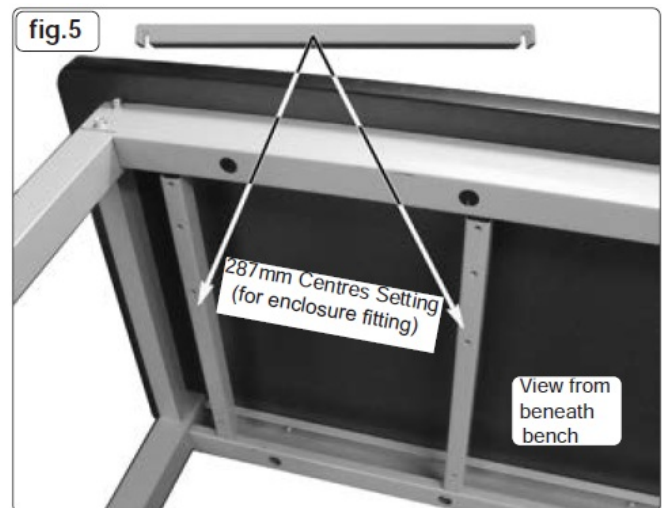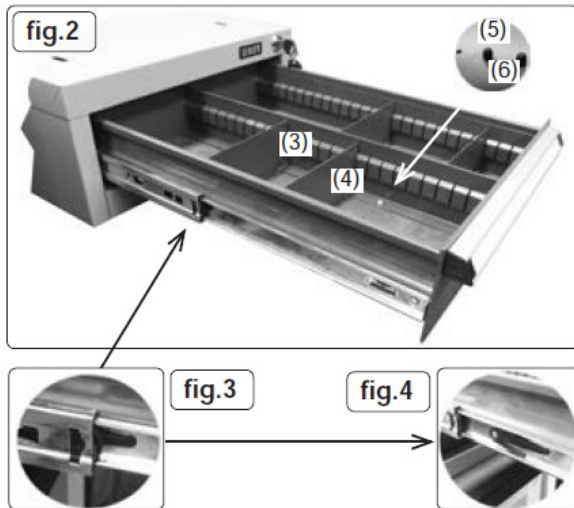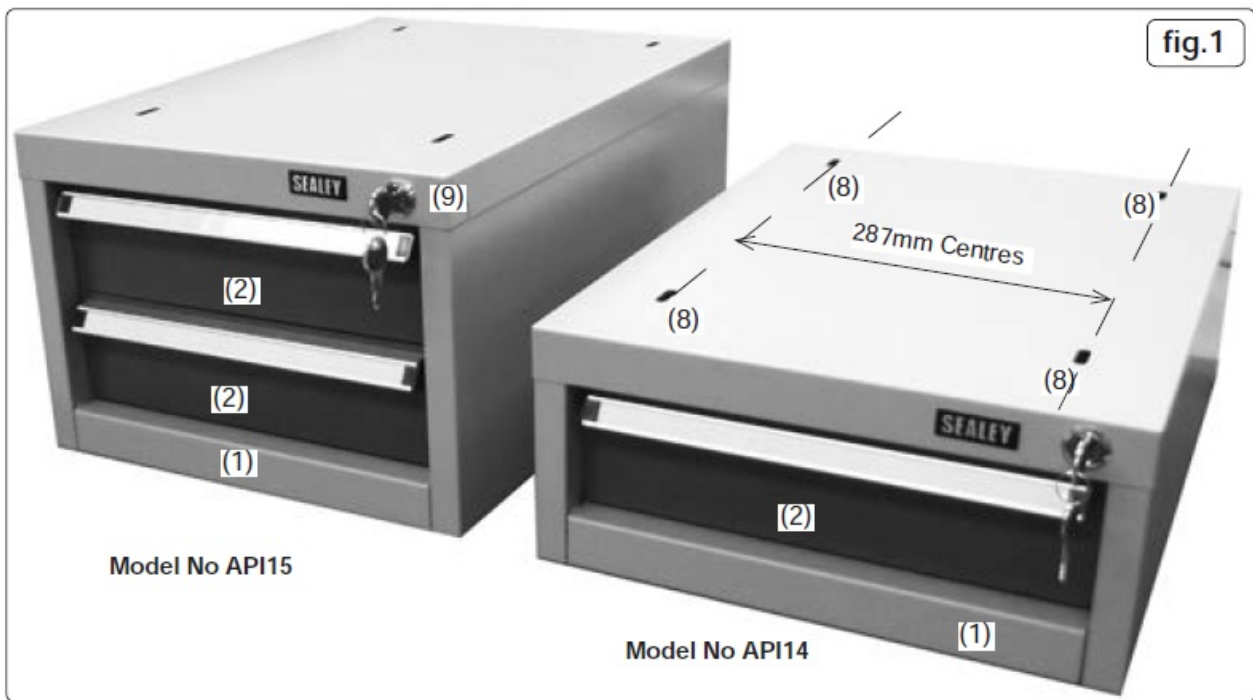

## DRAWER REMOVAL FROM ENCLOSURE

- Unlock the drawer if required; open the drawer fully and squarely until it stops (fig.2). Remove the loose components, items 3,4,5 and 6.
- With your thumb, push the plastic catch down one side (fig.3) and with your forefinger up the opposite side. Continue to hold the catches until fully exposed (fig.4), then release. The drawer can now be fully removed.
- It will be necessary to hold the enclosure steady; unless fitted to the bench; to remove the drawer completely.
- Slide the drawer runners back inside the enclosure after drawer removal.

## FITTING THE ENCLOSURE TO THE BENCH

- Locate the two bridge channels from beneath the bench at the required centres (fig.1) and (fig.5). As a suggestion only; position the bridge channels centrally about the bench width for best access.
- Offer the empty drawer enclosure up to the bridge channels aligning slots to the captive nut holes in the bridge channels.
- A second person is required to screw the enclosure to the bridge channels. DO NOT tighten at this stage.
- With all four screws fitted (item 8), with at least three threads engaged on each nut; slide the enclosure to the required position (fig.6) and tighten all four screws.

## DRAWER MULLION PARTITION

- Fit (item 3) centrally with self tapping screws (item 5) through the pre-punched holes. Transom plates (item 4) partitioning as required. Fit the rubber safety caps (item 6) to all self tapping screw projections, from the underside of the drawer.
- Locate the drawer guides with the enclosure runners and slide the drawer/drawers fully back into the enclosure. Generally the reverse of removal, without the need to touch the plastic catches. DO NOT force at any stage.

## MAINTENANCE

- Lubricate the drawer runner bearings with a general purpose grease every 6 months. Wipe off excess with a dry cloth.

## ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.

**Note:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. Please note that other versions of this product are available. If you require documentation for alternative versions, please email or call our technical team on [technical@sealey.co.uk](mailto:technical@sealey.co.uk) or 01284 757505.

**Important:** No Liability is accepted for incorrect use of this product.

**Warranty:** Guarantee is 120 months from purchase date, proof of which is required for any claim.

## SCANNER

REGISTER YOUR PURCHASE HERE




## MORE INFORMATION

© Jack Sealey Limited

## FAQ

- **Q: Can I use the drawers outdoors?**
  - A: No, it is not recommended to use the workbench drawers outdoors to prevent damage and ensure longevity.
- **Q: What should I do if a drawer is stuck?**
  - A: Avoid forcing the drawer. Check for any obstructions or misalignment that may be hindering its movement. Contact customer support for further assistance if needed.
- **Q: How should I clean the workbench drawers?**
  - A: Use a mild detergent and water solution to clean the drawers. Avoid harsh solvents that may damage the paint finish.

## Documents / Resources

	<p><a href="#">SEALEY API14,API15 Single Double Drawer Unit for API Workbenches</a> [pdf] Instruction Manual</p> <p>API14 API15, API14 API15 Single Double Drawer Unit for API Workbenches, Single Double Drawer Unit for API Workbenches, Double Drawer Unit for API Workbenches, Drawer Unit for API Workbenches, API Workbenches, Workbenches</p>
--	--

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.