



[Home](#) » [SEALEY](#) » **SEALEY CD2005TT Convector Heater Instruction Manual** 



SEALEY CD2005TT Convector Heater



Contents [[hide](#)]

1 THANK YOU

2 SAFETY

3 INTRODUCTION

4 SPECIFICATION

5 ASSEMBLY

6 OPERATION

7 MAINTENANCE

8 INFORMATION REQUIREMENTS FOR ELECTRIC LOCAL SPACE HEATERS

9 CUSTOMER SUPPORT

10 Documents / Resources

10.1 References

THANK YOU

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.

- Refer to instruction manual



- Do not cover



- Indoor use only



SAFETY

1. ELECTRICAL SAFETY

❑ **WARNING!** It is the user's responsibility to check the following:

Check all electrical equipment and appliances to ensure that they are safe before using.

Inspect power supply leads, plugs and all electrical connections for wear and damage. Ensure that the insulation on all cables and on the appliance is safe before connecting it to the power supply.

X DO NOT use worn or damaged cables, plugs or connectors.

✓ Ensure that any faulty item is repaired or is replaced immediately by a qualified electrician.

✓ If the cable or plug is damaged during use, switch off the electricity supply and remove from use.

Ensure that repairs are carried out by a qualified electrician.

✓ Sealey recommend that an RCD (Residual Current Device) is used with all electrical products.

Important: Ensure that the voltage rating on the appliance suits the power supply to be used and that the plug is fitted with the correct fuse.

X DO NOT pull or carry the appliance by the power cable.

X DO NOT pull the plug from the socket by the cable.

2. GENERAL SAFETY

❑ **WARNING!** Disconnect the heater from the mains power supply before carrying out any servicing or maintenance.

✓ Disconnect the heater from the power supply before handling or cleaning.

✓ Maintain the heater in good order and clean condition for best and safest performance.

✓ Replace or repair damaged parts. Use genuine parts only. Unauthorised parts may be dangerous and will invalidate the warranty.

✓ Ensure there is adequate lighting and keep the immediate area in front of the outlet

grille clear.

✓ Only use the heater standing on its feet in the upright position.

X DO NOT allow any untrained persons to use the heater. Ensure they are familiar with the controls and hazards of the heater.

X DO NOT let power lead hang over an edge (i.e. table), or touch a hot surface, lie in heater hot air flow, or run under a carpet.

X DO NOT touch the outlet grille (top) of the heater during and immediately after use as it will be hot.

X DO NOT place the heater near items that may be damaged by heat.

X DO NOT place heater too close to yourself or any object, allow the air to circulate freely.

X DO NOT use the heater for any purpose other than for which it is designed.

X DO NOT use heater on very deep pile carpets.

X DO NOT use the heater outdoors. These heaters are designed for indoor use only.

X DO NOT use heater if the power cord, plug or the heater is damaged, or if the heater has become wet.

X DO NOT use in bathroom, shower room, or in any wet or damp environments or where there is high condensation.

X DO NOT operate the heater when you are tired or under the influence of alcohol, drugs or intoxicating medication.

X DO NOT allow the heater to get wet as this may result in an electric shock and personal injury.

X DO NOT insert or allow objects to enter any openings of heater as this may cause an electric shock, a fire or damage to heater.

X DO NOT use the heater where there are flammable liquids, solids or gases such as petrol, solvents, aerosols etc, or where heat sensitive materials may be stored.

X DO NOT place the heater immediately below any electrical outlet.

X DO NOT cover heater when in use, and do not obstruct the air inlet and outlet grille (i.e. clothing, curtain, furniture, bedding etc).

✓ Allow the unit to cool before storage. When not in use, disconnect from the mains power supply and store in a safe, cool, dry, childproof area.

NOTE: Children of less than 3 years should be kept away unless continuously supervised.

Children aged from 3 years and less than 8 years shall only switch on/off the appliance

provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

INTRODUCTION

Electric convector heater features built-in turbo fan for accelerated heating. Three heat settings of 750/1250/2000W for gradual control of heating elements. Rotary controlled room thermostat maintains ambient temperature at preset level. Features 24 hour timer allowing the user to programme the time and duration the heater is operated. Slimline sturdy construction and high quality finish make this unit suitable for home, light industrial and office environments. Supplied with 3-pin plug.


SPECIFICATION

Model No:.....	CD2005TT.V2
Fuse Rating:.....	10A
Power Supply Cable Length:.....	1.5m
Power Settings:.....	750/1250/2000W
Supply:.....	230V
Size (WxDxH):.....	595 x 200x 420mm
Supply:.....	230V
Timer:.....	Yes
Turbo Fan:.....	Yes
Weight:.....	2.9kg

ASSEMBLY

1. MOUNTING THE FEET (fig.1.)

1. Turn the heater upside down and support it securely. Take one of the feet and place it onto the underside of the heater in the position indicated in (fig.1).
2. When the foot is positioned correctly 2 holes in the foot will line up with the holes in the underside of the heater.
3. Fasten each foot down with the self tapping screws provided.

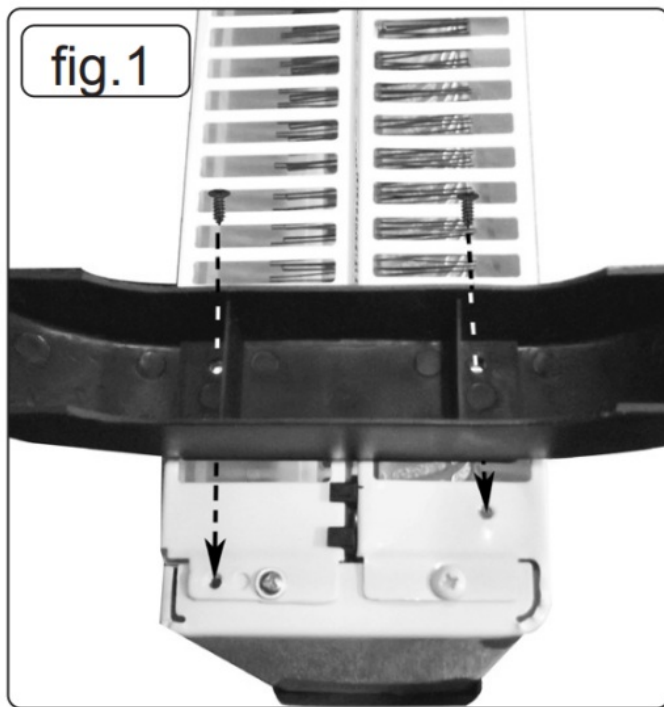

OPERATION

1. OPERATING THE HEATER (See fig.2)

1. Place the heater in a suitable position in the area you require to heat.
2. Allow a minimum of 500mm between the heater and adjacent objects such as furniture etc.
3. Plug the heater into the mains supply.
4. Turn the thermostat knob (**fig.2.C**) to a high setting.

2. SELECTING THE HEAT OUTPUT

Choose the required heat output by selecting the appropriate switch which will light up when pressed.

3. USING THE THERMOSTAT (fig.2.C)

1. Once the required room temperature has been achieved, turn the thermostat down slowly in the direction of the Min. setting until the heat output switch light (part of each switch) goes out. The heater will then keep the surrounding air at the set temperature by switching on and off at intervals. You may reset the thermostat at any time.

4. TURBO FAN FEATURE

1. To boost the output of air at any temperature setting select switch 'D' which has a fan symbol beside it. The fan can also be used to circulate cool air only by switching off the two heat setting switches.

5. TIMER FUNCTION

1. To activate timer function, turn the outer ring (**fig.2.E**) to the correct time. This will need to be repeated every time that the heater is reconnected to the power supply.



2. The function selector switch (fig.2.F) has three positions:
Left.....Heater on permanently
Centre.....Heater timed.
Right.....Heater off.
– The heater will not operate at all with the switch set in this position.
3. To select the time during which the heater is active, move the timer pins (**fig.2.G.**) outwards for the period required. Each pin is equal to 15minutes.
4. To switch the unit off, turn the heat selecting switches off and unplug from the mains.
5. Allow the unit to cool before handling or storage.
% **WARNING! DO NOT** touch the top of the heater when in use as it becomes hot.

6. SAFETY CUT OUT FEATURE

1. The heater is fitted with a thermostatic safety cut out which will turn the heater off automatically should the airflow become blocked or if the heater has a technical

malfunction.

2. Should this happen, switch the heater off and unplug it from the mains power supply.

‰ **WARNING!** In such a case the heater will be very hot.

X DO NOT connect the heater to the power supply again until the reason the safety cut out activated has been identified.

3. Allow the heater to cool completely before handling and then check the air inlet and outlet for obstructions before attempting to switch the unit back on.
4. If the cause is not obvious return the heater to your local Sealey stockist for servicing.

MAINTENANCE

1. Before attempting any maintenance ensure the unit is unplugged from the mains power supply and that it is cool.
2. Clean the unit with a soft dry cloth.

DO NOT use abrasives or solvents.

3. Periodically check the air inlet and outlet to ensure the air way is clear.



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



REGISTER YOUR PURCHASE HERE



WEEE REGULATIONS

Dispose of this product at the end of its working life in compliance with the EU Directive

on Waste Electrical and Electronic Equipment (WEEE).

When the product is no longer required, it must be disposed of in an environmentally protective way.

Contact your local solid waste authority for recycling information.

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product. Please note that other versions of this product are available. If you require documentation for alternative versions, please email or call our technical team on technical@sealey.co.uk or 01284 757505.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

INFORMATION REQUIREMENTS FOR ELECTRIC LOCAL SPACE HEATERS

Model identifier(s): CD2005TT

Item	Symbol	Value	Unit	Item	Unit
Heat Output				Type of heat input, for electric storage local space heaters only (select one)	
Nominal heat output	P _{nom}	1.9	kW	Manual heat charge control, with integrated thermostat	Yes ✓ / No

Minimum heat output (indicative)*	P _{min}	0.7	kW	Manual heat charge control with room and/or outdoor temperature feedback	Yes / No ✓
Maximum continuous heat output	P _{max,c}	1.9	kW	Electronic heat charge control with room and/or outdoor temperature feedback	Yes / No ✓
				Fan assisted heat output	Yes / No ✓
Auxiliary Electricity Consumption				Type of heat output / room temperature control (select one)	
At nominal heat output	e _{lmax}	NA	kW	Single stage heat output and no room temperature control	Yes / No ✓
At minimum heat output	e _{lmin}	NA	kW	Two or more manual stages, no room temperature control	Yes / No ✓
In standby mode	e _{lSB}	NA	kW	With mechanical thermostat room temperature control	Yes ✓ / No

	With electronic room temperature control	Yes / No ✓
	Electronic room temperature control plus day timer	Yes / No ✓
	Electronic room temperature control plus week timer	Yes / No ✓
	Other Control Options (multiple selections possible)	
	Room temperature control, with presence detection	Yes / No ✓
	Room temperature control, with open window detection	Yes / No ✓
	With distance control option	Yes / No ✓
	With adaptive start control	Yes / No ✓

	With working time limitation	Yes / No ✓
	With black bulb sensor	Yes / No ✓
Contact details: Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk, IP32 7AR. www.sealey.co.uk		
v1		ERP Table 2

CUSTOMER SUPPORT

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR



01284 757500




sales@sealey.co.uk



www.sealey.co.uk



Documents / Resources

	<p>SEALEY CD2005TT Convactor Heater [pdf] Instruction Manual</p> <p>CD2005TT.V2, CD2005TT Convactor Heater, CD2005TT, Convactor Heater, Heater</p>
---	--

References

- [User Manual](#)

CD2005TT, CD2005TT Convector Heater, CD2005TT.V2, Convector Heater, heater,

SEALEY SEALEY

—Previous Post

SEALEY MK64.V2 1 X 450mm Roll Step Up Masking Paper Dispenser Instruction Manual

Next Post—

SEALEY 9126/12 Worksafe Thermal Super Grip Gloves Instruction Manual

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Manuals+, Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.