



SEALEY CD2013TT.V3 2000W Convector Heater with Turbo and Timer Instruction Manual

[Home](#) » [SEALEY](#) » SEALEY CD2013TT.V3 2000W Convector Heater with Turbo and Timer Instruction Manual 



2000W CONVECTOR HEATER WITH TURBO &
TIMER



Contents

- 1 CD2013TT.V3 2000W Convactor Heater with Turbo and Timer
- 2 SAFETY
- 3 INTRODUCTION
- 4 SPECIFICATION
- 5 OPERATION
- 6 MAINTENANCE
- 7 ENVIRONMENT PROTECTION
- 8 Documents / Resources
- 8.1 References

CD2013TT.V3 2000W Convactor Heater with Turbo and Timer

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to
instructions



Electrical shock
hazard



Hot surfaces



Do not cover



Keep in dry area
protect from rain

SAFETY

11. ELECTRICAL SAFETY

WARNING! It is the user's responsibility to check the following

Check all electrical equipment and appliances to ensure that they are safe before using. Inspect power supply leads, plugs and all electrical connections for wear and damage. Sealey recommend that an RCD (Residual Current Device) is used with all electrical products. You may obtain an RCD by contacting your local Sealey stockist. If the product is used in the course of business duties, it must be maintained in a safe condition and routinely PAT (Portable Appliance Test) tested.

ELECTRICAL SAFETY INFORMATION: it is important that the following information is read and understood

1.1.1 Ensure that the insulation on all cables and on the appliance is safe before connecting it to the power supply.

1.1.2 Regularly inspect power supply cables and plugs for wear or damage and check all connections to ensure that they are secure.

1.1.3 **IMPORTANT:** Ensure that the voltage rating on the appliance suits the power supply to be used and that the plug is fitted with the correct fuse – see fuse rating in these instructions.

x DO NOT pull or carry the appliance by the power cable.

x DO NOT pull the plug from the socket by the cable:

x DO NOT use worn or damaged cables, plugs or connectors. Ensure that any faulty item is repaired or replaced immediately by a qualified electrician.

 
1.1.4 This product is fitted with a BS1363/A 13 Amp 3 pin plug

If the cable or plug is damaged during use, switch the electricity supply and remove from use.

Ensure that repairs are carried out by a qualified electrician

Replace a damaged plug with a BS1363/A 13 Amp 3 pin plug.

If in doubt contact a qualified electrician

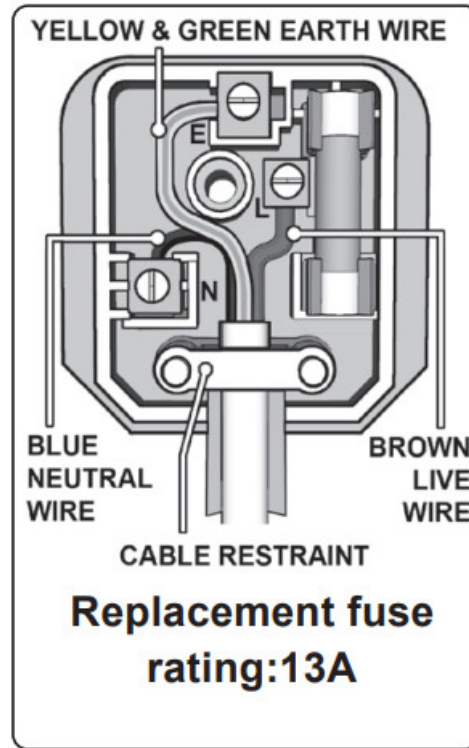

A) Connect the GREEN/YELLOW earth wire to the earth terminal 'E'

B) Connect the BROWN live wire to the live terminal 'L'

C) Connect the BLUE neutral wire to the neutral terminal 'N'

Ensure that the cable outer sheath extends inside the cable restraint and that the restraint is tight. Sealey recommends that repairs are carried out by a qualified electrician.

1.2 GENERAL SAFETY

WARNING! Disconnect the heater from the mains power supply before carrying out any servicing or maintenance.

- ✓ Disconnect the heater from the power supply before handling or cleaning
- ✓ Maintain the heater in good order and clean condition for best and safest performance.
- ✓ Replace or repair damaged parts. Use genuine parts only. Unauthorised parts may be dangerous and will invalidate the warranty.
- ✓ Ensure there is adequate lighting and keep the immediate area in front of the outlet grille clear.
- ✓ Only use the heater standing on its feet in the upright position
- X DO NOT** leave the heater unattended
- X DO NOT** allow any untrained or incompetent persons to use the heater. Ensure they are familiar with the controls and hazards of the heater.
- X DO NOT** let power lead hang over an edge (i.e. table), or touch a hot surface, lie in heater hot air flow, or run under a carpet.
- X DO NOT** touch the outlet grille (top) of the heater during and immediately after use as it will be hot.
- X DO NOT** place the heater near items that may be damaged by heat. Keep all objects at least 1 metre from the front, sides and rear of the heater. DO NOT place heater too close to yourself. Allow the air to circulate freely.
- X DO NOT** allow children to touch or to operate the heater.
- X DO NOT** use the heater for any purpose other than for which it is designed
- X DO NOT** use heater on very deep pile carpets.
- X DO NOT** use the heater out of doors. These heaters are designed for indoor use only.
- X DO NOT** use heater if the power cord, plug or the heater is damaged, or if the heater has become wet.
- X DO NOT** use in bathroom, shower room, or in any wet or damp environments or where there is high condensation
- X DO NOT** operate the heater when you are tired or under the influence of alcohol, drugs or intoxicating medication
- X DO NOT** allow the heater to get wet as this may result in an electric shock and personal injury.
- X DO NOT** insert or allow objects to enter any openings of heater as this may cause an electric shock, a fire or

damage to heater.

X DO NOT use the heater where there are flammable liquids, solids or gases such as petrol, solvents, aerosols etc, or where heat sensitive materials may be stored

X DO NOT place the heater immediately below any electrical outlet.

X DO NOT cover heater when in use, and **DO NOT** obstruct the air inlet and outlet grille (i.e. clothing, curtain, furniture, bedding etc)

Allow the unit to cool before storage. When in use, disconnect from the mains power supply and store in a safe, cool, dry, childproof area

NOTE: This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance

in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision

INTRODUCTION

Modern design convector heater with two heat settings of 1250/2000W for gradual control of heating elements. Rotary controlled room thermostat maintains ambient temperature at preset level. Hard-wearing feet to allow for maximum stability. Features built- in turbo fan for accelerated heating and 24 hour timer allowing the user to program the time and duration the heater is operated. Slimline, sturdy construction and high quality finish make these units suitable for home, light industrial and office environments. Supplied with 3-pin plug


SPECIFICATION

Model NoCD2013TT.V3

Power1250/2000W

Supply230V

 Size (W x D X H)600mm x 100mm x 350mm

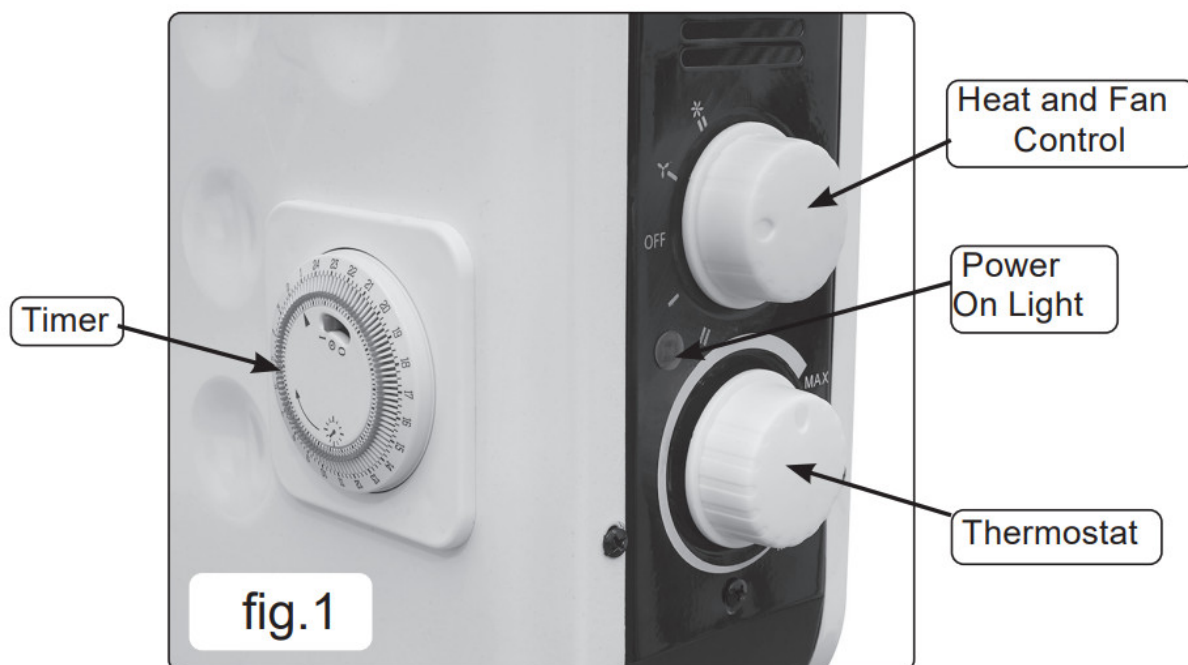

OPERATION

41. Fit feet using the self tapping screws supplied

42. Place the heater in a suitable position in the area you require to heat. Allow a minimum of 50cm between the heater and adjacent objects such as furniture etc.

43. HEATING



431, Plug the heater into the mains supply, turn the thermostat knob (fig. 1) clockwise to a high setting

432, To select 1250W output, set Heat Control dial to T mark

433, To select 2000W output, set Heat Control dial to II' mark

434, Once the required room temperature has been achieved, turn the thermostat down slowly in the direction of the minimum setting until the heat output switch light goes out. The heater will then keep the surrounding air at the set temperature by switching on and off at intervals. You may reset the thermostat at any time.

44. TURBO FAN FEATURE (fig.2)

4.4.1 To boost the output of air at any temperature setting, select fan symbol (low  or high  speed service)

4.4.2, The fan can also be used to circulate cool air only by switching off the two heat setting switches.

45. TIMER FUNCTION (fig.3)

4.5.1, To activate timer function, turn the outer ring clockwise (fig.3) to set the correct current time. This will need to be repeated every time that the heater is reconnected to the power supply.

4.5.2, The function selector switch (fig.3) has three positions:

Left Heater on permanently. =

Centre..... Heater timed

Right..... Heater off. The heater will not operate at all with the switch set in this position

4.5.3, To select the time during which the heater is active, move the timer pins (fig.3) outwards for the period required. Each pin is equal to 15 minutes

4.5.4. To switch the unit off, turn the heat / fan control dial to "OFF" and unplug from the mains. Allow the unit to cool before handling or storage.

WARNING! DO NOT touch the top of the heater when in use as it becomes hot.

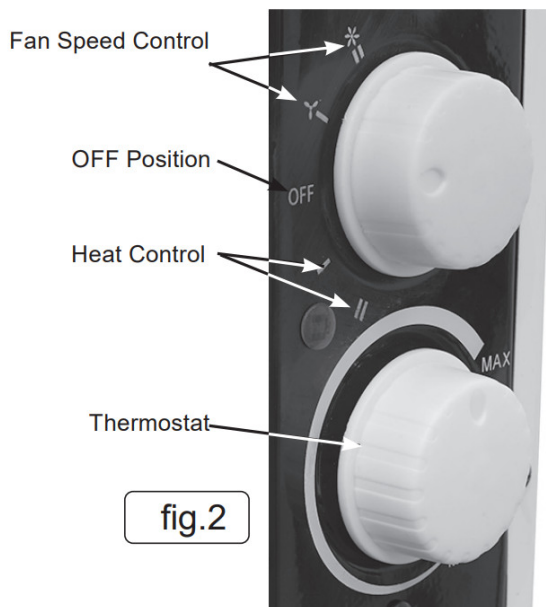 


fig.2

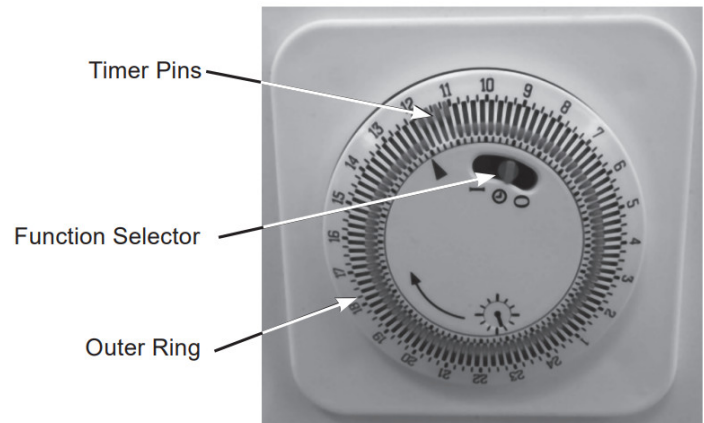 


fig.3

46. SAFETY CUT OUT FEATURE

4.6.1. The heater is fitted with a thermostatic safety cut out which will turn the heater off automatically should the airflow become blocked or if the heater has a technical malfunction.

If this happens, switch the heater off and unplug it from the mains power supply.

WARNING! In such a case, the heater will be very hot

X DO NOT connect the heater to the power supply again until the reason the safety cutout activation has been identified

Allow the heater to cool completely before handling and then check the air inlet and outlet for obstructions before attempting to switch the unit back on.

If the cause is not obvious, return the heater to your local Sealey stockist for servicing

MAINTENANCE

WARNING! Before attempting any maintenance ensure the unit is unplugged from the mains power supply and that it is cool

51. Clean the unit with a soft dry cloth. **DO NOT** use abrasives or solvents.

52. Periodically check the air inlet and outlet to ensure the air way is clear.

ENVIRONMENT PROTECTION



Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.

WEEE REGULATIONS



Dispose of this product at the end of its working life in compliance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information

Note:

It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. Please note that other versions of this product are available.

If you require documentation for alternative versions, please email or call our technical team on technical@sealey.co.uk or 01284 757505

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Information requirements for electric local space heaters

Model identifier(s): CD2013TT.V3					
Item	Symbol	Value	Unit	Item	Unit
Heat output			Type of heat input, for electric storage local space heaters only (select one)		
Nominal heat output		2.0	kW	Manual heat charge control, with integrated thermostat	Yes No 7
Minimum heat output (indicative)* 'Enter figure or NA	P mp	1.	kW	Manual heat charge control wkh room and/or outdoor temperature feedback	Yes No
Maximum continuous heat output		2.	kW	Electronic heat charge with room econ and/or outdoor temperature feedback	Yes No
			Fan assisted heat output		Yes No ✓
Auxiliary electricity consumption			Type of heat output/room temperature control (select one)		
At nominal heat output	e/ x	N/a	kW	Single stage heat output and no room temperature control	Yes No 1
At minimum heat output	el	N/a	kW	Two or more manual stages, no room temperature control	Yes No 1
In standby mode	e/s,	N/a	kW	t With mechanic thermostat room temperature control	Yes 1 No
			With electronic room temperature control		Yes No ✓
			Electronic room temperature control plus day timer		Yes No ✓
			Electronic room temperature control plus week timer		Yes No ✓
			Other control options (multiple selections possible)		
			Room temperature control, with presence detection		Yes No 1
			Room temperature control, with open window detection		Yes No ✓
			With distance control option		Yes No ✓
			With adaptive start control		Yes No ✓
			With working time limitation		Yes No 7
			With black bulb sensor		Yes No 7
Contact details: Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk, IP32 7AR. www.sealey.co.uk					



01284 757500



01284 703534



sales@sealey.co.uk



www.sealey.co.uk



© Jack Sealey Limited
Original Language Version
CD2013TT.V3 Issue 2 (3) 28/06/22

Documents / Resources



[SEALEY CD2013TT.V3 2000W Convect or Heater with Turbo and Timer](#) [pdf] Instruction Manual

CD2013TT.V3 2000W Convect or Heater with Turbo and Timer, CD2013TT.V3, 2000W Convect or Heater with Turbo and Timer, Convect or Heater with Turbo and Timer, Heater with Turbo and Timer, Turbo and Timer, Timer

References

- [Sealey - Leading Professional Tool & Workshop Equipment Supplier](#)