

# SEALEY LED50WS 10w Cob LED Rechargeable Torch With Wireless Speaker Instruction Manual



10W COB LED RECHARGEABLE TORCH WITH WIRELESS SPEAKER

MODEL NO: LED50WS

**Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.**

**IMPORTANT:** PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.




Refer to instruction manual

## 1. SAFETY

### 1.1. GENERAL SAFETY

- ✓ Ensure the lamp is fully charged before initial use.
- ✗ **DO NOT** turn the lamp on when it is being charged.
- ✗ **DO NOT** shine directly into your, another person's or an animal's eyes.
- ✗ **DO NOT** allow children to use the lamp.
- ✗ **DO NOT** handle or move the lamp whilst it is being charged.
- ✗ **DO NOT** use the lamp if you suspect that the battery or the lamp casing is damaged.
- ✗ **DO NOT** leave battery in a discharged state, recharge battery immediately. Before storage, fully recharge the battery, subsequently recharge the battery at least once every six months of non-use.

### 1.2. BATTERY SAFETY

-  **WARNING!** To reduce the risk of burns or fire:
  - ✗ **DO NOT** attempt to open, disassemble, modify or service the battery pack.
  - ✗ **DO NOT** crush, puncture, short external contacts or dispose of in fire or water.
  - ✗ **DO NOT** expose to temperatures above 60°C (140°F).
- ✓ Recycle or dispose of used battery as stipulated by local regulation.
- ✓ If the electrolyte in the cells gets on your skin, thoroughly wash with soap and water. If it gets in your eyes, rinse thoroughly with cool water and seek immediate medical attention.

## 2. INTRODUCTION

Supplied with built-in high quality wireless speaker which can easily be connected to your smartphone or tablet to play music. Rubber coated housing with recessed hook and integral 90° adjustable stand. Battery charge level indicator on the back. Main light has an on/off power button when pressed multiple times cycles through two levels of brightness, 500 lumens and 250 lumens with a runtime of 4.5hr/12hr. Light produces a beam distance of up to 50m. IK06 Impact rated to withstand falls of up to 1m. Light can be used whilst charging. Supplied with Micro USB cable.

## 3. SPECIFICATION

**Model No:** ..... **LED50WS**  
**Battery** ..... 3.7V 3Ah Li-ion  
**Charging Time** ..... 6hr  
**IP Rating** ..... IPX4  
**LED Type:** ..... 10W COB  
**Length** ..... 160mm  
**Lumen Output:** ..... 500lm  
**Operating Time:** .....4.5-12hr



## IMPORTANT WARRANTY INFORMATION

The battery fitted to this lamp is considered to be a consumable item and its ability to accept a charge will reduce over time. We will provide warranty against mechanical and electrical defect for a period of one year – this **DOES NOT** cover fair wear and tear. If the battery is not properly charged before first use, or regularly conditioned, its capacity will diminish. Under these circumstances we will not replace the battery regardless of whether it is less than one year old.

## 4. OPERATION

### 4.1. CHARGING THE TORCH (fig.1)

4.1.1. Connect the USB lead to the socket on the rear of the lamp (fig.1). Plug USB lead into a power supply and turn on.

4.1.2. When the battery has fully charged the battery indicator LEDs will all be lit (fig.1).

4.1.3. The LEDs will light upon initial switch on of either the torch or wireless function to indicate battery charge state and will go off after a few seconds. When all 4 LEDs are lit the charge level is 100%, 3 LEDs indicate 75%, 2 LEDs indicate 50% and 1 LED indicates 25%.

### 4.2. OPERATING THE TORCH FUNCTION

4.2.1. Direct the lens away from your eyes before switching on.

4.2.2. The torch ON/OFF button is located on the rear of the lamp (fig.1). The operation sequence is: one press

100% light, two presses 50% light , three presses OFF.

#### 4.3. OPERATING THE WIRELESS CONNECTION

4.3.1. The wireless connection is made by holding down the marked button (fig.1) for approximately 3 seconds. To cancel wireless operation hold down the wireless button (fig.1) for approximately 3 seconds. When the wireless operation is switched on or off the unit will produce an audible indication.

4.3.2. 5 minutes after disconnecting the wireless operation the unit will shut down.

4.3.3. If the unit is playing music, pressing the wireless button (fig.1) will pause the output and if pressed again will resume playing.

4.3.4. To redial the last call made, press the wireless button (fig.1) twice in quick succession.

4.3.5. To accept a phone call whilst playing music, press the wireless button once to answer. To disconnect a call press the wireless button (fig.1) twice.

4.3.6. Please note that the wireless function cannot be used when the unit is being charged.

4.3.7. The lamp may be suspended by the hook or attached to any ferrous surface by using the magnets (fig.1).

**NOTE:** Both magnets need to be in contact with the ferrous surface in order that the lamp is held securely. One engaged magnet will not be sufficient in all orientations. The lamp is also fitted with a pop out stand (fig.1) which can support the lamp at an angle.

**fig.1**

1. **Hook**
2. **Magnet**
3. **On/Off mode button**
4. **Micro USB port**
5. **Stand**
6. **Battery indicator lights**
7. **Wireless button**

#### 5. MAINTENANCE

5.1. Keep the torch clean by wiping with a damp cloth.

5.2. Store torch in a dry childproof area.



##### **WEEE REGULATIONS**

Dispose of this product at the end of its working life in compliance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.

#### BATTERY REMOVAL

Under the Waste Batteries and Accumulators Regulations 2009, Jack Sealey Ltd are required to inform potential purchasers of products containing batteries (as defined within these regulations), that they are registered with Valpak's registered compliance scheme. Jack Sealey Ltd's Batteries Producer Registration Number (BPRN) is BPRN00705.



##### **ENVIRONMENT PROTECTION**

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



REGISTER YOUR  
PURCHASE HERE

**Note:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

**Important:** No Liability is accepted for incorrect use of this product.

**Warranty:** Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR



01284 757500



[sales@sealey.co.uk](mailto:sales@sealey.co.uk)



[www.sealey.co.uk](http://www.sealey.co.uk)

© Jack Sealey Limited

Original Language Version

LED50WS Issue 3 (3) 14/06/23

## Contents

### 1 Documents / Resources

#### 1.1 References

#### 2 Related Posts

## Documents / Resources



[SEALEY LED50WS 10w Cob LED Rechargeable Torch With Wireless Speaker](#) [pdf] Instruction Manual

LED50WS, LED50WS 10w Cob LED Rechargeable Torch With Wireless Speaker, 10w Cob LED Rechargeable Torch With Wireless Speaker, LED Rechargeable Torch With Wireless Speaker, Torch With Wireless Speaker, Wireless Speaker, Speaker

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.