



SEALEY MS900PS Variable Speed Sander Polisher Instruction Manual

[Home](#) » [SEALEY](#) » SEALEY MS900PS Variable Speed Sander Polisher Instruction Manual 

Contents

- [1 SEALEY MS900PS Variable Speed Sander Polisher](#)
- [2 Product Usage Instructions](#)
- [3 FAQ:](#)
- [4 SAFETY](#)
- [5 GENERAL SAFETY](#)
- [6 INTRODUCTION](#)
- [7 SPECIFICATIONS](#)
- [8 CONTENTS](#)
- [9 ASSEMBLY](#)
- [10 OPERATION](#)
- [11 MAINTENANCE](#)
- [12 Warranty](#)
- [13 CONTACT](#)
- [14 Documents / Resources](#)
 - [14.1 References](#)
- [15 Related Posts](#)



SEALEY MS900PS Variable Speed Sander Polisher



Product Usage Instructions

General Safety Precautions

1. Wear eye protection.
2. Wear ear protection.
3. Wear a mask.
4. Wear protective gloves.

FAQ:

- **Q:** What should I do if the cable or plug is damaged during use?
- **A:** Switch off the electricity supply and remove the product from use. Replace a damaged plug with a BS1363/A 13 Amp 3-pin plug. If you are unsure, contact a qualified electrician.
- **Q:** Can I use this product with a petrol-driven generator?
- **A:** The MS900PS requires a 'clean' and stable power supply. While a normal 230V mains supply is suitable, the output from many petrol-driven generators may not be suitable for this product.

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble-free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to
instruction
manual



Wear eye
protection



Wear ear
protection



Wear a mask



Wear
protective
gloves

SAFETY

ELECTRICAL SAFETY

 
WARNING! It is the user's responsibility to check the following:

Check all electrical equipment and appliances to ensure that they are safe before use. Inspect power supply leads, plugs, and all electrical connections for wear and damage. Sealey recommends that an RCD (Residual Current Device) is used with all electrical products. You may obtain an RCD by contacting your local Sealey stockist.

If the sander/polisher is used in the course of business duties, it must be maintained in a safe condition and routinely PAT (Portable Appliance Test) tested.

For electrical safety information, the following information must be read and understood.

1. Ensure that the insulation on all cables and the appliance is safe before connecting it to the power supply.
2. Regularly inspect power supply cables and plugs for wear or damage and check all connections to ensure that they are secure.
3. **Important:** Ensure that the voltage rating on the appliance suits the power supply to be used and that the plug is fitted with the correct fuse – see fuse rating in these instructions.
 - DO NOT pull or carry the appliance by the power cable.
 - DO NOT pull the plug from the socket by the cable. Remove the plug from the socket by maintaining a firm grip on the plug.
 - DO NOT use worn or damaged cables, plugs, or connectors. Ensure that any faulty item is repaired or replaced immediately by a qualified electrician.

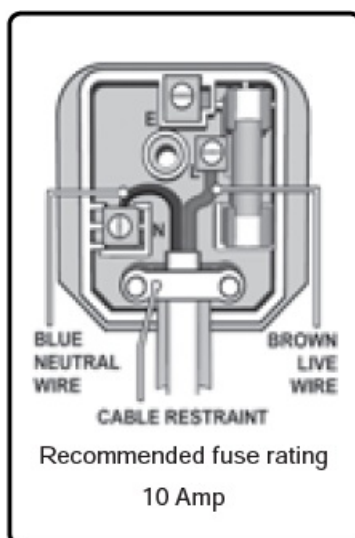

4. This product is fitted with a BS1363/A 13 Amp 3-pin plug.

If the cable or plug is damaged during use, switch the electricity supply and remove it from use.

Replace a damaged plug with a BS1363/A 13 Amp 3-pin plug. If in doubt contact a qualified electrician.

Class II products are wired with live (brown) and neutral (blue) only and are marked with the Class II symbol;



- **A)** Connect the BROWN live wire to the live terminal 'L'.
 - **B)** Connect the BLUE neutral wire to the neutral terminal 'N'.
 - **C)** After wiring, check that there are no bare wires and ensure that all wires have been correctly connected.
 - Ensure that the cable outer sheath extends inside the cable restraint and that the restraint is tight.
 - DO NOT connect either wire to the earth terminal.
 - Sealey recommends that repairs be carried out by a qualified electrician.
 - **NOTE:** The MS900PS has an electronic speed control, which requires a 'clean' and stable power supply. A normal 230V mains supply is suitable. However, the output from many petrol-driven generators may not be suitable for this tool. 'Inverter' type power supplies provide a much more stable output and should present no problem.
5. Cable extension reels. When a cable extension reel is used it should be fully unwound before connection. A cable reel with an RCD fitted is recommended since any product that is plugged into the cable reel will be protected. The section of the cores of the cable is important. We suggest a 1.5mm² section as a minimum but to be sure that the capacity of the cable reel is suitable for this product and for others that may be used in the other output sockets, we recommend the use of a 2.5mm² section cable.

GENERAL SAFETY

- **WARNING!** Ensure Health & Safety, local authority, and general workshop practice regulations are adhered to when using this equipment.
- Familiarise yourself with the application and limitations of the product, as well as the specific potential hazards peculiar to the polisher.
- **WARNING!** Disconnect from the mains power and ensure the disc is at a complete standstill before changing accessories, servicing, or performing any maintenance.
- Maintain the polisher/sander in good condition (use an authorized service agent).
- Replace or repair damaged parts. Use genuine parts only. Non-authorized parts may be dangerous and will invalidate the warranty.
- **WARNING!** Keep all guards and holding screws in place, tight, and in good working order. Check regularly for damaged parts. A guard or any other part that is damaged must be repaired/replaced before the tool is next used.
- Locate the polisher/sander in a suitable working area, and keep the area clean tidy, and free from unrelated materials. Ensure there is adequate lighting.
- Keep the polisher/sander clean for the best and safest performance.
- Before each use check abrasive attachments for condition. If worn or damaged replace immediately.
- Ensure there are no flammable or combustible materials near the work area.
- **WARNING!** Wear approved eye safety protection, ear defenders, and, if dust is generated, respiratory protection.
- Maintain correct balance and footing. Ensure the floor is not slippery and wear non-slip shoes.
- Remove ill-fitting clothing. Remove ties, watches, rings, and any loose jewelry, and contain and/ or tie back long hair.

- Keep children and unauthorized persons away from the working area.
- Secure a non-stable workpiece with a clamp, vice, or other adequate holding device.
- Remove adjusting keys and wrenches from the machine and its vicinity before turning it on.
- DO NOT use equipment for any purpose other than that for which it is designed.
- DO NOT operate the polisher/sander if any parts are damaged or missing as this may cause failure or possible personal injury.
- **WARNING! DO NOT** sand any materials containing asbestos.
- DO NOT switch the polisher/sander on whilst the head is in contact with the workpiece and avoid unintentional starting.
- DO NOT get the polisher/sander wet or use it in damp locations or areas where there is condensation.
- DO NOT allow untrained persons to operate the polisher/sander.
- DO NOT operate the polisher/sander when you are tired, or under the influence of alcohol, drugs, or intoxicating medication.
- DO NOT use the polisher/sander where there are flammable liquids, solids or gases such as paint solvents, etc.
- DO NOT leave the polisher/sander operating unattended.
- DO NOT carry the polisher/sander with your finger on the power switch.
- DO NOT pull the cord to remove the plug from the power supply.
- Use a qualified person to lubricate and maintain the polisher/sander.
- When not in use unplug from the mains power supply and store in a safe, dry, childproof area.

LEAD PAINT WARNING! Paint once contained lead as a traditional ingredient. Contact with the dust from the removal of such paint is toxic and must therefore be avoided. The following action must be taken before using the machine as a sander:

1. The user must determine potential hazards relating to the age of the paint to be removed. (Modern paints do not have lead content).
2. **DANGER!** Keep all persons and pets away from the working area. The following are particularly vulnerable to the effects of lead paint dust: Expectant women, babies, and children.
3. We recommend personal protection by using the following safety items:
 - **A)** Paint Spray Respirator (Sealey ref. SSP1699) **B)** PE Coated Hooded Coverall (Sealey ref. SSP266).
 - **C)** Latex Gloves (Sealey ref. SSP24).
4. Take adequate measures to contain paint dust, flakes, and scrapings. Wear safety equipment, as in (3) above, and thoroughly clean all areas when a task is complete.
5. Ensure the paint waste is disposed of in sealed bags or containers according to local regulations.

INTRODUCTION

 
- Variable speed control for sanding and polishing.
- Speed varies from 1000 to 3000rpm.
- Alloy bevel gear head with composite motor housing.
- Supplied with Ø170mm backing pad and side handle.

SPECIFICATIONS

- **Model no:**MS900PS
- **Pad size:**Ø170mm
- **Thread size:**M14 x 2mm
- **No load speed:**1000 – 3000rpm
- **Power:**1300W
- **Supply:**230V
- **Weight:**3.8kg
- **Noise power:**102Lwa
- **Noise pressure:**91Lpa
- **Vibration:**7.678m/s²
- **Uncertainty:**1.5k

CONTENTS

1. Polisher Unit,
2. Side Handle,
3. Pad,
4. Spanner

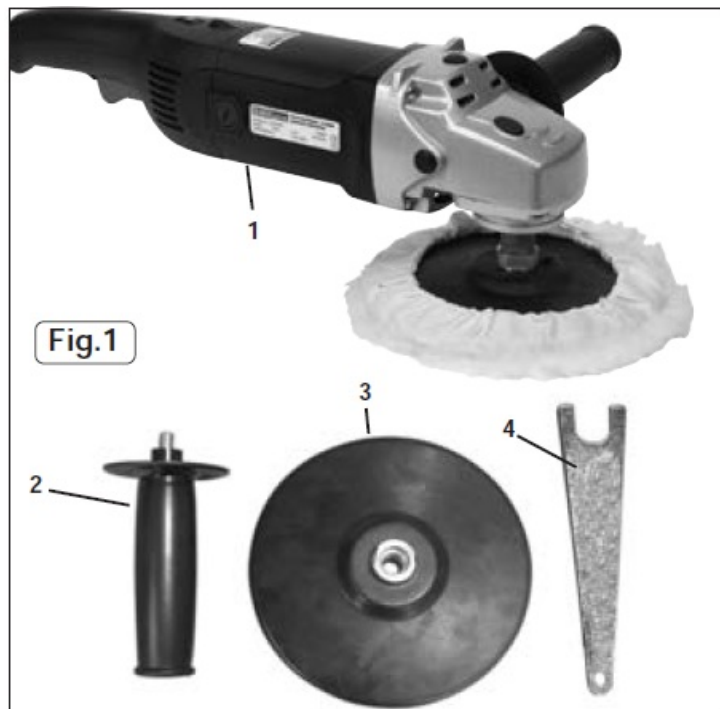

ASSEMBLY

WARNING! Ensure the unit is not plugged into mains before attempting any assembly.



1. Attach the side handle (fig.1.2). Note: there is a mounting hole on either side and the top to suit the application and/or operator.
2. To attach the rubber pad:
Thread the rubber pad (fig.1.3) on the shaft and tighten using a spanner (fig.1.4) by holding the shaft steady with the locking button (fig.2).

3. To fit a sanding disc:

Select the grade of self-adhesive sanding disc required, peel off the backing, and centrally locate the disc onto the rubber pad.

4. To fit a polishing bonnet:

  Fit the polishing bonnet over the secured rubber pad, using the pull cord, tighten the bonnet and tie a bow to secure, and tuck the loose ends of the bow neatly under the bonnet.

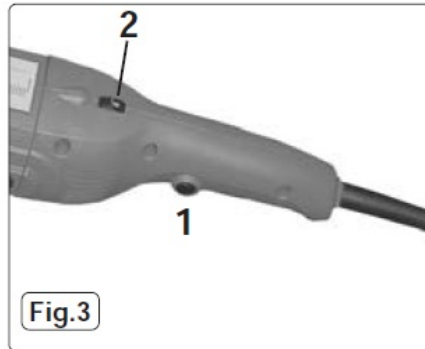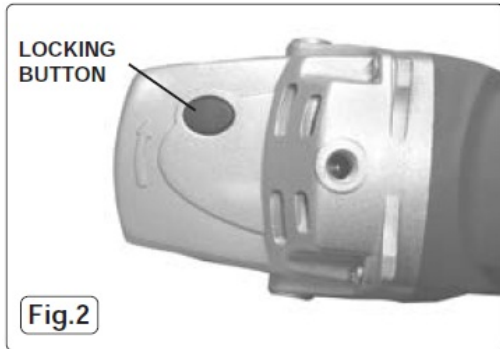

OPERATION

WARNING! Ensure you read, understand, and apply the safety instructions in Section 1.

1. Ensure the power control switch is NOT locked on before plugging into the mains.
2. Hold the polisher firmly with one hand on the handle grip and the other on the side handle. To select the required speed rotate the speed selector switch (fig.3.2) to the required speed 1 to 6.

Speed Settings: Range from 1000pm – 3000pm

3. To start the polisher press and hold down the safety lock button (fig.3.1) and squeeze the trigger. When releasing the trigger, the safety lock button will engage, preventing the polisher from being inadvertently started.

WARNING! The high-speed settings are intended for sanding. If used for polishing an excessive amount of surface material may be removed or if polishing at too high a speed the tool will burn through paintwork. For this reason, it will not be necessary to use the tool at a speed setting above 3 (2000pm no load).

Note: As the rubber support disc is flexible when sanding it should not be used head-on, but at an angle of approximately 10 to 20 degrees.

4. Contact your Sealey stockist for details of compound heads and lambswool bonnets.

MAINTENANCE

WARNING! Before attempting any maintenance ensure the unit is unplugged from the mains power supply.

1. Keep the machine clean and dry
2. DO NOT use abrasives to clean the unit. Ensure all external head screws are tight.
3. Clean regularly by blowing a jet of compressed air through side vents to ensure motor ventilation is kept clear.

WARNING! Wear approved safety eye protection and, if necessary, respiratory protection.

Note. The following maintenance must only be carried out by a technically qualified person or an authorized Sealey service agent.

4. Check carbon brushes by removing each side screw (fig.4). Check to see if the brushes are worn or cracked. If

so, the brushes must be replaced to avoid sparking and damage to the armature. Always change brushes as a pair. Use only genuine spare parts as these are specifically designed for the machine. Failure to do so may be dangerous and will invalidate your warranty.

5. After each 500 hours of use replace the gear head grease to prevent gear wear and possible drive failure.

ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories, and packaging should be sorted, taken to a recycling center, and disposed of in a manner that is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



WEEE REGULATIONS

Dispose of this product at the end of its working life in compliance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.



Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications, and parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty

- Guarantee is 12 months from purchase date, proof of which is required for any claim.

WARNING! – Risk of Hand Arm Vibration Injury.

This tool may cause Hand Arm Vibration Syndrome if its use is not managed adequately.

This tool is subject to the vibration testing section of the Machinery Directive 2006/42/EC.

This tool is to be operated per these instructions.

- Measured vibration emission value (a):. 7.678 m/s²
- Uncertainty value (k):. 1.5 m/s²

Please note that the application of the tool to a sole specialist task may produce a different average vibration emission. We recommend that a specific evaluation of the vibration emission is conducted before commencing with a specialist task.

- A health and safety assessment by the user (or employer) will need to be carried out to determine the suitable duration of use for each tool.
- NB: Stated Vibration Emission values are type-test values and are intended to be typical.
- Whilst in use, the actual value will vary considerably from and depend on many factors.
- Such factors include; the operator, the task, and the inserted tool or consumable.
- NB: ensure that the length of leader hoses is sufficient to allow unrestricted use, as this also helps to reduce


vibration.

- The state of maintenance of the tool itself is also an important factor, a poorly maintained tool will also increase the risk of Hand Arm Vibration Syndrome.
 - Health surveillance.
 - We recommend a program of health surveillance to detect early symptoms of vibration injury so that management procedures can be modified accordingly.
 - Personal protective equipment.
 - We are not aware of any personal protective equipment (PPE) that provides protection against vibration injury that may result from the uncontrolled use of this tool. We recommend a sufficient supply of clothing (including gloves) to enable the operator to remain warm and dry and maintain good blood circulation in fingers etc.
- Please note that the most effective protection is prevention, please refer to the Correct Use and Maintenance section in these instructions. Guidance relating to the management of hand-arm vibration can be
- found on the HSC website www.hse.gov.uk – Hand-Arm Vibration at Work.



CONTACT

- Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR
- 01284 757500
- 01284 703534
- sales@sealey.co.uk.
- www.sealey.co.uk.

Documents / Resources

	<p>SEALEY MS900PS Variable Speed Sander Polisher [pdf] Instruction Manual MS900PS, MS900PS Variable Speed Sander Polisher, Variable Speed Sander Polisher, Speed Sander Polisher, Sander Polisher, Polisher</p>
-------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

References

-  [HSE: Information about health and safety at work](#)
-  [Sealey - Leading Professional Tool & Workshop Equipment Supplier](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.