



SEALEY SMS2008 Bench Top Drill Bit Sharpener User Guide

[Home](#) » [SEALEY](#) » SEALEY SMS2008 Bench Top Drill Bit Sharpener User Guide 



BENCHTOP DRILL BIT SHARPENER
MODEL NO: SMS2008

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble-free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to
instructions



Wear eye
protection



Wear protective
gloves



Wear ear
protection

Contents

1 SAFETY

1.1 ELECTRICAL SAFETY

1.2 GENERAL SAFETY

2 INTRODUCTION

3 SPECIFICATION

4 OPERATION

5 SETTING

5.1 SHARPENING

6 GRINDING









7 MAINTENANCE


8 Documents / Resources

9 Related Posts

SAFETY

ELECTRICAL SAFETY

	<p>WARNING! It is the user's responsibility to check the following:</p> <p>Check all electrical equipment and appliances to ensure that they are safe before use. Inspect power supply leads, plugs, and all electrical connections for wear and damage. Sealey recommends that an RCD (Residual Current Device) is used with all electrical products. You may obtain an RCD by contacting your local Sealey stockist.</p> <p>If used in the course of business duties, it must be maintained in a safe condition and routinely PAT (Portable Appliance Test) tested.</p> <p>Electrical safety information, it is important that the following information is read and understood.</p>
	Ensure that the insulation on all cables and on the appliance is safe before connecting it to the power supply.
	regularly inspect power supply cables and plugs for wear or damage and check all connections to ensure that they are secure.
	Ensure that the voltage rating on the appliance suits the power supply to be used and that the plug is fitted with the correct fuse – see fuse rating in these instructions.
	DO NOT pull or carry the appliance by the power cable.
	DO NOT pull the plug from the socket by the cable.
	DO NOT use worn or damaged cables, plugs or connectors. Ensure that any faulty item is repaired or replaced immediately by a qualified electrician.
	<p>This product is fitted with a BS1363/A 13 Amp 3 pin plug.</p> <p>If the cable or plug is damaged during use, switch off the electricity supply and remove from use. Ensure that repairs are carried out by a qualified electrician.</p> <p>Replace a damaged plug with a BS1363/A 13 Amp 3 pin plug. If in doubt contact a qualified electrician.</p> <p>a) Connect the GREEN/YELLOW earth wire to the earth terminal 'E'.</p> <p>b) Connect the BROWN live wire to the live terminal 'L'.</p> <p>c) Connect the BLUE neutral wire to the neutral terminal 'N'.</p> <p>Ensure that the cable outer sheath extends inside the cable restraint and that the restraint is tight.</p> <p>Sealey recommends that repairs are carried out by a qualified electrician.</p>

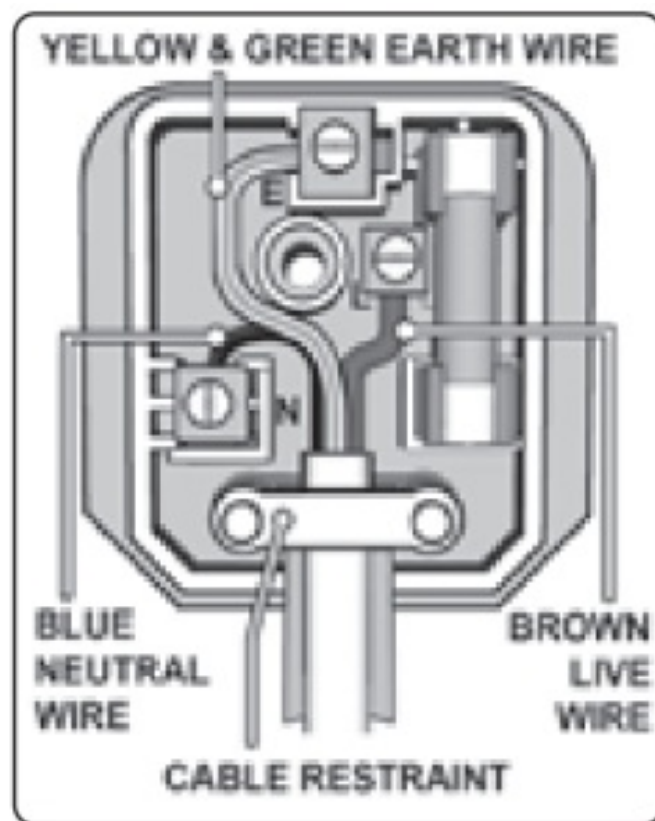

GENERAL SAFETY


✓	Disconnect the sharpener from the mains power before changing accessories, servicing or performing any maintenance.
✓	Maintain sharpener and stone in good condition. Check moving parts and alignment. If necessary use an authorised service agent.
✓	Replace or repair damaged parts. Use genuine parts only. Unapproved parts may be dangerous and will invalidate the warranty.
✓	The grinding wheel or stone must only be changed by persons holding an appropriate grinding wheel certificate.
✓	Wear approved safety goggles, ear defenders, and safety gloves.
✓	Remove ill-fitting clothing. Remove ties, watches, rings, and other loose jewelry, and contain long hair.
✓	Use a sharpener in a suitable work area, keep the area clean, tidy, and free from unrelated materials and ensure adequate lighting.
✓	Maintain correct balance and footing. DO NOT over-reach and ensure the floor is not slippery. Wear non-slip shoes.
✓	Keep nonessential persons away from the working area.
✗	DO NOT operate the sharpener if any parts are missing or the sharpener is damaged.
✗	DO NOT use the sharpener for a task it was not designed to perform.
✗	DO NOT operate sharpener where there are flammable liquids or gasses.
✗	DO NOT get the sharpener wet or use in damp or wet locations.
✗	DO NOT switch the sharpener on whilst the stone is in contact with the workpiece.
✗	DO NOT touch the workpiece immediately after sharpening as it will be very hot.
✗	DO NOT try to cool the sharpening wheel with water or other lubricants.
✗	DO NOT touch the sharpening disc whilst operating, or whilst plugged into the mains power.
✗	DO NOT leave the sharpener running unattended.
✗	DO NOT operate the sharpener when you are tired or under the influence of alcohol, drugs or intoxicating medication.
✗	DO NOT attach modules if the wheel is still moving and DO NOT use without a module in place.
✓	Use for a maximum of 15 minutes continuous use.
✓	When not in use switch the sharpener off, remove the plug from the power supply.

INTRODUCTION

Fast, simple, and effective way to sharpen your drill bits. Gives a perfect angle/sharpened head to make drilling with your bit easier. Suitable for use with HSS Titanium, Cobalt, and Carbon Steel bits in range Ø3-13mm.

SPECIFICATION

Model No:..... SMS2008
Motor Power/supply: 80W/230V
No-load speed: 4200rpm
Minimum Drill Diameter: Ø3mm
Maximum Drill Diameter: Ø13mm
Replacement grinding wheelSMS2008.10

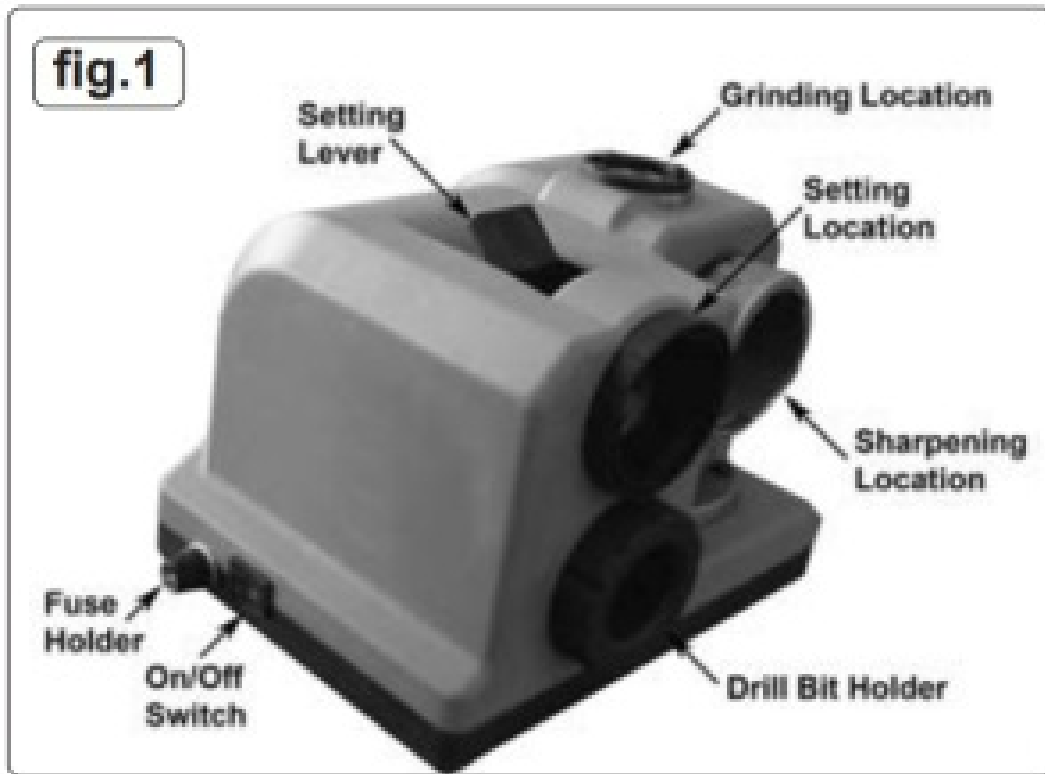


OPERATION

fig.2



fig.3

Terminal

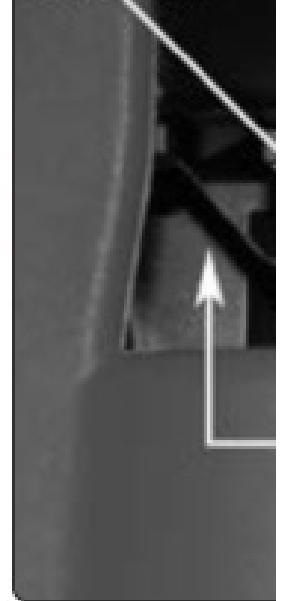


SETTING

1. 4.1.1. Remove the drill bit holder from its location.
2. 4.1.2. Loosen the locking ring (fig.2) and insert the drill bit; tighten the locking ring lightly.
3. 4.1.3. Lock the drill bit holder into the Setting Location whilst holding the setting lever (which controls the spring jaws) open, allowing the drill bit to be pushed back by the terminal (see fig.3). Ensure that the drill bit is inserted with the cutting edge of a flute vertically aligned, as in fig.2.
4. 4.1.4. Tighten the locking ring fully before removing the drill bit holder from the Setting Location.


SHARPENING

1. 4.2.1. The settings achieved in section 4.1. are transferred to the sharpener by moving the drill bit holder, complete with drill bit, to the Sharpening Location.
2. 4.2.2. Switch the machine on by means of the on/off switch.
3. 4.2.3. Insert the drill bit holder into the Sharpening Location ensuring that the upper lugs on the holder body are engaged with the cut-outs in the collar (fig.4).
4. 4.2.4. Sharpen the drill bit by rocking the collar back and forth until the sound from the wheel diminishes.
5. 4.2.5. Remove the drill bit holder, rotate through 180°, and repeat step 4.2.4.
6. 4.2.6. If an arrowhead point has not been achieved, turn the drill bit through 90° in the holder and repeat from 4.1.2.

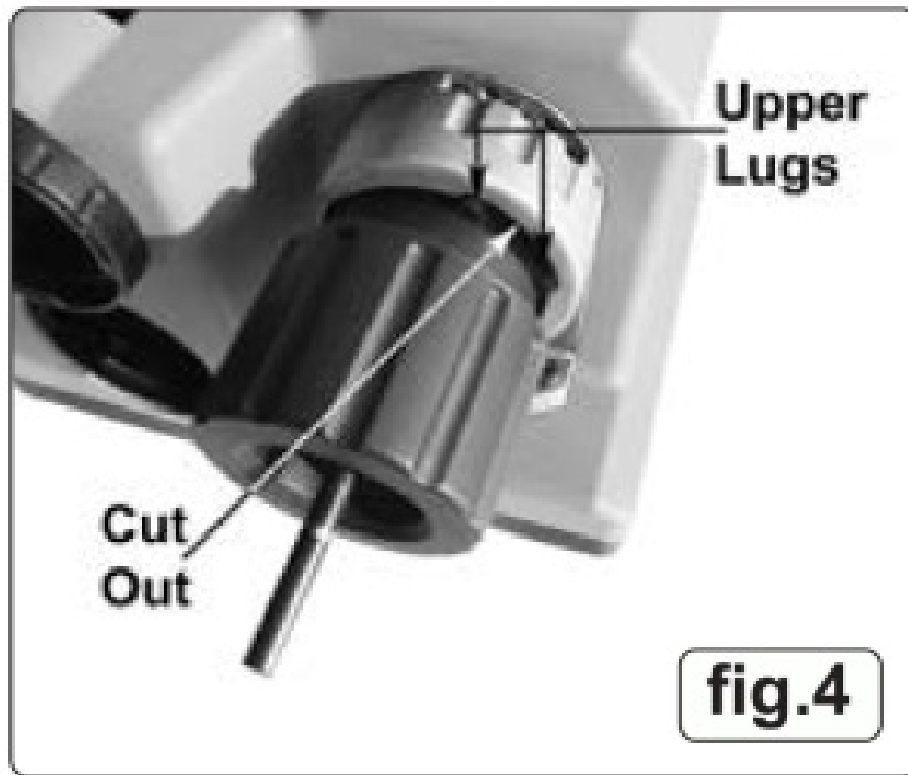


GRINDING

1. 4.3.1. Switch the machine on.
2. 4.3.2. Insert the drill bit holder into the Grinding Location, ensuring that the lower lugs engage in the cut-outs (see fig.5).
3. 4.3.3. Work the drill bit holder back and forth until the grinding sound diminishes.
4. 4.3.4. Remove the drill bit holder and re-insert having turned through 180°.
5. 4.3.5. Repeat step 4.3.3. When complete, the drill bit will be sharpened and ready for use.

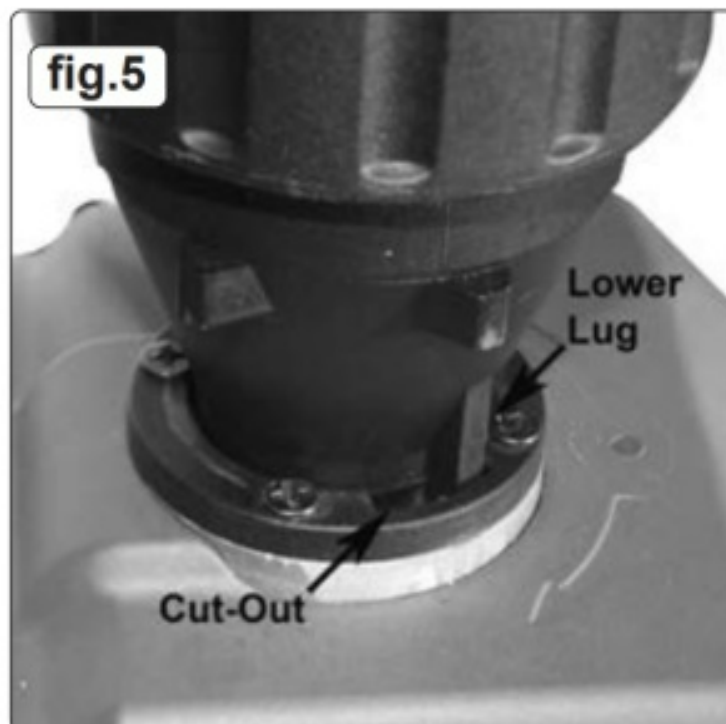



MAINTENANCE

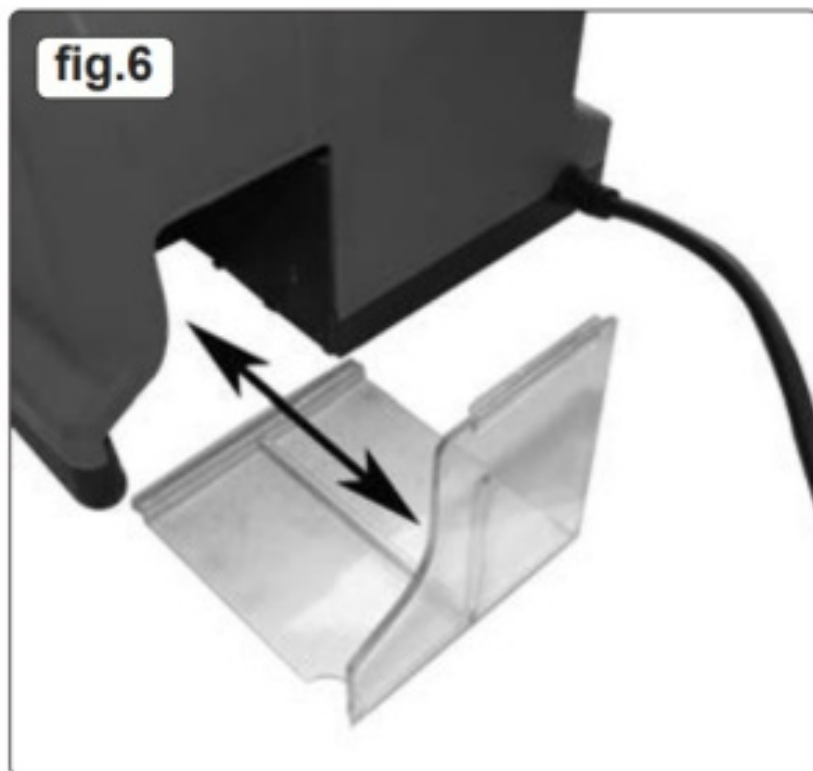1. 5.1. Before cleaning disconnect from the mains. Keep clean and free from oil and grease, store in dry conditions.
2. 5.2. Metal filings can be cleared by removing the cover as in fig.6 and emptying the contents.



3. 5.3. An internal fuse is fitted, accessed via the fuse holder next to the on/off switch, see fig.1.

X DO NOT replace with a fuse of a different rating.

	<p>ENVIRONMENT PROTECTION</p> <p>Recycle unwanted materials instead of disposing of them as waste. All tools, accessories, and packaging should be sorted, taken to a recycling center and disposed of in a manner that is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.</p>
	<p>WEEE REGULATIONS</p> <p>Dispose of this product at the end of its working life in compliance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.</p>

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications, and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR



01284 757500



01284 703534




sales@sealey.co.uk



www.sealey.co.uk

Documents / Resources

	<p>SEALEY SMS2008 Bench Top Drill Bit Sharpener [pdf] User Guide SMS2008, Bench Top Drill Bit Sharpener</p>
---	---