

Seanxon A9 Portable Blender User Manual

Home » Seanxon » Seanxon A9 Portable Blender User Manual

11

Contents

- 1 Seanxon A9 Portable Blender
- **2 Product Information**
- **3 Product Usage Instructions**
- 4 Procedure
- **5 DESCRIPTION**
- **6 TECHNICAL PARAMETERS**
- 7 Warranty
- 8 Malfunction Analysis and

Troubleshooting

- 9 Documents / Resources
 - 9.1 References



Seanxon A9 Portable Blender



Product Information

Specifications:

• Model: A9

• Jar Capacity: 600ml

• Jar Material: AS (Food Grade)

• Base Material: ABS

• Blade Material: 304 Stainless Steel

• Blending Voltage: 7.4V

• Charging Voltage / Current: 5V / 1A

• Battery Type / Capacity: 18650 / 2000mAh*2

• Motor Speed: 18000rpm

• Charging Time: About 3 to 5 hours

• Single blend time of Blend mode: 30 seconds per cycle

• Maximum blend time of Pulse mode: 30 seconds

Product Usage Instructions

Your First Blend:

Before your first blend, ensure that your blender is fully charged by checking whether all indicator lights are green. Follow these steps:

1. Tighten the body and base until the magnet is aligned with the power button.

2. Ensure that the blender is clean before use.

Procedure:

- 1. Cut fruits into small pieces before adding them into the blender. The fruit pieces should fill up about 60% of the jar capacity.
- 2. Add drinkable liquid until it reaches 80% of the jar capacity.
- 3. Tighten the lid and tilt down the blender to ensure that fruit pieces are not stuck under the blades.
- 4. Choose the desired blending mode:
 - **Blend Mode:** Click the power button once to start blending. The green lights will flash. Slightly tilt the blender back and forth while blending if desired. Click the power button once again to pause the blending process.
 - **Pulse Mode:** Double-click the power button to enter pulse mode. The orange lights will be on. While the yellow lights flicker, press and hold the power button repeatedly to pulse. Pulse mode will automatically end after 5 seconds of inactivity and the yellow lights will turn off.

Cautions:

- Do not put the blender in the dishwasher.
- Keep the blender away from fire.
- Do not use the blender with non-microwavable or fragile food items.
- Use the metallic spiral ball to prevent parts from scratching or damaging.

Maintenance:

The USB port is waterproof, but it is prohibited to soak the base in water or put it into the dishwasher for cleaning to avoid damage to the battery after water inside.

FAQ

- Q: What should I do if all indicator lights are in red or there are no lights, and the blender is unable to start?
- A: This issue may occur when the blender runs out of battery. Charge it for 3 to 5 hours to ensure that it gets a full charge.
- Q: What should I do if all indicator lights flicker in red and green alternately, and the blender is unable to start?
- A: This issue may occur when the blender stops working due to leakage. Check if the jar is tightened to the
 base properly. If the issue persists, there may be an ingredient that is too thick or the volume may be too large,
 causing motor overload protection. Add some liquid or cut ingredients into smaller pieces, or shift into Pulse
 Mode, then restart the blender.
- Q: What should I do if all indicator lights flicker in red for 8 seconds?
- A: This issue may occur due to a leakage problem. Make sure the seal is placed properly and check the thread alignment when screwing on the jar/cap. Tighten the jar and base, ensuring that the magnet is aligned with the power button.
- Q: Can I put the blender in the dishwasher for cleaning?

• A: No, it is not recommended to put the blender in the dishwasher for cleaning.

NOTE:

- Product is suitable for USB Type-C cable. Suitable for power bank charging as well.
- When not been used for a long time, charge it fully first to keep battery in high voltage state in order to prevent from damage.



Cautions

- DO NOT remove the lid or add in something rigid in your blender when it is blending.
- DO NOT submerge the base into water to prevent base elements from damaging and make sure it is off before cleaning.
- DO NOT disinfect your blender in microwave or hot water above 80°C.
- DO NOT put your blender in freezer.
- DO NOT clean your blender with any kind of metallic spiral ball to prevent parts from scratching or damaging.
- DO NOT clean your blender with a dishwasher machine.
- DO NOT charge your blender when it is wet.
- DO NOT repair or disassemble it by yourself otherwise your warranty will be void. If malfunction occurred, kindly contact us.

Your First Blend

Make sure your blender is fully charged by checking whether all indicator lights are green before your first blend. Tighten the body and base until the magnet is aligned with the power button. Remember to clean it immediately after use.

Pro Tips

- BLEND MODE: Perfect for smoothies, shakes and mixed drinks.
- PULSE MODE Perfect for sala, jams, small ice-cube, frozen fruits and extra tough ingredients.

Check Battery Level (The last second of LED light color displays battery capacity under Blend Mode)

- 1%- 17% no lights
- 18%-33% : 2 green lights on
- 34%-50% : 4 green lights on
- 51%-67%: 6 green lights on

- 68%-83% : 8 green lights on
- 84%-99%: 10 green lights on
- Fully charged, all green lights on, red light off

Procedure

1. Step 1

Cut fruits into small pieces before adding into the blender to fill up about 60% of the jar capacity.

2. Step 2

Add some drinkable liquid until it reaches 80% of jar capacity.





Step 1 Step 2

3. **Step 3**

Tighten the lid and tilt down the blender to make sure fruit pieces are not stuck under the blades.

4. Step 4

Blend Mode: Click once power button to start blending and green lights flashing. Slightly tilt it back and forth while blending if desired. Click once again to pause.

Pulse Mode: Double-click power button to enter into pulse mode. While yellow lights flicker, press and hold the power button repeatedly to pulse. Pulse mode will automatically end after 5S of inactivity and yellow lights off.



Step 3



Tips





Pulse Mode

Bottom cover

Pulse Mode

Double click to switch into pulse mode, organge lights will be on.


Bottom cover

- The USB port is waterproof. It is prohibited to soak the base in water or put it into the dishwasher for cleaning to avoid damage to the battery after water inside.
- Do not mix with hard-shelled fruits, nuts, and large pieces of frozen fruits. It is recommended that fruits or vegetables be cut into small pieces of 1 inch/CM to avoid jamming of the blade and blocking protection.





DESCRIPTION

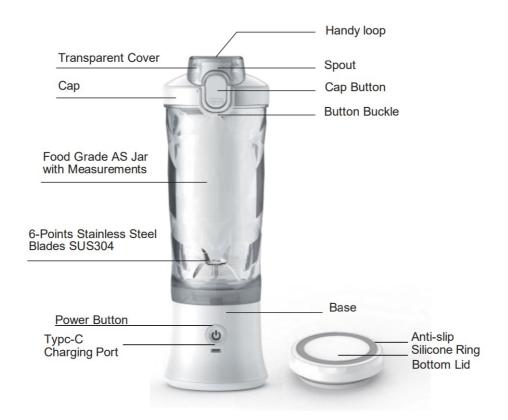

TECHNICAL PARAMETERS

• Model: A9

· Jar Capacity: 600ml

Jar Material: ASBase Material: ABS

• Blade Material: 304 Stainless Steel

• Blending Voltage: 7.4V

Charging Voltage / Current: 5V / 1A

• Battery Type / Capacity:18650 / 2000mAh*2

Motor Speed: 18000rpm

• Charging Time: About 3 to 5 hours

Single blend time of Blend mode: 30 seconds a cycle Maximum blend time of Pulsemode: 30 seconds

Warranty

We offer 12 months warranty on all our products for fault or product quality. Accidental damage or damage as a result of misuse is not covered under this warranty.

Malfunction Analysis and Troubleshooting

Malfunction	Analysis	Troubleshooting
All indicator lights in red or no ligh t, unable to start.	Ran out of battery.	Charge it for 3 to 5 hours to make sure t hat it gets a full charge.
All indicator lights flicker in red an d green alternately, unable to start .	The jar is not tighten to the base.	Tighten the jar and base, make sure the magnet is aligned with the power button.
Stop working, all indicator lights fli cker in red for 8 seconds.	Ingredient is too thick or volume t oo big, motor overload protection.	Add some liquid or cut ingredients into smaller pieces or shift into Pulse Mode, then restart it.
Leakage.	The seal is not placed properly; j ar/cap is cross-threaded.	Check seals; check thread alignment w hen screwing on jar/cap.

PORTABLE BLENDER

Imported Environmental-friendly Materials CE, ROHS, FCC Approval

Documents / Resources



<u>Seanxon A9 Portable Blender</u> [pdf] User Manual A9 Portable Blender, A9, Portable Blender, Blender

References

• User Manual

Manuals+, Privacy Policy