

SEAWARD Apollo Series 400 Checkbox User Guide

Home » SEAWARD » SEAWARD Apollo Series 400 Checkbox User Guide 🖫



Contents

- 1 SEAWARD Apollo Series 400 Checkbox
- **2 Product Information**
- **3 Product Usage Instructions**
- 4 FAQ
- 5 Perform a Checkbox Sequence
- 6 Documents / Resources
 - **6.1 References**



SEAWARD Apollo Series 400 Checkbox



Specifications:

• Model: Apollo 400+

Manufacturer: Seaward

• Country of Origin: United Kingdom

Power Supply: MainsTest Lead Type: IEC

Product Usage Instructions

Step 1: Register your Apollo

To receive an additional 12 months warranty and full access to Product Support, register your Apollo by either visiting the website www.seaward.com/warranty24 or completing the form in the Care and Support card and returning it by post.

Step 2: Update Firmware

Ensure your Apollo has the latest firmware installed. To update the firmware, follow the instructions provided in the following link: www.seaward.com/apollo-series-firmware.

Step 3: Access Checkbox Function

- 1. From the Apollo Home Screen, press the PAT button (F3).
- 2. Select F1.
- 3. Select the manual option.

Step 4: Select Checkbox Function

In the manual page, select the Checkbox function (F3).

Step 5: Checkbox Setup

You will see a Checkbox Setup message. Follow the instructions below:

- 1. Connect the mains supply to the black socket on the Apollo Series.
- 2. Connect the red IEC lead between both sockets on the Apollo Series (do not connect the Checkbox yet).

Step 6: IEC Lead and Polarity Test

An IEC lead and polarity test will be performed to check the lead.

Step 7: Attach Checkbox

You will see a page requesting you to attach the Checkbox.

- 1. Connect the red IEC lead to the Checkbox.
- 2. Connect the red test lead to the 4mm socket on the Checkbox (and red Apollo Series test socket).

Step 8: Confirmation and Start

- 1. Select F3 to confirm (a green tick will appear in the middle of the page).
- 2. Select F5 to continue.

The instrument will now perform additional tests in a sequence.

FAQ

- Q: What is the power supply for the Apollo 400+?
 - A: The Apollo 400+ is powered by mains supply.
- Q: How can I update the firmware of my Apollo 400+?

A: To update the firmware, please visit the website <u>www.seaward.com/apollo-series-firmware</u> for instructions.

• Q: How do I register my Apollo 400+?

A: You can register your Apollo 400+ by visiting the website www.seaward.com/warranty24 or by completing the form in the Care and Support card and returning it by post.

Perform a Checkbox Sequence

How to perform a checkbox sequence on your Apollo 400+?

You can perform a Checkbox Sequence on your Apollo Series test instruments, the following guide will help you to perform this (note you require a seaward Apollo Series Checkbox and IEC lead to perform this test). Please check all aspects of this before contacting the technical support helpline.

- Please register your Apollo to receive an additional 12 months warranty plus full access to Product Support.
 You can do this at <u>www.seaward.com/warranty24</u> or by completing the form in the "Care and Support" card and returning by post.
- 2. Please ensure your Apollo has the latest firmware installed, to do this please see the following link: www.seaward.com/apollo-series-firmware
- 3. From the Apollo "Home Screen" select "F1" ** then select the manual PAT button "F3" **.
- 4. In this page select the "Checkbox" function "F3" Ω
- 5. You will now see a "Checkbox Setup" message:
- 6. Connect the mains supply to the black socket on the Apollo Series
- 7. Connect the red IEC lead between both sockets on the Apollo Series (do not connect the Checkbox yet)
- 8. An IEC lead and polarity test will be performed to check this lead.
- 9. You will now see a page requesting you to "Attach checkbox"
- 10. Connect the red IEC lead to the Checkbox
- 11. Connect the red test lead to the 4mm socket on the Checkbox (and red Apollo Series test socket)
- 12. Select "F3" to confirm (a green tick will appear in the middle of the page) and then select "F5" continue.

The instrument will now perform additional tests in a sequence.

- 13. After completion of the above you should see a "Warning" message before the mains supply is applied you will need to select the green start button to perform a mains powered test.
- 14. The test sequence should now be complete and a message displaying the outcome will be displayed confirm this using the "return" key (the button above the green start button).

If you require more help, please contact us at https://www.seaward.com/cms/enquire/.

15-18 Bracken Hill, South West Industrial Estate, Peterlee, County Durham, SR8 2SW, United Kingdom t: +44 (0) 191 586 3511 | f: +44 (0) 191 586 0227 | e: sales@seaward.com

Documents / Resources



SEAWARD Apollo Series 400 Checkbox [pdf] User Guide Apollo Series 400 Checkbox, Apollo Series, 400 Checkbox, Checkbox

References

- <u>Seaward</u> <u>Electrical Safety Test Equipment Manufacturers | Seaward</u>
- № 24 month warranty | Seaward
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.