



SECOMP RS422-485 USB 1 Port Converter with Isolation Installation Guide

[Home](#) » [SECOMP](#) » SECOMP RS422-485 USB 1 Port Converter with Isolation Installation Guide 

SECOMP RS422-485 USB 1 Port Converter with Isolation Installation Guide



Contents

- [1 Product Specifications](#)
- [2 PROUDUCT OWERVIVE](#)
- [3 Method of Connecting External point-to-point](#)
- [4 Method of Connecting multidrop](#)
- [5 How to Connect RS485 Connector](#)
- [6 SW SETUP](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)

Product Specifications

Communication speed Maximum 115.2K BPS

USB Isolation RS422/485

Circuit Protection ESD 15KV Surge Protector attached

Supporting operating systems Windows 98/2000/Server 2003/XP/Vista/win 7, Linux 2.4


MAC OS8/9 OS-X

USB 1.0/1.1 compliant, USB 2.0 Full Speed compatible


Connector: Terminal Block 5P and Mini USB B type

PROUDUCT OWERVIVE


Front View

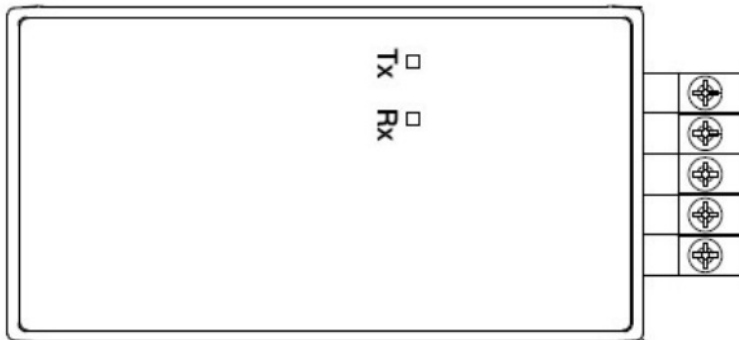


How to Connect TB5 RS422/485 Connector

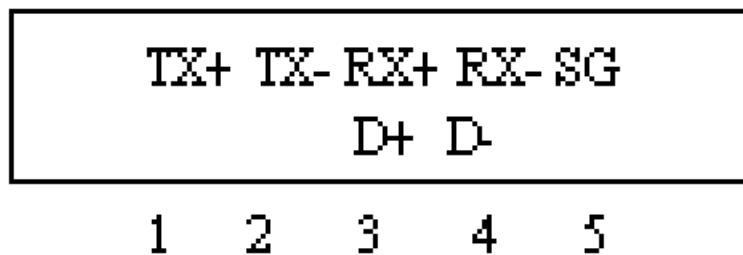


Method of Connecting External point-to-point

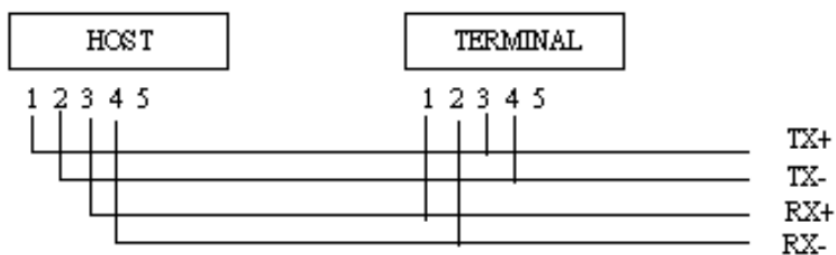

Method of Connecting multidrop

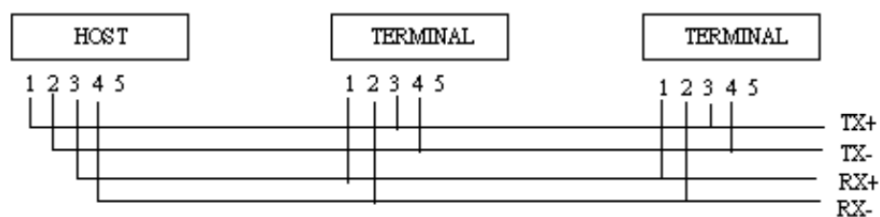

How to Connect RS485 Connector

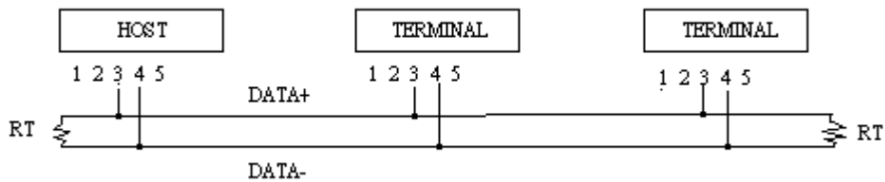

The default is non-echo mode.

Method of Connecting

RS:120 ohm (if there is not serious noise, it is not required to add termination resistors) RS485, like LAN, adopts a half-duplex bus where the host is not divided from terminals.

SW SETUP

SW	1	2	3				4
	0	0	0	RS422			ONTR
ON=1	0	0	1	RS422			
OFF=O	1	0	1	RS422M	RS5854W		
	0	1	0	RS485			
	0	1	1	RS485ECHO			



Documents / Resources

	SECOMP RS422-485 USB 1 Port Converter with Isolation [pdf] Installation Guide 12.02.1004, RS422-485, RS422-485 USB 1 Port Converter with Isolation, USB 1 Port Converter with Isolation, 1 Port Converter with Isolation, Converter with Isolation, Isolation
--	--