



secrui PR3 Motion Sensor Alarm User Manual

[Home](#) » [secrui](#) » [secrui PR3 Motion Sensor Alarm User Manual](#) 

Contents

 
- [1 secrui PR3 Motion Sensor Alarm](#)
- [2 User manual for PI R Alarm Kits](#)
- [3 Product Introduction](#)
- [4 Package](#)
- [5 Feature](#)
- [6 Operatin Instructions](#)
- [7 SETTING](#)
- [8 Remote Control Setting](#)
- [9 Factory Settings](#)
- [10 Low Power Prompt](#)
- [11 Attention](#)
- [12 Technical Parameters](#)
- [13 Documents / Resources](#)
- [14 Related Posts](#)



secrui PR3 Motion Sensor Alarm



User manual for PIR Alarm Kits

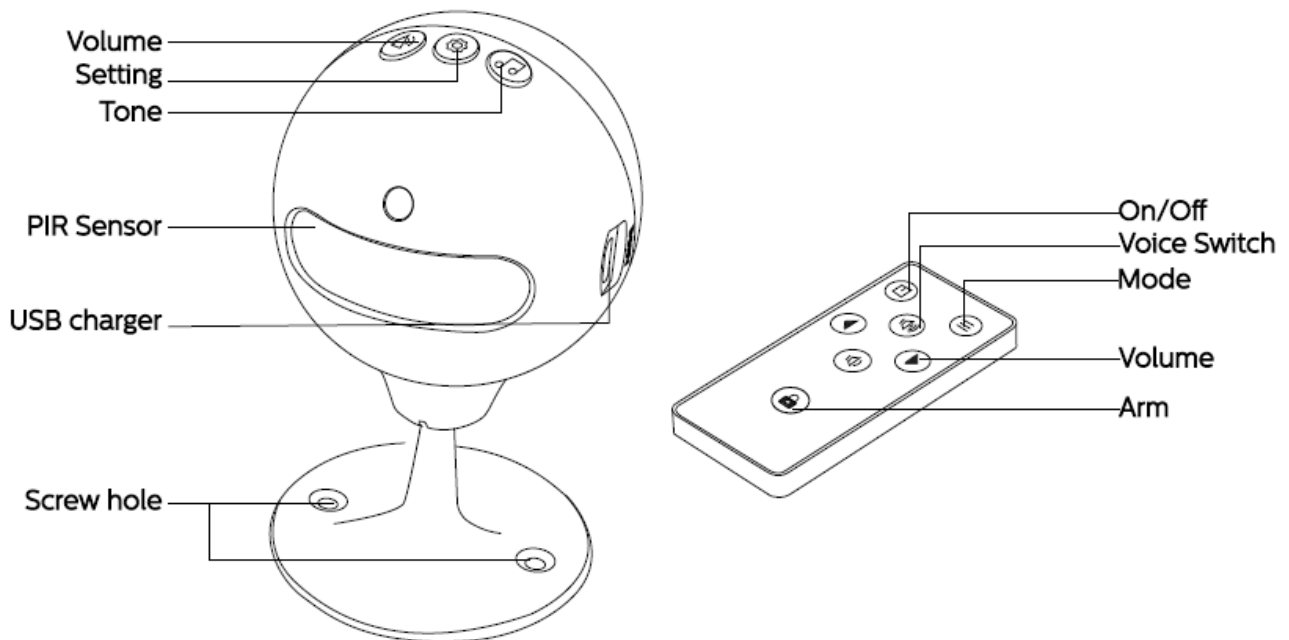

Product Introduction

This host is a passive infrared detector, it uses digital dual-core fuzzy logic infrared control processing technology and intelligent analysis algorithm ,it can effectively distinguish the interference signal and the human motion signal to prevent false alarm .This host can connect the remote control and the performance is suitable and reliable .It

suitable for large villas, office buildings, clubs leisure centers, hotels families , shops. etc.

Package

- PIR Alarm unit(s)
- Remote control(s)
- Warranty card
- AAA alkaline batteries

Feature

- 5 tunes optional.
- 4 level of adjustable volume.
- The remote control can control all the function


Operatin Instructions

PIR Alarm Unit Setting


1. Setting [-⏻-] G) Short press < 2s shift Arm and Disarm, beep once means Arm, beeps twice means Disarm.
2. Long press > 5s from on to off, it will beep once, from off to On, it will beep once continuously.

SETTING

1. Short press Choose different ring tone.

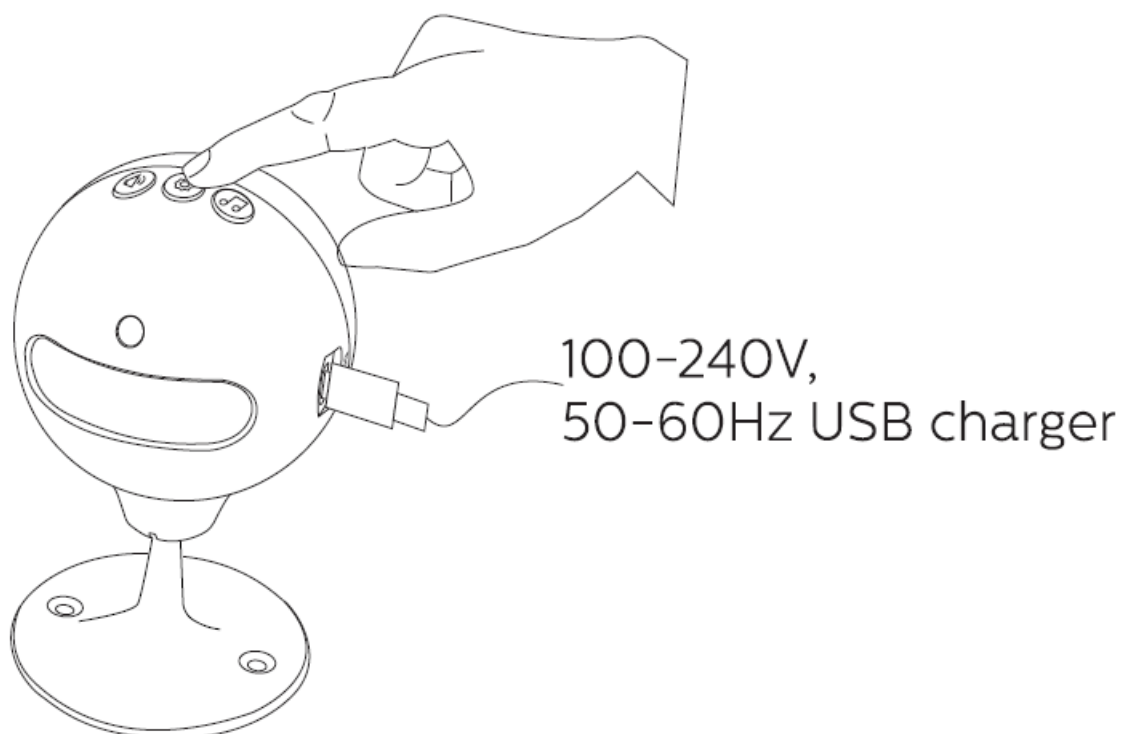


2. Change volume cycle adjustment

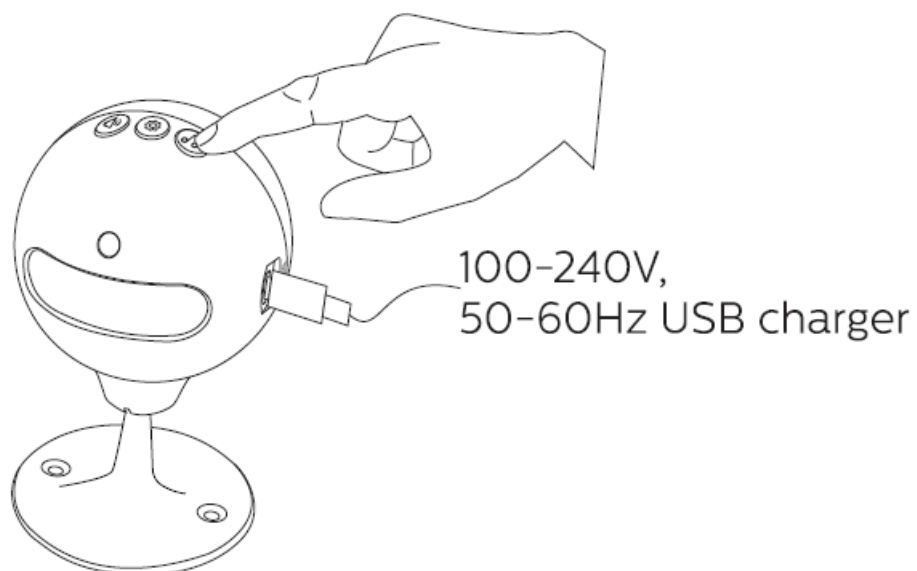


NOTE: When the host broadcasts the voice, even you triggers any button on the host, the host state does not change.


Remote Control Setting

Switch On/off to control the PIR alarm power

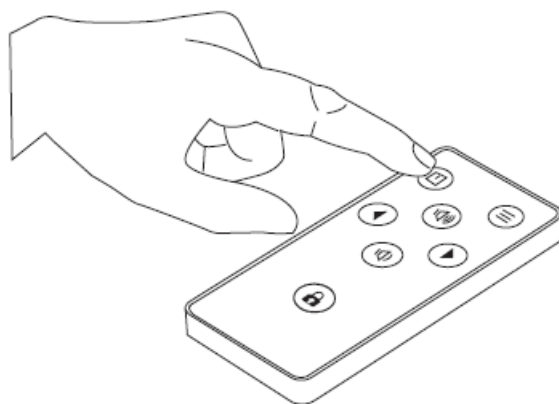


Short press this button, the host will be alarm.

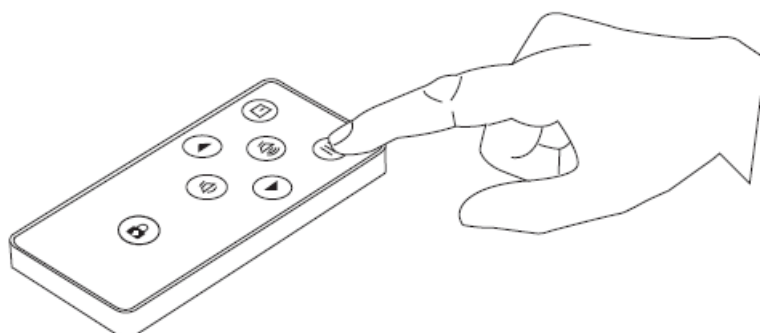


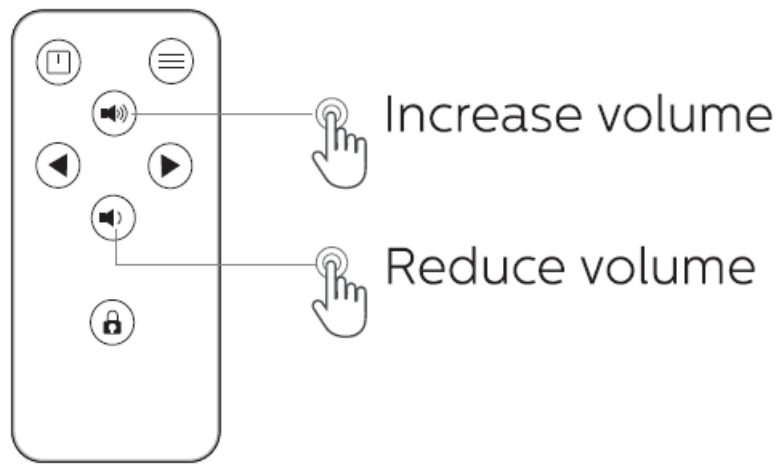

When it reach Maximum volume and minimum volume the PIR detector will be beeps twice.

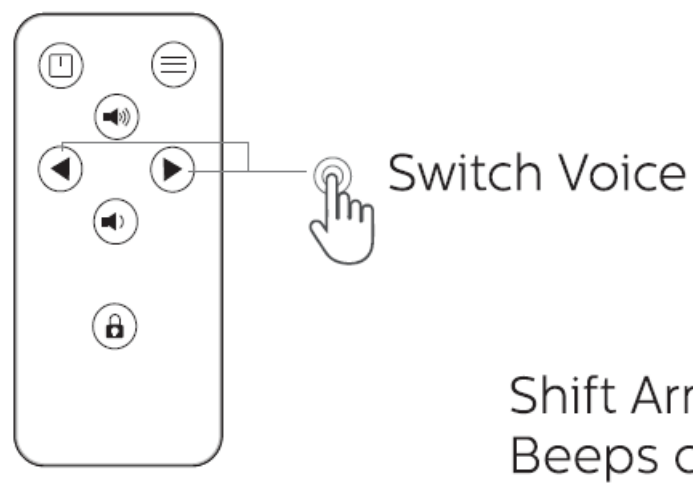


Shift Arm and Disarm, Beeps once means Arm, Beeps twice means Disarm.

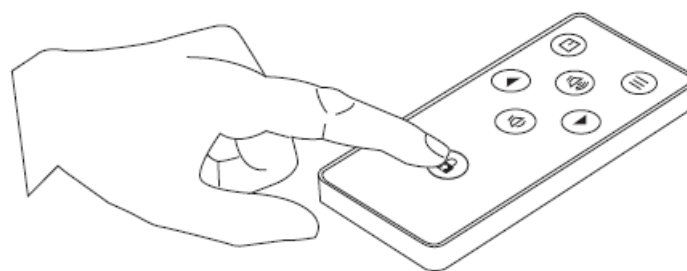


Factory Settings

1.

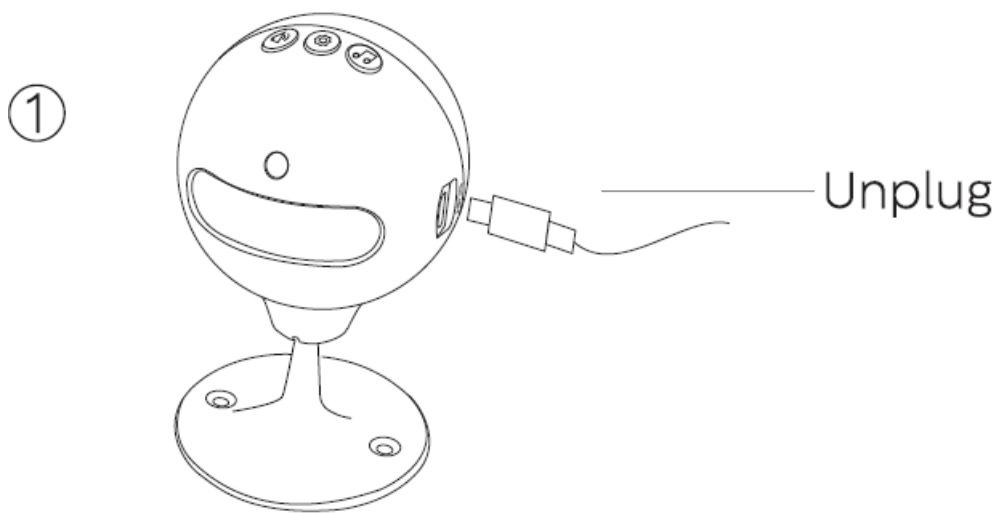

2. Plug and long press [n] and [1C1v] until it will Beep once, it will turn to the first tune and biggest volume.

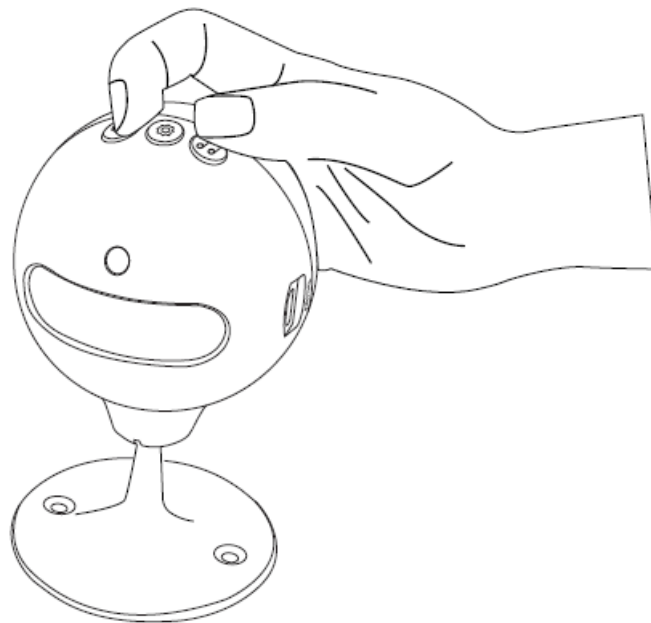

Low Power Prompt

1. When the voltage is lower than a certain value, the button on the host or the remote control is triggered, the indicator light flashes 3 times, and there is no voice prompt, it indicates that you should change the battery or plug in USB power.
2. when the battery voltage is too low, it will shut down automatically.


Attention

1. Please use Alkaline or rechargeable battery ,do not mix the new and old battery to use
2. Non-professionals are not allowed to repair.
3. Do not install the product in a place where it is exposed to rain, long periods of direct sunlight, and where temperature will change rapidly.

Technical Parameters

- **Working voltage:** USB 5V or 3*AAA Alkaline battery
- **Standby current:** <300uA
- **Working current:** <100mA.

Documents / Resources

	<p>secrui PR3 Motion Sensor Alarm [pdf] User Manual PR3, B085MB61BZ, B07N18PNFP, PR3 RC511, PR3 Motion Sensor Alarm, PR3, Motion Sensor Alarm, Sensor Alarm, Alarm</p>
-----------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------