 




Securaco SSL-W-V1 Smart Lock User Manual

[Home](#) » [Securaco](#) » Securaco SSL-W-V1 Smart Lock User Manual 

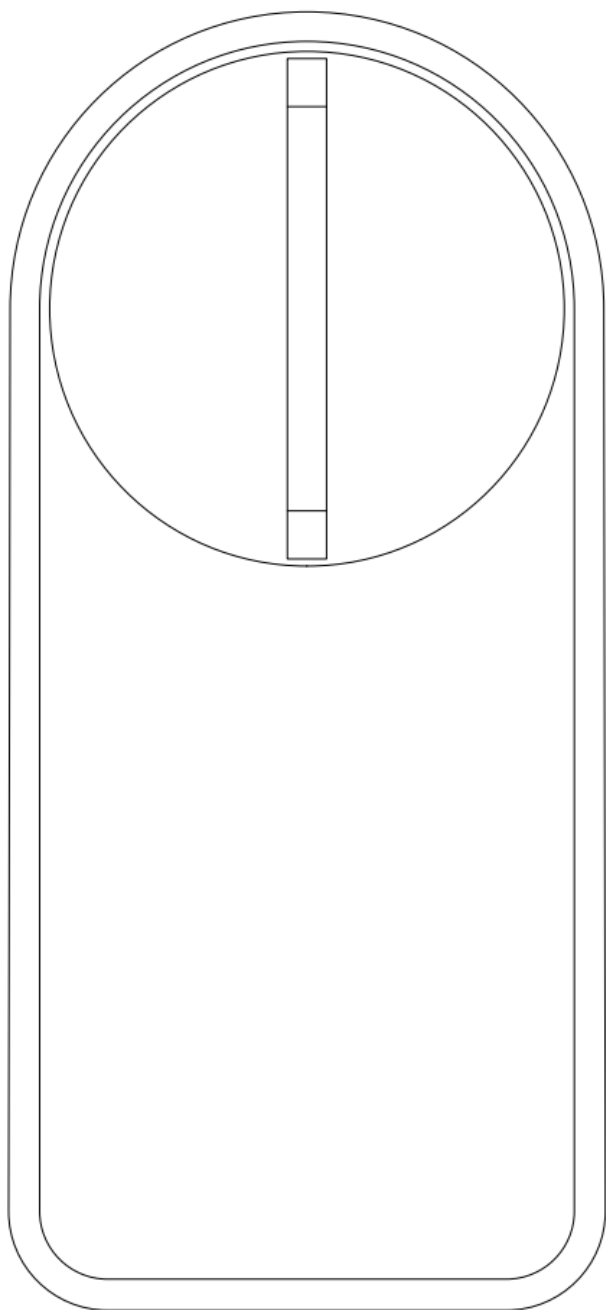 




Contents

- [1 PACKING LIST](#)
- [2 MEET THE LOCK](#)
- [3 INSTALLATION](#)
- [4 GUIDE FOR USE](#)
- [5 PARAMETERS](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)


PACKING LIST

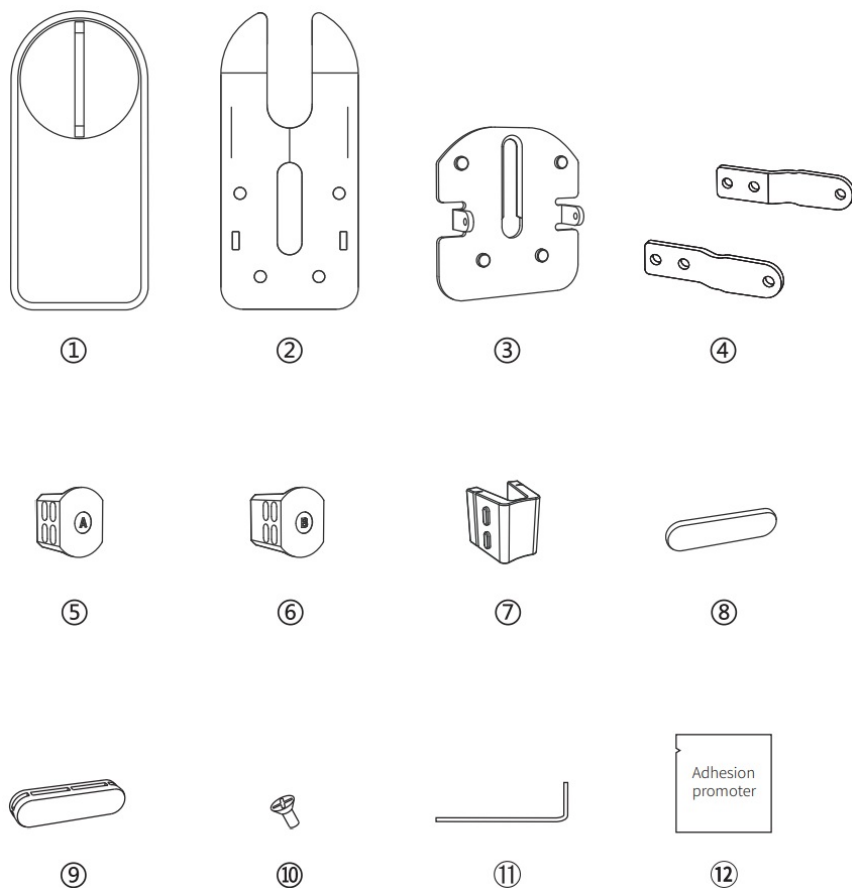

1. Main body*1
2. Card*1
3. mounting plate*1
4. 20mm Gasket*2
5. Clamp A*1
6. Clamp B*1


7. Clamp Gasket*1
8. 3mm Gasket*2
9. 10mm Gasket*1
10. Screws*6
11. Allen Key*1
12. Adhesion promoter*1

 MEET THE LOCK

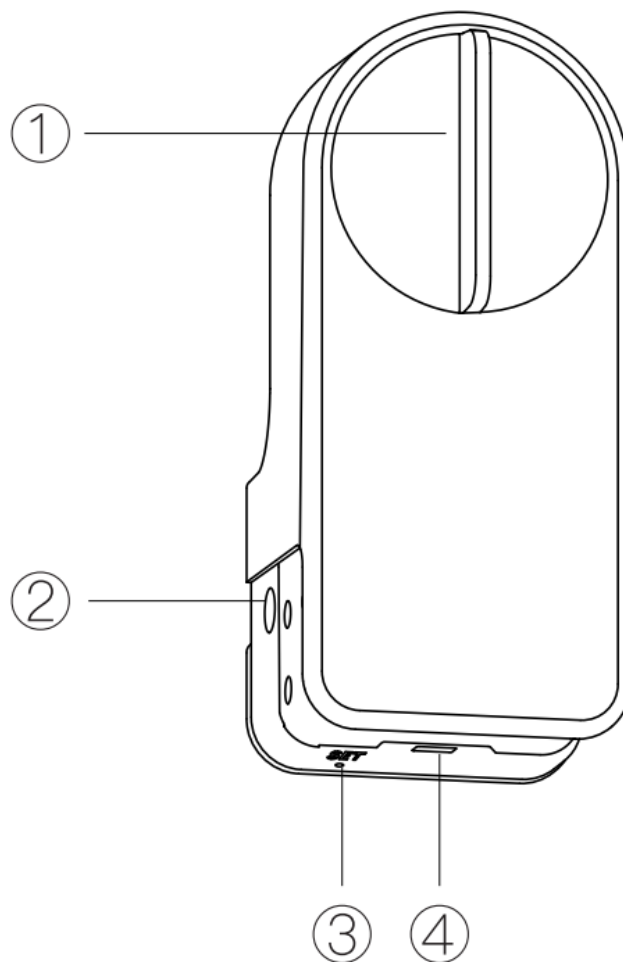


INSTALLATION

 1. Confirm the type of your lock.

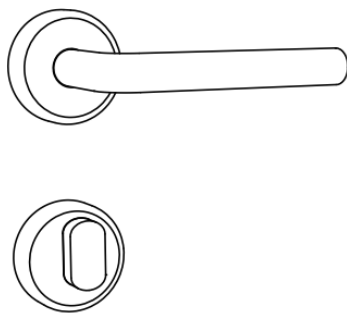

A

 Fission lock


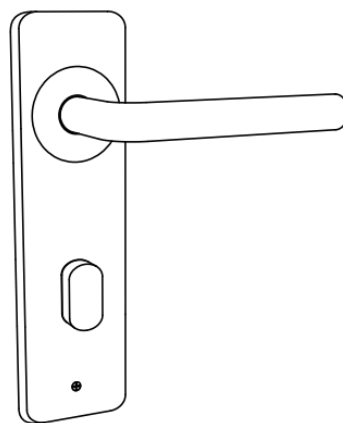


B


Cojoined lock

Fission Lock


 
 
A1. Wipe the surface clean with adhesive promoter.

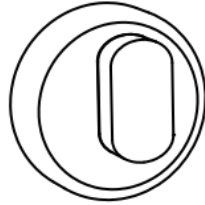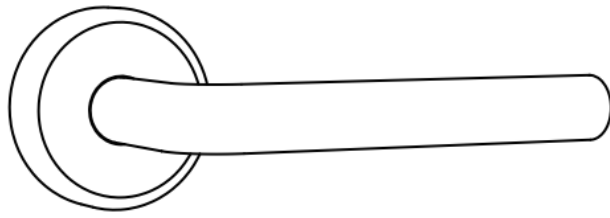

 
A2. Align the mounting plate into the card.

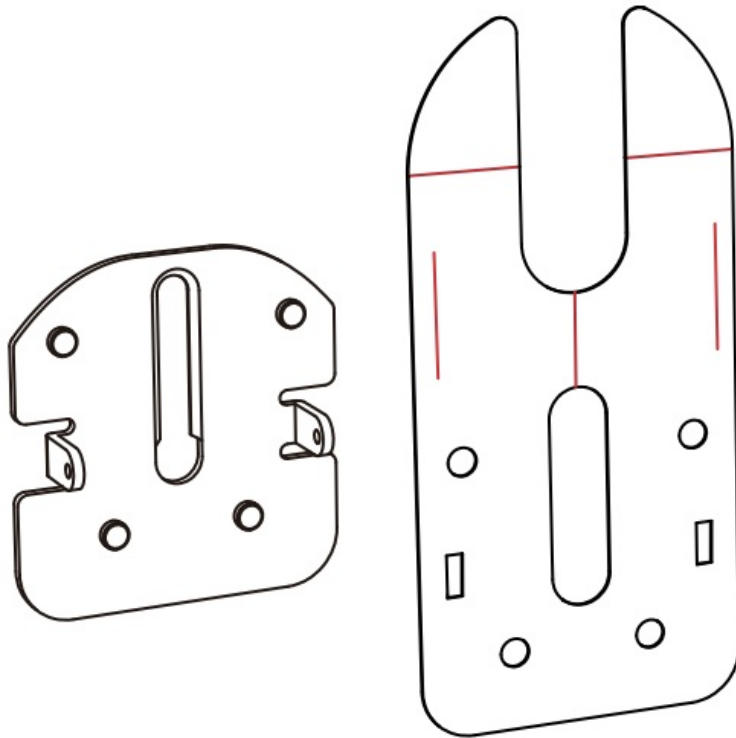

   
3. Align the center of the knob with the crossed red line, attach the mounting plate to the door, and remove the card.

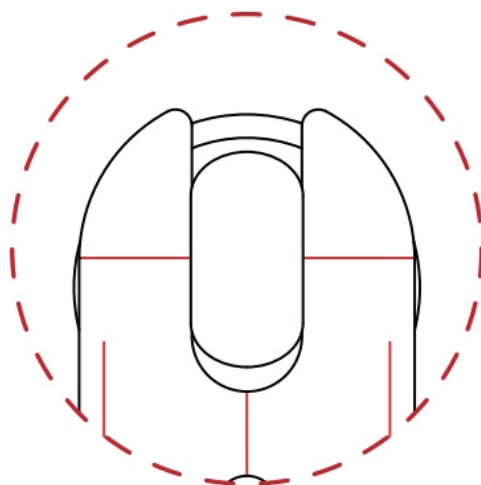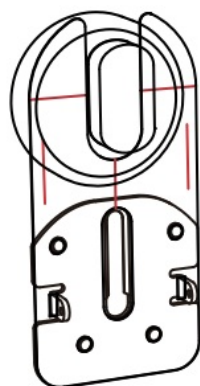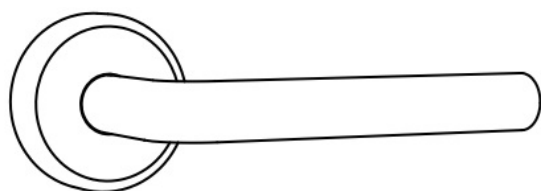


A5. Install 4 AA batteries.

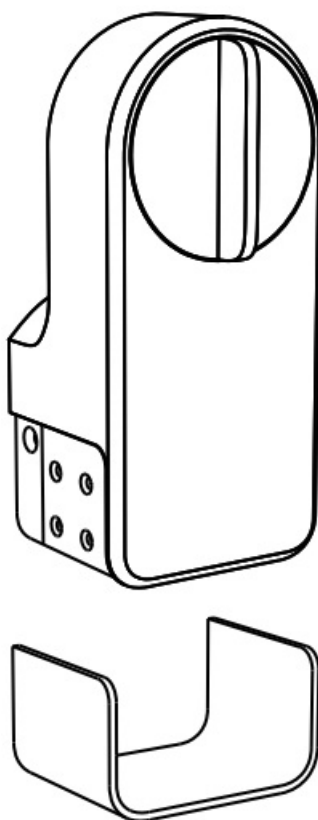 



A4. Open the main body battery cover.

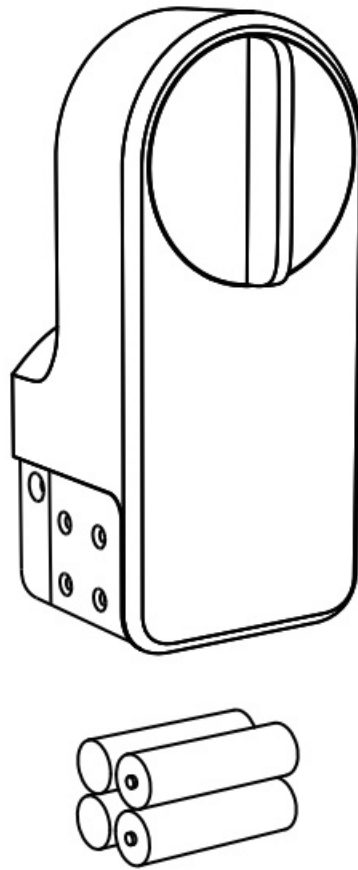 


 
A6. Install the main body on the mounting plate.

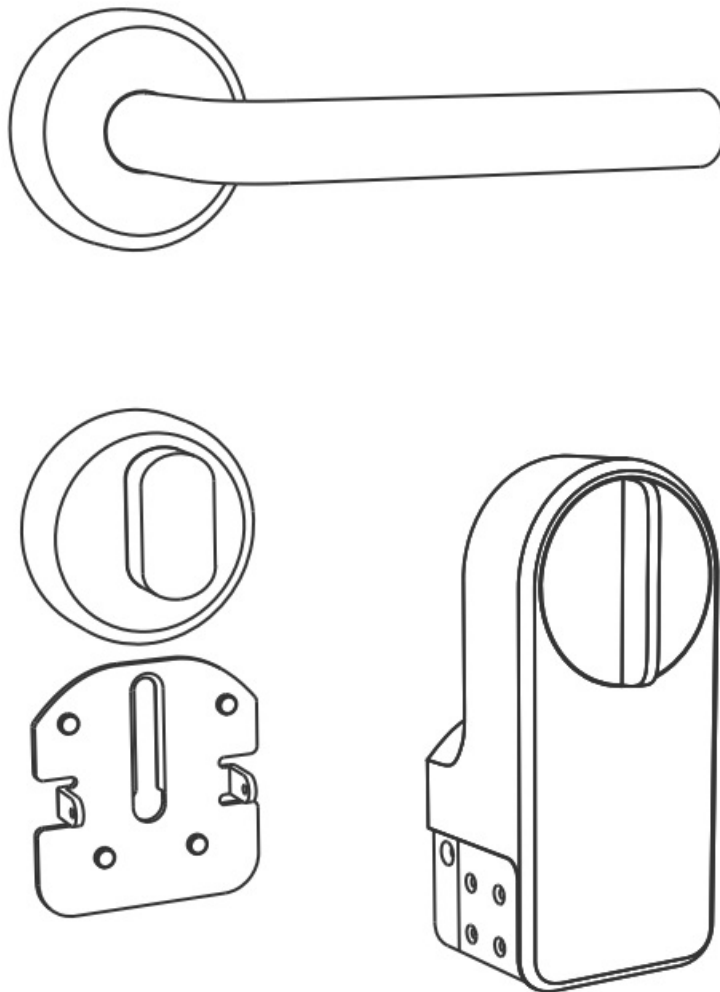

  
A7. Thin knob: Find the Clamp Gasket, fix it on the thin knob.

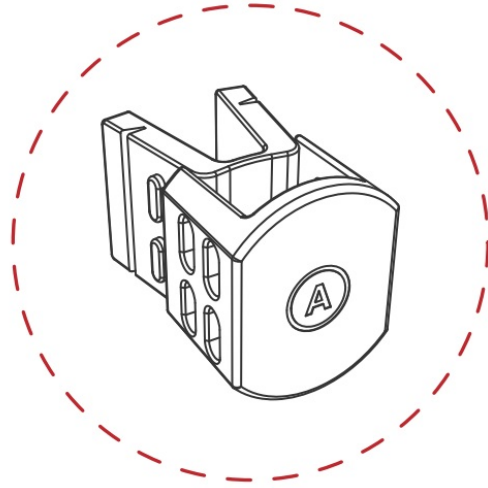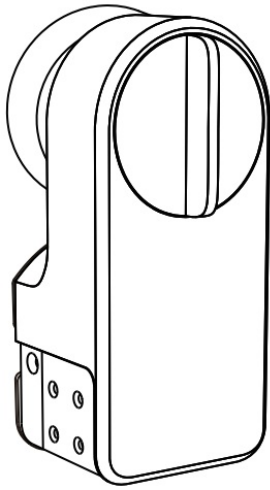

  
A8. Short knob: Open the knob of the main body, push out the Clamp A, insert the Clamp B, and then put the knob back to its original positioning.

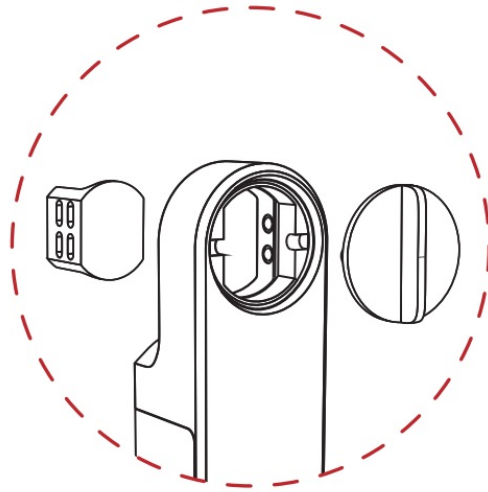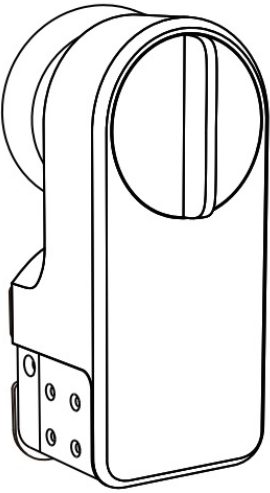

A9. Lock the screws on both sides.

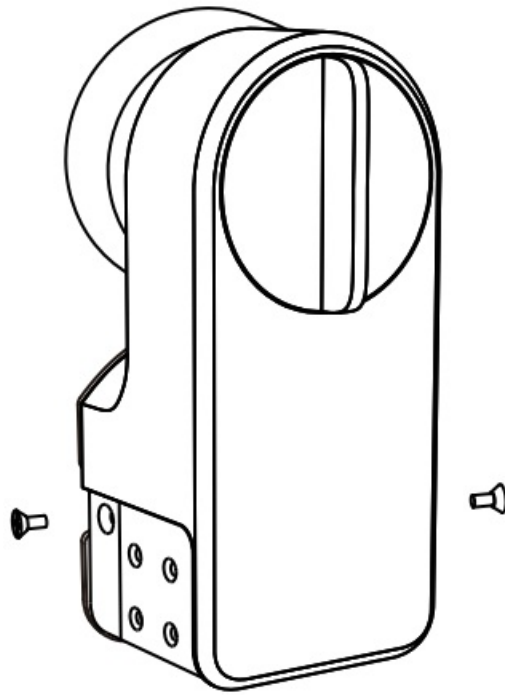 


 A10. Close the battery cover and the hardware installation is complete.

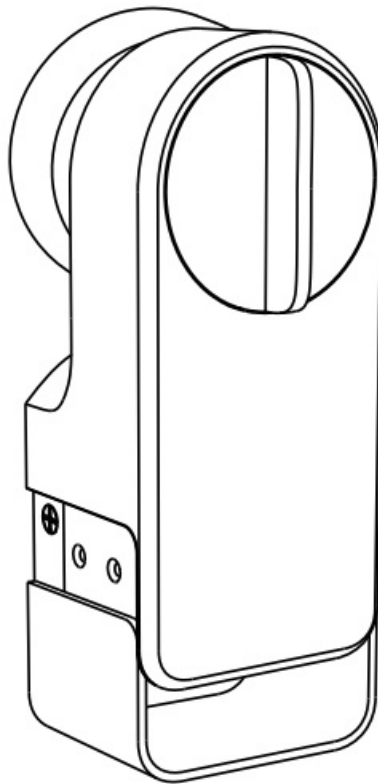


Conjoined Lock

 
B1. Wipe the surface clean with adhesive promoter.

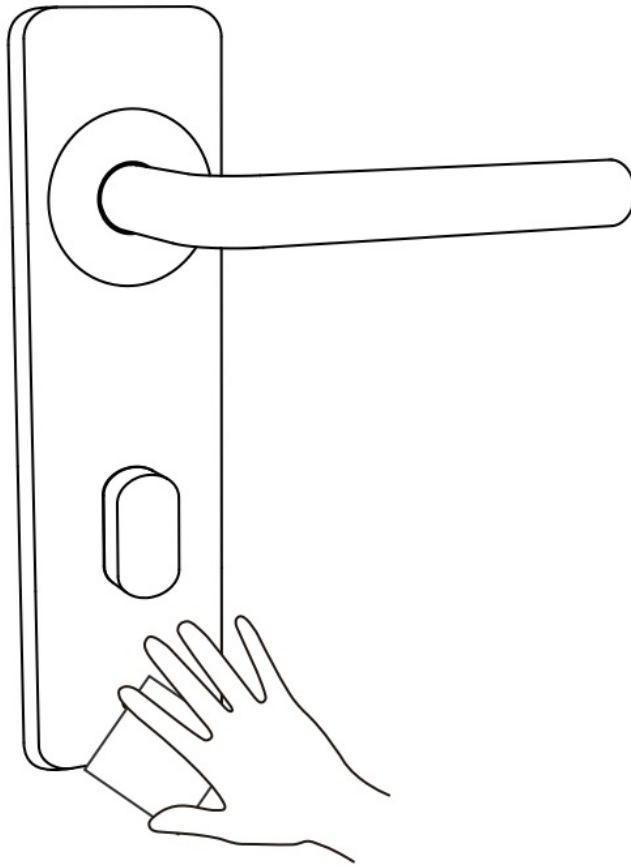

 
B2. Measure the thickness of the door lock, select the appropriate gasket and sticker, and attach it to the mounting plate.

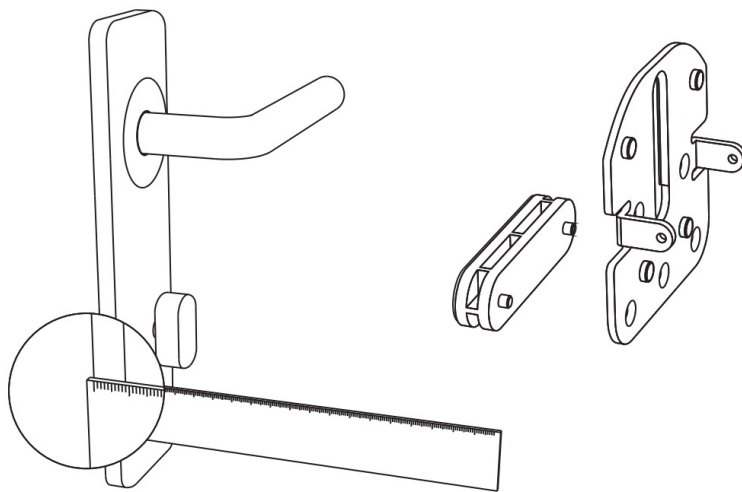

 
B3. Remove the screw 1 cm out from the door lock, aim the mounting plate into the card, align the center of the knob with the crossed red line, attach the mounting plate to the door, remove the card, and lock the screw back to its original positioning.

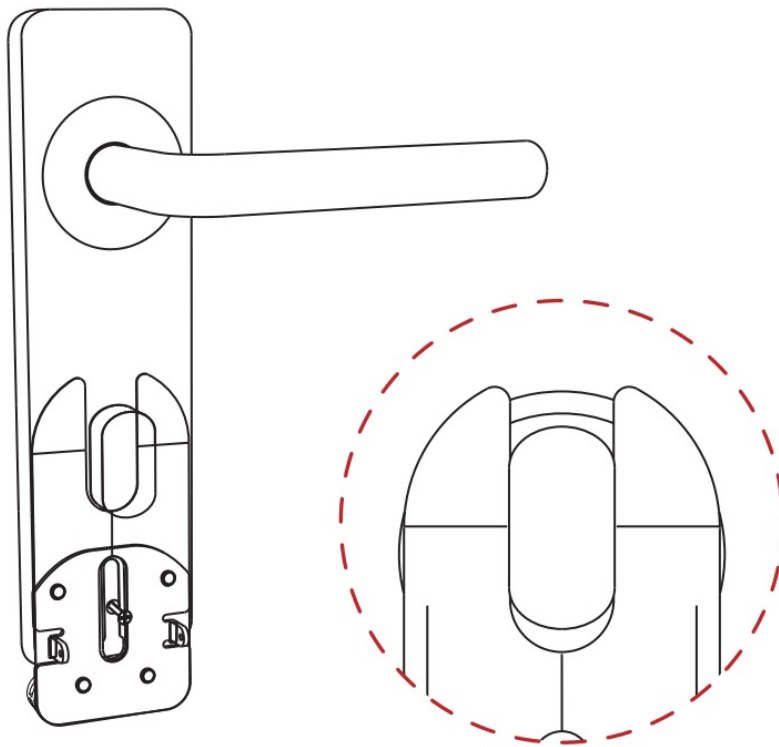


B4. Open the main body battery cover.

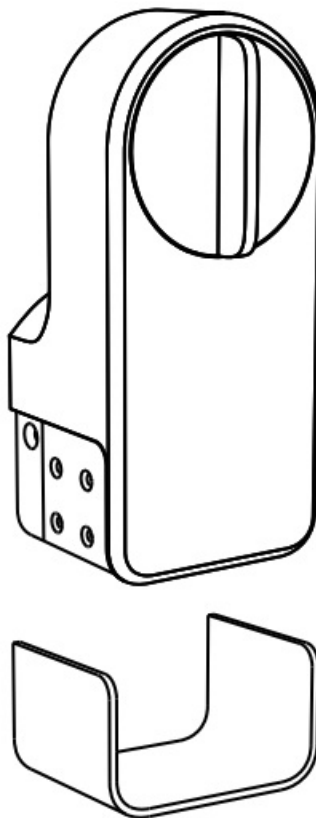 


B5. Install 4 AA batteries.

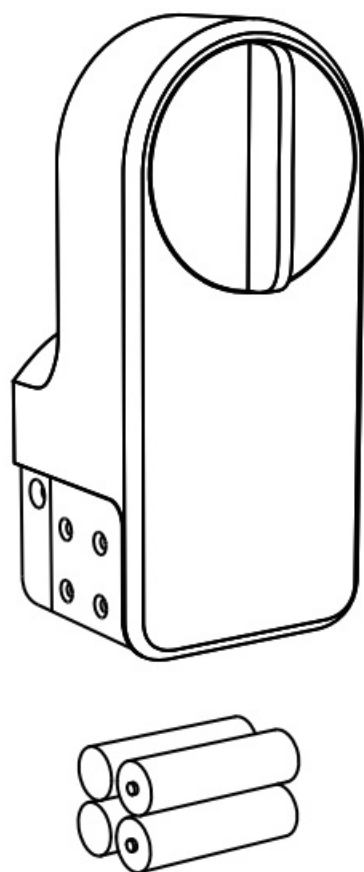 

 
B6. Install the main body on the mounting plate.

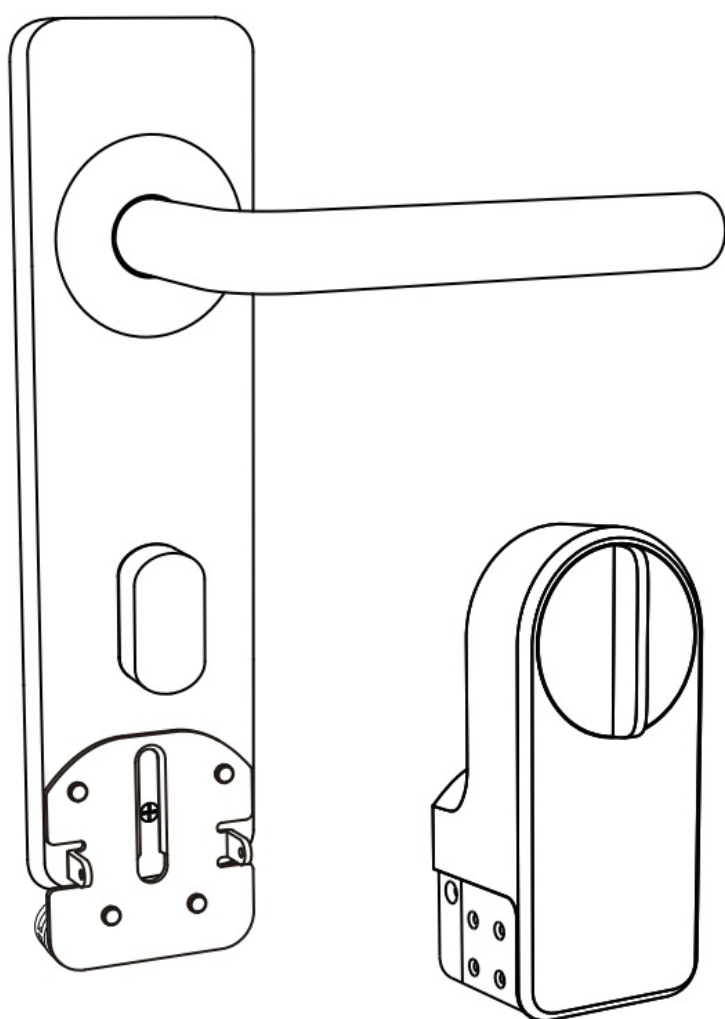

 
B7. Thin knob: Find the Clamp Gasket, fix it on the thin knob.

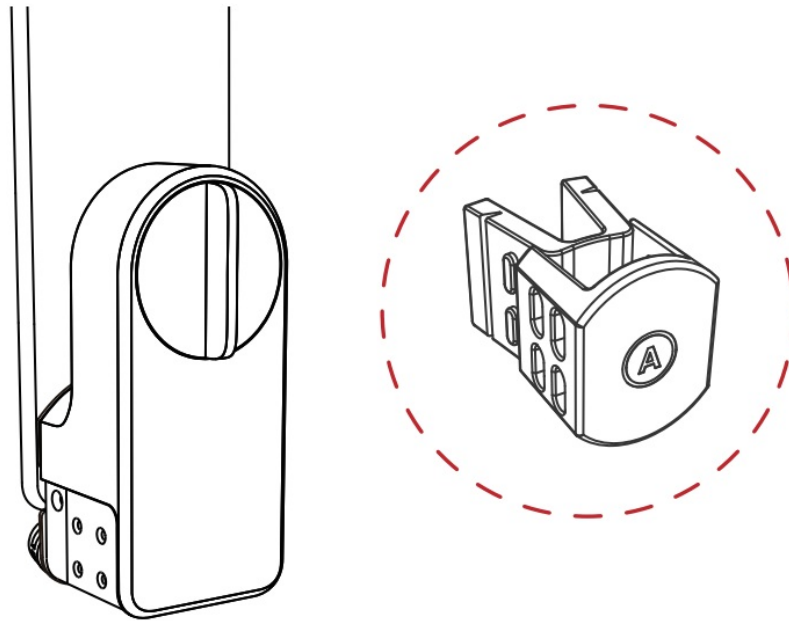

 
B8. Short knob: Open the knob of the main body, push out the Clamp A, insert the Clamp B, and then put the knob back to its original positioning.

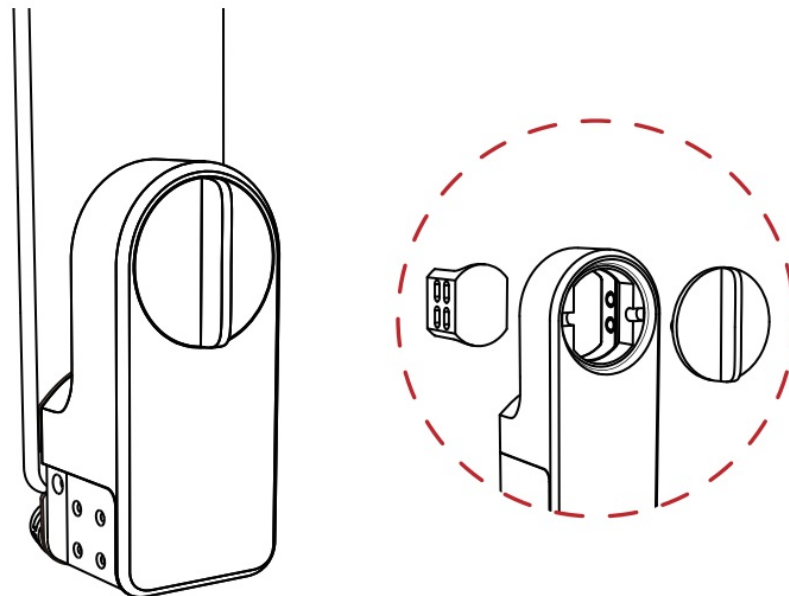

B9. Lock the screws on both sides.

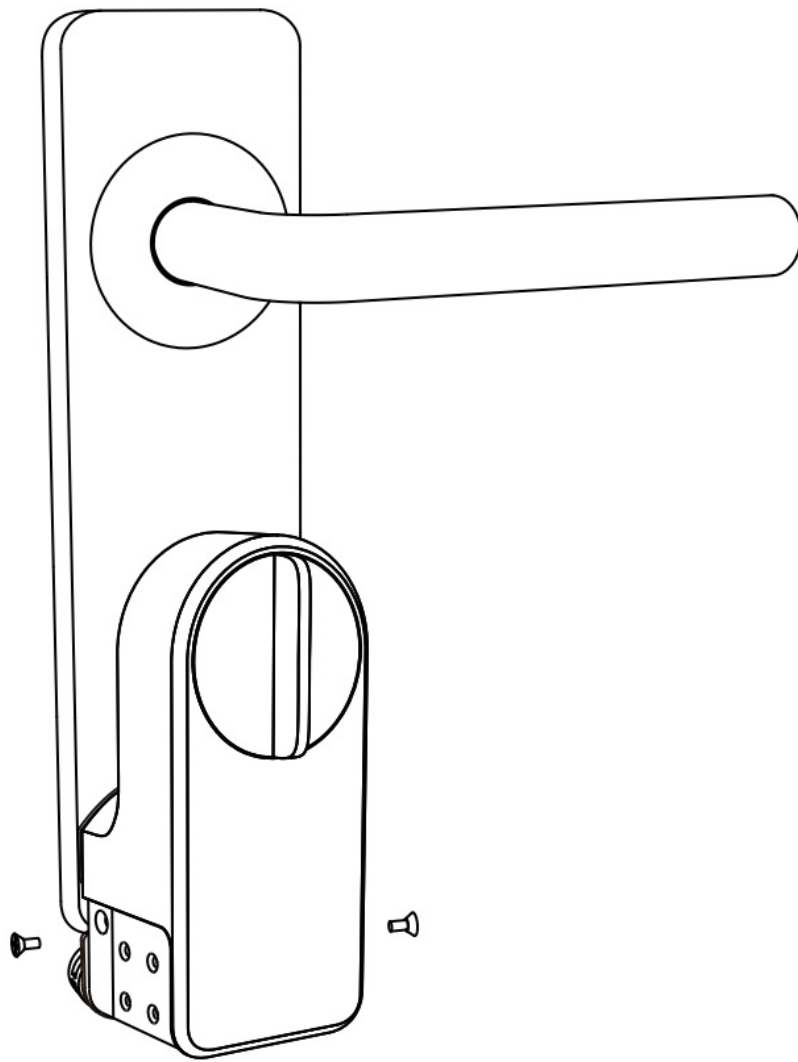 

 B10. Close the battery cover and the hardware installation is complete.

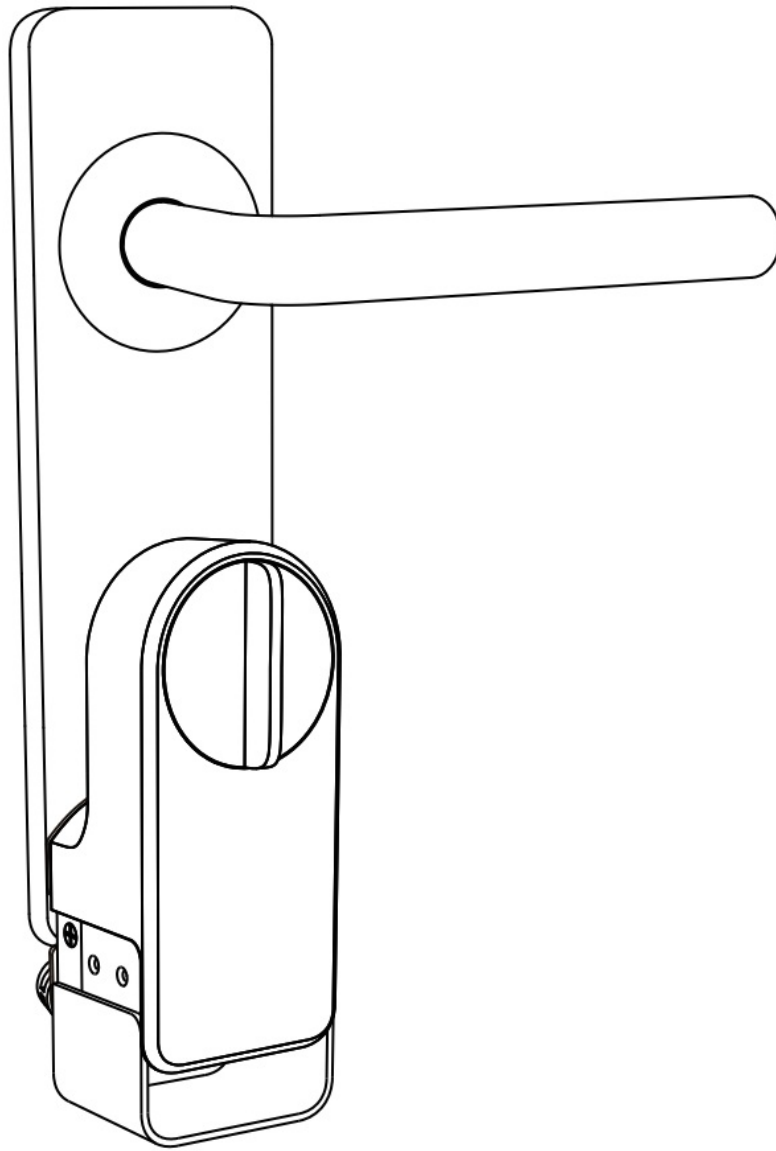

2. Add smart lock in the app

2.1 Download the APP by scanning the QR code, or search “Smart Life” on App Store / Google Play. Create a new account or log in with an existing account.



<https://smartapp.tuya.com/smartlife>

2.2 Start the APP, Select “Add Device”.

2.3 Select “Auto Scan”, after you find the device, then click “Next”.

2.4 After the device is added, click “Done”.

NOTE	If you find that the rotation is opposite to the direction of the door lock, you can click the set icon and set the rotation direction to “anticlockwise unlock”.
	The first time you open the door with APP, the device will calibrate the lock position. Please ensure that the device has been properly installed on the door lock.





3. Add smart lock to gateway

3.1 Select gateway in the APP, then click “ Add device by list”.

3.2 Select the smart lock device, and then click “OK”. When the pop-up box is displayed, select “Immediately to join”.

3.3 Select the device in the gateway sub-device list, then click “Opening / Closing ” to unlock and lock the door.

GUIDE FOR USE

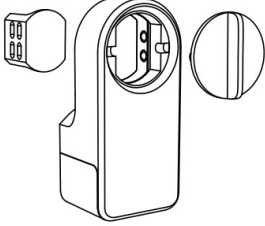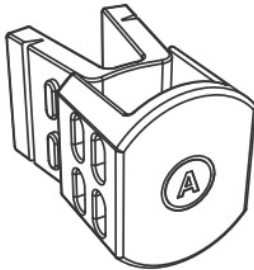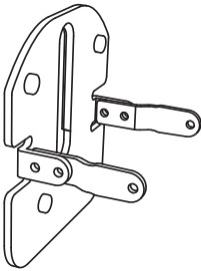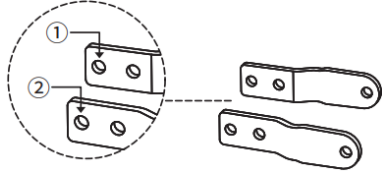1	Unlock/ Lock	A. Use the APP. B. Turn the knob of the smart lock. C. Use the keypad(accessory).
2	Rotation Direction	If you find that the rotation is opposite to the direction of the door lock, you can click the set icon and set the rotation direction to “anticlockwise unlock”.
3	Calibration	When the rotation is inaccurate during use, you can click “Setting / Calibration” for calibration in the APP.
4	Check battery	Select the device in the APP to check battery status.
5	Replace Clamp 	Take off the Knob directly, press to take out the original Clamp, and replace another Clamp. You can take out the Clamp Gasket if necessary. 
6	Beep alarm	There will be beeps when the device battery is low, and the battery needs to be replaced at this time.
7	Unbind device	Firstly, delete the device in the APP, then press “SET” button on the bottom of the battery case for 5 seconds until you hear a beep, the device is unbound.
8	Adjust height 	If the door lock is too high, you can attach the gaskets to the mounting plate of the smart lock. First lock the screw holes in the diagram, then lock the other screw holes. 
9	Share Device	A. At the bottom of the device page, click “ ” to enter member management. B. Click “ ” at the top right of page and select “Family” to add. C. Fill in the other APP account and other information, set the permissions, and click save.

PARAMETERS

Product Dimensions	136mm*62mm*47mm"
Body Material	PC
Color	Grey
Net Weight	287g
Communication Mode	Bluetooth 4.0 and above
Battery	AA Battery*4
Endurance	300 Days
APP Support	Android and iOS



WARNING

The battery may overheat if the following conditions occur, which may cause a fire or explosion hazard.
 Battery dismantling, impacting, squeezing or putting into fire, soaking.
 Contact metal or electrode short.

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.



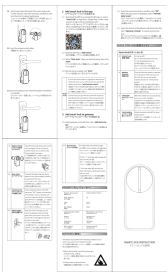

[Securaco SSL-W-V1 Smart Lock](#) [pdf] User Manual
SSL-W-V1 Smart Lock, SSL-W-V1, Smart Lock, Lock

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.