

## RSECURITY BANDS Edge E1 Smart Keypad with Intercom Access Control System User Guide

[Home](#) » [SECURITY BRANDS](#) » RSECURITY BANDS Edge E1 Smart Keypad with Intercom Access Control System User Guide 



**SECURITY  
BRANDS**

**EDGE E1**

**QUICK START GUIDE**

**Model 27-210, 27-215**

**Edge E1 Smart Keypad with  
Intercom Access Control System  
User Guide**

## Contents

- 1 Edge E1 Smart Keypad with Intercom Access Control System
- 2 What's what?
- 3 4. Connect wires.
- 4 E1. Direct Programming / Unit Configuration
- 5 E2. Direct Programming / Unit Configuration
- 6 E3. Direct Programming / Unit Configuration
- 7 E4. Direct Programming / Unit Configuration
- 8 E5. Direct Programming / Unit Configuration
- 9 F1. Direct Programming / Onboard Keypad
- 10 F2. Direct Programming / Onboard Keypad
- 11 G1. Direct Programming / External Wiegand Keypad
- 12 G2. Direct Programming / External Wiegand Keypad
- 13 Documents / Resources
  - 13.1 References
- 14 Related Posts

## Edge E1 Smart Keypad with Intercom Access Control System

### START HERE

1

Unpack box and make sure you have all items shown here.  
(Screwdriver not shown.)



Edge Unit  
(27-210 shown)



12-V AC/DC Adapter  
(PS-12DC1)



Key




Carriage Bolt  
( 4x )



Hex Nut  
( 4x )


2

Unlock and open front panel of unit for mounting, wiring, and setup.

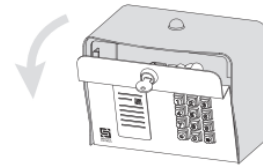

3

Mount unit to pedestal using included mounting hardware.  
(This step may be completed later.)

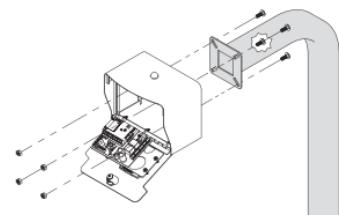

### WARNING

AUTOMATIC GATES CAN CAUSE SERIOUS INJURY OR DEATH!  
ALWAYS CHECK THAT THE GATE PATH IS CLEAR BEFORE OPERATING!  
REVERSING OR OTHER SAFETY DEVICES SHOULD ALWAYS BE USED!



### CAUTION


Use all four carriage bolts when mounting the unit to a pedestal.  
Leave the antenna in place. Seal all openings created in the enclosure.  
Failure to follow these instructions can damage the unit and/or cause it not to function correctly!

### What's what?

All important components labeled

Model 27-210 is shown

Unit shown with front panel open. Wiring/cabling not shown for clarity.

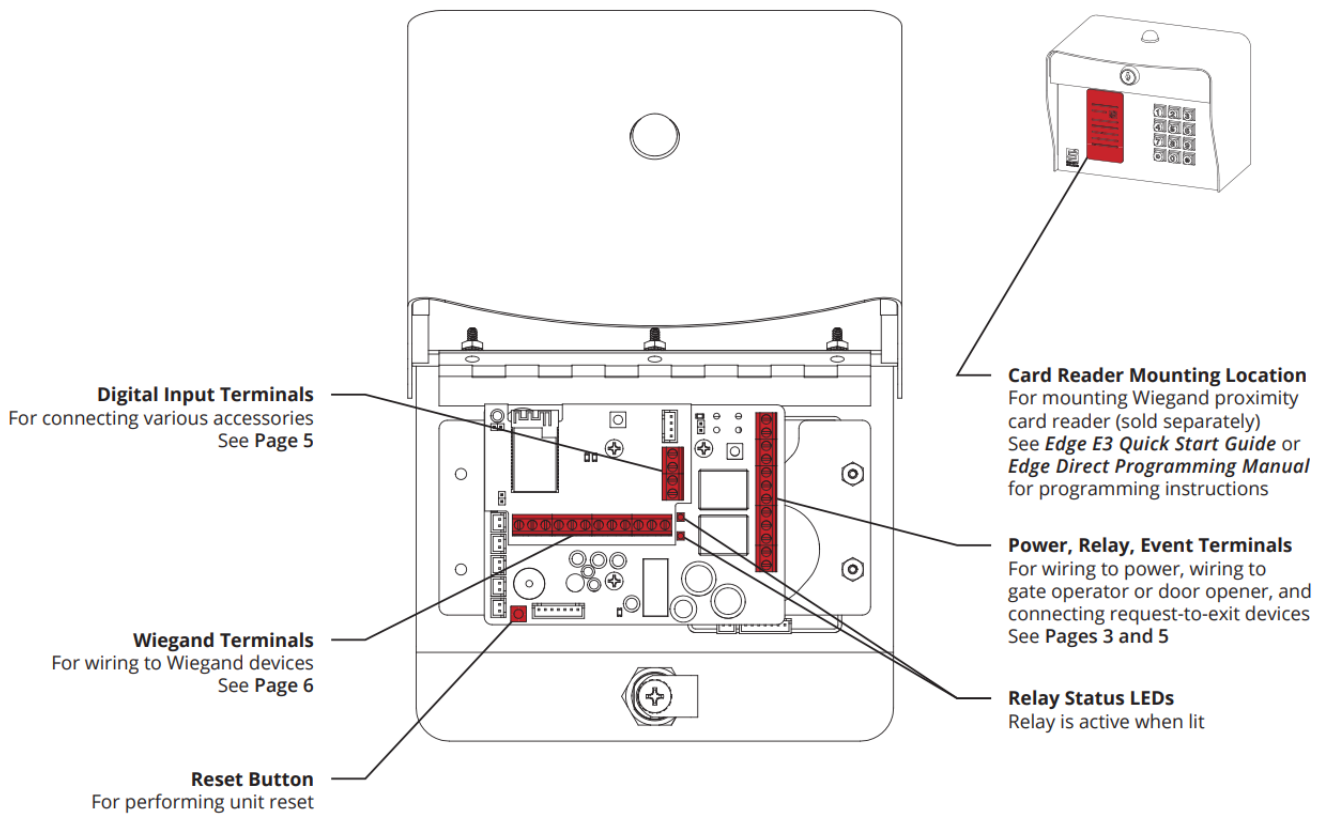


#### 4. Connect wires.

Feed wires through back of unit, and connect as shown using included screwdriver.

Excessive force can damage unit!

Additional wiring diagrams can be found on Pages 5 and 6.

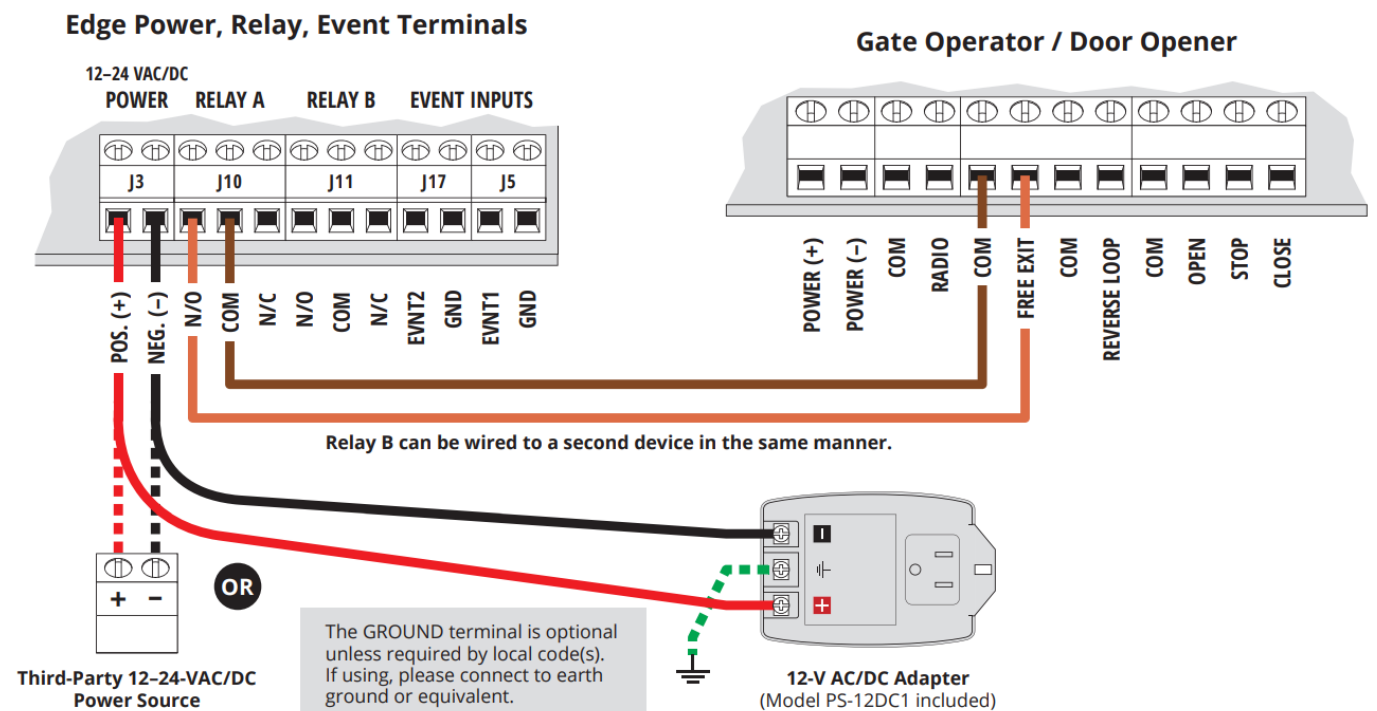

#### CAUTION

If the included 12-V AC/DC adapter will not be used, please go to Page 4 and follow the procedure, Using a Third-

Party Power Source.

Do not exceed 24 VAC/DC! Failure to choose a compatible power source can damage the unit!

### Using a Third-Party Power Source (Optional)



#### IMPORTANT

If you would like to use a third-party power source such as solar, verify that it conforms to the following specs:

Input	12–24 VAC/DC no more than 10% beyond this range
Current Draw	less than 111 mA @ 12 VDC less than 60 mA @ 24 VDC

**4a.** Connect wires to unit as shown in Step 4.

**4b.** Connect wires to your power source, making sure you connect positive to positive and negative to negative.



#### CAUTION

Double check that you have wired from positive on the Edge unit to positive on your power source and negative on the Edge unit to negative on your power source.

Reverse polarity can damage the unit!

**5.** Close front panel of unit and lock it.



#### STOP

Before going forward, double check all wiring and make sure the unit has power!


Wiring diagrams for connecting to accessory devices can be found on Pages 5 and 6.

For connecting accessories not mentioned, please contact Technical Support.

Make sure the gate or door path is clear before completing Step 7!


**6.** Add Access Code to Relay A.

(To add multiple codes, enter each of them before pressing pound key.)

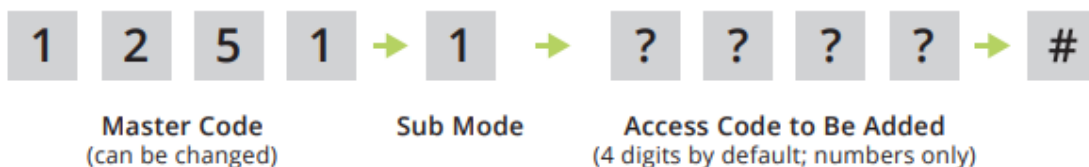

**NOTE:** The green arrow indicates a “good” tone on the Edge unit. By default, the following codes are reserved and cannot be used: 1251, 1273, 1366, 1381, 1387, 1678, 1752, and 1985.

**7.** Make sure gate or door path is clear; then enter access code on keypad, and confirm gate or door opens.

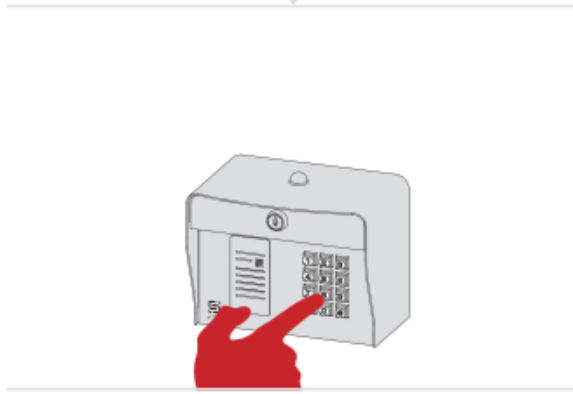


## INSTALLATION COMPLETE!

Jump to Page 7 to continue programming and download the Edge Smart Keypad app.

### A. Event Inputs

Wiring for accessories such as a request-to-exit device

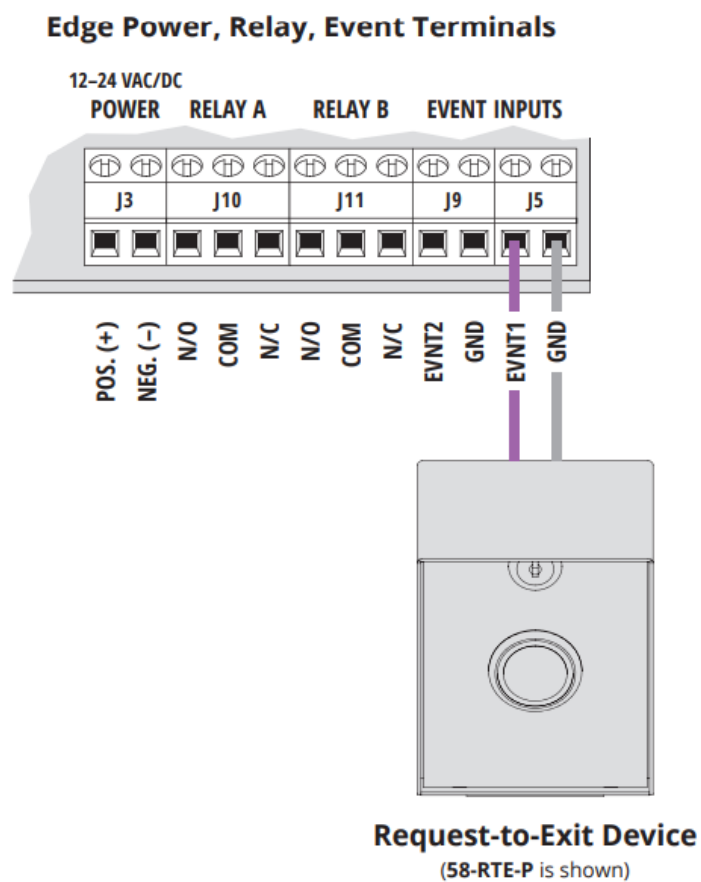


Event Input configuration instructions can be found on Pages 10 and 11.

### B. Digital Inputs

Wiring to various accessories

## Edge Digital Input Terminals

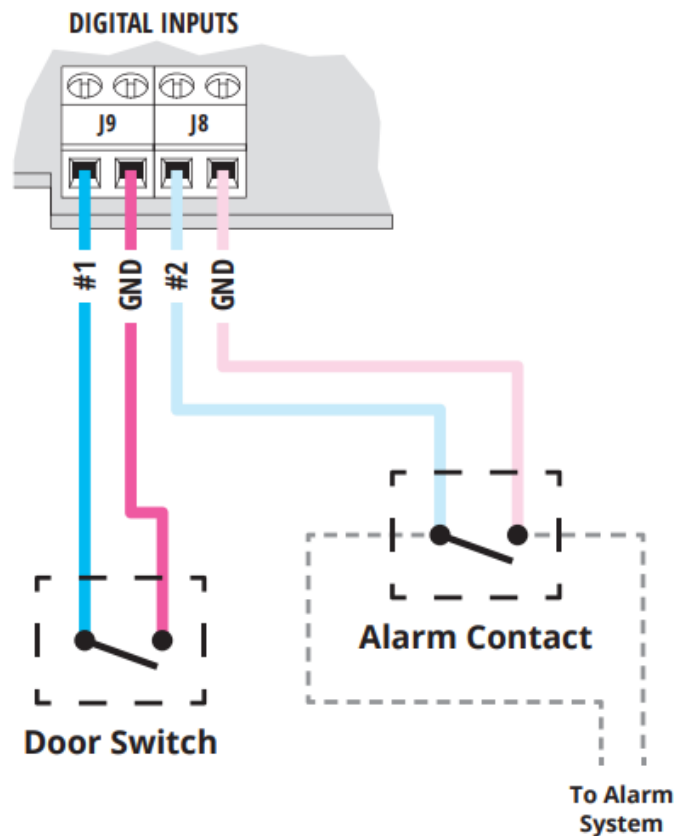

Digital Inputs can be configured using the Edge Smart Keypad app.


### C. Wiegand Device

Wiring for a Wiegand device

Wiegand configuration instructions can be found on Page 14.

## Wiegand Device

## Edge Wiegand Terminals

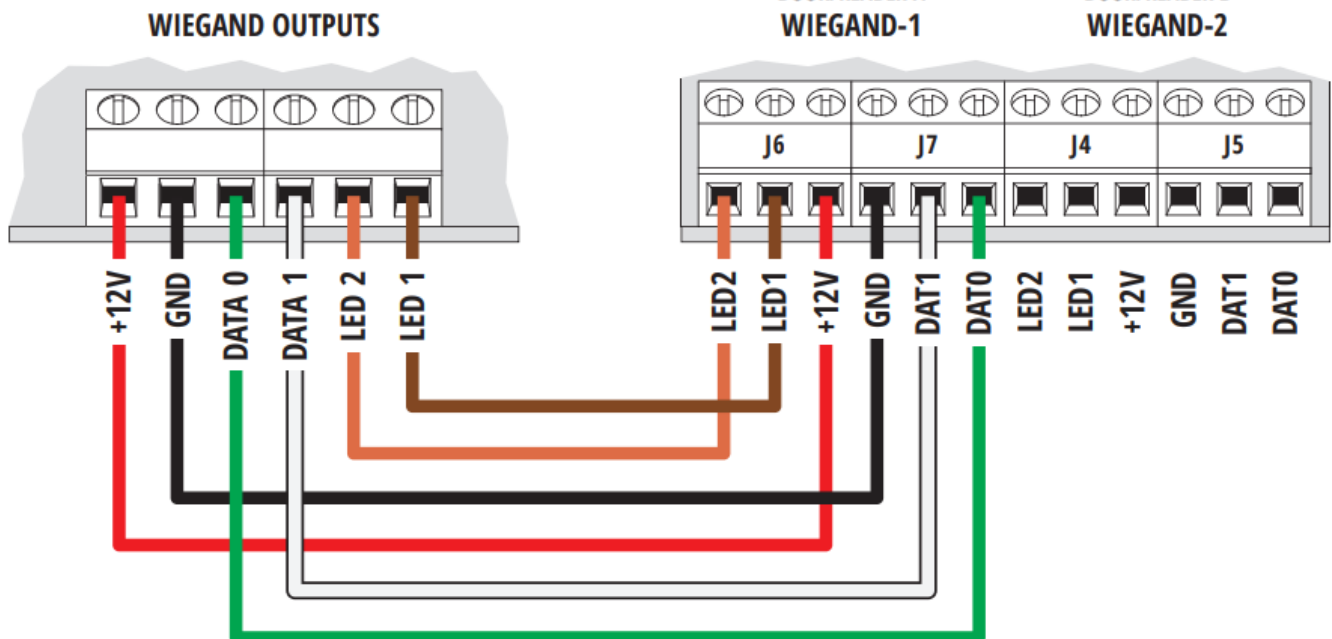

If mounting a Wiegand card reader to the Edge unit front panel, remove the existing cover plate and hex nuts to reveal the mounting holes and wiring passthrough hole.



### CAUTION

Disconnect power to the Edge unit before connecting Wiegand devices.

Failure to disconnect power can damage the unit!

## Downloading the Edge Smart Keypad App for iOS/Android



The Edge Smart Keypad app is for ADMINISTRATOR USE ONLY and is not intended for users.

- a. Grab your smartphone or tablet. (These steps are optional. Unit can be fully programmed from keypad.)
- b. Navigate to your app store, and search for “edge smart keypad.”
- c. Find the Edge Smart Keypad app by Security Brands, Inc. and download it.



Edge Smart Keypad Security Brands, Inc.



### NEED HELP

You can find plenty of useful resources online to help you get your new Edge unit up and running quickly and easily.

Go to [securitybrandsinc.com/edge/](https://securitybrandsinc.com/edge/)

If you need further assistance, please call Technical Support at (972) 474-6390.

### D. Pairing Edge Unit

Connecting your mobile device to your Edge unit for use with app. The app is available for administrators who want to use it. Nearly all functionality is available through direct programming via the keypad.

**IMPORTANT!** Make sure your Edge unit is powered on and that Bluetooth is enabled on your mobile device or pairing will not work.

**Step 1** – Grab your mobile device and open the Edge Smart Keypad app. If you do not have the app, follow the steps on this page for downloading it.

**Step 2** – Fill out your account information and tap the “Sign Up” button. If you have already created an account, you will log in instead.

**Step 3** – On the Paired Keypads screen, tap the “Add Keypad” button.

**Step 4** – On the Add Keypad screen, tap the Edge unit you want to pair. If you do not see any Edge units listed, make sure your Edge unit is powered on and is in Bluetooth range.

**Step 5** – Complete the procedure shown on your mobile device. These steps will be completed using the PIN pad on your Edge unit.

**Step 6** – Enter the Master Code (default is 1251) on your mobile device.

**Step 7** – Enter the code shown on your mobile device at the Edge unit. This step must be completed within the time duration displayed.

**Step 8** – Change your Master Code if you like.

This step is recommended, but optional, and can be done at a later time.

Your new Edge unit is now be paired and will appear on the Paired Keypads screen. Tapping on the Edge unit on this screen will give you access to relay control and full access control management of the Edge unit from within the app.




For more information and guidance, please go to [securitybrandsinc.com/edge/](https://securitybrandsinc.com/edge/) or call Technical Support at (972) 474-6390 for assistance.


## E1. Direct Programming / Unit Configuration

### Change Master Code

(Highly recommended for security purposes)

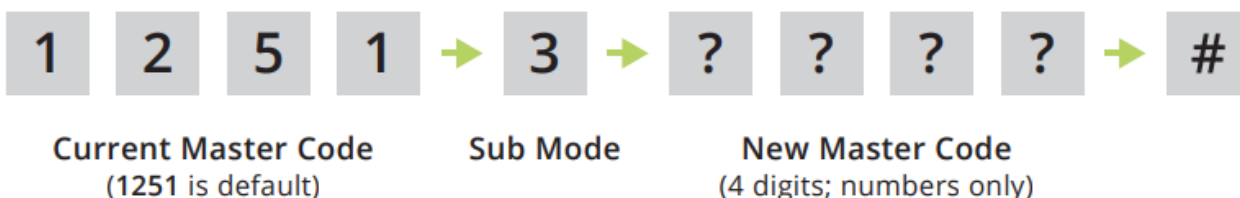

## Change Sleep Code

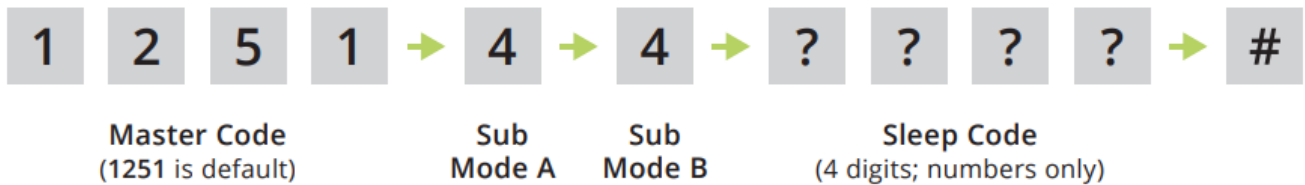

## Programming Sub Modes

1	Add Access Code(s) to Relay A
2	Delete Code (Non-Wiegand)
3	Change Master Code
4 – 3	Add Latch Code to Relay B
4 – 4	Change Sleep Code
4 – 5	Change Code Length (Non-Wiegand)
4 – 6	Change Relay Trigger Time
4 – 7	Enable/Disable Timers and Schedules
4 – 8	Enable/Disable “3 Strikes, You’re Out”
4 – 9	Configure Event Input 1
5	Add Latch Code to Relay A
6	Configure Wiegand Inputs
7	Add Access Code(s) to Relay B
8	Add Limited-Use Code
0	Delete All Codes and Timers

## Things to Know

### The Star Key (\*)

If a mistake is made, pressing the star key deletes your entry. Two beeps will sound.

### The Pound Key (#)


The pound key is good for one thing and one thing only: exiting programming mode.

## E2. Direct Programming / Unit Configuration

### Change Code Length




**IMPORTANT! THIS WILL DELETE ALL NON-WIEGAND ACCESS AND LATCH CODES!**

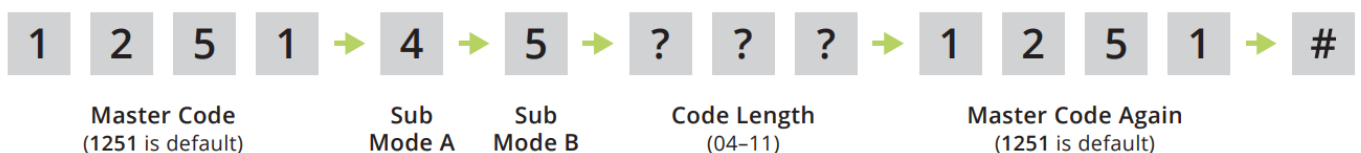


### Change Relay Trigger Time



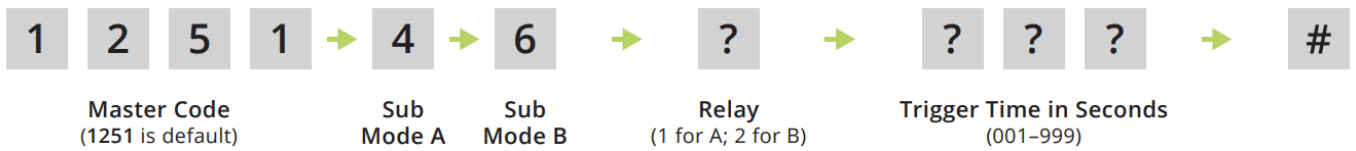


### Enable/Disable Timers and Schedules

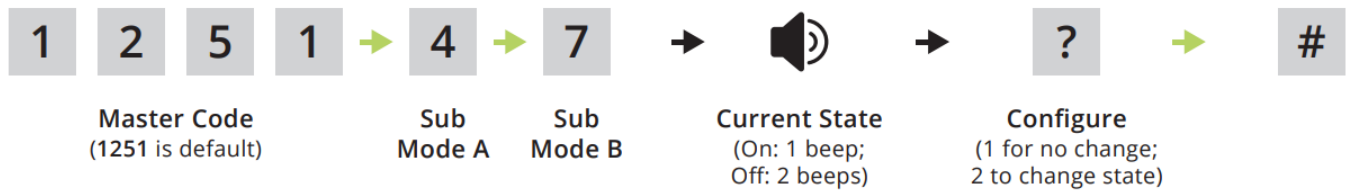

### Enable/Disable “3 Strikes, You’re Out”

(When enabled, the unit will sound an alarm and go into a 90-second lockdown for 90 seconds when an incorrect code is entered three times.)

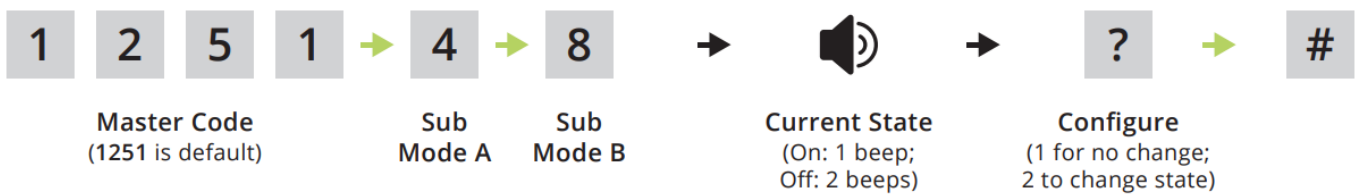


Green arrow indicates “good” tone on unit. Always wait for good tone before moving on.

## E3. Direct Programming / Unit Configuration

### Toggle Silent Mode

(Toggles Silent Mode, which mutes all audible-tone feedback on unit)

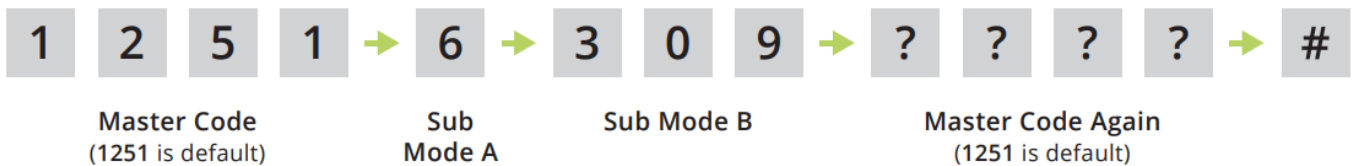

### Configure Event Input 1

(Allows an external device to affect keypad operation or trigger a relay. To configure additional inputs, use the Edge Smart Keypad app.)

#### Mode 1 – Remote Open Mod

Triggers either Relay A or Relay B when event input state changes from normally open (N/O) to normally closed (N/C).

#### Mode 2 – Log Mode

Makes log entry of event input state when event input state changes from normally open (N/O) to normally closed (N/C).

#### Mode 3 – Remote Open and Log Mode

Combines Modes 1 and 2.

#### Mode 4 – Arming Circuit Mode


Enables either Relay A or Relay B when event input state changes from normally open (N/O) to normally closed (N/C). Otherwise, selected relay is disabled.

#### Mode 5 – Remote Operation Mode

Triggers or latches either Relay A or Relay B when event input state changes from normally closed (N/C) to normally open (N/O).

#### Mode 0 – Event Input 1 Disabled

Modes 1, 3, and 4

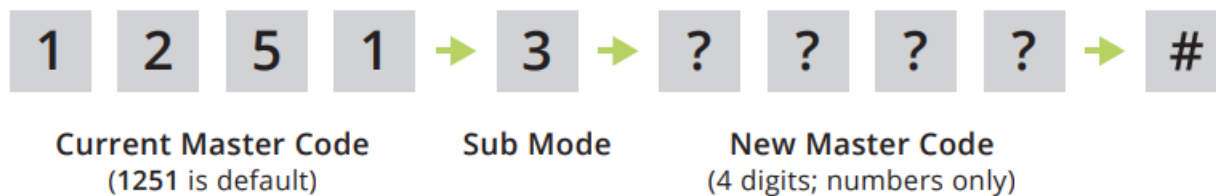


Green arrow indicates “good” tone on unit. Always wait for good tone before moving on.

## E4. Direct Programming / Unit Configuration


### Configure Event Input 1 (continued)

(Allows an external device to affect keypad operation or trigger a relay. To configure additional inputs, use the Edge Smart Keypad app.)


#### Mode 2

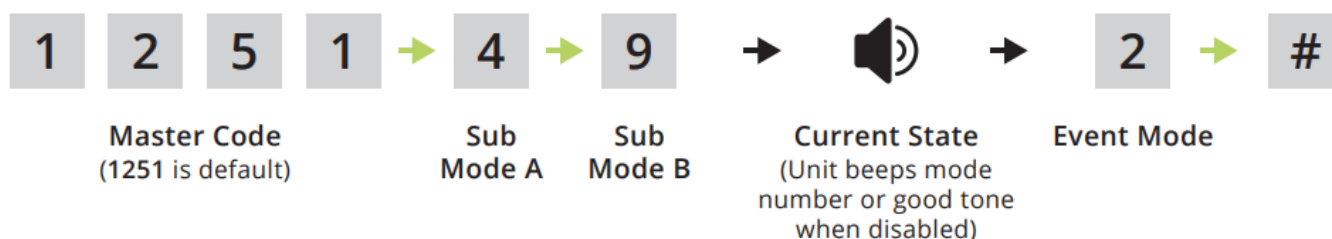

#### Mode 5

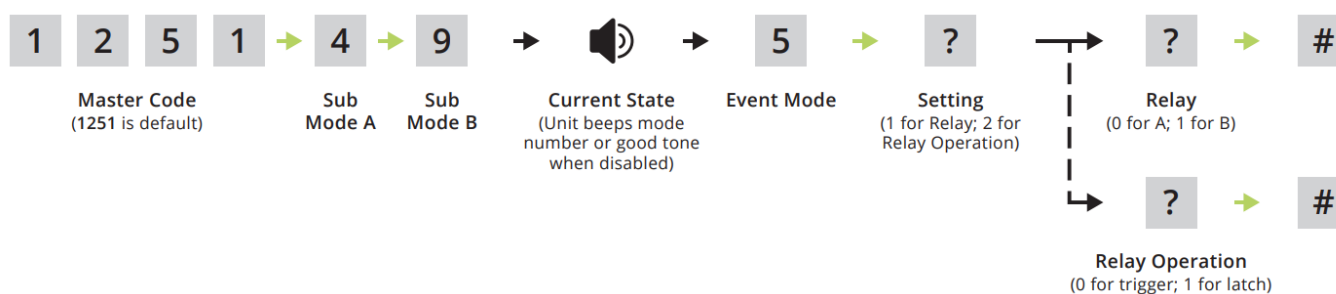

### Disable Event/Digital Inputs (Mode 0)

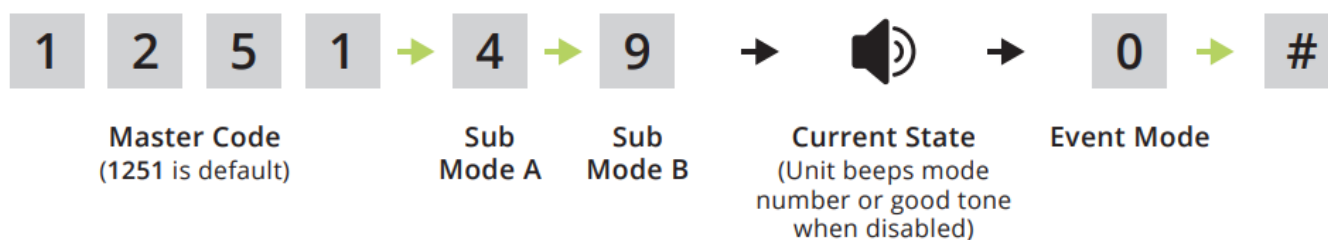


Green arrow indicates “good” tone on unit. Always wait for good tone before moving on.

## E5. Direct Programming / Unit Configuration

### Configure Wiegand Input

(Allows enabling or disabling of a Wiegand input and configuration of the Wiegand device type. For the tag reader type, use the Edge Smart Keypad app.)

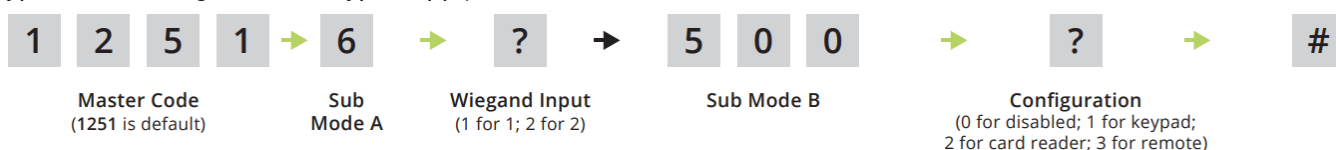

### Change Default Facility Code




Green arrow indicates “good” tone on unit. Always wait for good tone before moving on.

## F1. Direct Programming / Onboard Keypad

### Add Access Code(s) to Relay B

(To add multiple codes, enter each of them before pressing pound key)

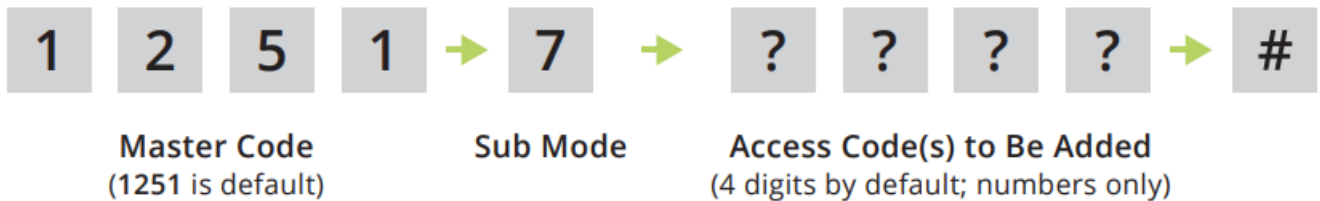


Green arrow indicates “good” tone on unit. Always wait for good tone before moving on. By default, these codes are unavailable for use: 1251, 1273, 1366, 1381, 1387, 1678, 1752, 1985.

## F2. Direct Programming / Onboard Keypad


### Add Latch Code to Relay A



### Add Latch Code to Relay B

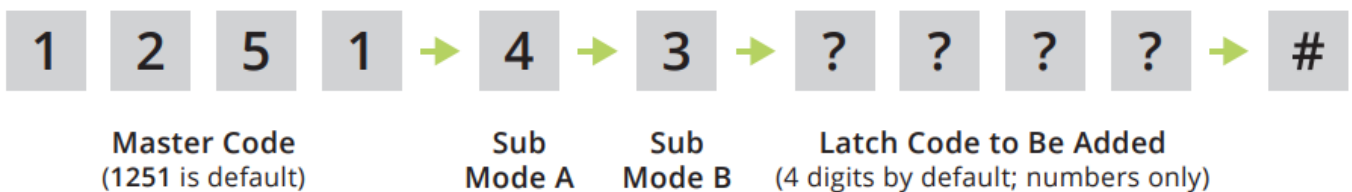


### Delete Code (Non-Wiegand)

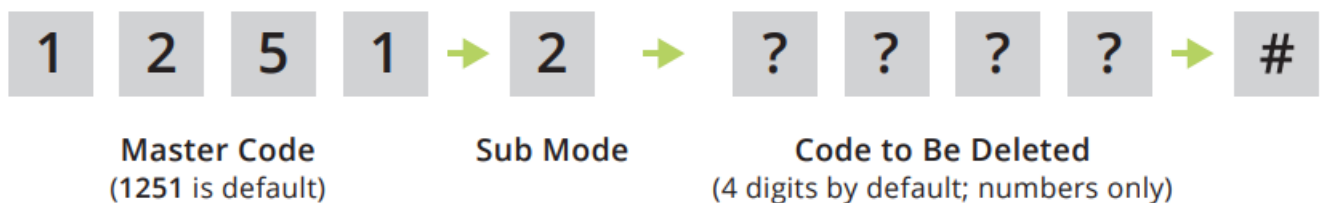

### Add Limited-Use Code

(Access codes can be given a use or time restriction. For more advanced time restrictions, use the Edge Smart Keypad app.)

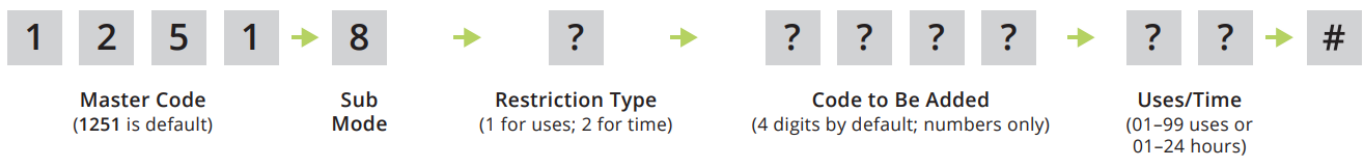


Green arrow indicates “good” tone on unit. Always wait for good tone before moving on. By default, these codes are unavailable for use: 1251, 1273, 1366, 1381, 1387, 1678, 1752, 1985.

### G1. Direct Programming / External Wiegand Keypad


#### Add Wiegand Keypad Access Code(s)

(Uses default facility code; to add multiple codes, enter each of them before pressing pound key)

##### On Both Wiegand Inputs

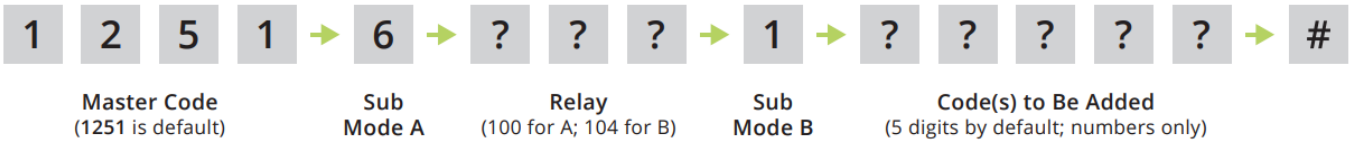

##### On Wiegand Input 1 or 2

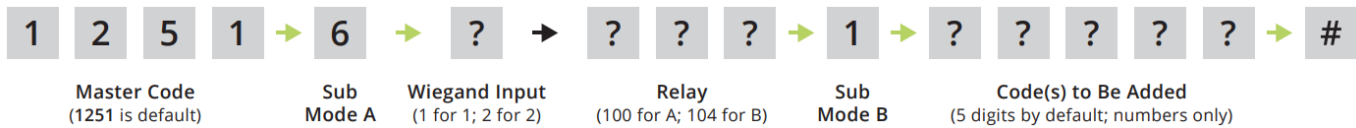


#### Add Wiegand Keypad Manager Access Code(s)

(Uses default facility code; to add multiple codes, enter each of them before pressing pound key)

##### On Both Wiegand Inputs



##### On Wiegand Input 1 or 2

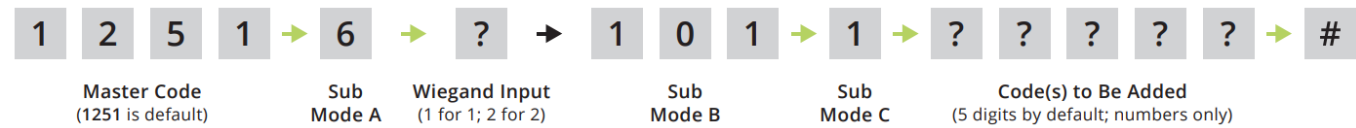


Green arrow indicates “good” tone on unit. Always wait for good tone before moving on.

### G2. Direct Programming / External Wiegand Keypad


#### Add Wiegand Keypad Latch Code(s)

(Uses default facility code; to add multiple codes, enter each of them before pressing pound key)

##### On Both Wiegand Inputs

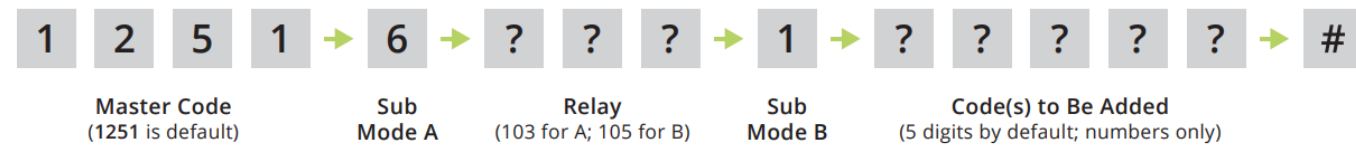


##### On Wiegand Input 1 or 2

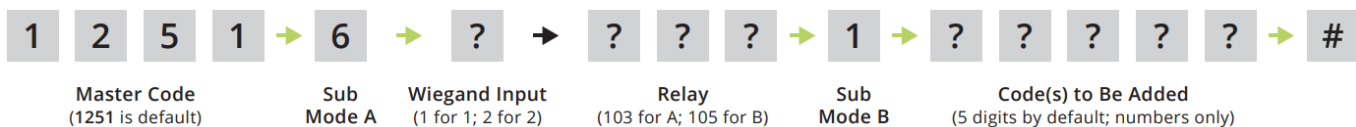


## Delete Wiegand Keypad Code(s)

(Uses default facility code; to delete multiple codes, enter each of them before pressing pound key)

### On Both Wiegand Inputs

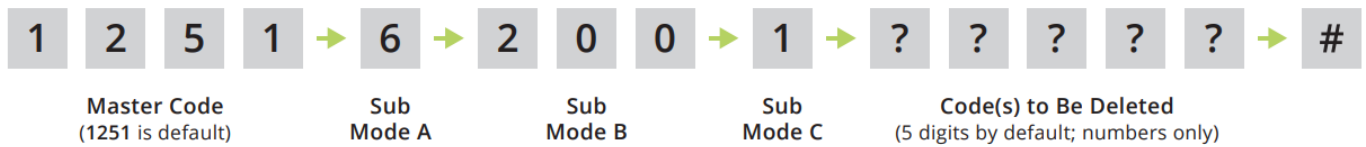


### On Wiegand Input 1 or 2

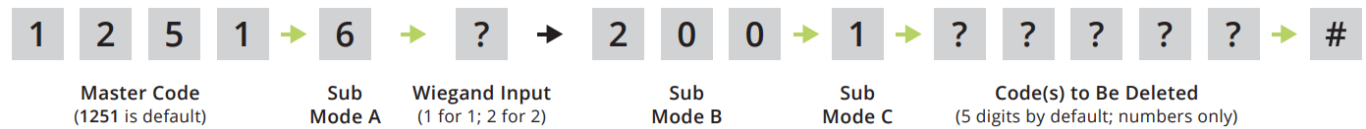

Green arrow indicates “good” tone on unit. Always wait for good tone before moving on.

### Notes

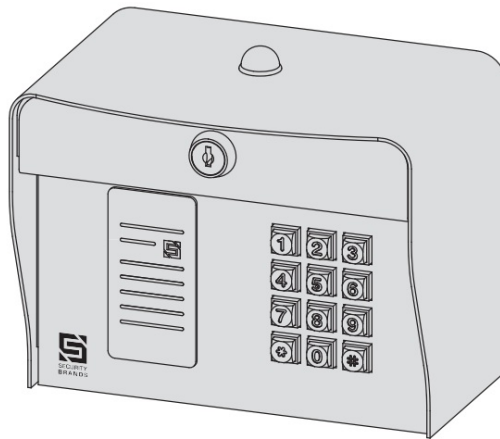

**Edge E1**  
27-210



**SECURITY BRANDS INC.**  
your *partner* in access control

### NEED HELP



Call (972) 474-6390


Email [techsupport@securitybrandsinc.com](mailto:techsupport@securitybrandsinc.com)

We are available Mon–Fri / 8am–5pm Central

© 2021 Security Brands, Inc. All rights reserved.

QSG-2721027215-EN Rev. B (11/2021)

## Documents / Resources

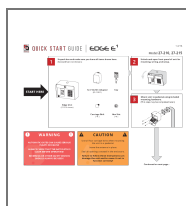

[SECURITY BRANDS Edge E1 Smart Keypad with Intercom Access Control System](#) [pdf]

### User Guide

Edge E1 Smart Keypad with Intercom Access Control System, Edge E1, Smart Keypad with Intercom Access Control System, Keypad with Intercom Access Control System, Intercom Access Control System, Access Control System, Control System

## References

-  [Edge - Security Brands, Inc.](#)

