

Seeed Studio 102991714 Development Board Instruction **Manual**

Home » seeed studio » Seeed Studio 102991714 Development Board Instruction Manual





Contents

- 1 Safety Instructions
- 2 Operating Instructions for download
- 3 Intended use
- 4 Description of symbols
- **5 Safety instructions**
- 6 Disposal
- 7 Technical data
- 8 Documents / Resources
 - 8.1 References

Safety Instructions

reComputer

Item no: 3124642 (J202)

Operating Instructions for download

Use the link www.conrad.com/downloads (alternatively scan the QR code) to download the complete operating

instructions (or new/current versions if available). Follow the instructions on the web page.



Intended use

The product is intended for indoor use only. Do not use it outdoors.

Contact with moisture must be avoided under all circumstances.

If you use the product for purposes other than those described, the product may be damaged.

Improper use can result in short circuits, fires, electric shocks or other hazards.

The product complies with the statutory national and European requirements.

For safety and approval purposes, you must not rebuild and/or modify the product.

Read the safety instructions and any accompanying instructions carefully and store them in a safe place. Make this product available to third parties only together with the safety instructions and any accompanying instructions. All company names and product names are trademarks of their respective owners. All rights reserved.

Description of symbols

The following symbols are on the product/appliance or are used in the text:



The symbol warns of dangerous voltage that can lead to personal injury by electric shock.



The symbol warns of hazards that can lead to personal injury.

Safety instructions

Read this document and the accompanying operating instructions carefully and especially observe the safety information. If you do not follow the safety instructions and information on proper handling, we assume no liability for any resulting personal injury or damage to property. Such cases will invalidate the warranty/guarantee.

4.1 General

- The product is not a toy. Keep it out of the reach of children and pets.
- Do not leave packaging material lying around carelessly. This may become dangerous playing material for children.
- If you have questions which remain unanswered by this information product, contact our technical support service or other technical personnel.
- Maintenance, modifications and repairs must only be completed by a technician or an authorised repair centre.

4.2 Handling

■ Handle the product carefully. Jolts, impacts or a fall even from a low height can damage the product.

4.3 Operating environment

- Do not place the product under any mechanical stress.
- Protect the appliance from extreme temperatures, strong jolts, flammable gases, steam and solvents.
- Protect the product from high humidity and moisture.

■ Protect the product from direct sunlight.

4.4 Operation

- Consult an expert when in doubt about the operation, safety or connection of the product.
- If it is no longer possible to operate the product safely, take it out of operation and protect it from any accidental use. DO NOT attempt to repair the product yourself. Safe operation can no longer be guaranteed if the product:
- is visibly damaged,
- is no longer working properly,
- has been stored for extended periods in poor ambient conditions or
- has been subjected to any serious transport-related stresses.

4.5 Power adapter

Do not modify or repair mains supply components including mains plugs, mains cables, and power supplies. Do not use damaged components. Risk of death by electric shock!

- Connect the appliance to a wall socket that can be accessed easily.
- As power supply, only use the supplied mains adaptor.
- Only connect the power adaptor to a normal mains socket connected to the public sup- ply. Before plugging in the power adaptor, check whether the voltage stated on the power adaptor complies with the voltage of your electricity supplier.
- Never connect or disconnect power adaptors if your hands are wet.
- Never unplug the power adaptor from the mains socket by pulling on the cable; always use the grips on the plug.
- For safety reasons, disconnect the power adaptor from the mains socket during storms.
- Do not touch the power adapter if there are any signs of damage, as this may cause a fatal electric shock! Take the following steps:
- Switch off the mains voltage to the socket containing the power adapter (switch off the corresponding circuit breaker or remove the safety fuse, and then switch off the corresponding RCD protective switch).
- Unplug the power adapter from the mains socket.
- Use a new power adapter of the same design. Do not use the damaged adapter again.
- Ensure that cables are not pinched, kinked or damaged by sharp edges.
- Always lay cables so that nobody can trip over or become entangled in them. This poses a risk of injury.

4.6 Connected devices

■ Also observe the safety and operating instructions of any other devices which are connected to the product.

Disposal

This symbol must appear on any electrical and electronic equipment placed on the EU market. This symbol indicates that this device should not be disposed of as unsorted municipal waste at the end of its service life. Owners of WEEE (Waste from Electrical and Electronic Equipment) shall dispose of it separately from unsorted municipal waste. Spent batteries and accumulators, which are not enclosed by the WEEE, as well as lamps that can be removed from the WEEE in a non-destructive manner, must be removed by end users from the WEEE in a non-destructive manner before it is handed over to a collection point.

Distributors of electrical and electronic equipment are legally obliged to provide free takeback of waste. Conrad provides the following return options free of charge (more details on our website):

- in our Conrad offices
- at the Conrad collection points
- at the collection points of public waste management authorities or the collection points set up by manufacturers or distributors within the meaning of the ElektroG

End users are responsible for deleting personal data from the WEEE to be disposed of.

It should be noted that different obligations about the return or recycling of WEEE may apply in countries outside of Germany.

Technical data

6.1 Power supply

Input 9 – 19 V/DC

6.2 Power adapter

Input 100 – 240 V/AC

6.3 Environment

Usage environment Indoor
Operating temperature 0 to +60 °C

Operating humidity max. 95 % RH (non-condensing)

Storage temperature-40 to +85 °C

Storage humidity< <80 % RH (non-condensing)

6.4 Others

Dimensions (L x W) (approx.) 100 x 80 mm Weight (approx.) 0.2 kg

This is a publication by Conrad Electronic SE, Klaus-Conrad-Str. 1, D-92240 Hirschau (www.conrad.com). All rights including translation reserved. Reproduction by any method (e.g. photocopying, microfilming or the capture in electronic data processing systems) requires prior written approval from the editor. Reprinting, also in part, is prohibited.

This publication reflects the technical status at the time of printing.

Copyright by Conrad Electronic SE.

*3124642 (J202)_V1_0624_jh_ss_en 1398667787-2 I1/O1 en



Documents / Resources



<u>Seeed Studio 102991714 Development Board</u> [pdf] Instruction Manual 102991714 Development Board, 102991714, Development Board, Board

References

- Conrad Electronic » All parts of success
- <u>© Download center</u>
- User Manual

Manuals+, Privacy Policy