



Seiko Instruments 600 Series Smart Label Printers User Guide

[Home](#) » [Seiko Instruments](#) » Seiko Instruments 600 Series Smart Label Printers User Guide 

SEIKO

SII

QUICK START GUIDE

Contents

- [1 600 Series Smart Label Printers](#)
- [2 Host Environments](#)
- [3 Preparing the SLP](#)
- [4 Your First Address Label \(Mac\)](#)
- [5 Label Objects for Mac and Windows](#)
- [6 How To's](#)
- [7 Changing Labels](#)
- [8 About Your Labels](#)
- [9 Documents / Resources](#)
- [10 Related Posts](#)

600 Series Smart Label Printers

Install the software, Smart Label Creator, as follows before connecting the SMART LABEL PRINTER to your computer.

©2013-2022 Seiko Instruments Inc. All rights reserved. Specifications are subject to change without notice.

“SII” is a registered trademark of Seiko Instruments Inc. “SMART LABEL PRINTER®” is a registered trademark and “SmartLabels™” is a trademark of Seiko Instruments USA Inc. Other brand and product names are

trademarks or registered trademarks of their respective holders.

Abbreviations used in this document are as follows:

- SMART LABEL PRINTER® → SLP
- SmartLabels™ → SmartLabels

Host Environments

- Microsoft® Windows® 8.1 (32 bit / 64 bit)
- Microsoft® Windows® 10 (32 bit / 64 bit)
- Microsoft® Windows® 11 (64 bit)
- macOS™ 10.14 (64 bit)
- macOS™ 10.15 (64 bit)
- macOS™ 11 (64 bit)
- macOS™ 12 (64 bit)

Hereinafter, host environments noted above are abbreviated as “Windows” or “Mac”.

Installing the Smart Label Creator for Mac

Please download the disc image file (.dmg) from the web page (www.sii-ps.com/slp/).

Double-clicking the downloaded disc image file (.dmg) mounts it on the Mac volume. Start up the installer by double-clicking the SII Smart Label Printer.pkg file there.

 
Installing the Smart Label Creator for Windows

Please download the zip file from the web page (www.sii-ps.com/slp/).


Double-click the downloaded zip file to unzip. Start up the installer by double-clicking the Setup.exe file inside the folder.

Preparing the SLP

1. Install the Smart Label Creator, then connect the printer to your PC or Mac.
 - The SLP can be connected to either the Serial or USB port on your PC. Do not use both cables. On your Mac use the USB port.
 - Connect the other end of the cable into the appropriate port on the back of the SLP.

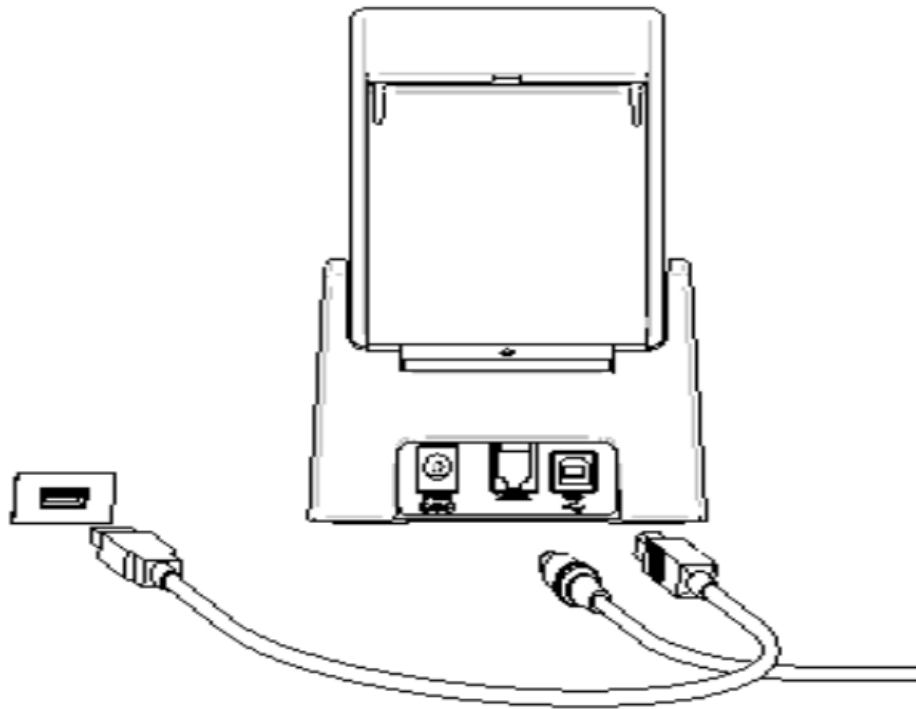


 2. Connect the supplied AC adapter to the back of the SLP and to a power outlet.
3. The printer powers on automatically when connected to AC power. The Status Light will flash until the labels are loaded.
4. Lift the Roll Cover.
5. Inserting a SmartLabels.
 - Remove the sticker from the roll, and then place the roll on the spindle as illustrated. Adjust the label guides to fit against the roll.
 - Feed the labels into the paper inlet slot. The labels will then automatically be moved into the correct position.
 - Close the Roll Cover.
6. Start your SLP software and begin using your new SLP.

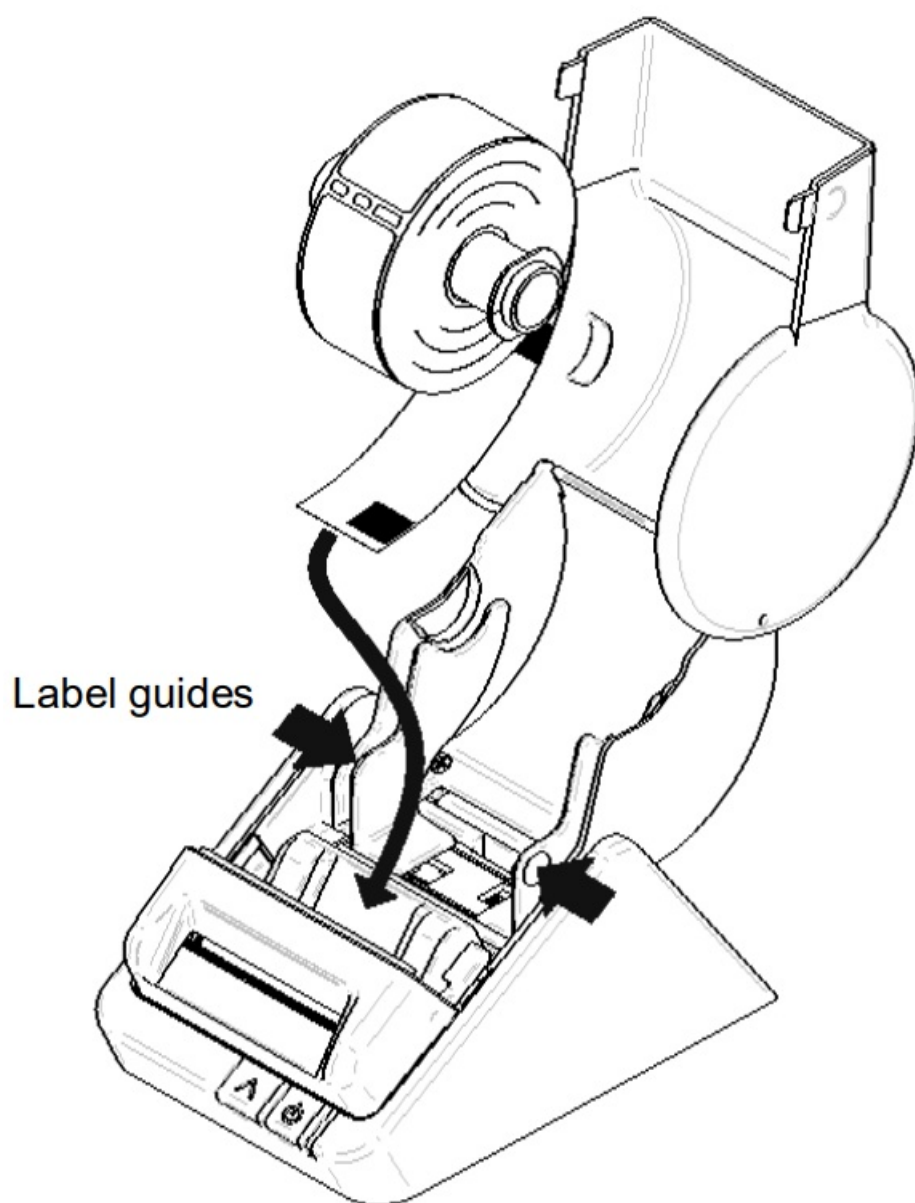


Your First Address Label (Mac)

 1. Select File – New Finder Window on Apple menu bar, click the Applications and then double-click the Smart Label Creator.app on the folder Seiko Instruments Inc.
2. The default address label will appear (Screen shot at the following). The cursor is in a position where it can be input the text data. You can easily input text data.

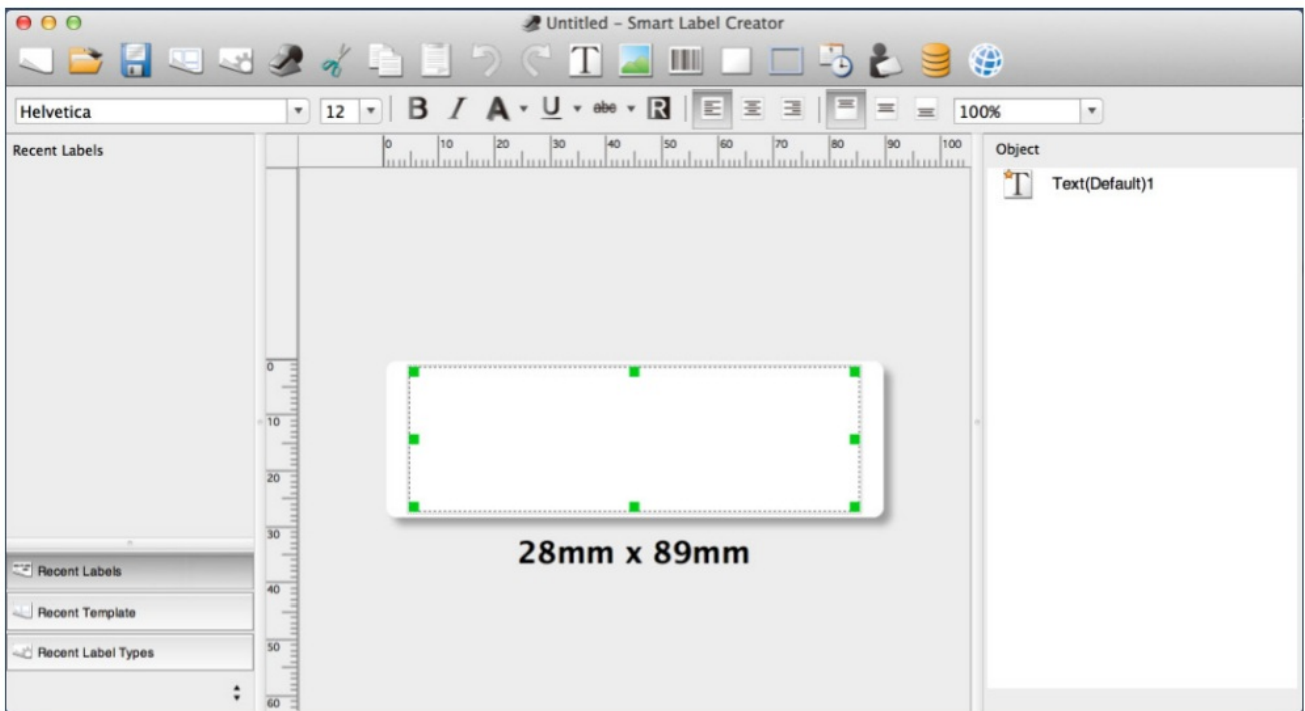

- Edit the font or text.

 
- To add a barcode, select .

3. Click  to print the label.


4. Click  to save the label.


Your First Address Label (Windows)


1. Double-click the Smart Label Creator Icons on your desktop.
2. The default address label will appear (Screen shot at the following). The cursor is in a position where it can be input the text data. You can easily input text data.

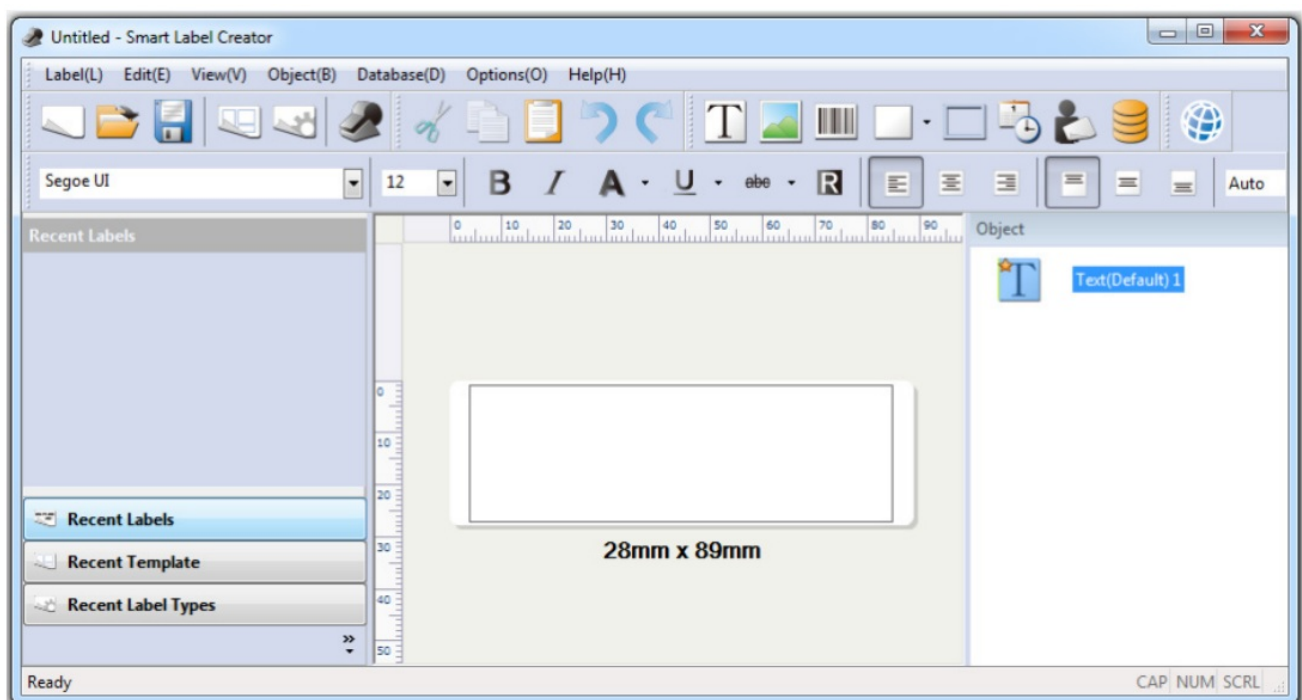

- Edit the font or text.

 
- To add a barcode, select .

3. Click  to print the label.

4. Click  to save the label.

Label Objects for Mac and Windows

Object buttons are used to add different elements to the labels. Choose from different elements (Screen shot at the following): Text, Image, Barcode, Drawings, Frame, DateTime, and Return Address.

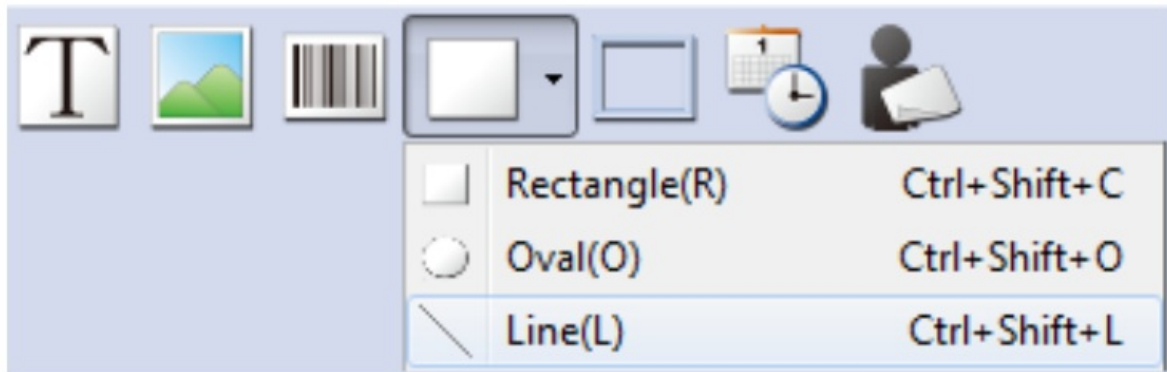

To use the object buttons:

- Click one of the object buttons, then position the pointer at desired location on label. Left click and hold the mouse to draw the object box on the label.

To open the Properties dialog box:

- Select an object and right click the mouse to open the object's shortcut menu. Then choose Properties to open selected object's property dialog box.

To move the objects:

- Select an object, confirm that the pointer is a movement pointer, and then drag the object.


To resize the objects:


- Select an object, move the mouse on the lower right of selected object and confirm that the pointer is a change-size pointer. Then drag the object and change the size.


To change the default properties of any objects, go to Object menu then Default Settings of Properties.

How To's

Create a New Label. Click . To change the format, click .


Save Labels. Click . In the Save As dialog box, specify the save destination. Enter a file name, and then click Save.

Batch Print Saved Labels. Click . In the Open dialog box, select saved labels you want to print and select the check box Print Selected File. Then click Open.



Open a Saved Label. Click  and select the label that you want to open. The label may be edited and printed. Importing Data as Database of Smart Label Creator (Windows only). In Microsoft Office applications (Word, Excel,

 
the address book of Outlook, and Access), select the data you want to import and select Add-Ins tab then click

Import DB to Smart Label Creator icon .


Copying Text (Windows only). In other programs, select the text data you want to copy and click  Copy Text to Smart Label Creator icon in the notification area of the Windows Taskbar.


Changing Labels

- Tear off any printed labels so the labels are flush with the exit slot. Press and hold the button  to reverse the labels out the paper inlet slot. DO NOT pull the labels out of
- To select a different label type in the Smart Label Creator, click . Select the label type from the pull-down list on the Label Settings dialog (Screen shot at the following).

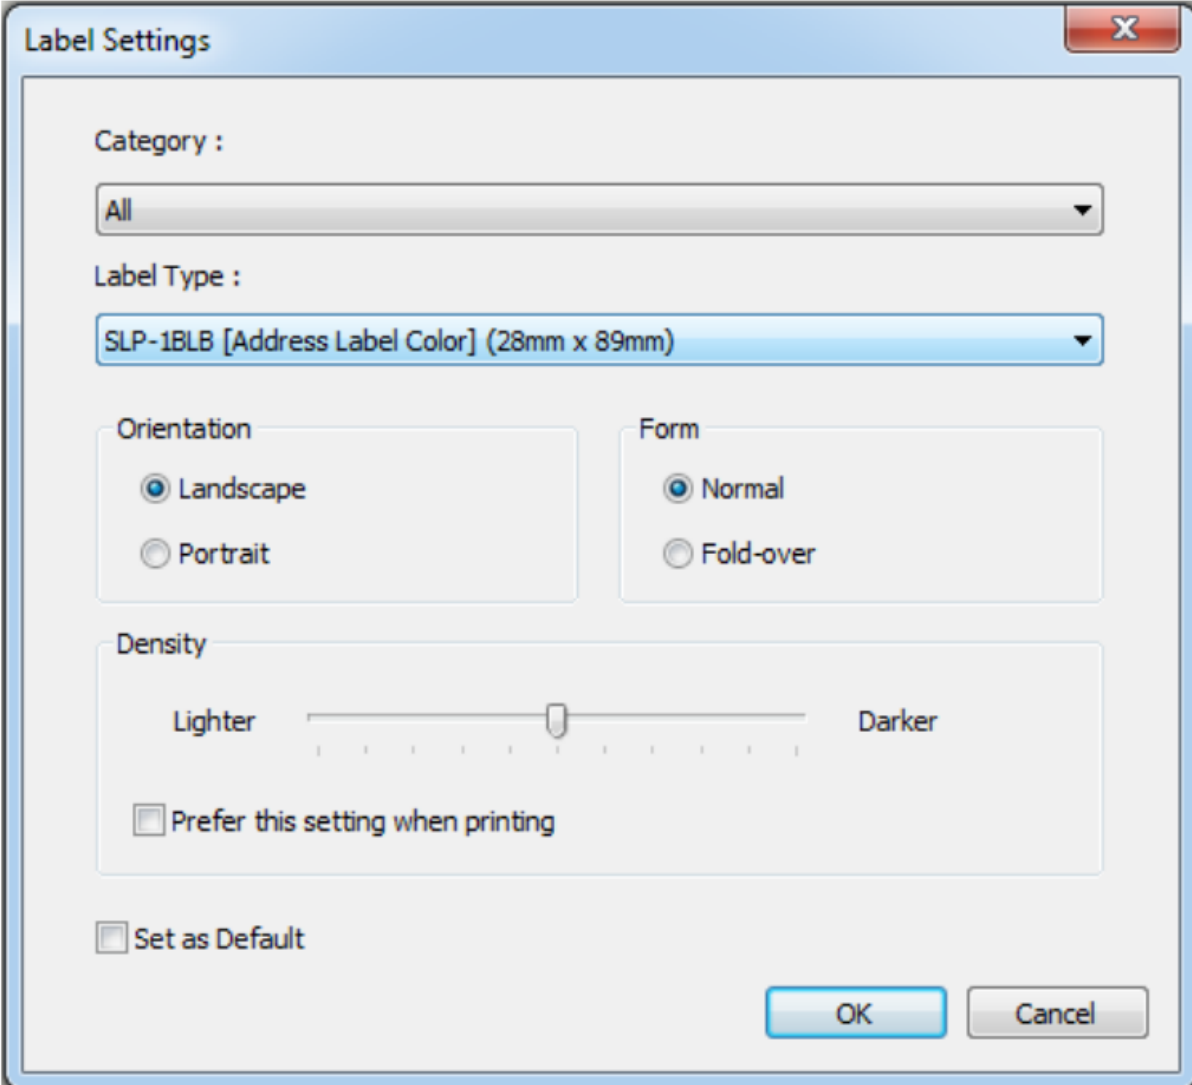

The image shows a screenshot of the 'Label Settings' dialog box. It has a title bar with 'Label Settings' and a close button. The dialog contains several sections: 'Category' with a dropdown menu set to 'All'; 'Label Type' with a dropdown menu set to 'SLP-1BLB [Address Label Color] (28mm x 89mm)'; 'Orientation' with radio buttons for 'Landscape' (selected) and 'Portrait'; 'Form' with radio buttons for 'Normal' (selected) and 'Fold-over'; 'Density' with a slider between 'Lighter' and 'Darker' and a checkbox 'Prefer this setting when printing'; and a checkbox 'Set as Default' at the bottom left. 'OK' and 'Cancel' buttons are at the bottom right.

 - The print margins can be adjusted if the printing isn't positioned properly when the label is printed, particularly on small labels. To adjust the margins, click . Move the slider of Margin Adjustment on the Print dialog (Screen shot at the following).

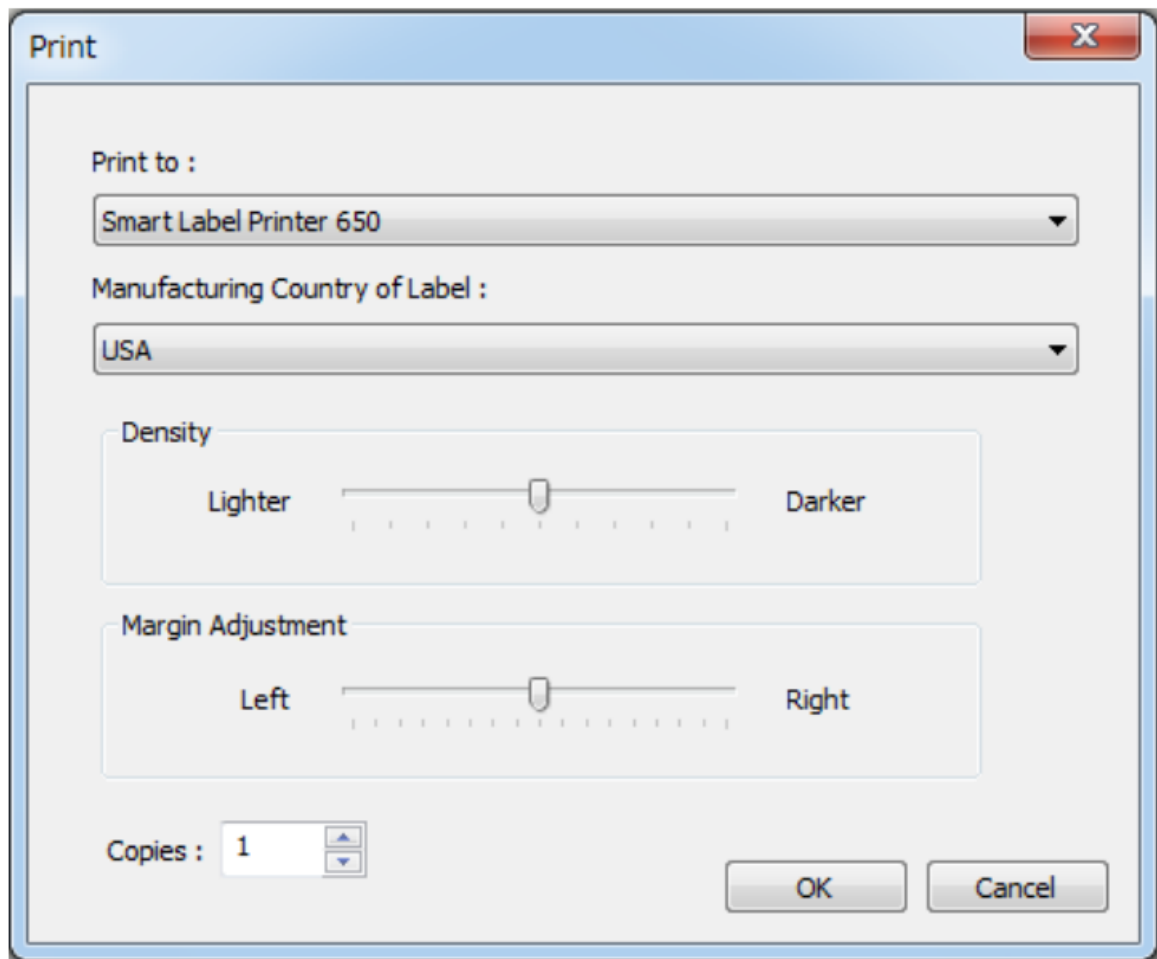

About Your Labels

- The SLP 620, 650, and 650SE can use any of the SmartLabels provided by Seiko Instruments Inc.
- SmartLabels are available from your local Seiko Instruments dealer or they may be ordered from Seiko Instruments at www.sii-ps.com/slp/.

Important: For best results we recommend the use SmartLabels of Seiko Instruments Inc. Other brands may not work correctly with your SLP, or they may damage the printer and void your warranty.

What To Do If...

Refer to your SMART LABEL PRINTER User's Guide or the on-line help if you have a problem or need additional information when using your SLP.

To access on-line help, choose Smart Label Creator Help from the Help menu.

SEIKO

