



SelectBlinds Minimalist Series Light Filtering 'Zebra' Shades Installation Guide

[Home](#) » [SelectBlinds](#) » SelectBlinds Minimalist Series Light Filtering 'Zebra' Shades Installation Guide 

Contents

- [1 SelectBlinds Minimalist Series Light Filtering 'Zebra' Shades](#)
- [2 Fitting the brackets](#)
- [3 Fitting the shade](#)
- [4 Programming Instructions](#)
- [5 Documents / Resources](#)



SelectBlinds Minimalist Series Light Filtering 'Zebra' Shades



Product Information: Motorized Zebra Shades

The Motorized Zebra Shades are a versatile window treatment option that combines the functionality of blinds and curtains. These shades feature a motorized system that allows for easy opening and closing, providing convenience and control over the amount of light entering your space. The shades are designed with a cassette housing that neatly stores the fabric when not in use, giving a sleek and modern look to your windows.

The shades come with brackets that offer two methods of installation:

Top-Fixing:

For this method, use the front two holes in the top of the bracket to fix it to the lintel, which is the ceiling of the recess. This installation method is suitable when you have sufficient space above the window.

Face-Fixing:

For face-fixing, use two screws through the back plate of the bracket to mount it onto a facing surface such as a wall or window frame. This method is ideal when there is limited space above the window.

It is important to note that the position of the outermost brackets should be at least 5cm away from the ends of the rail. Additionally, any other brackets should be evenly distributed across the width to ensure proper support and stability.

Once the brackets are installed, follow the instructions below for attaching the shade:

Attaching the Shade:

1. Holding the rail at an angle, position the T-shaped lip on the top of the cassette into the front lip of the bracket.
2. Twist the back of the cassette upwards until it snaps into place against the back lip of the bracket.

Product Usage Instructions: Remote BF-305A Programming

The Motorized Zebra Shades come with a remote control model BF-305A for easy operation. To program the remote, please follow the instructions below

1. Ensure that the shades are connected to a power source and the motor is in standby mode.
2. Press and hold the "Programming" button on the remote control until the LED indicator starts flashing.
3. Within 5 seconds, press the desired channel button (1, 2, 3, etc.) on the remote control to assign the shades to that channel.
4. The LED indicator will stop flashing, indicating that the programming is complete.

Repeat the above steps for programming additional channels if needed. The remote control allows you to control multiple sets of Motorized Zebra Shades independently by assigning them to different channels.

 
For further assistance or troubleshooting, refer to the complete user manual or contact our customer support.

Fitting the brackets


The brackets offer two methods of installation:

- Use the front two holes in the top of the bracket to fix to the lintel (the 'ceiling' of the recess).

- Use two screws through the back plate to mount onto a facing surface (a wall or window frame)

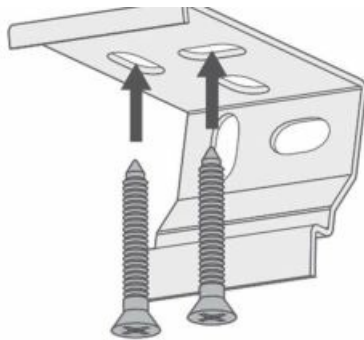

Top-Fixing

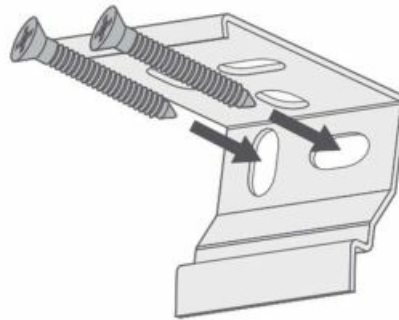 


Face-Fixing

Note that the position of the outermost brackets should be at least 5cm away from the ends of the rail, with any other brackets evenly distributed across the width.




Fitting the shade

 - Holding the rail at an angle, situate the T-shaped lip on the top of the cassette into the front lip of the bracket.
- Twist the back of the cassette upwards until it snaps into place against the back lip of the bracket.

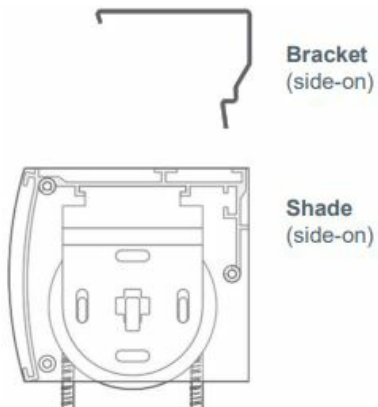


Bracket
(side-on)

 Shade
(side-on)


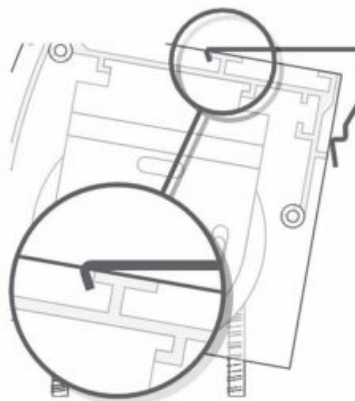


 Holding the rail at an angle, situate the T-shaped lip on the top of the cassette into the front lip of the bracket.

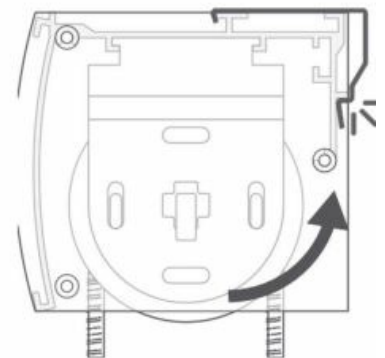

Twist the back of the cassette upwards until it snaps into place against the back lip of the bracket.

  Programming Instructions

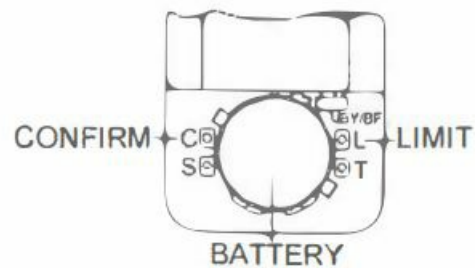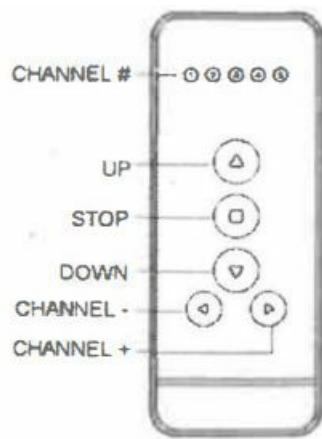

1. Adjust switch on BY or BF working mode

BY mode: Short press UP or DOWN button motor in jog rotating, long press UP or DOWN button over 2 seconds motor will be rolling up or down continuously.

BF mode: Short press UP or DOWN button motor will roll UP or DOWN continuously

2. Select the Channel for Programming:

Press "CHANNEL+" or "CHANNEL-" to choose the channel until the LED bright on the channel you want.

3. Programming this channel on the Motor or Receiver:

Let the motor or receiver under the programming state (operating according to the instructions of the motor or receiver)

4. Then press the CONFIRM key on the remote

(do it in 6 seconds after the motor under the programming state), the motor jogs, beeps or the receiver beeps to confirm the programming succeeds.

FIY: The group channel will be recorded on the motor automatically when the single channel has been programmed on the motor.

Documents / Resources

	<p>SelectBlinds Minimalist Series Light Filtering 'Zebra' Shades [pdf] Installation Guide Minimalist Series Light Filtering Zebra Shades, Minimalist Series, Light Filtering Zebra Shades, Filtering Zebra Shades, Zebra Shades, Shades</p>
--	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------